

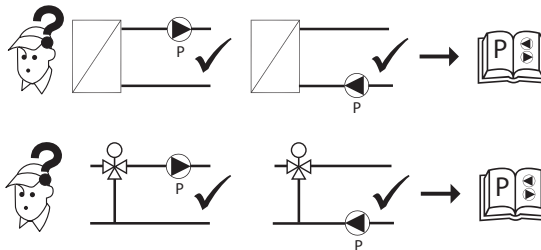
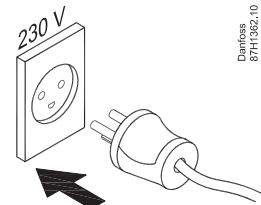
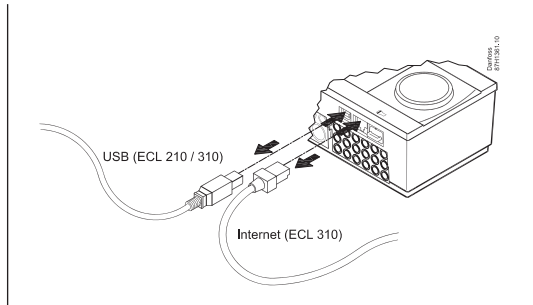


Installation Guide

ECL Comfort 210 / 296 / 310, A266 (code no. 087H3800)

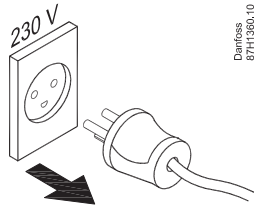


A266.1 (ex. a):

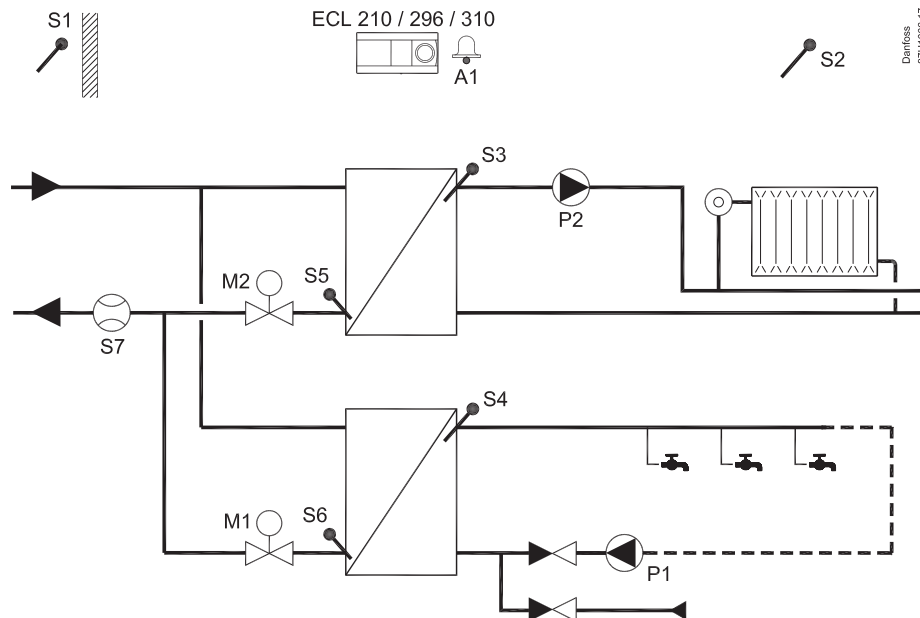


M1, M2 = 3-point / 0 - 10 V


A266.1 (ex. b):

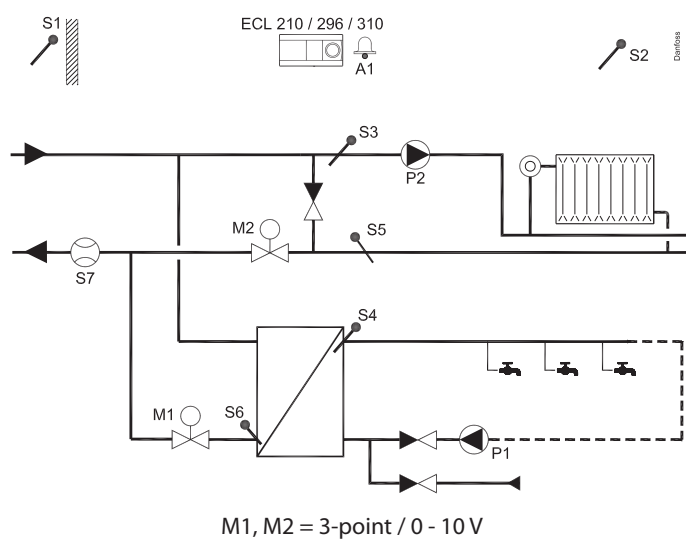


A266.1 (ex. c):

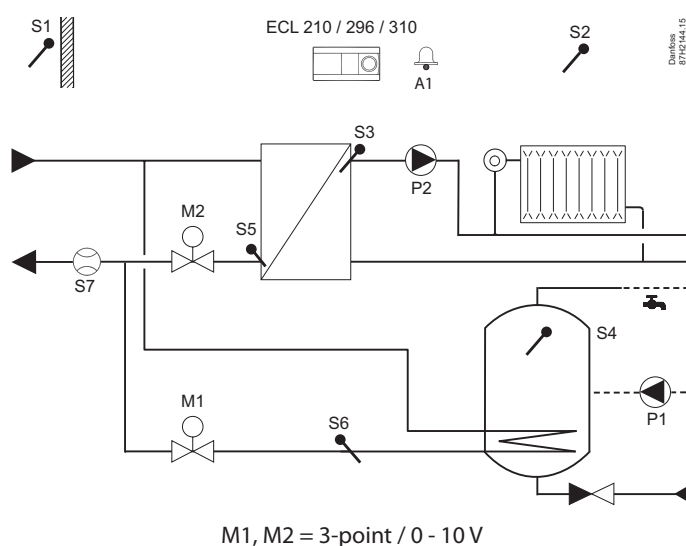


A266.2 (ex. a):

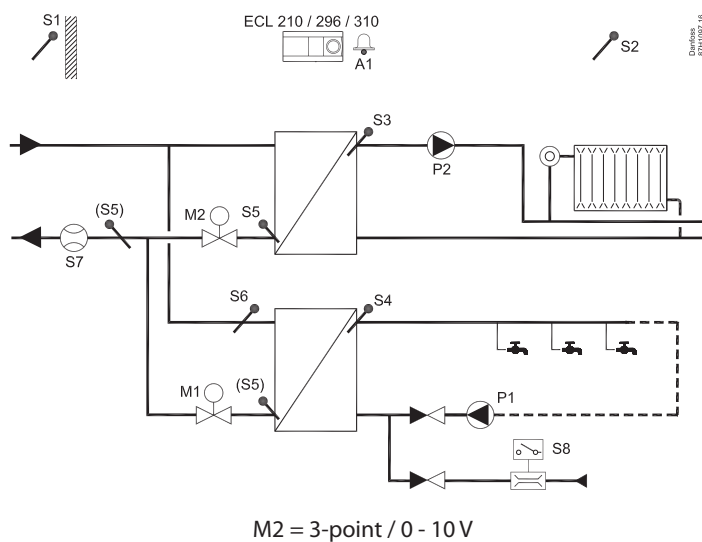

A266.9 (ex. a):

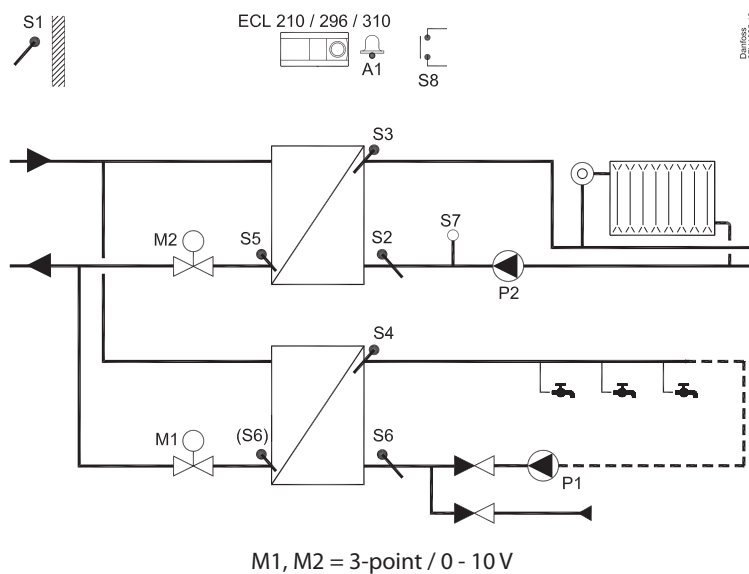

A266.10 (ex. a):

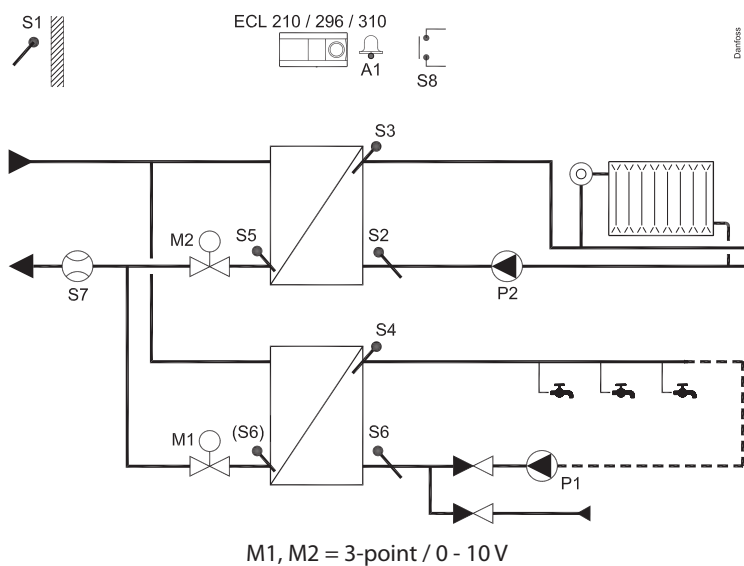

A266, ECA 32


	0 - 10 V:	
	M1	M2
A266.1	✓	✓
A266.2		✓
A266.9	✓	✓
A266.10	✓	✓

ECL Comfort 210 / 296 / 310:


230 V a.c.

R	4 (2) A / 230 V a.c.
R	
Tr	0,2 A / 230 V a.c.


ECL Comfort 210 / 310

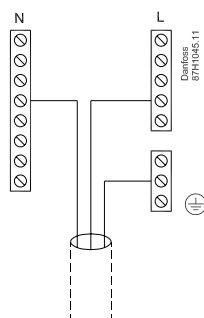


ECL Comfort 296

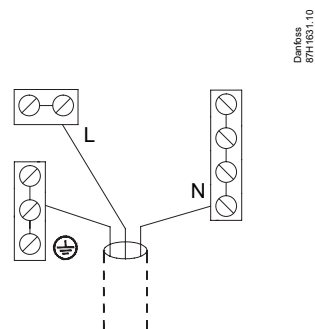

230 V a.c. , A266.1 / A266.2 / A266.9 / A266.10

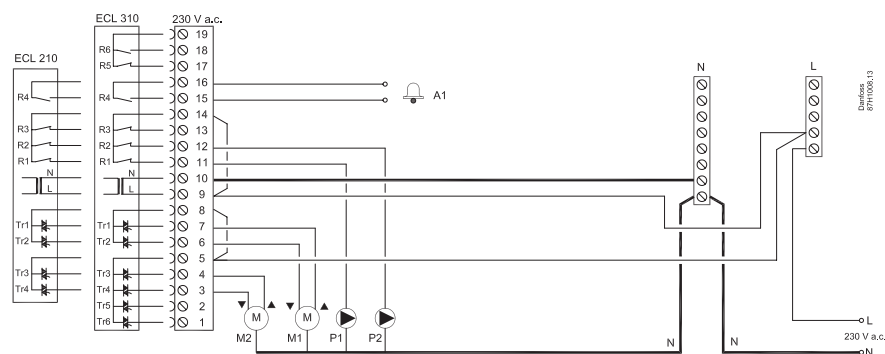


230 V a.c. , A266.1 / A266.2 / A266.9 / A266.10

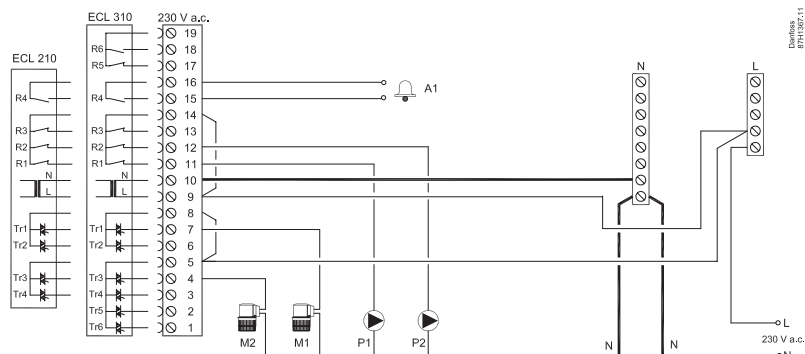


A266, ECL Comfort 310

ECA 32, V1, V2

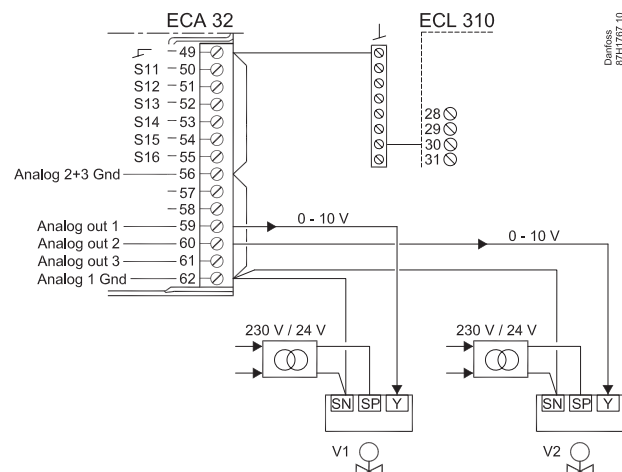


230 V a.c. / 24 V a.c. , safety thermostat

1-step closing

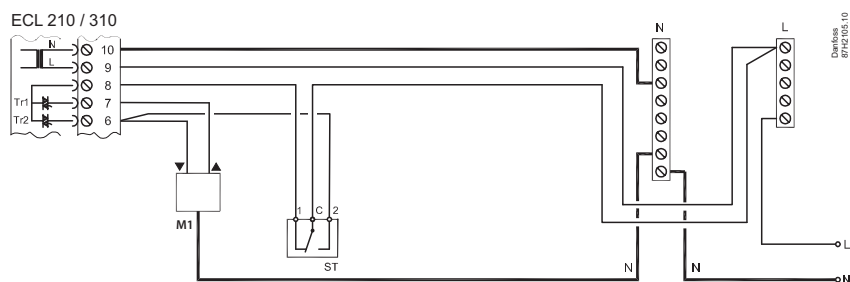


230 V a.c. / 24 V a.c. , safety thermostat

1-step closing

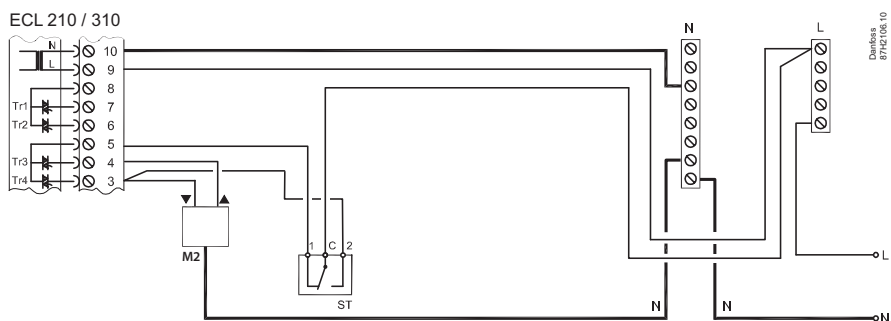


230 V a.c. / 24 V a.c. , safety thermostat

1-step closing

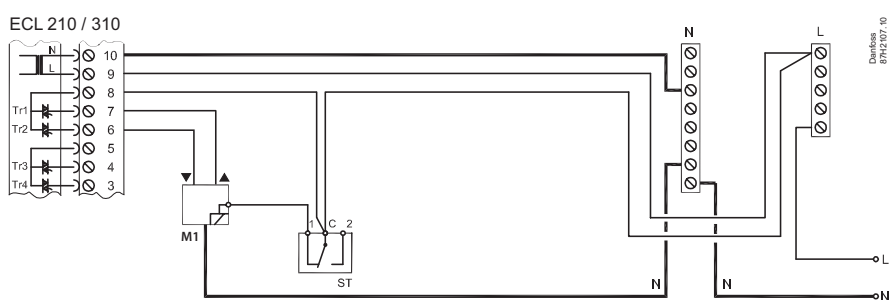


230 V a.c. / 24 V a.c. , safety thermostat

1-step closing

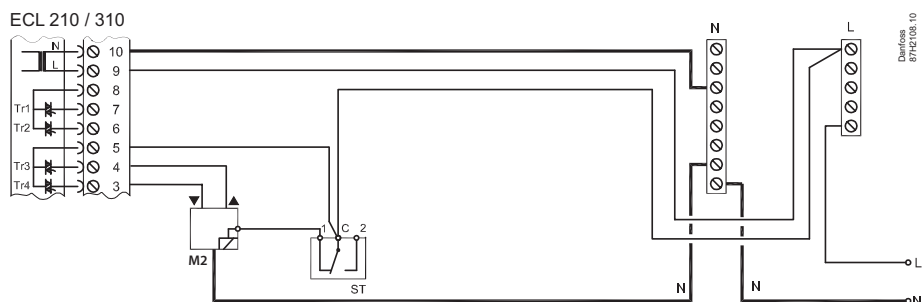


230 V a.c. / 24 V a.c. , safety thermostat

2-step closing

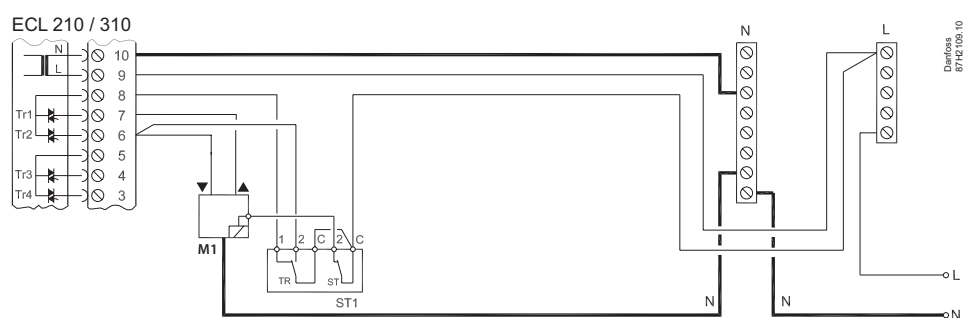

230 V a.c. / 24 V a.c. , safety thermostat

2-step closing

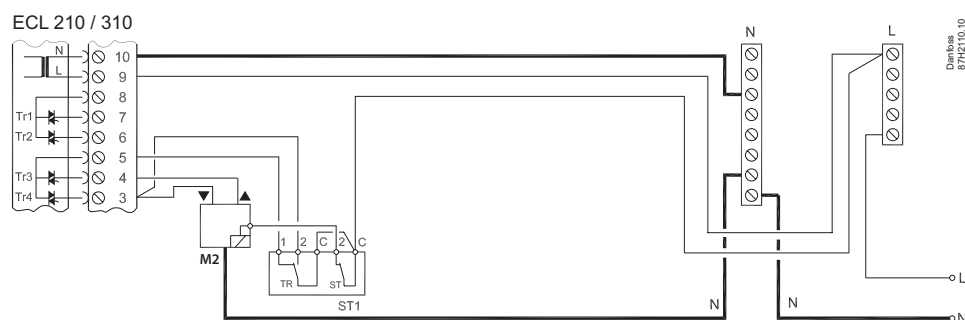


ECL Comfort 310:


24 V a.c.

R	4 (2) A / 24 V a.c.
R	
Tr	1 A / 24 V a.c.

24 V a.c. (A266.1 / A266.2 / A266.9 / A266.10)

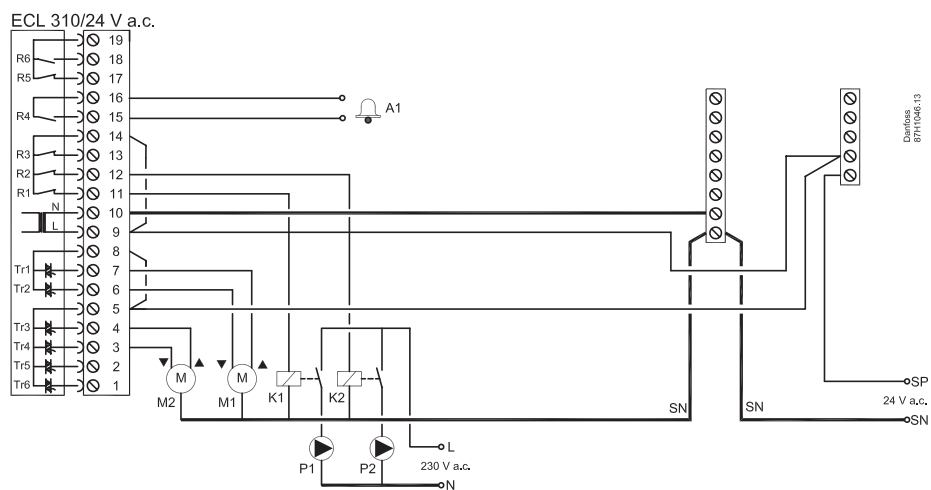


24 V a.c. (A266.1 / A266.2 / A266.9 / A266.10)

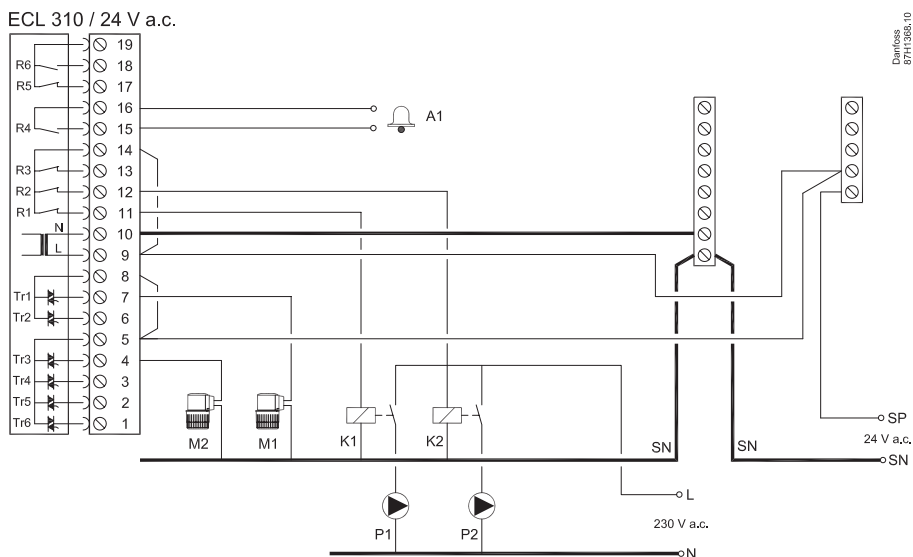


Installation Guide, ECL Comfort 210 / 296 / 310, A266

 **Pt 1000** (1000 Ω / 0 °C)

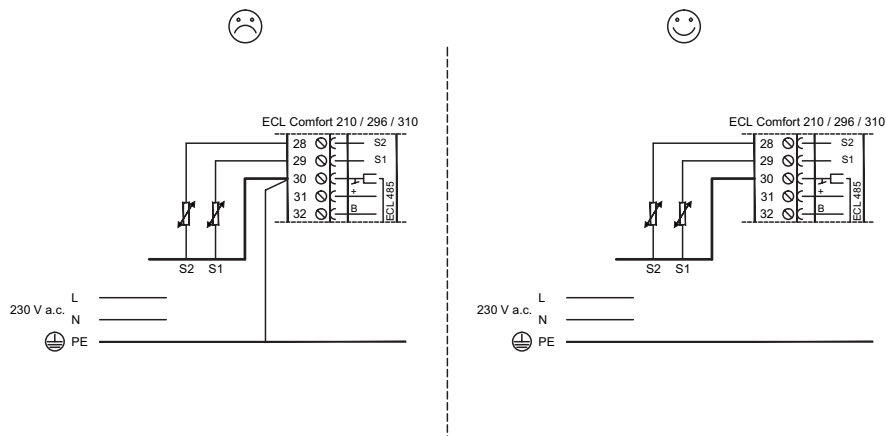

Danfoss
87H1087.11

A266.1 / A266.2 / A266.9 / A266.10

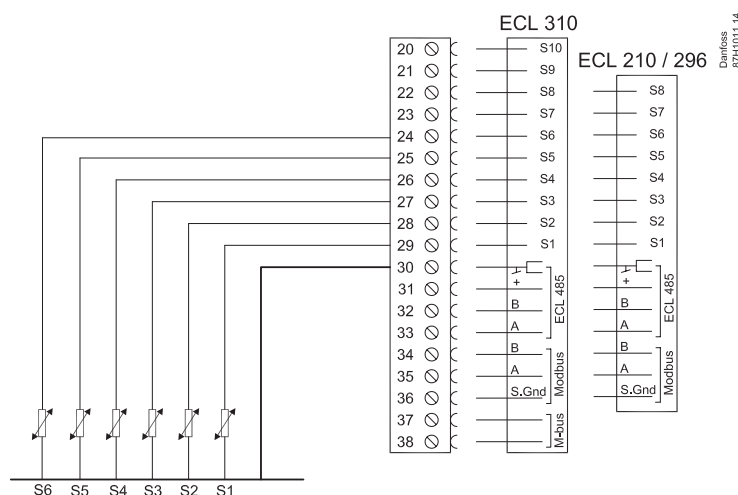


Danfoss
87H1011.14

A266.1 / A266.2 / A266.10



S7

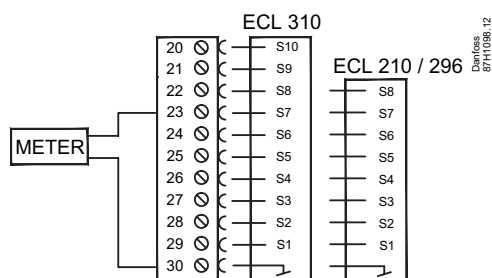

Danfoss
87H1088.12

A266.1 / A266.2 / A266.10




S7




A / B ?


A:

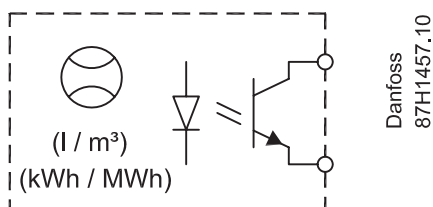


B:

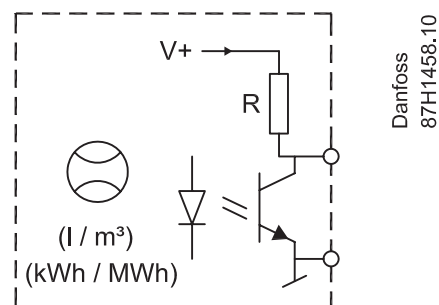


A:

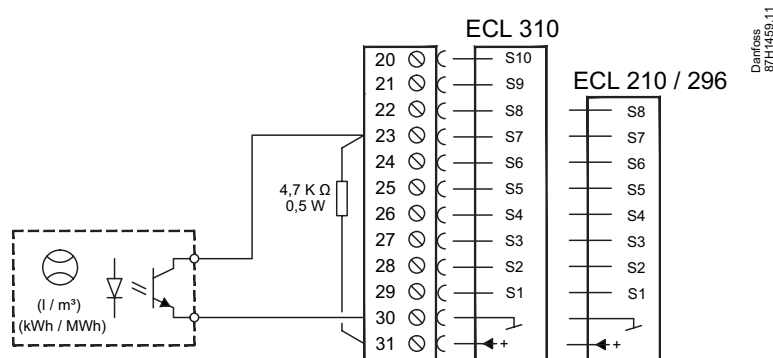



B:

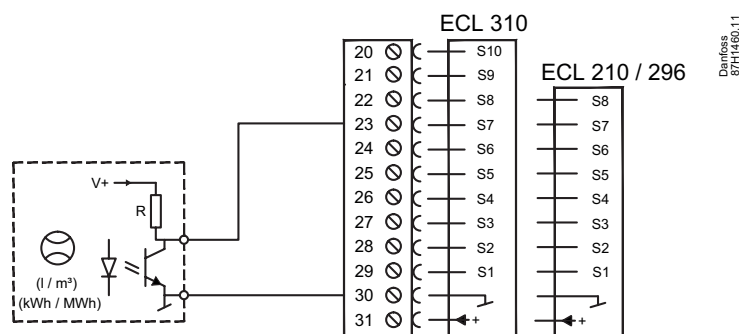

S8


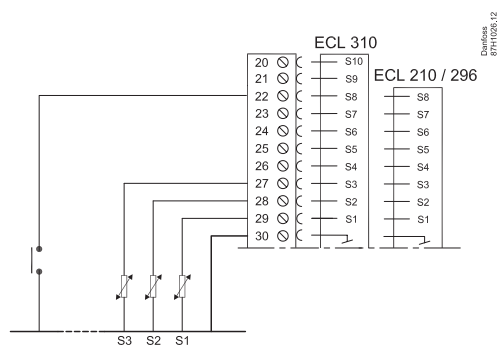


A266.9

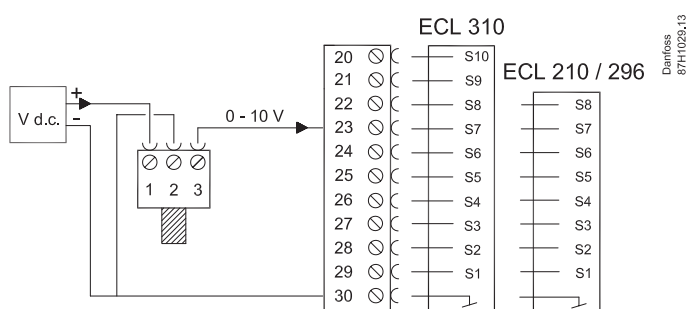 


V d.c. = 12 - 24 V d.c.


ECA 30 / 31

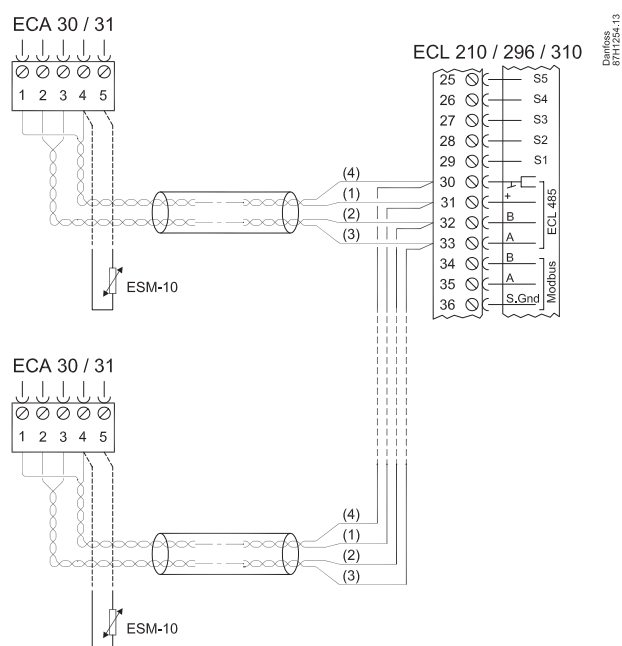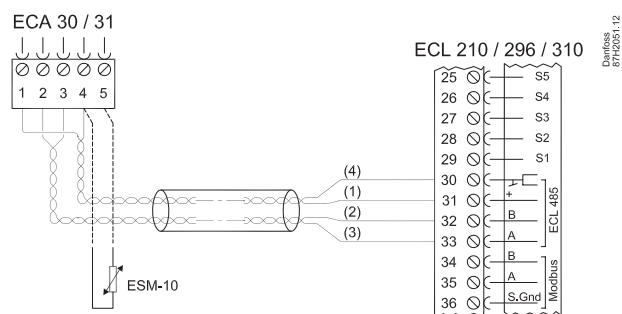



Master / slave

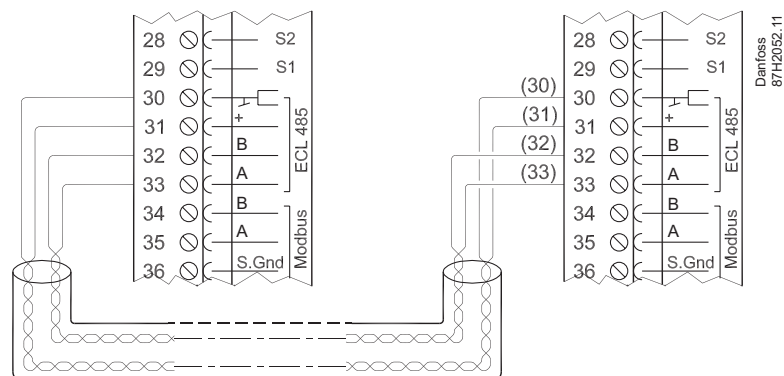



Modbus

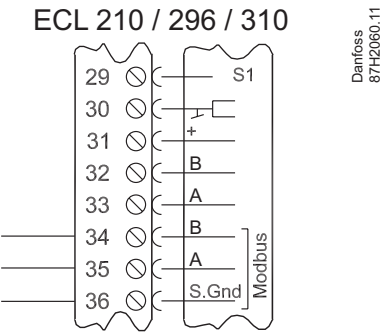

M-bus

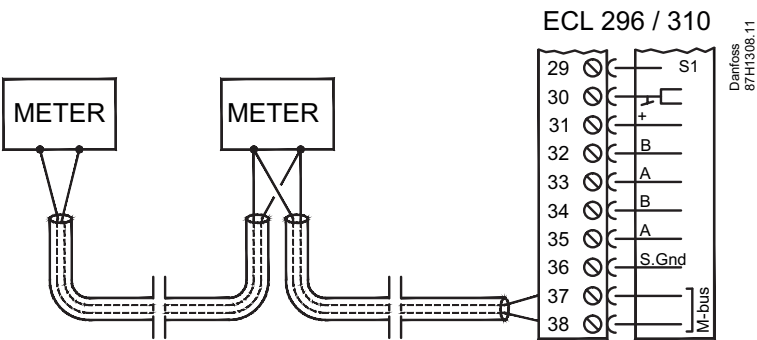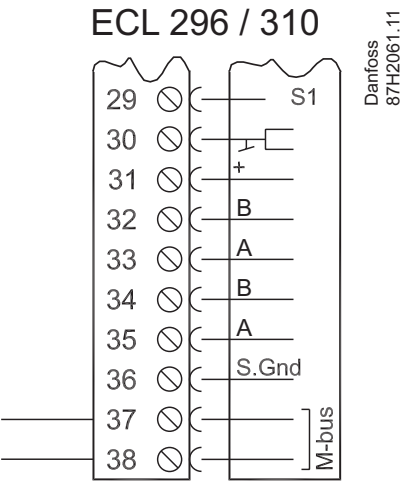


Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

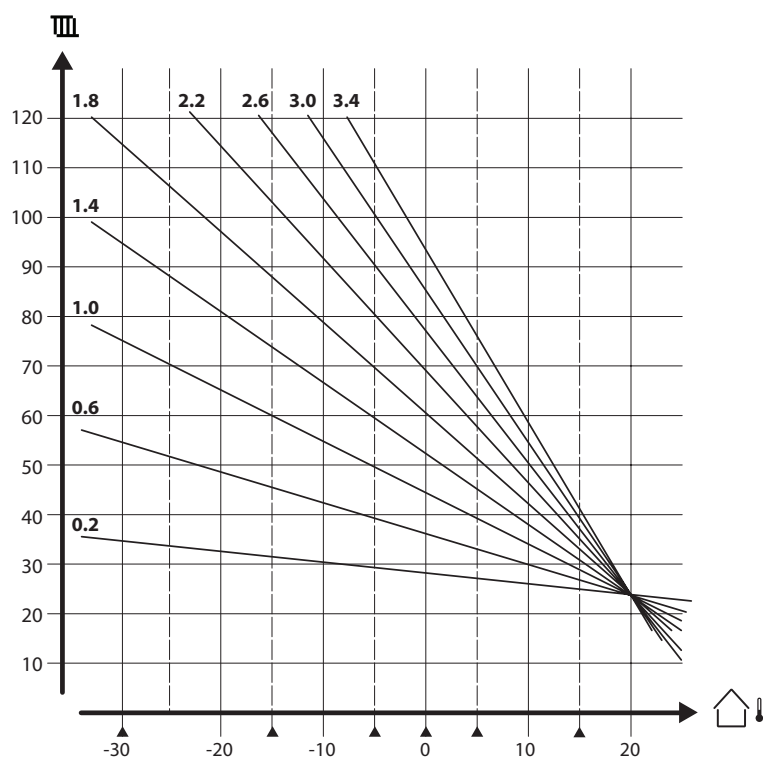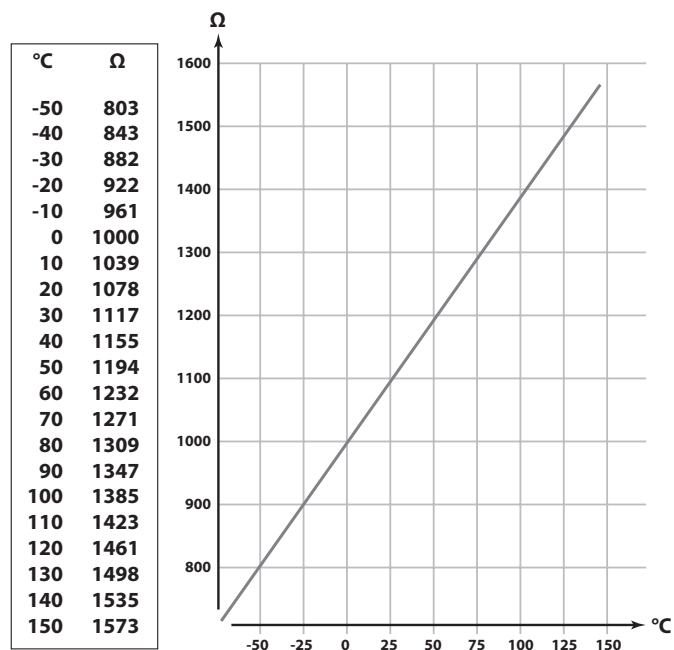


ECA 30


1

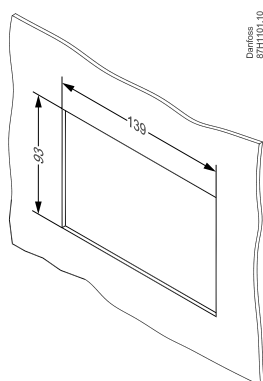


2

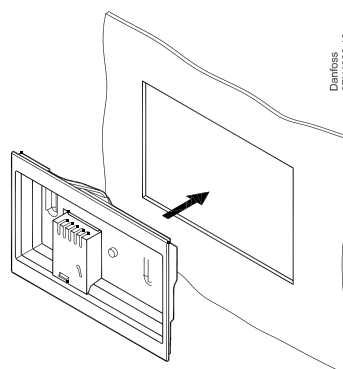


3

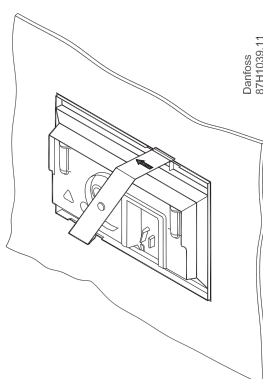


4

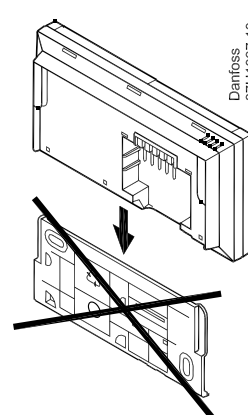


5

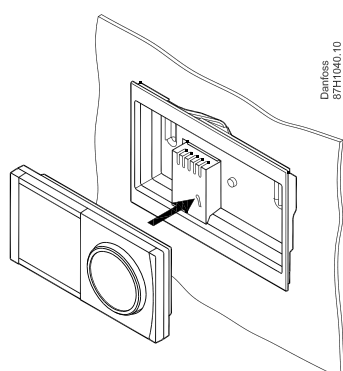


6

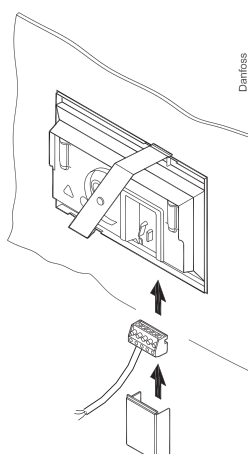

7

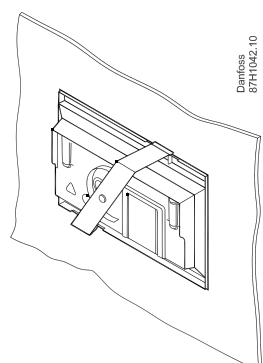


8

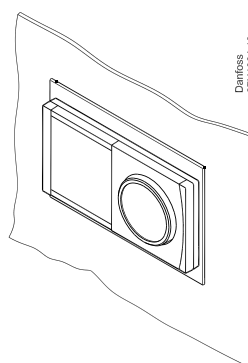


ECL Comfort 296


A:

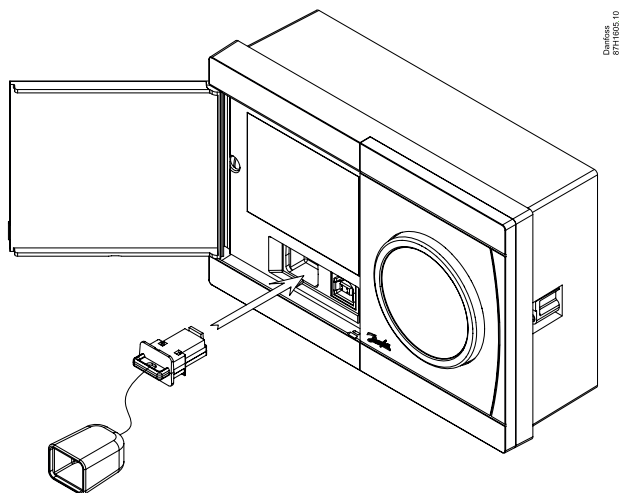


B:

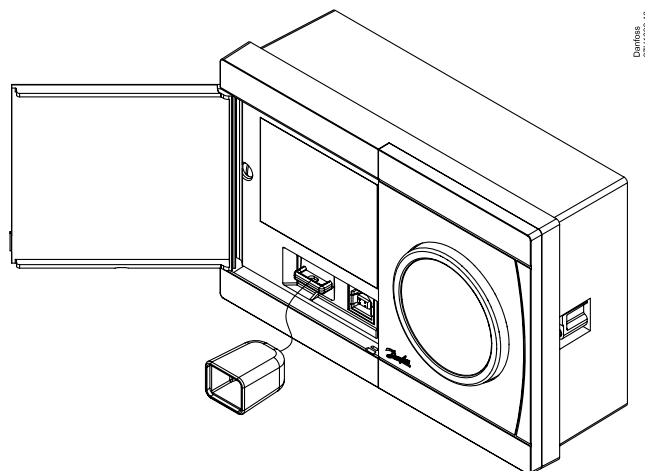

C:



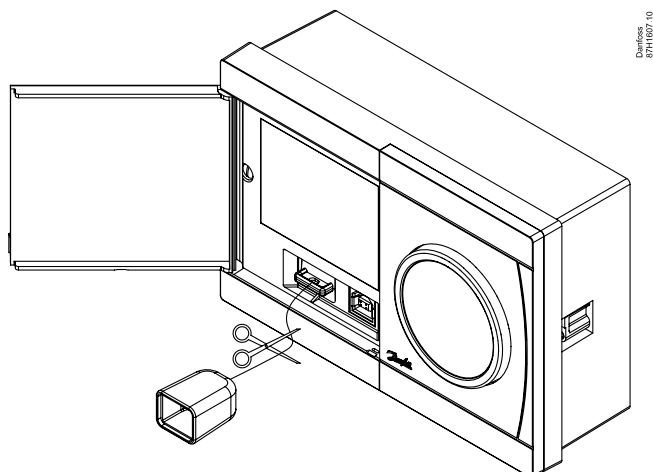


D:

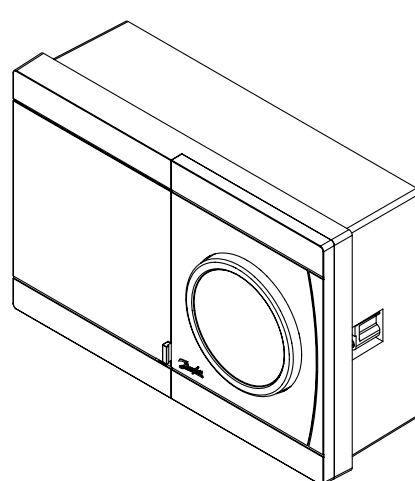

Installation Guide, ECL Comfort 210 / 296 / 310, A266

ECL Comfort 210 / 310

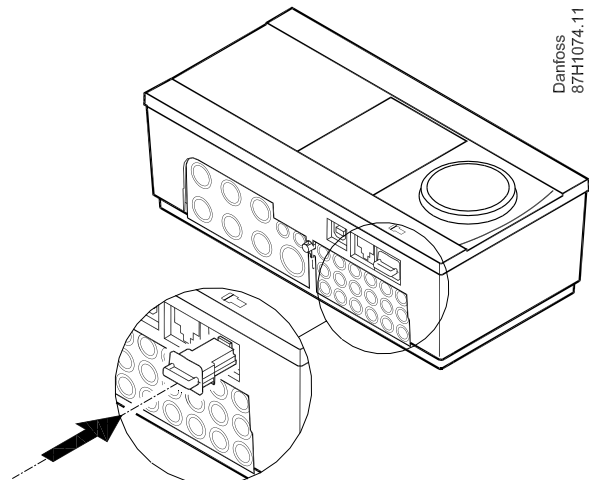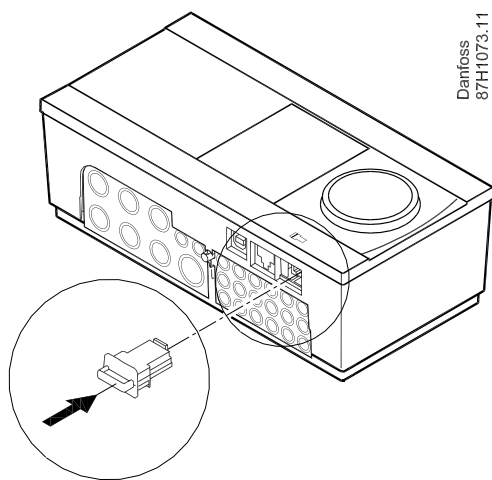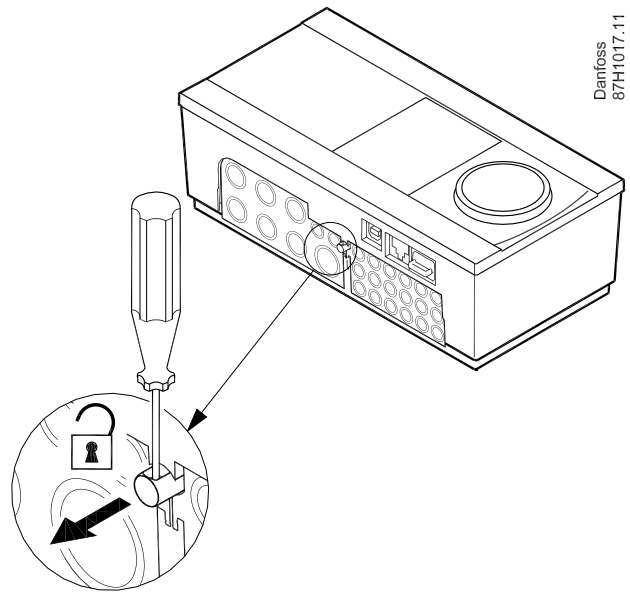

? **ECL Comfort 210 / 296 / 310, A266: www.heating.danfoss.com**

? **<https://www.youtube.com/user/DanfossHeating>**
-> Playlists -> How-to Videos -> District Energy installation videos



Danfoss A/S

Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com



Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without consequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.