

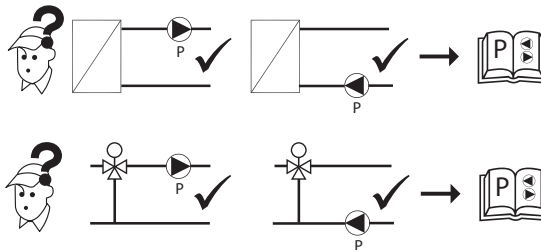
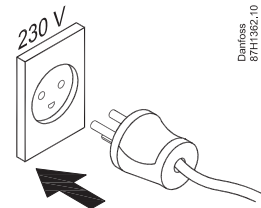
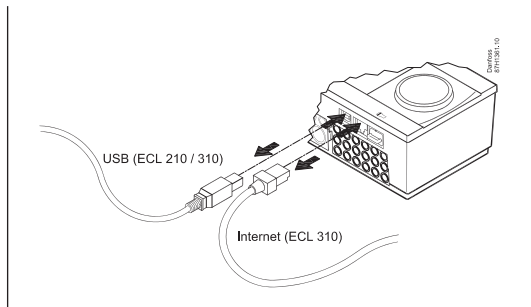


Installation Guide

ECL Comfort 210 / 296 / 310, A237 / A337 (code no. 087H3806, 087H3821)

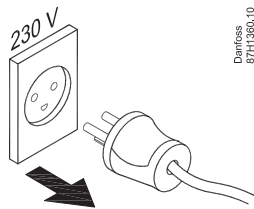


A237.1, ex. a / A337.1, ex. a:

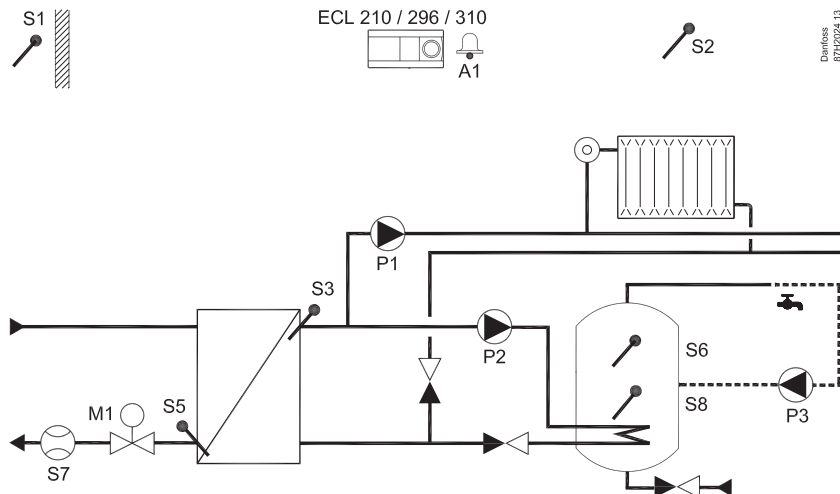


ECL 210 / 310 = ECL 210 / 296 / 310

A237.1, ex. b / A337.1, ex. b:

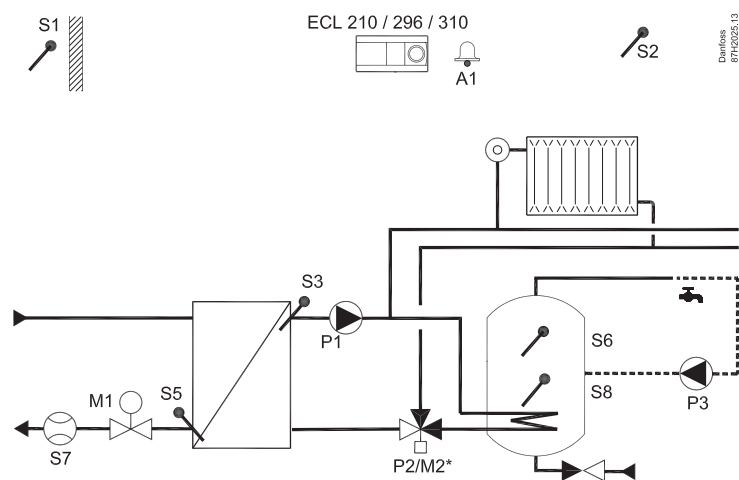


ECL 210 / 310 = ECL 210 / 296 / 310

A237.1, ex. c / A337.1, ex. c:

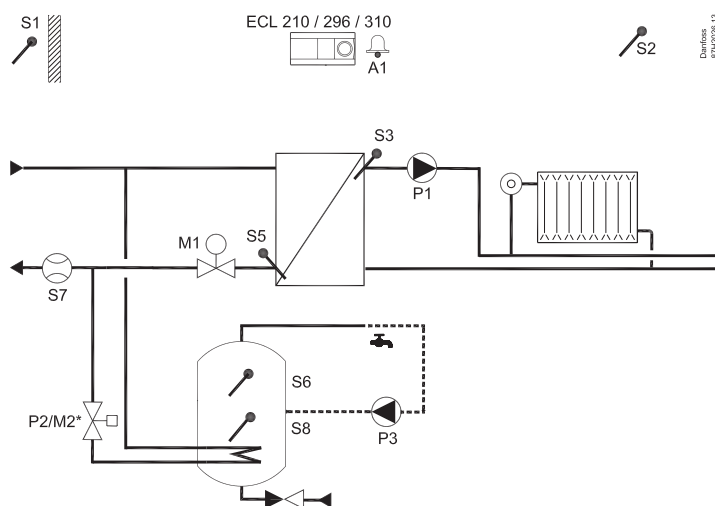


ECL 210 / 310 = ECL 210 / 296 / 310

A237.1, ex. d / A337.1, ex. d:

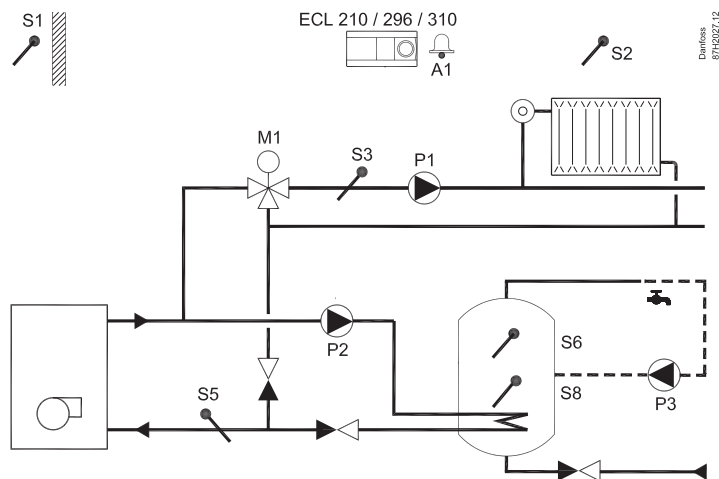


ECL 210 / 310 = ECL 210 / 296 / 310

A237.2, ex. a / A337.2, ex. a:

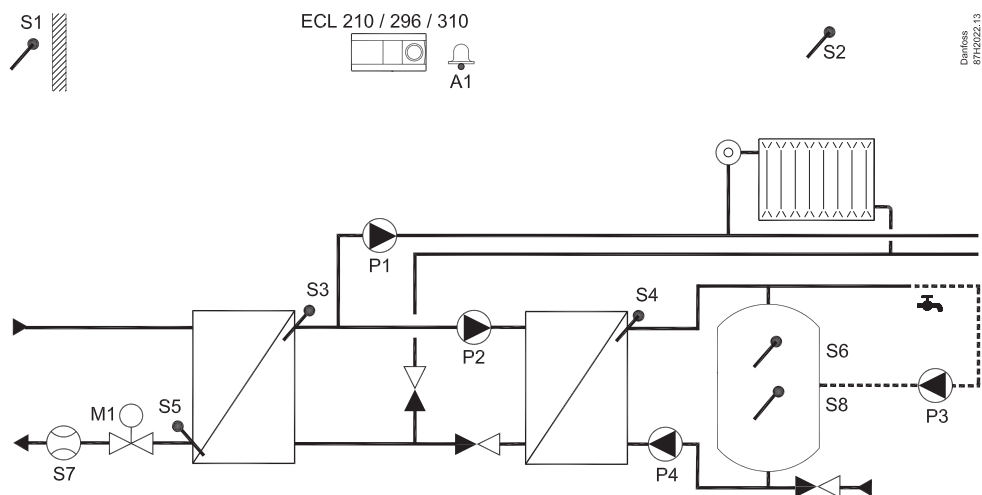
$$\text{ECL } 210 / 310 = \text{ECL } 210 / 296 / 310$$

A237.2, ex. b / A337.2, ex. b:

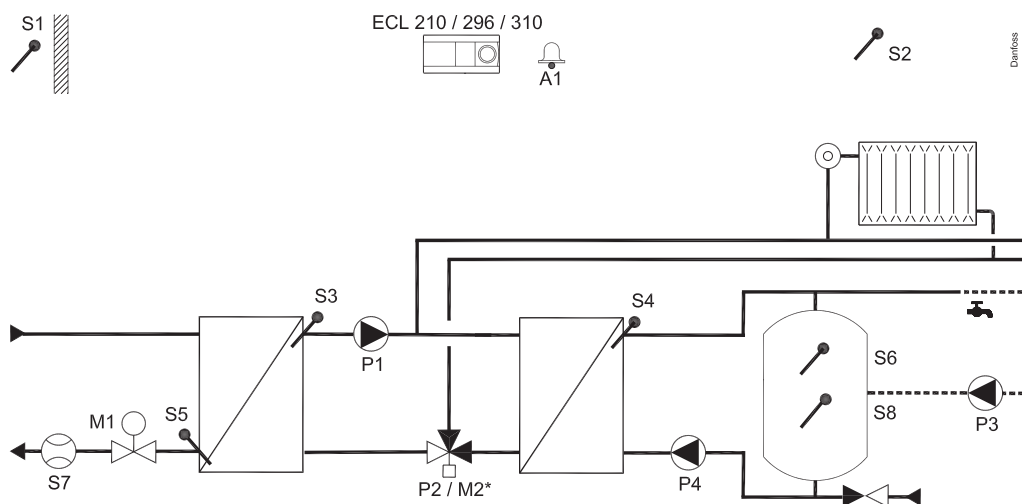
$$\text{ECL } 210 / 310 = \text{ECL } 210 / 296 / 310$$


		ECL 210	ECL 296	ECL 310
A237	A237.1	√	√	√
	A237.2	√	√	√
	A337.1			√
	A337.1			√

Installation Guide, ECL Comfort 210 / 296 / 310, A237 / A337


ECL Comfort 210 / 296 / 310:

230 V a.c.


R 	4 (2) A / 230 V a.c.
Tr 	0,2 A / 230 V a.c.

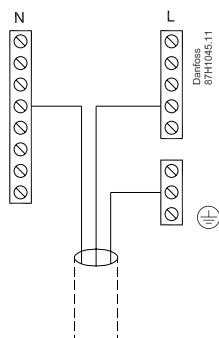


230 V a.c., A237.1

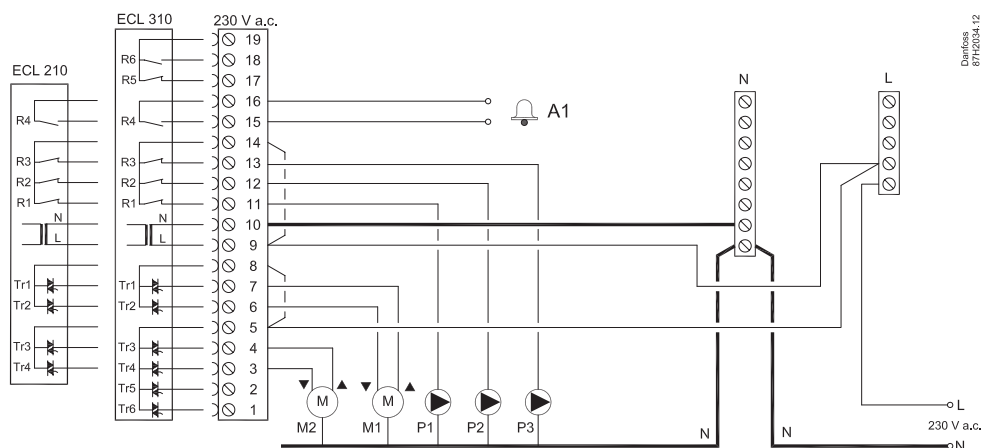


230 V a.c., A237.2

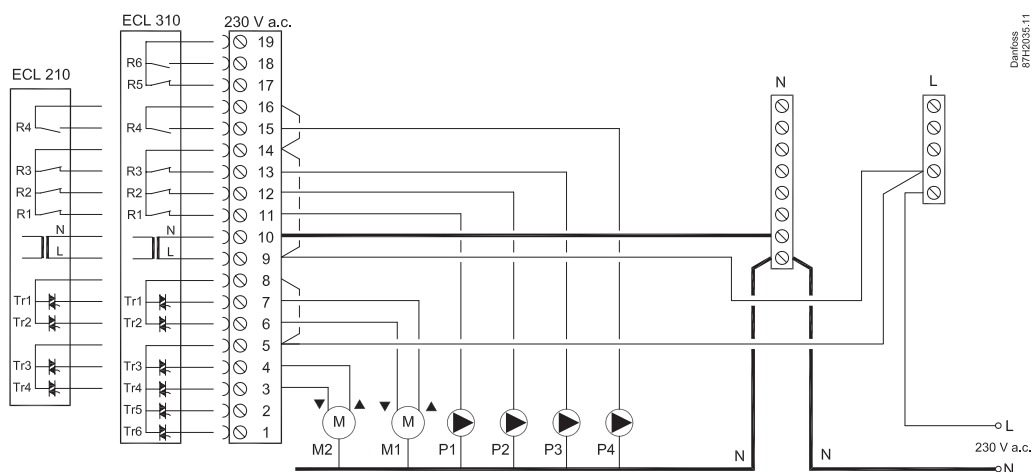


230 V a.c., A237.1, A237.2

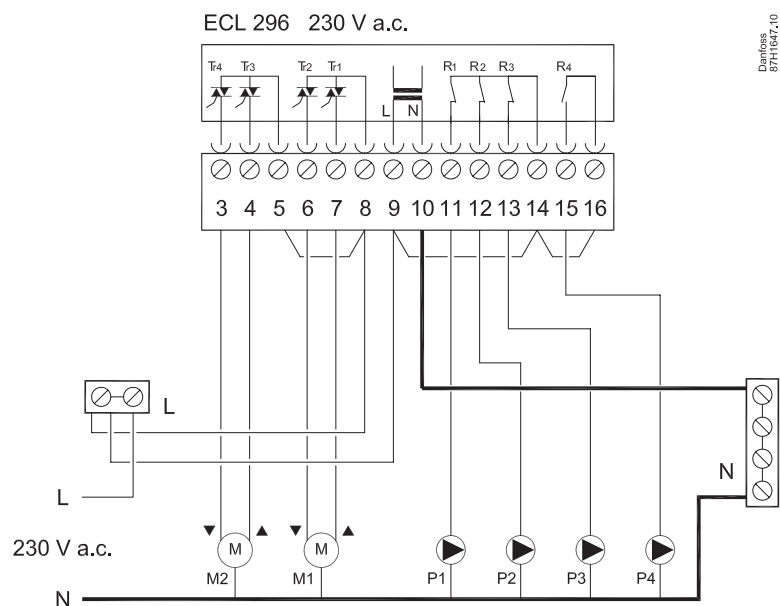ECL 296


230 V a.c., A337.1

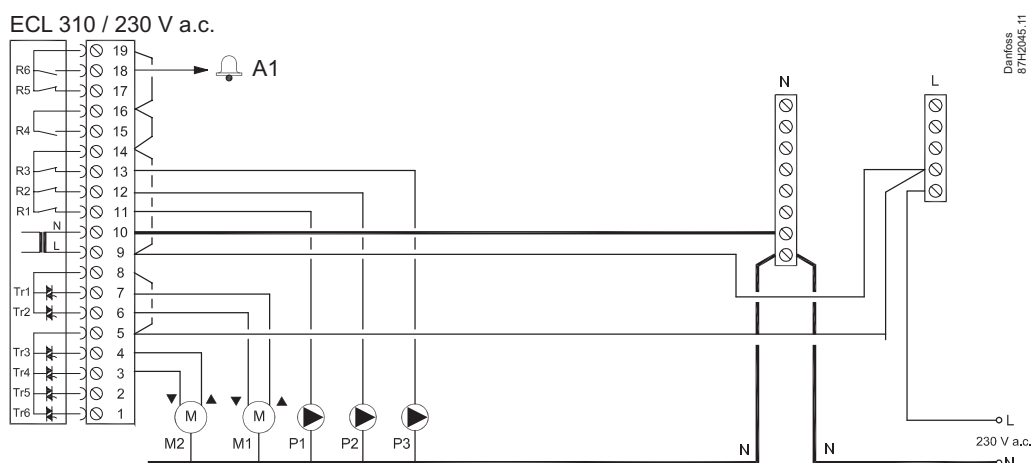

230 V a.c., A337.2

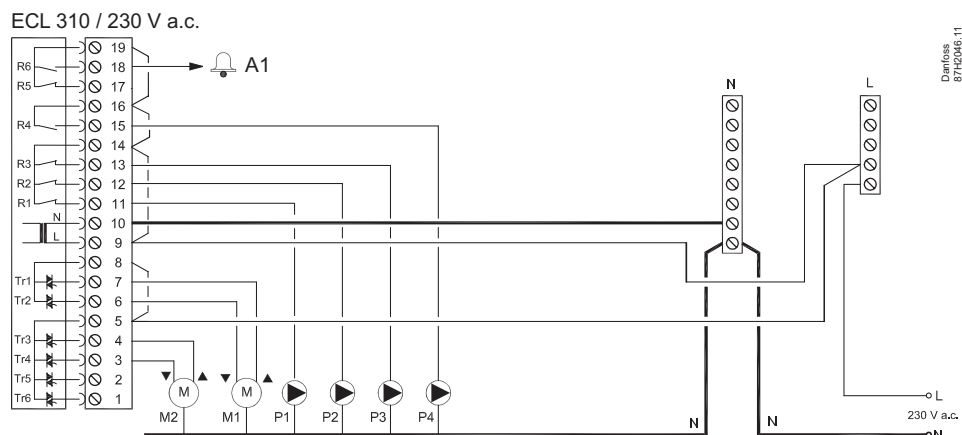


230 V a.c.
Danfoss Thermo-actuator ABV

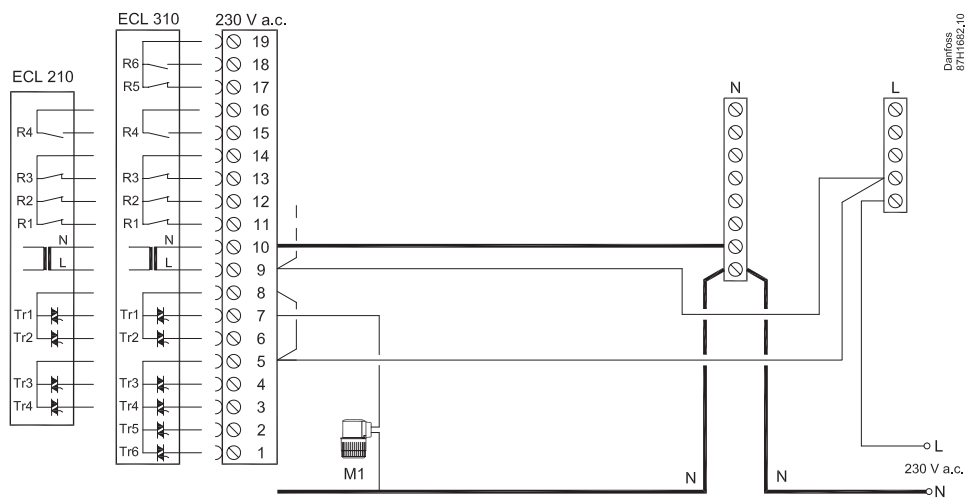


ECL Comfort 210 / 296 / 310:
24 V a.c.

R	4 (2) A / 24 V a.c.
Tr	1 A / 24 V a.c.


24 V a.c., A237.1

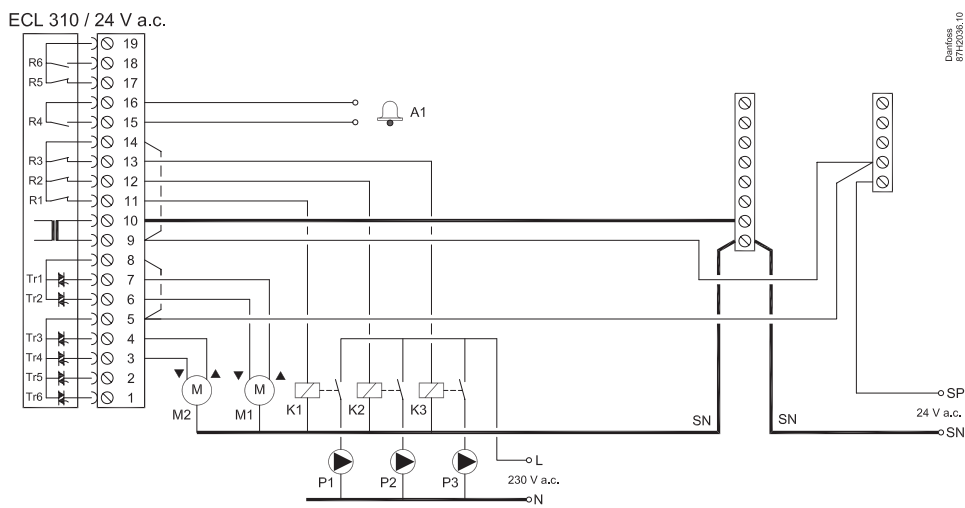


24 V a.c., A237.2

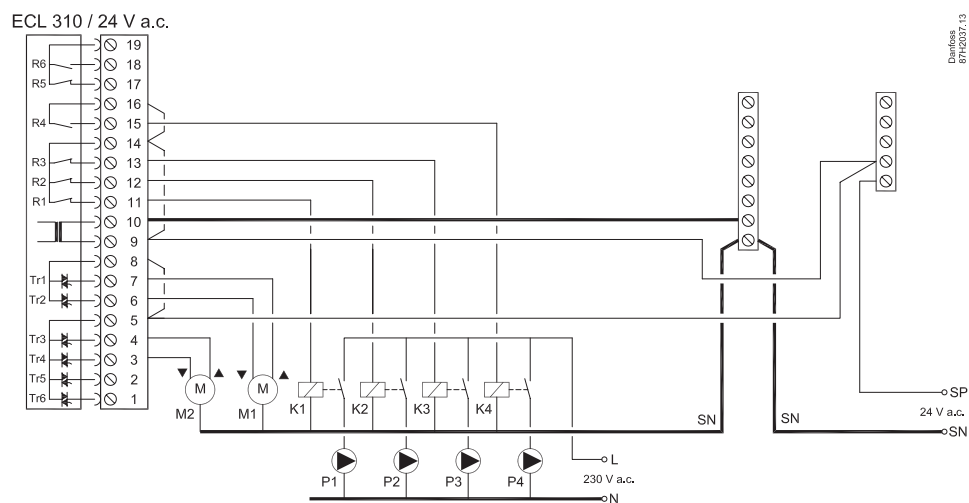

24 V a.c., A337.1

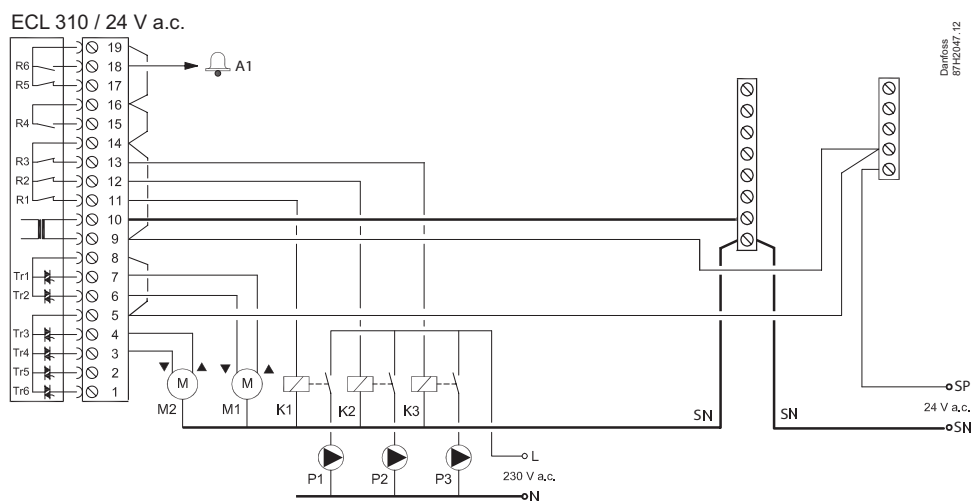


24 V a.c., A337.2

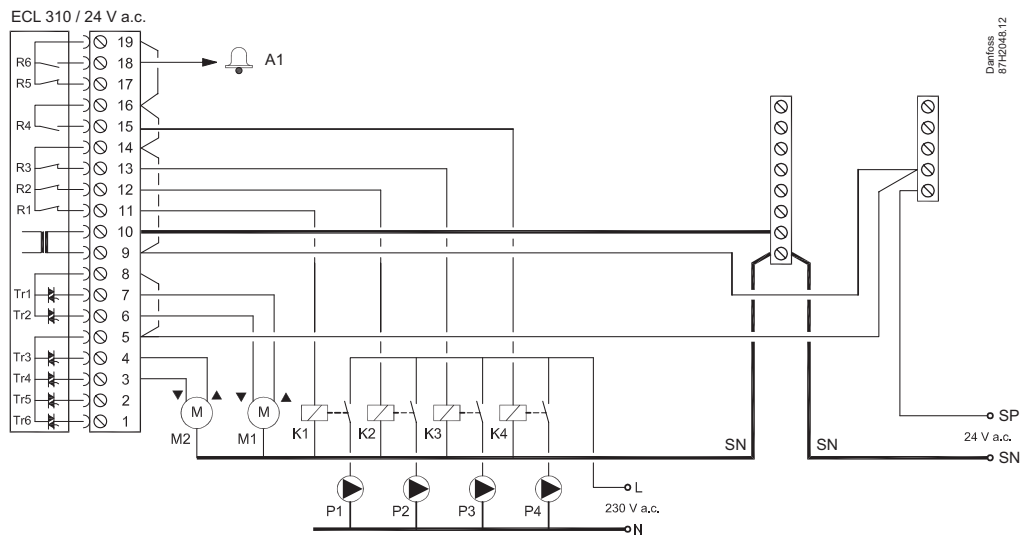


24 V a.c.

Danfoss Thermo-actuator ABV

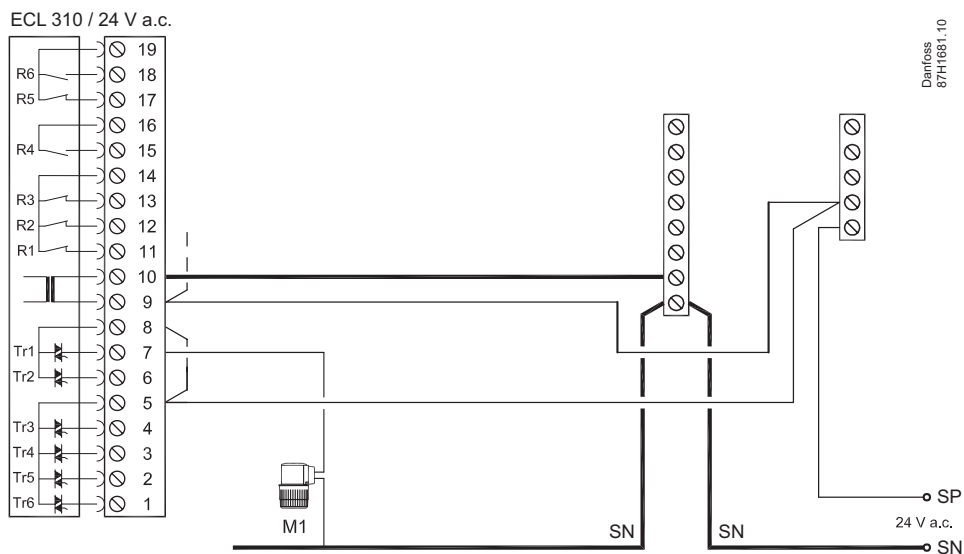


230 V a.c. / 24 V a.c. , safety thermostat

1-step closing

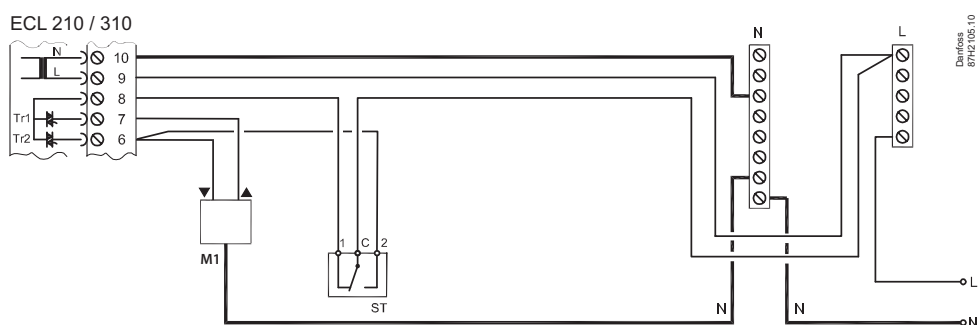


230 V a.c. / 24 V a.c. , safety thermostat

1-step closing

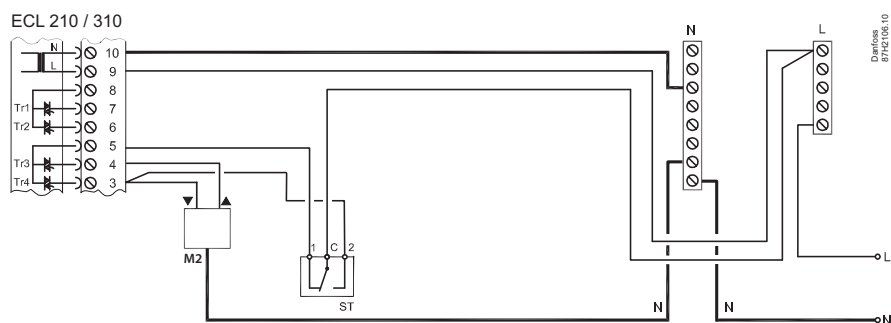


230 V a.c. / 24 V a.c. , safety thermostat

1-step closing

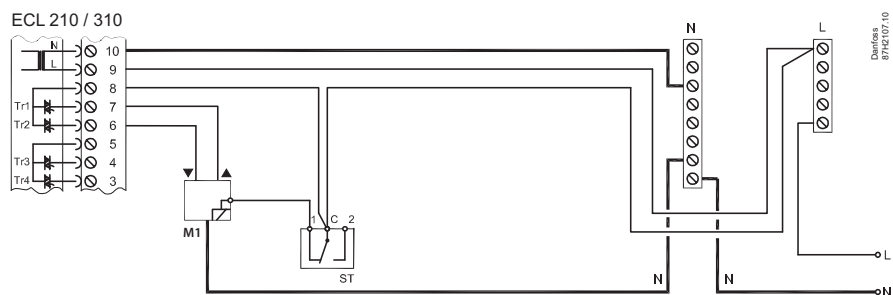


230 V a.c. / 24 V a.c. , safety thermostat

1-step closing

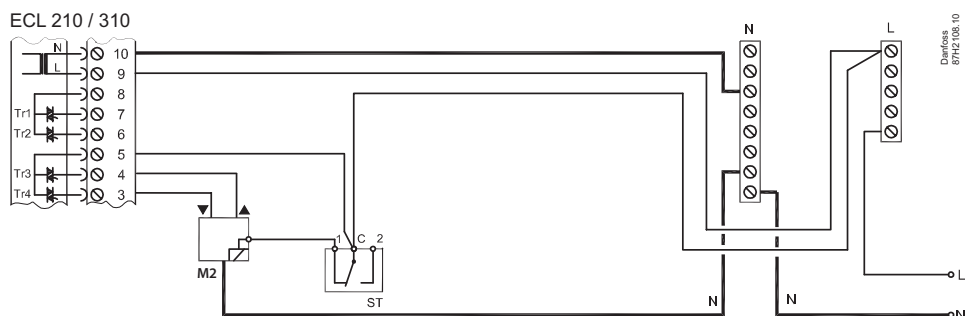


230 V a.c. / 24 V a.c. , safety thermostat

2-step closing


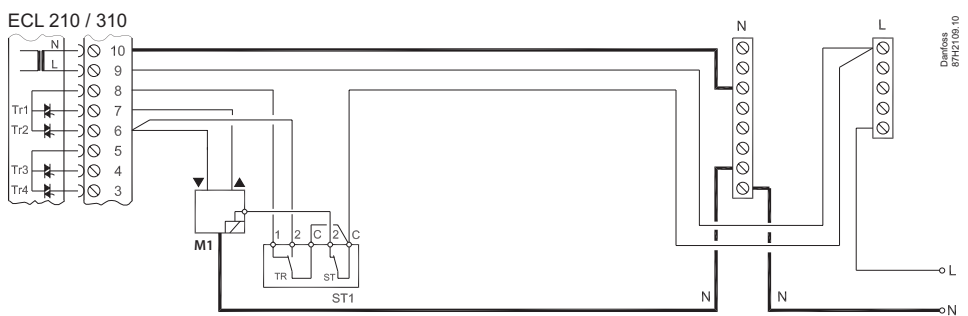


230 V a.c. / 24 V a.c. , safety thermostat

2-step closing

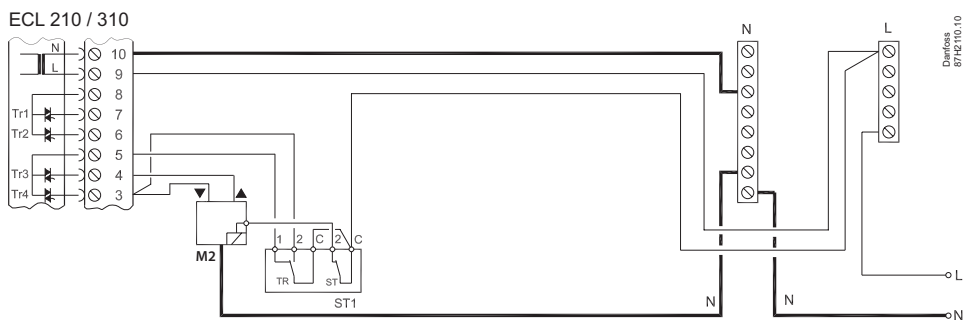

 **Pt 1000** (1000 Ω / 0 °C)

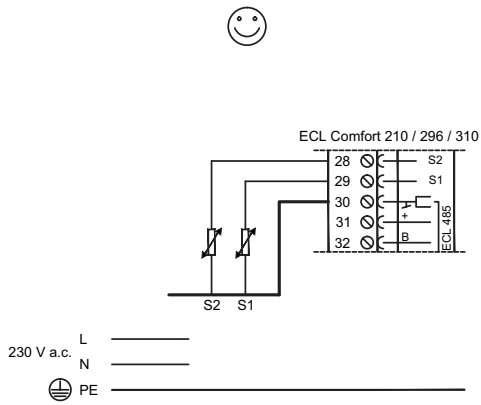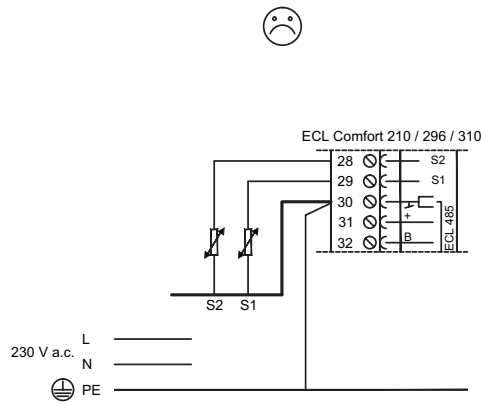


Danfoss
871407.11

 **Pt 1000** (1000 Ω / 0 °C)

ECL 210 / 296 / 310


	S1	S2	S3	S4	S5	S6	S7	S8
A237.1	✓	✓	✓		✓	✓		✓
A237.2	✓	✓	✓	✓	✓	✓		✓

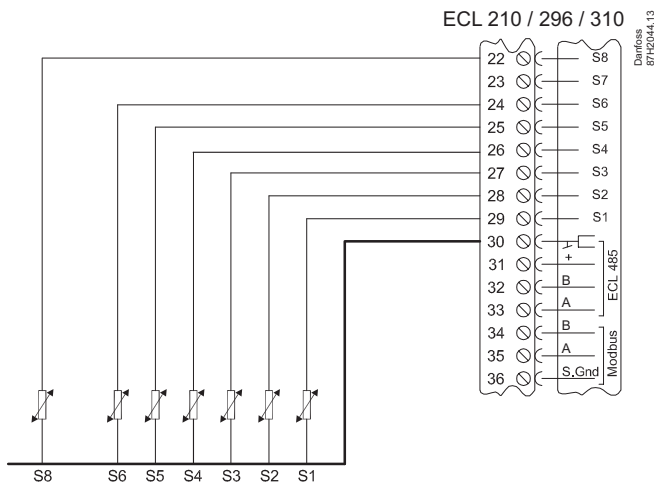

 **Pt 1000** (1000 Ω / 0 °C)

ECL 310

	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10
A337.1	✓	✓	✓		✓	✓		✓		0 - 10 V
A337.2	✓	✓	✓	✓	✓	✓		✓		0 - 10 V

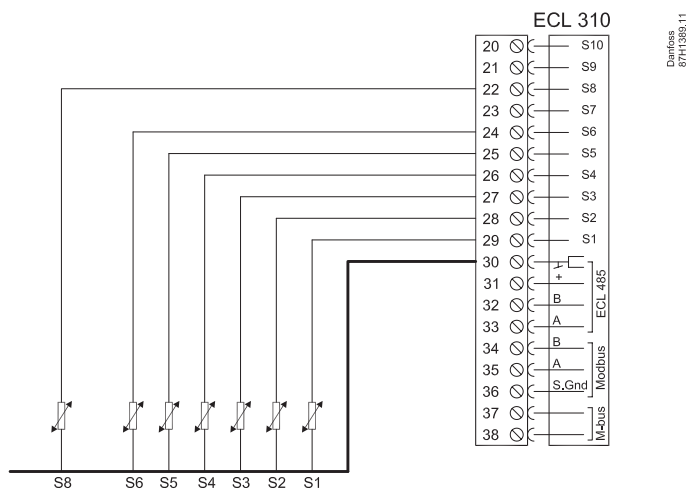


Danfoss
87H1389.11

A237.1, A237.2



S7

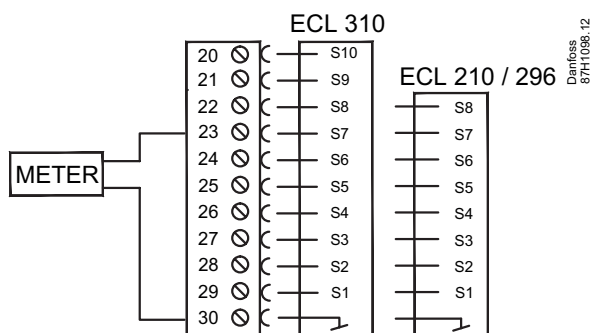

Danfoss
87H1088.12

A237.1, A237.2




S7




A / B ?

A:

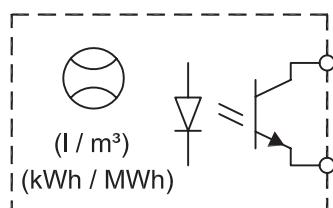

Danfoss
87H1457.10


B:

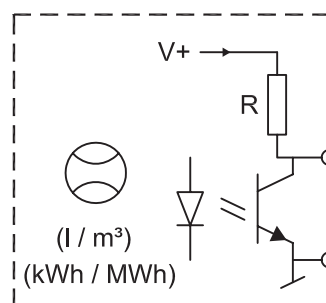

Danfoss
87H1458.10




A:

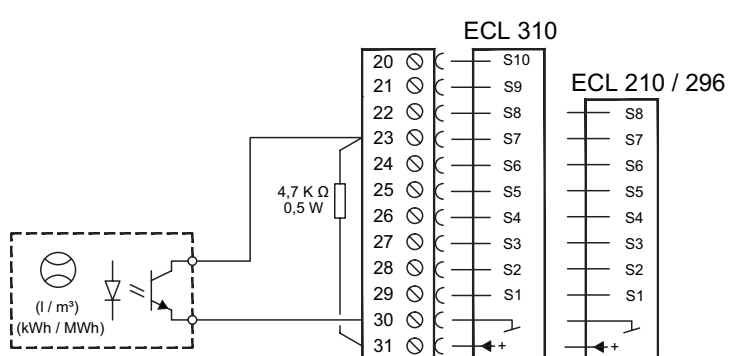


Danfoss
87H1459.11

B:

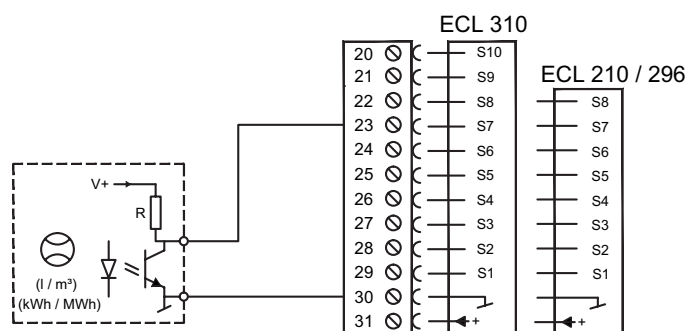


Danfoss
87H1460.11


A337.1, A337.2:

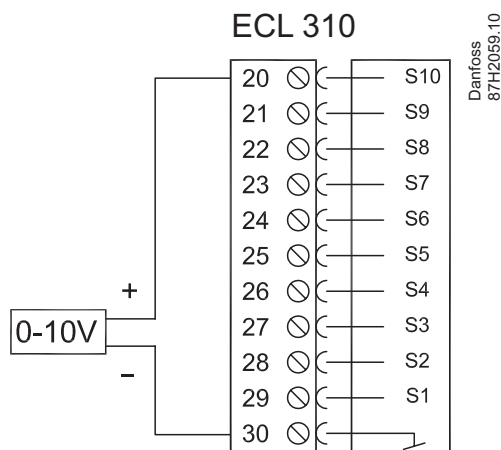


ECA 30 / 31

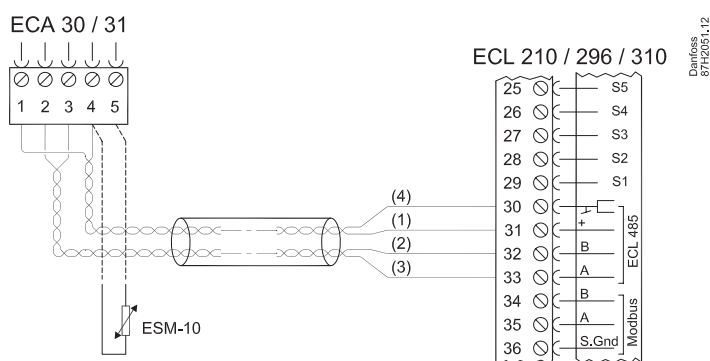


ECA 30 / 31

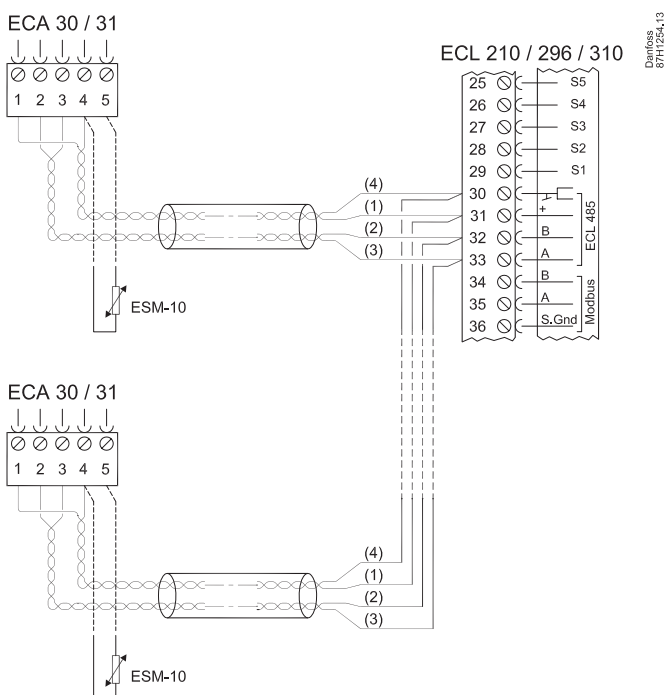


Master / slave

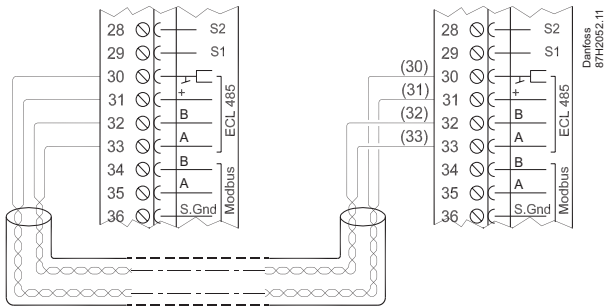


Modbus

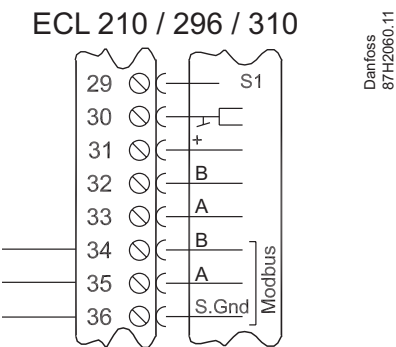



M-bus

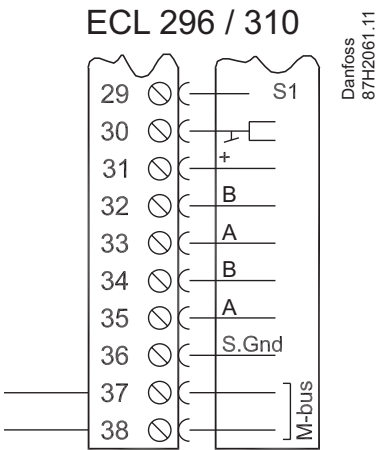

M-bus

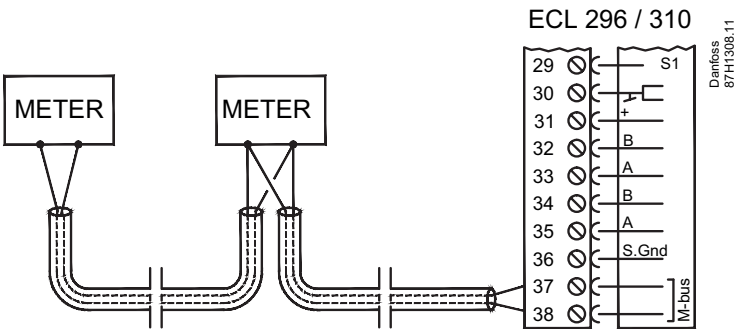


Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

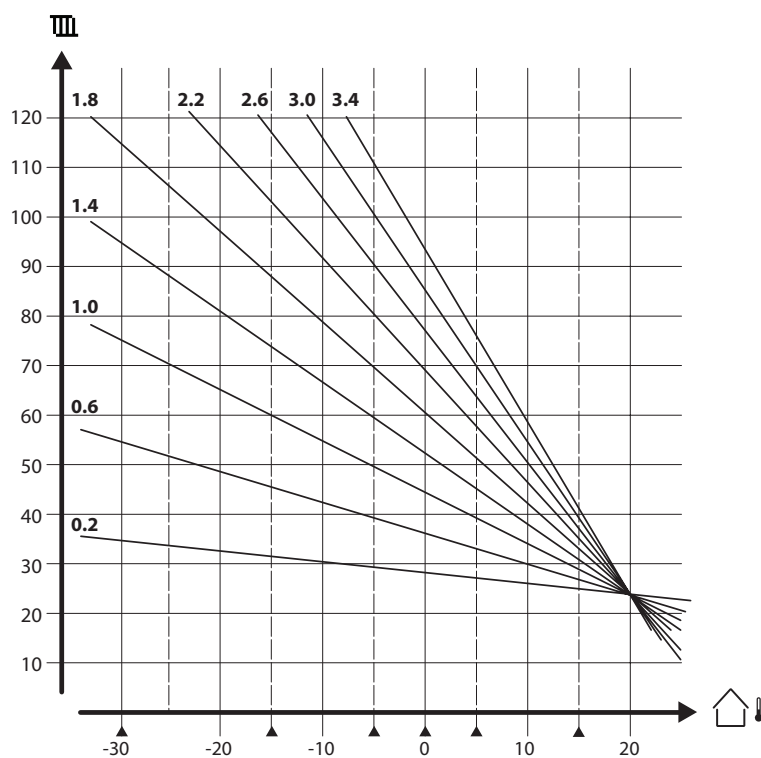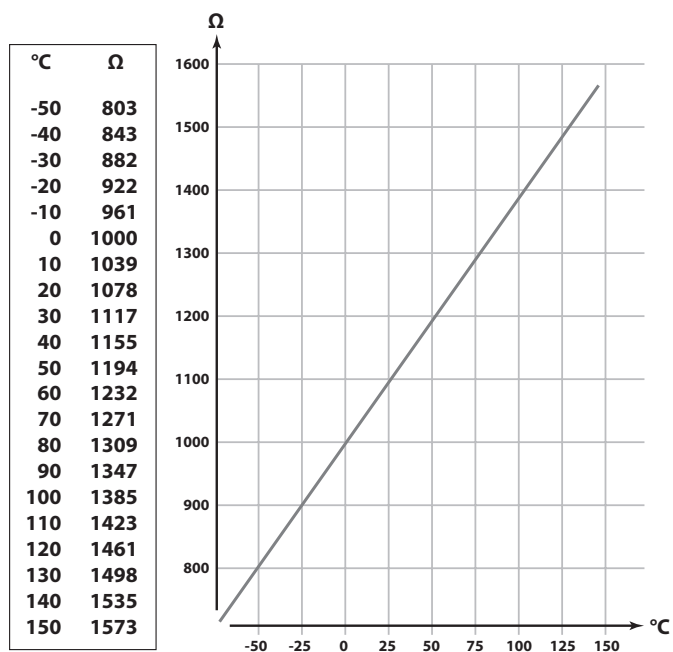


ECA 30


1

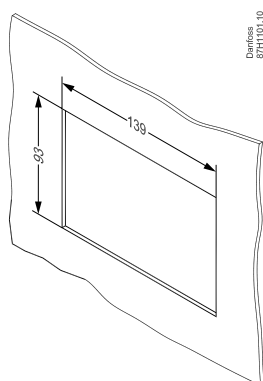


2

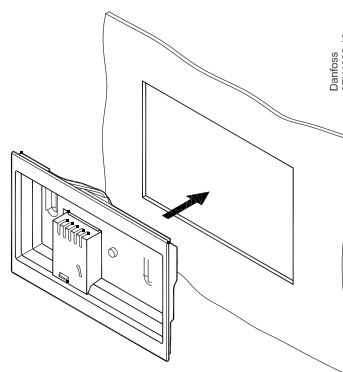


3

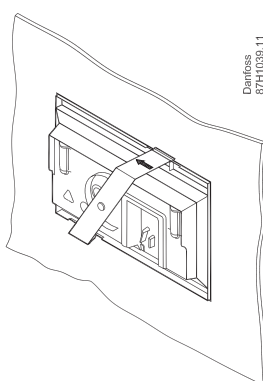


4

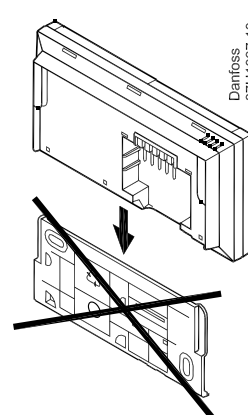


5

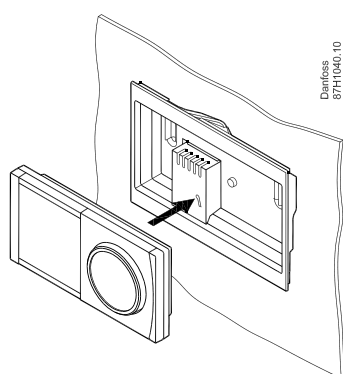


6

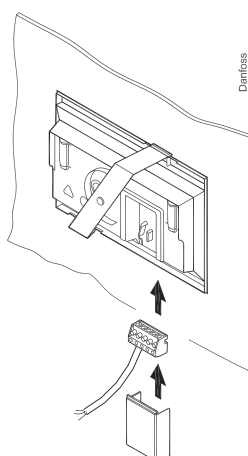





7

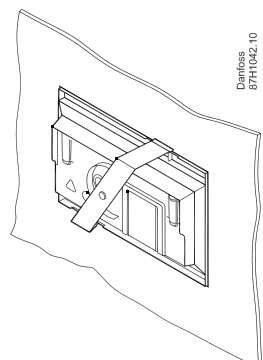

8

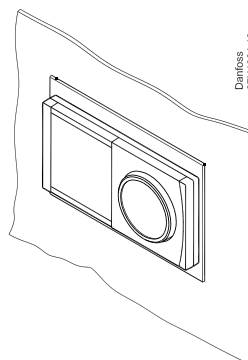

Installation Guide, ECL Comfort 210 / 296 / 310, A237 / A337

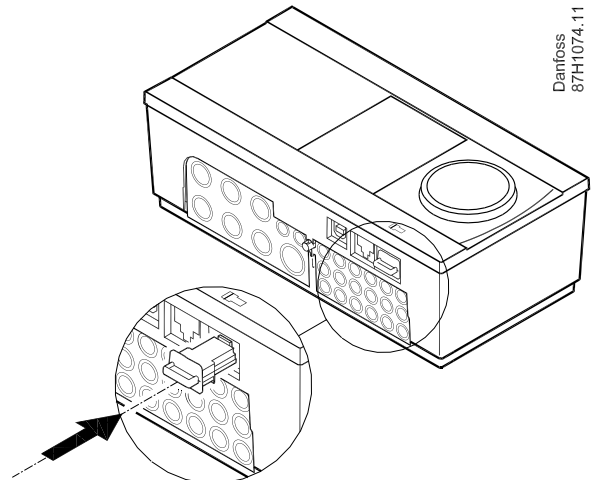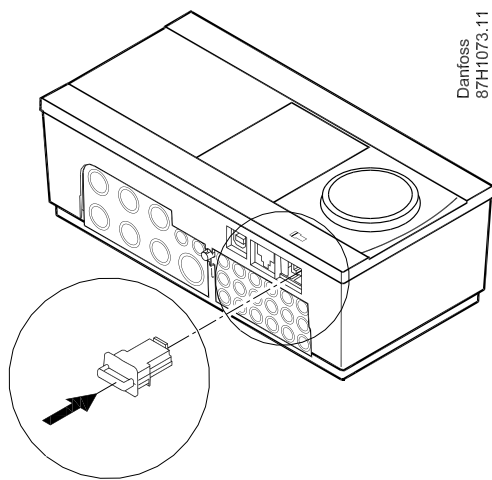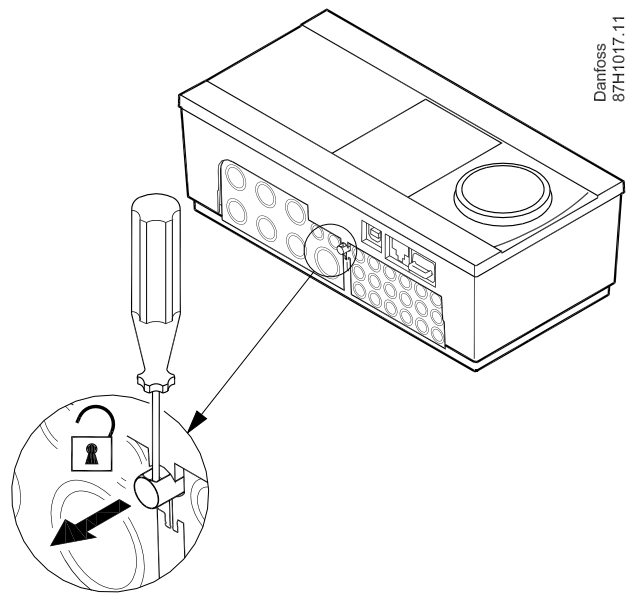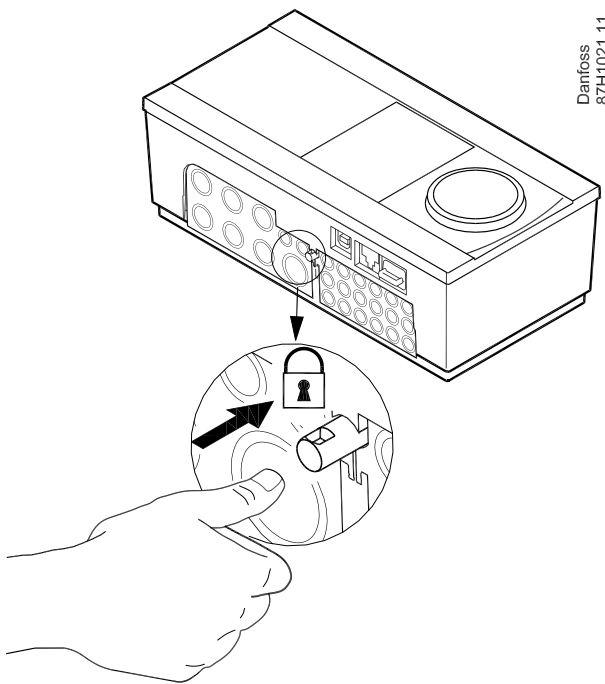

?  **ECL Comfort 210 / 296 / 310, A237 / A337: www.heating.danfoss.com**

?  **<https://www.youtube.com/user/DanfossHeating>
-> Playlists -> How-to Videos -> District Energy installation videos**



Danfoss A/S

Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.