

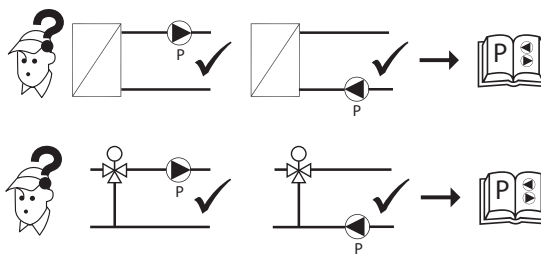
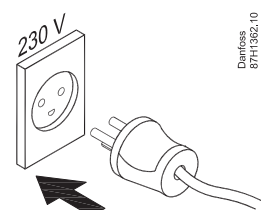
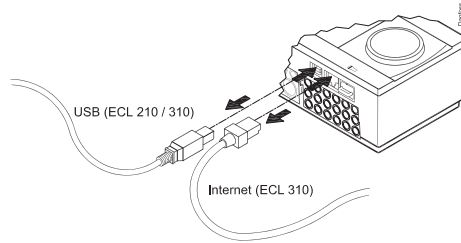


Installation Guide


ECL Comfort 310, A367 (code no. 087H3813)

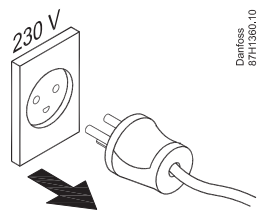


A367.1 (ex. a):

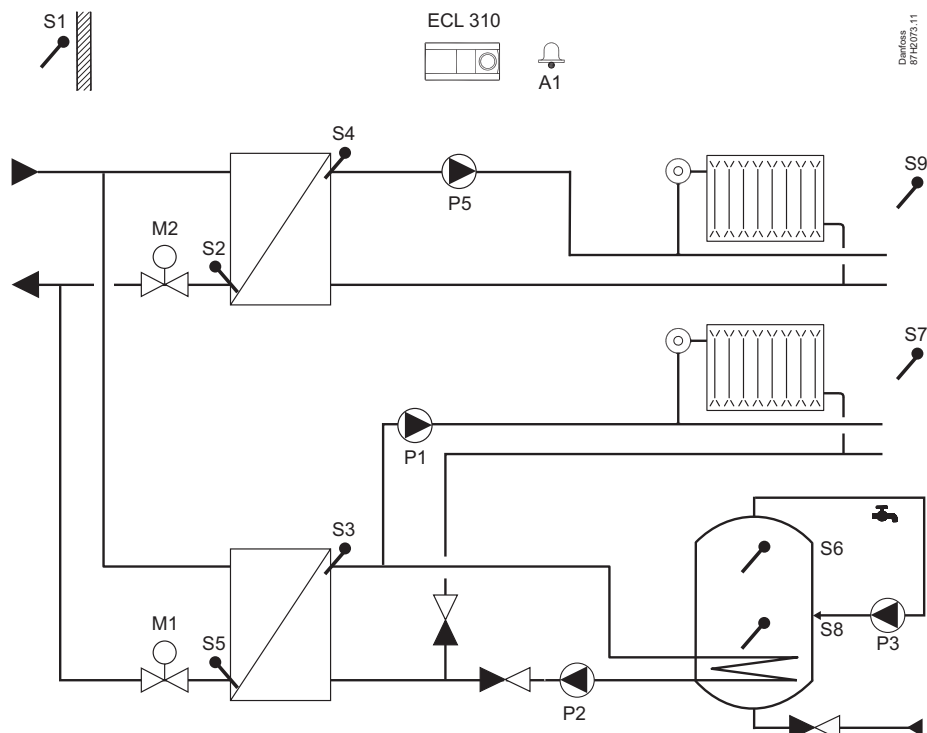


A367.1 (ex. b):

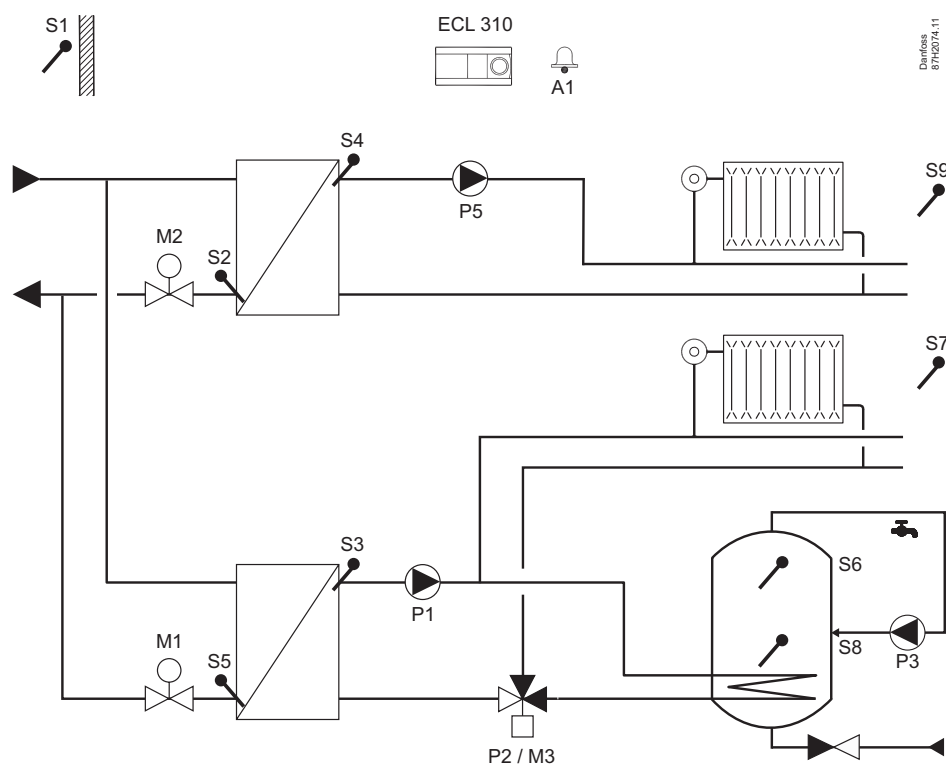


A367.1 (ex. c):

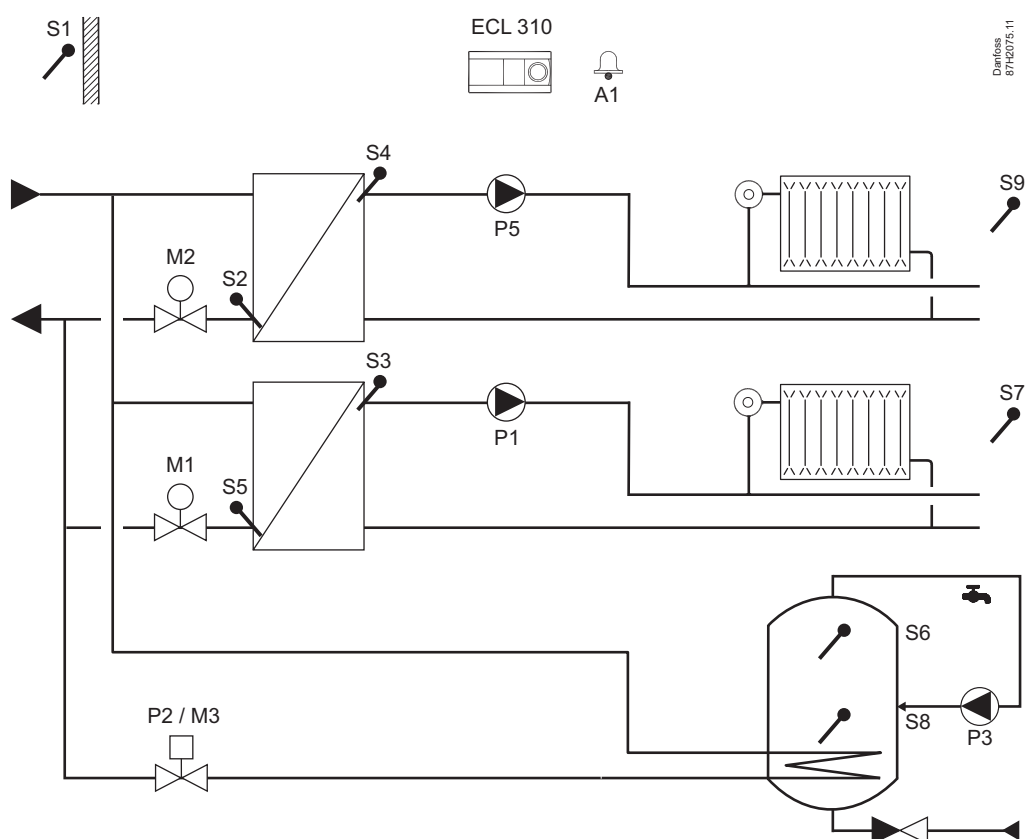


A367.1 (ex. d):

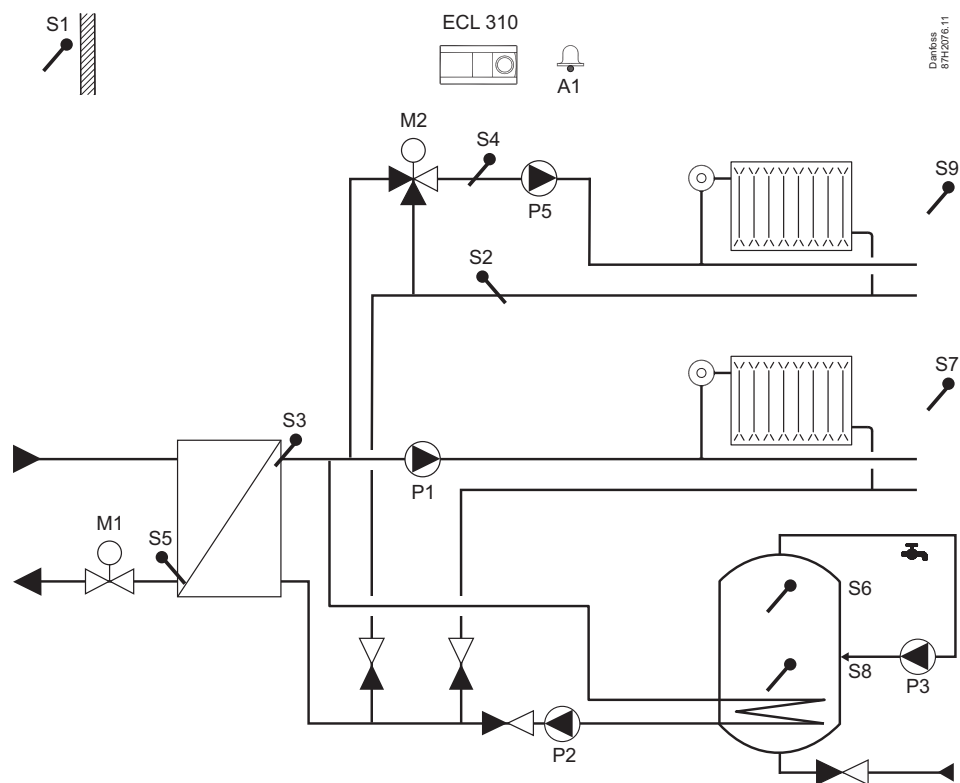


A367.1 (ex. e):

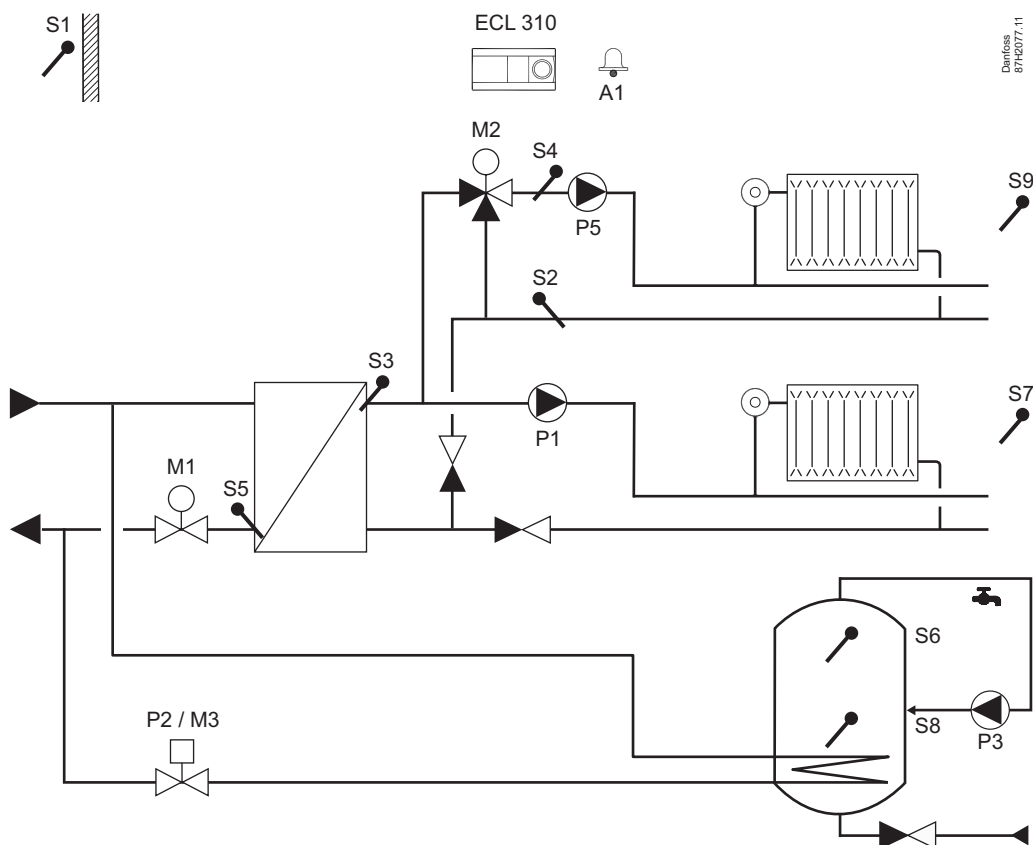


A367.2 (ex. a):

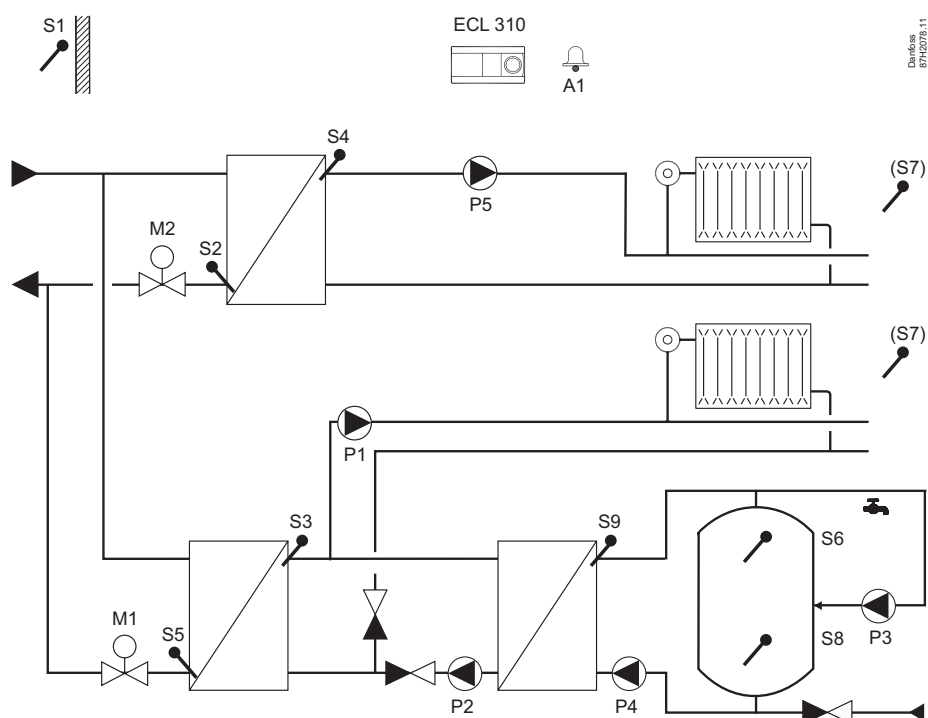

A367.2 (ex. b):

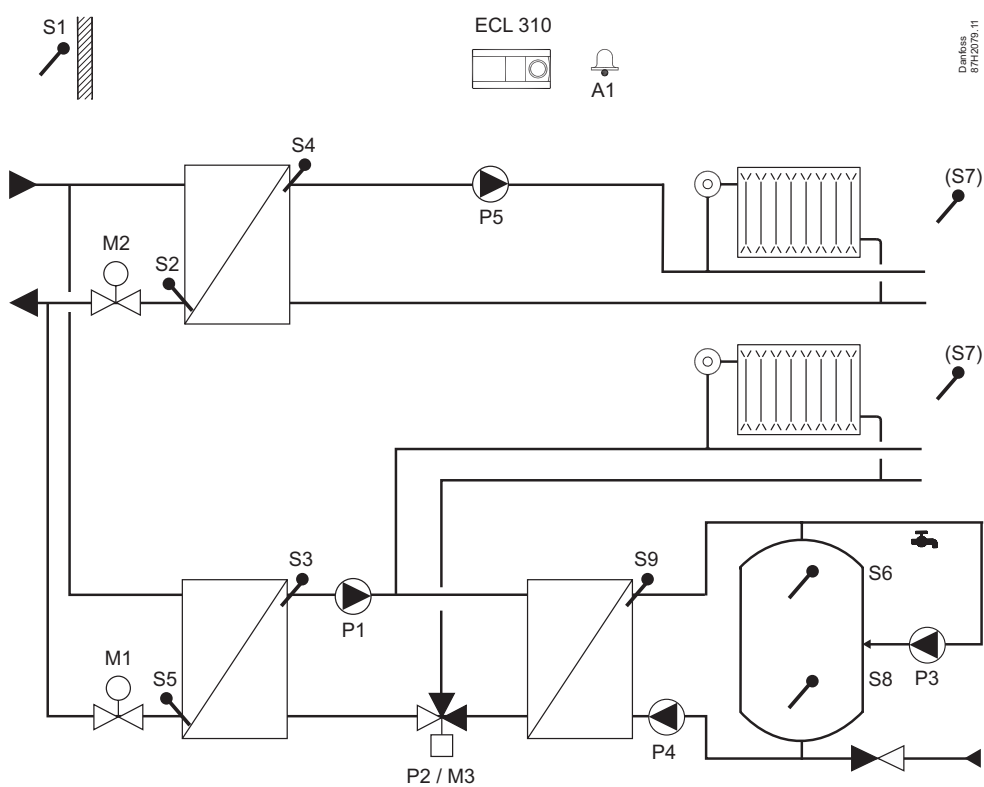


A367.2 (ex. c):

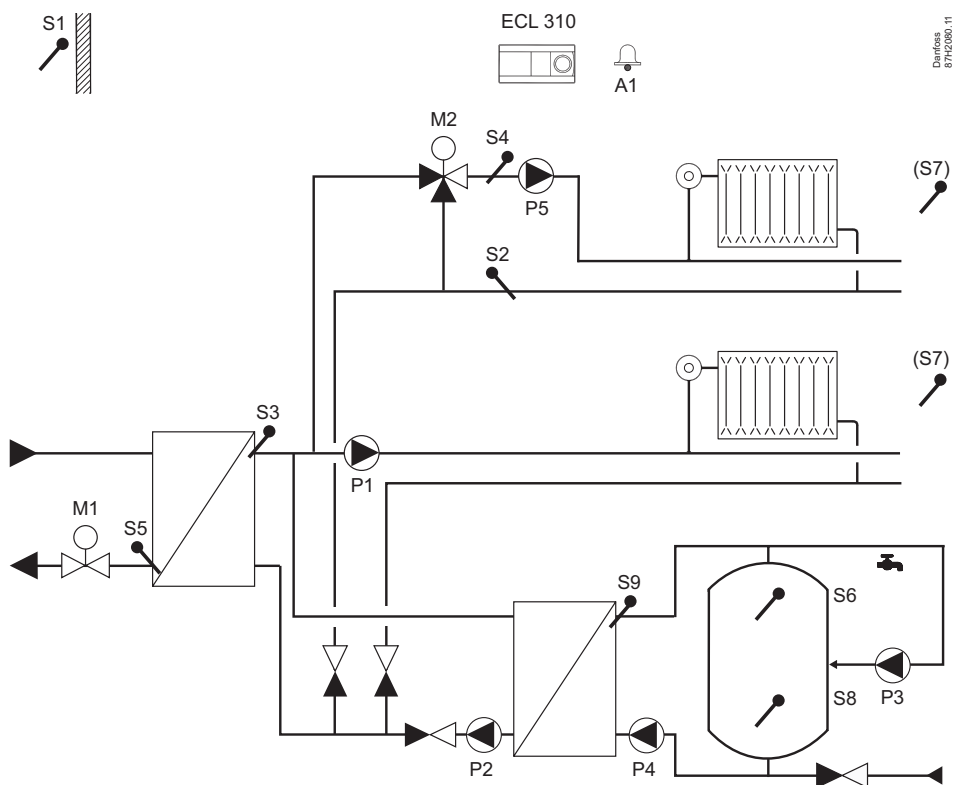

ECL Comfort 310:
230 V a.c.

R 	4 (2) A / 230 V a.c.
R 	
Tr 	0,2 A / 230 V a.c.

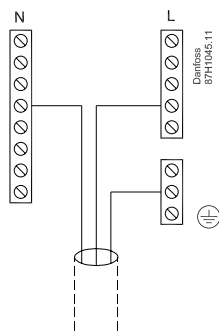


Installation Guide, ECL Comfort 310, A367

230 V a.c.

A367.1 ex. a - A367.1 ex. d: ÷P4


A367.2 ex. a - A367.2 ex. c: +P4

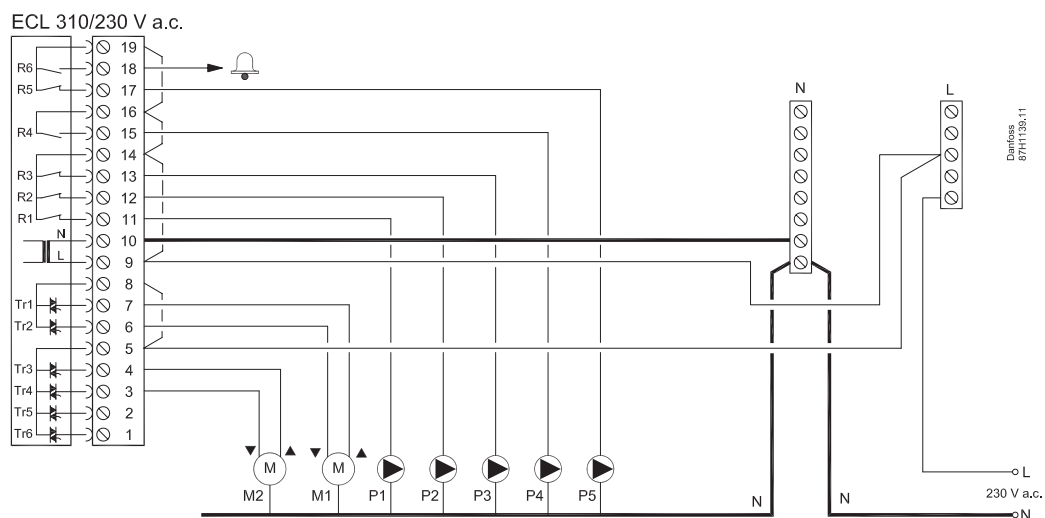

230 V a.c.

A367.1 ex. b - A367.1 ex. c - A367.1 ex. e: ÷P4

A367.2 ex. b: +P4

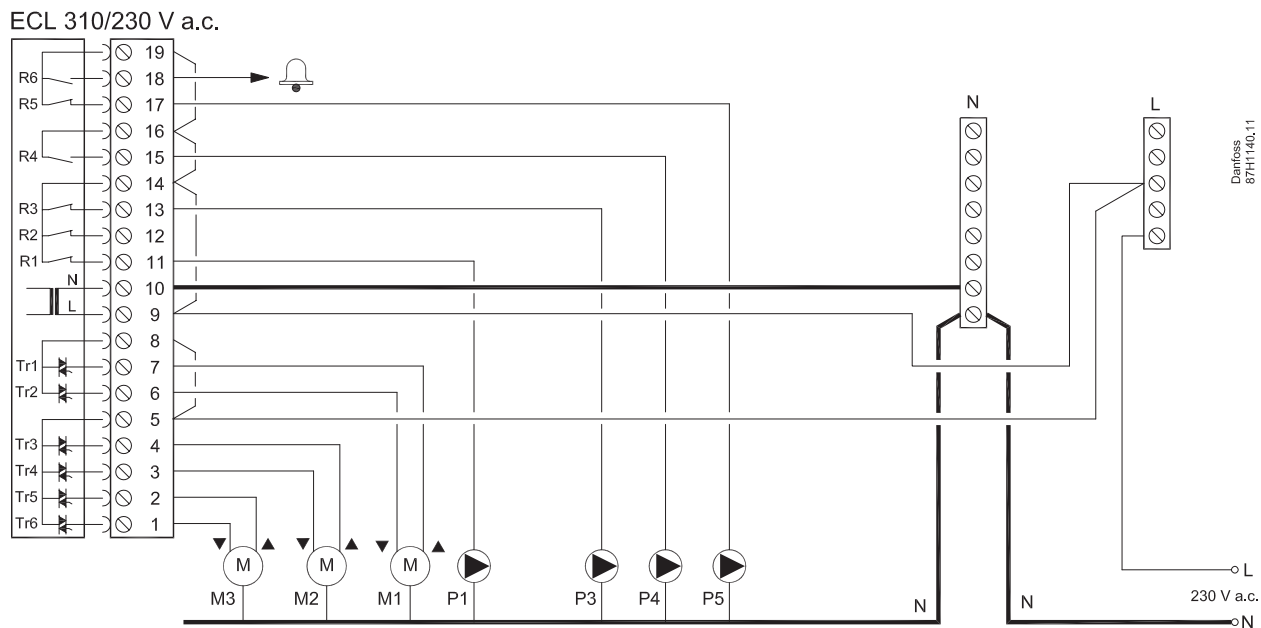


Installation Guide, ECL Comfort 310, A367

230 V a.c.

A367.1 ex. b: ÷P4

A367.2 ex. b: ÷P4


ECL 310/230 V a.c.

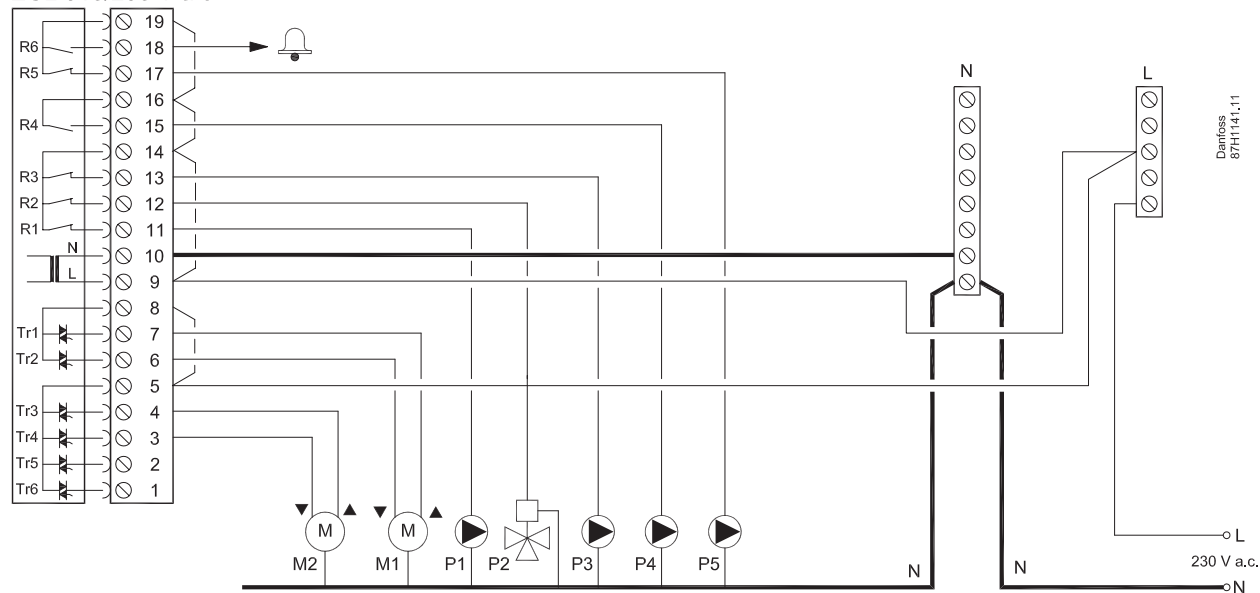

230 V a.c.

A367.1 ex. c - A367.1 ex. e

ECL 310/230 V a.c.

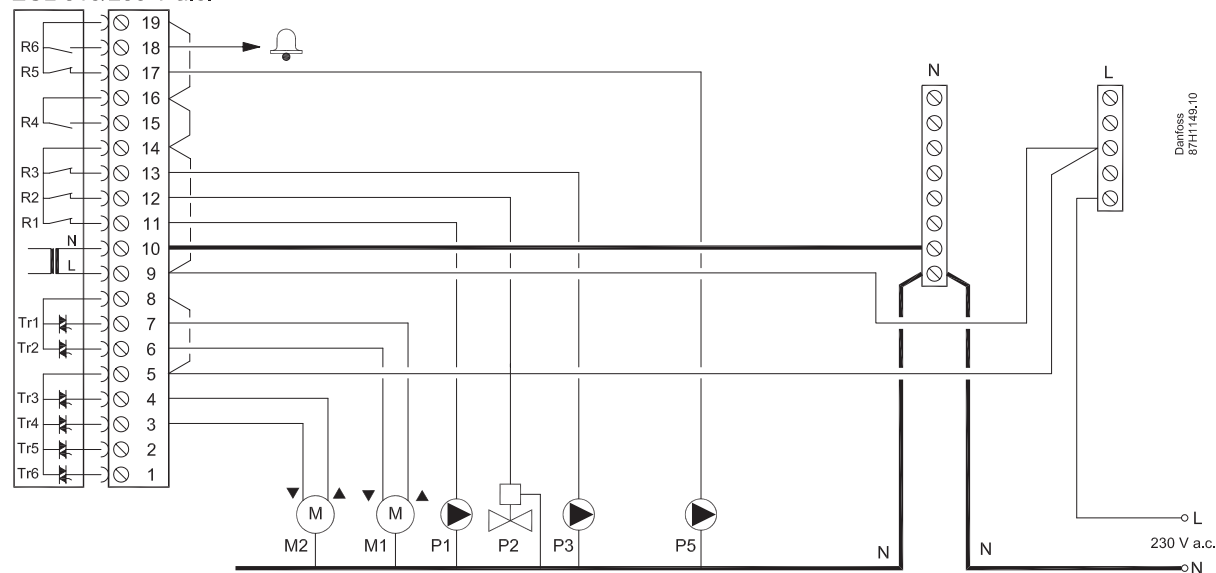

ECL Comfort 310:

24 V a.c.


R  R 	4 (2) A / 24 V a.c.
Tr 	1 A / 24 V a.c.

24 V a.c.

A367.1 ex. a - A367.1 ex. d: ÷P4

A367.2 ex. a - A367.2 ex. c: +P4

ECL 310/24 V a.c.

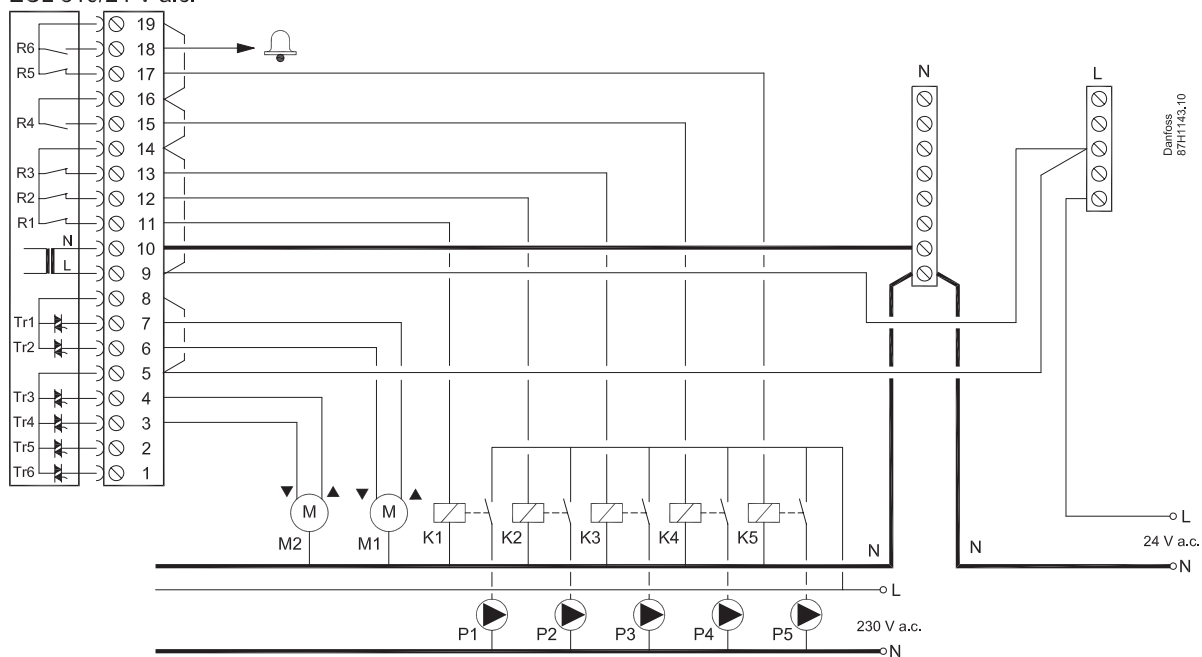


24 V a.c.

A367.1 ex. b - A367.1 ex. c - A367.1 ex. e: ÷P4

A367.2 ex. b: +P4

ECL 310/24 V a.c.

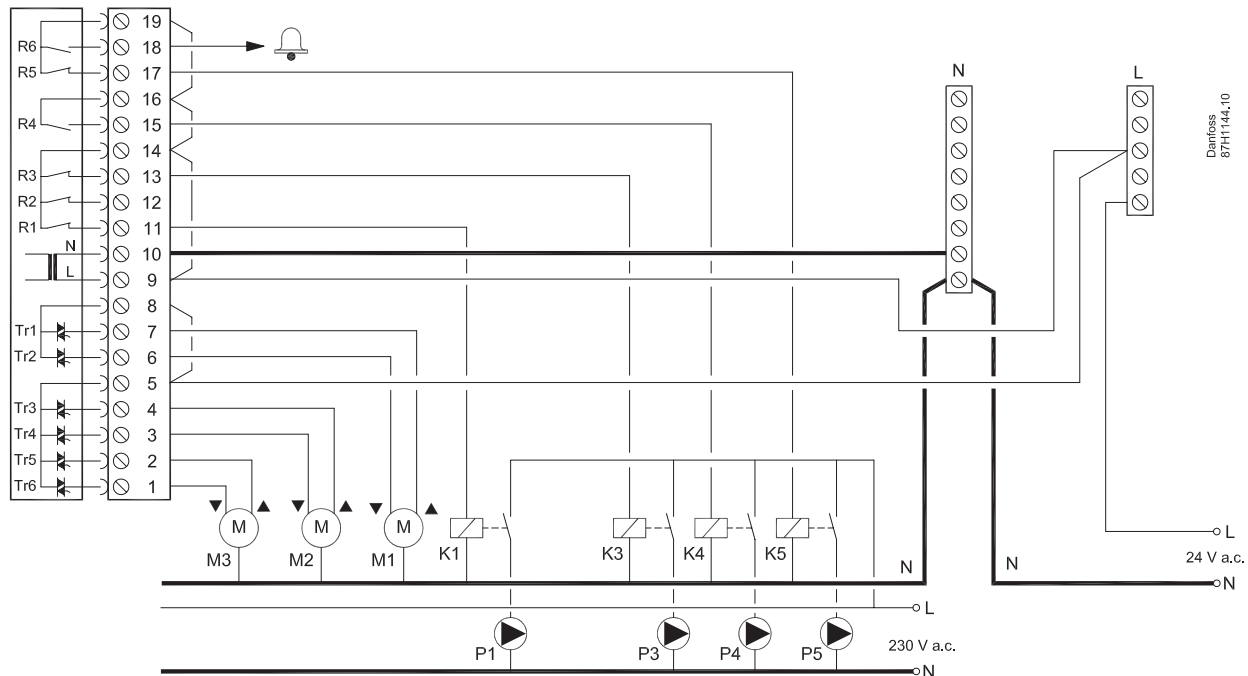


24 V a.c.

A367.1 ex. b: ÷P4

A367.2 ex. b: +P4

ECL 310/24 V a.c.

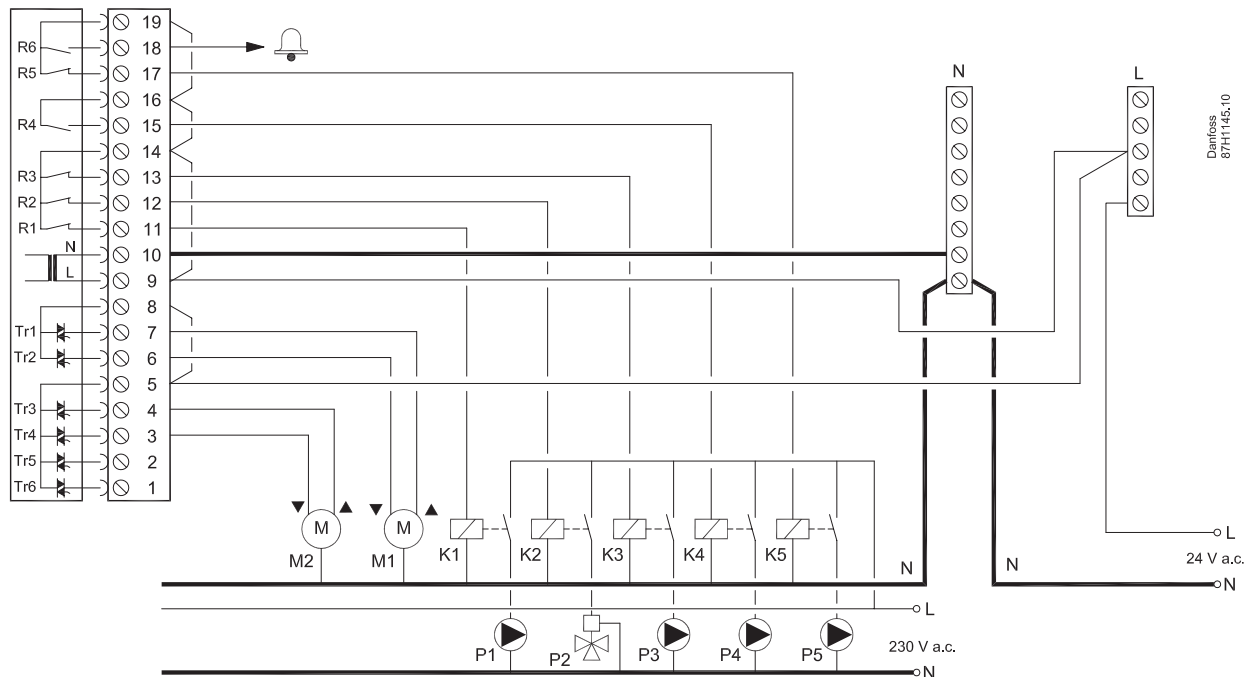


Installation Guide, ECL Comfort 310, A367

24 V a.c.

A367.1 ex. c - A367.1 ex. e


ECL 310/24 V a.c.

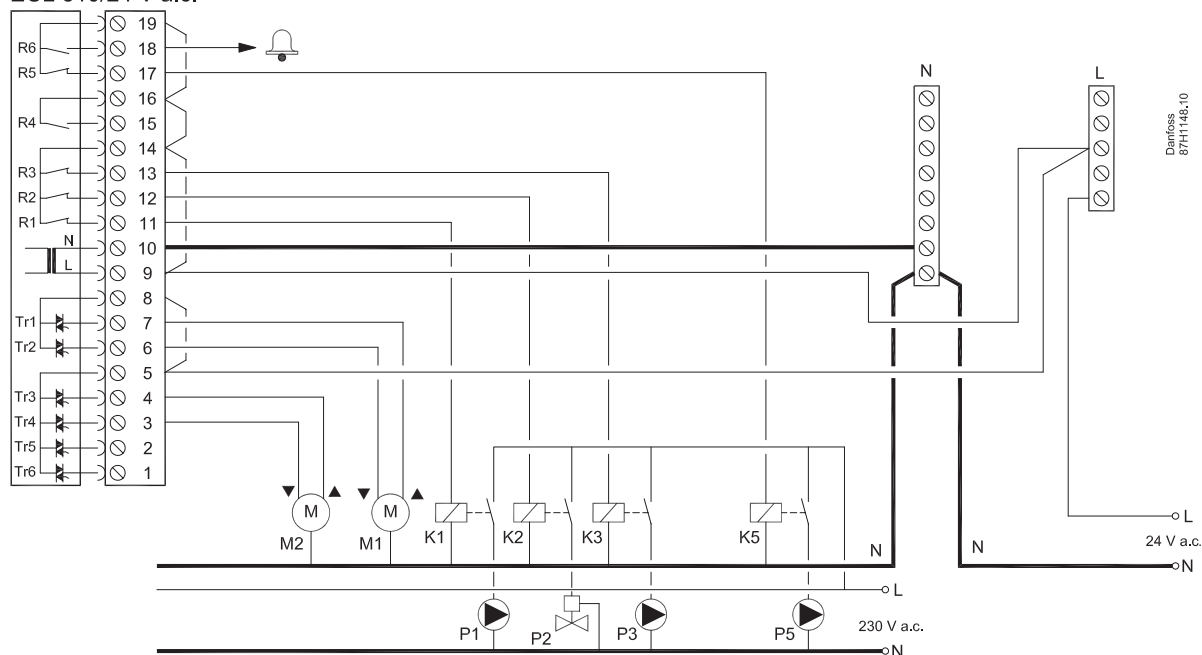


24 V a.c. / 230 V a.c. safety thermostat

1-step closing

ECL 310


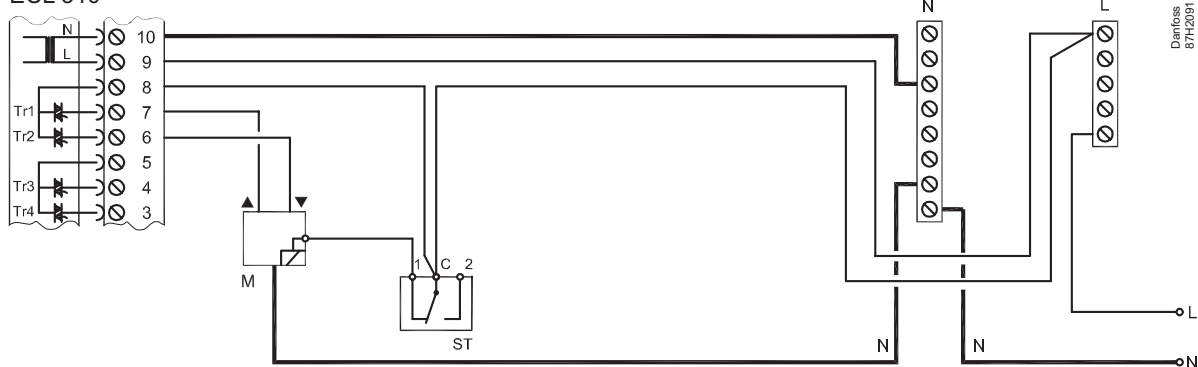


ECL 310


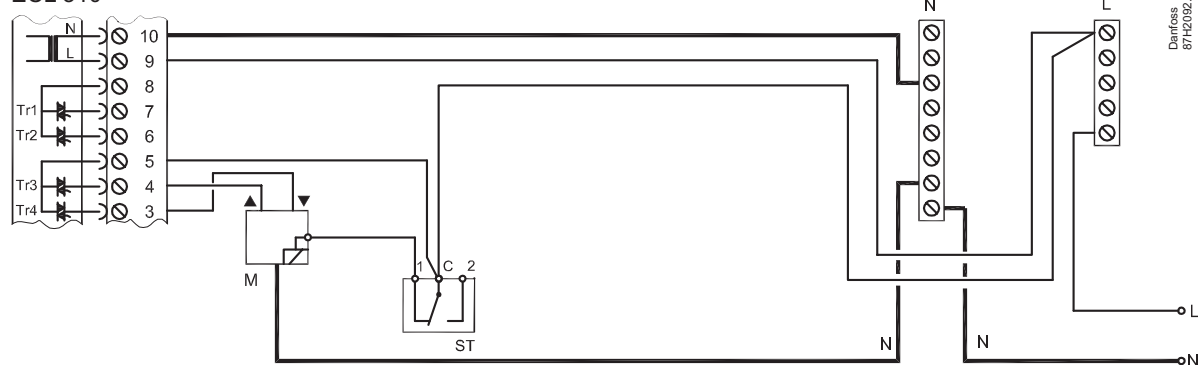


24 V a.c. / 230 V a.c. safety thermostat

2-step closing

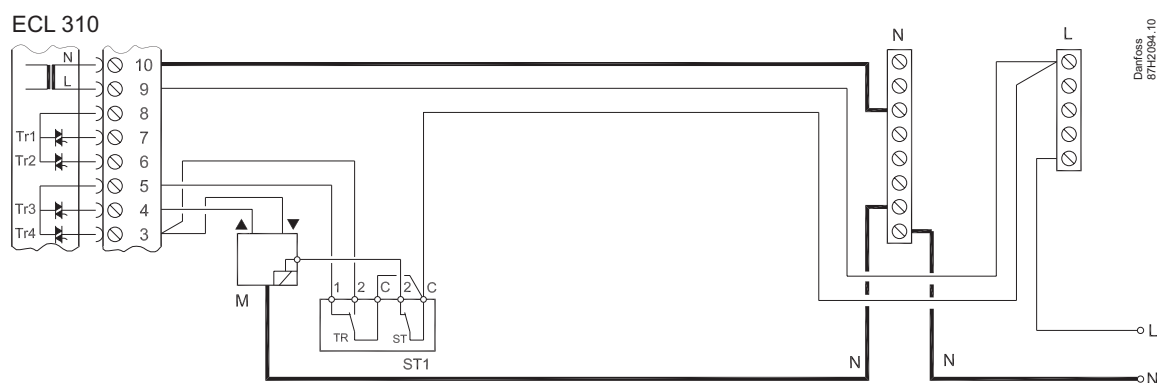
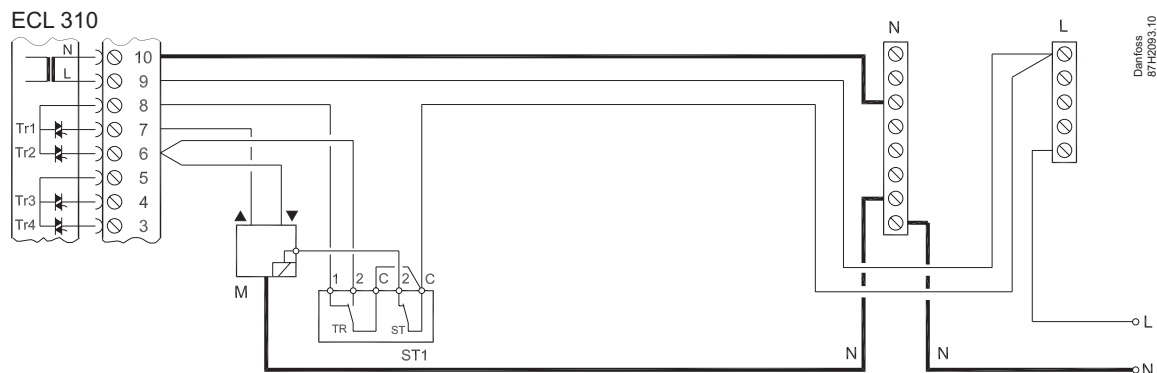


Pt 1000 (1000 Ω / 0 °C)

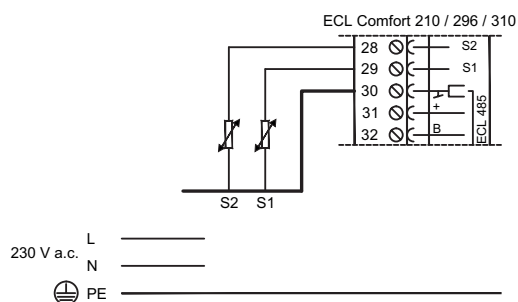
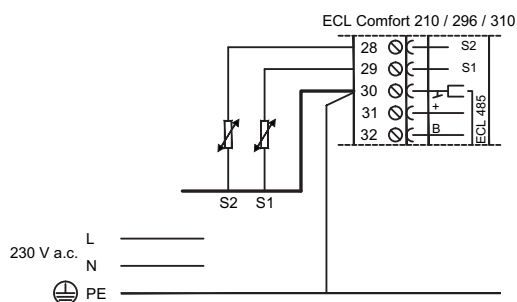


Danfoss 87H1487.11


 **Pt 1000** (1000 Ω / 0 °C)

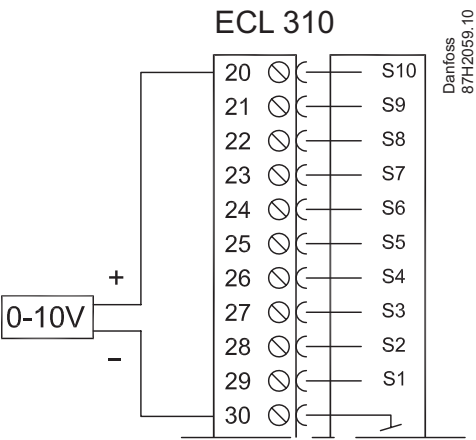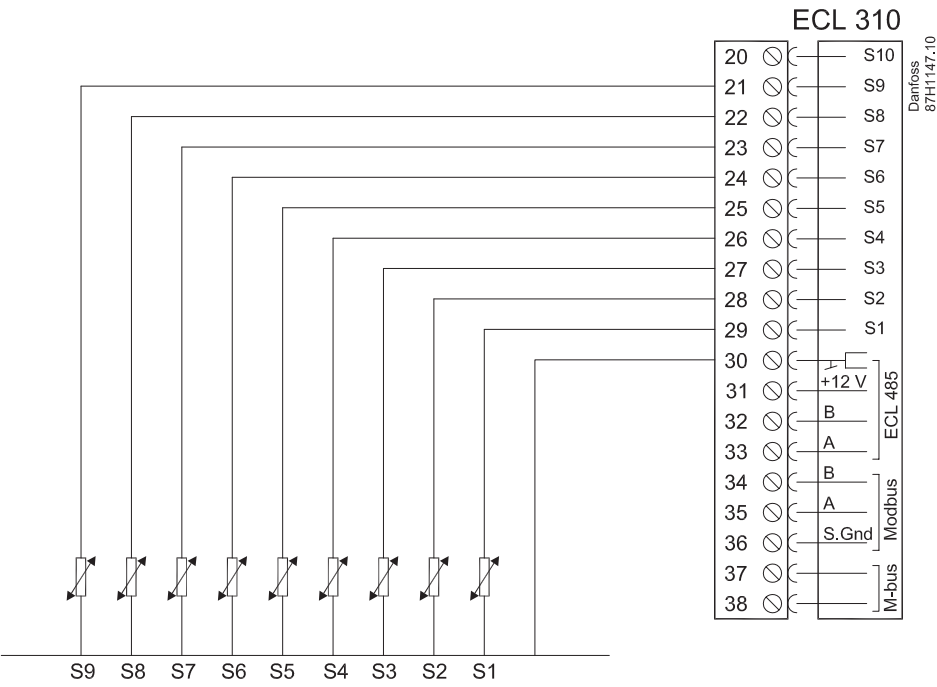


ECA 30 / 31

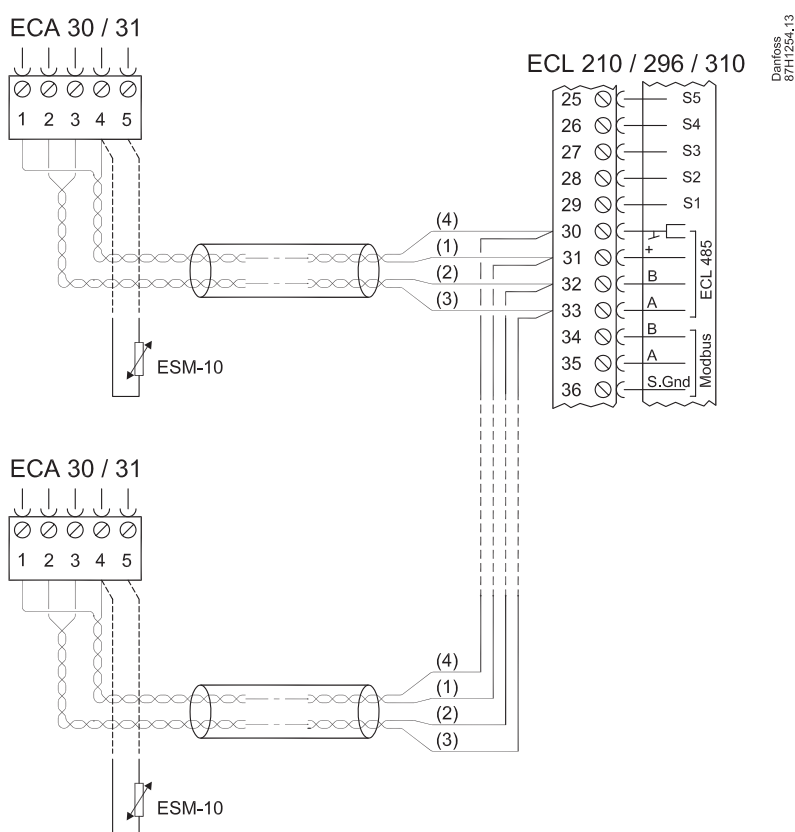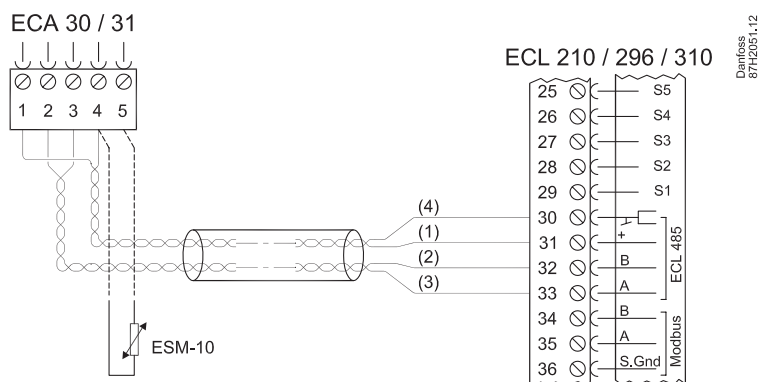


Master / slave

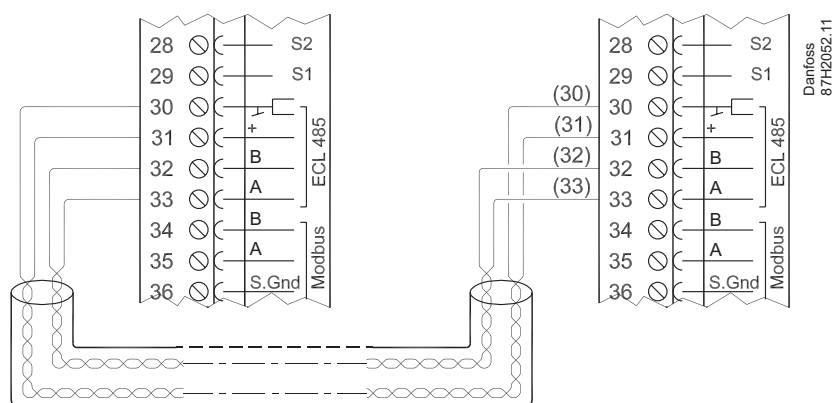


Modbus

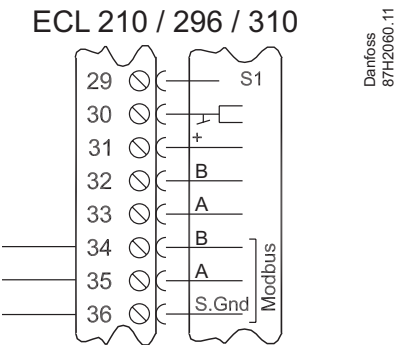


M-bus

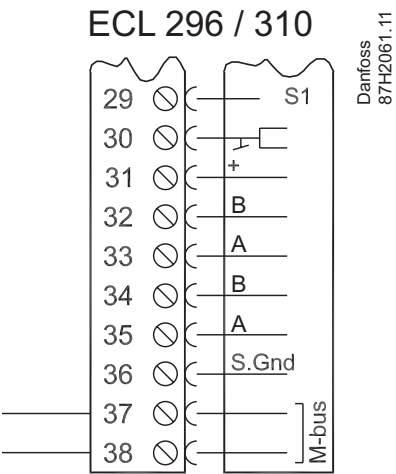


M-bus

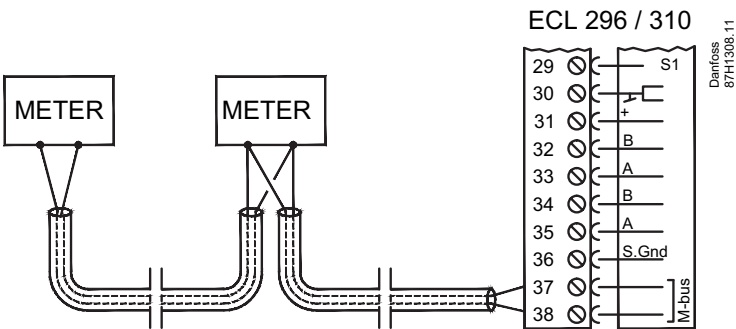

Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

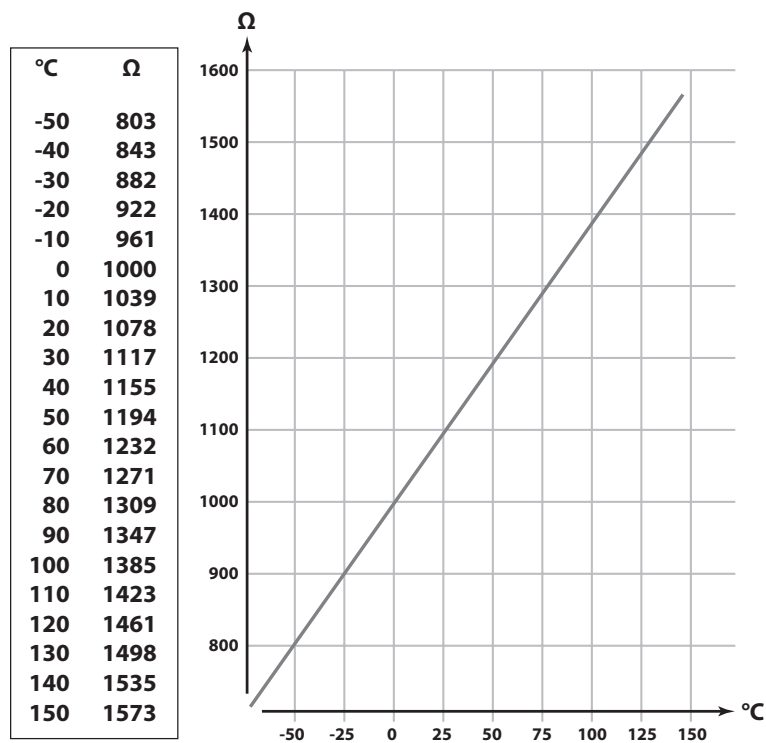


Heat curves

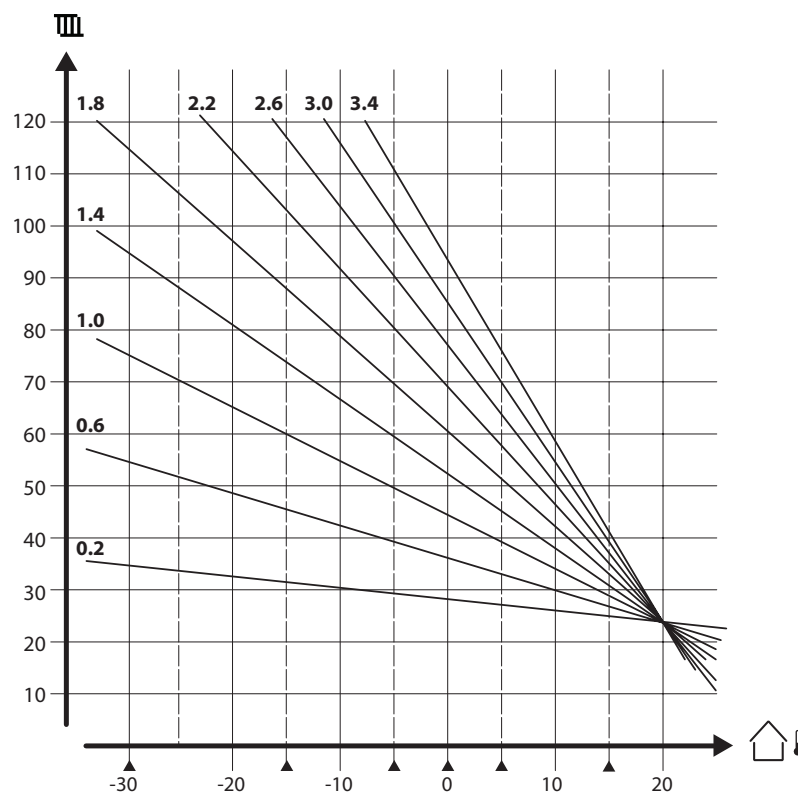


ECA 30


1

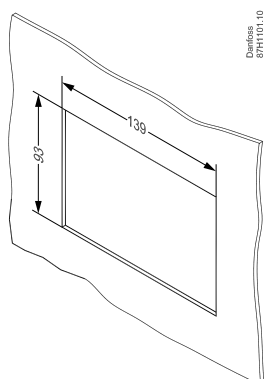


2

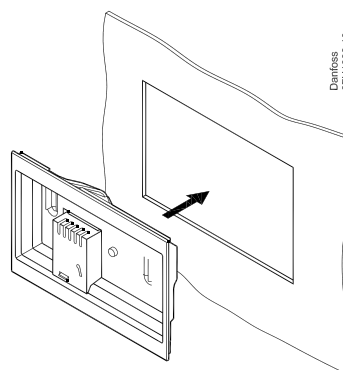


3

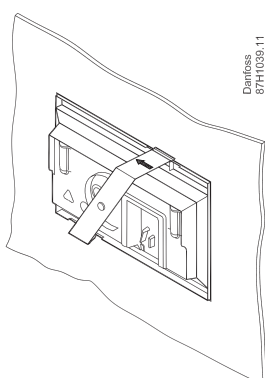


4

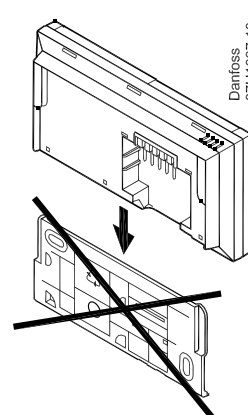


5

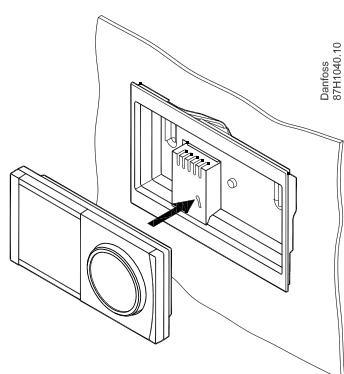


6

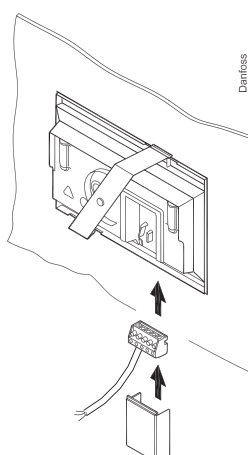

7

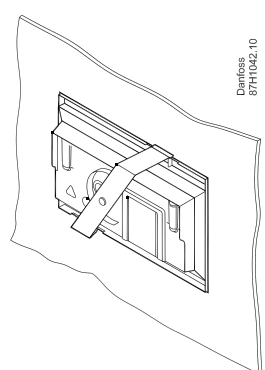


8

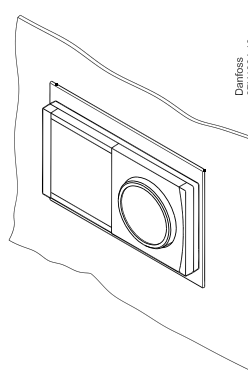


Installation Guide, ECL Comfort 310, A367


Danfoss
87H1021.11

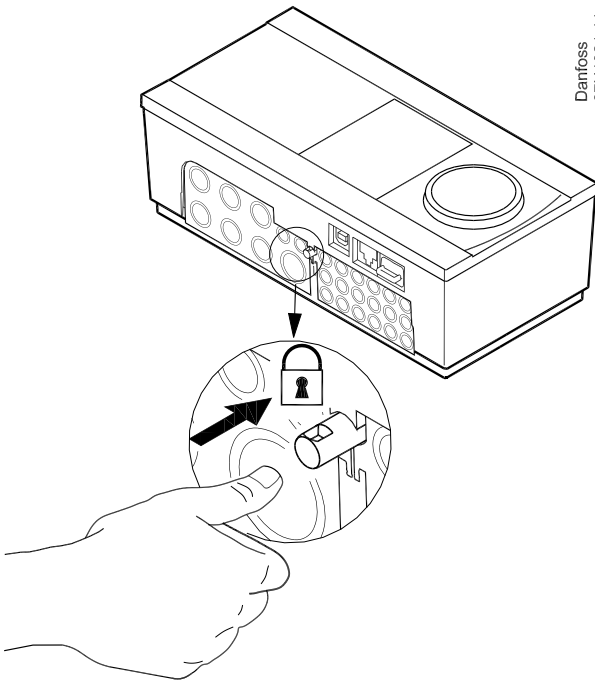


Danfoss
87H1017.11

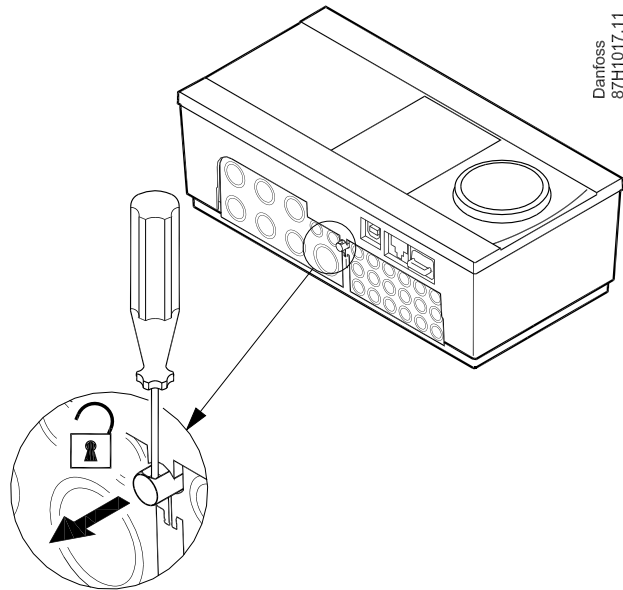

Danfoss
87H1073.11

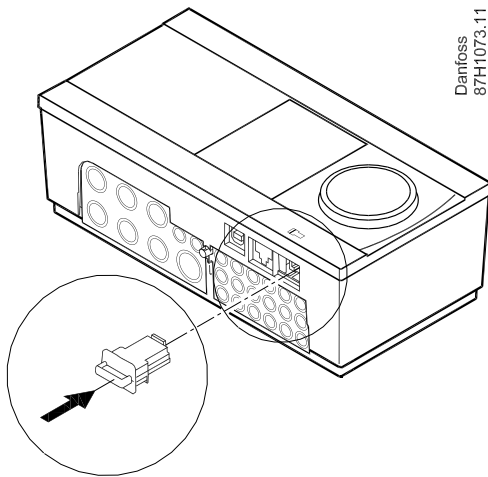

Danfoss
87H1074.11

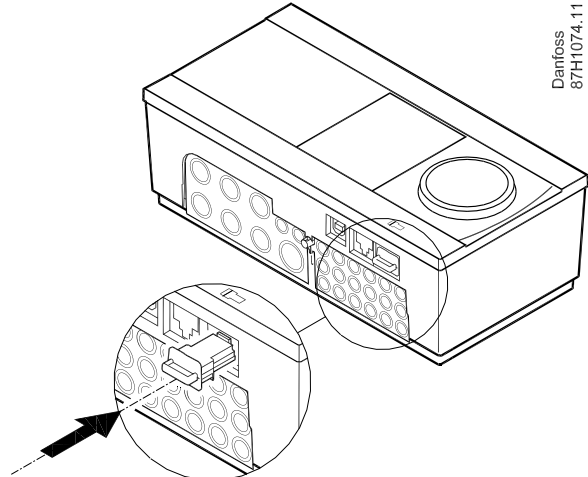

?  **ECL Comfort 310, A367: www.heating.danfoss.com**

?  **<https://www.youtube.com/user/DanfossHeating>**
-> Playlists -> How-to Videos -> District Energy installation videos



Danfoss A/S

Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.