

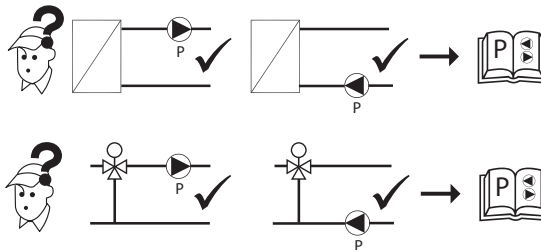 
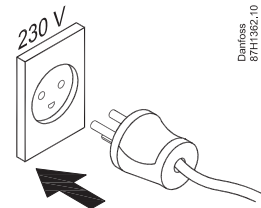 
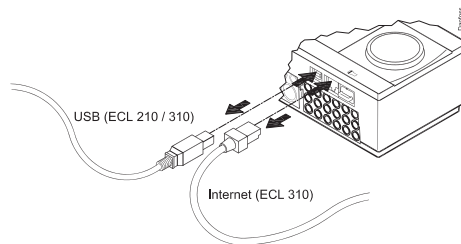 


Installation Guide

 
ECL Comfort 310, A333 (code no. 087H3818)

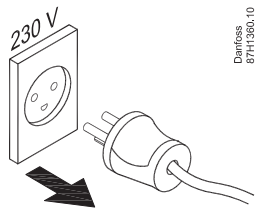

A333.1 (ex. a):

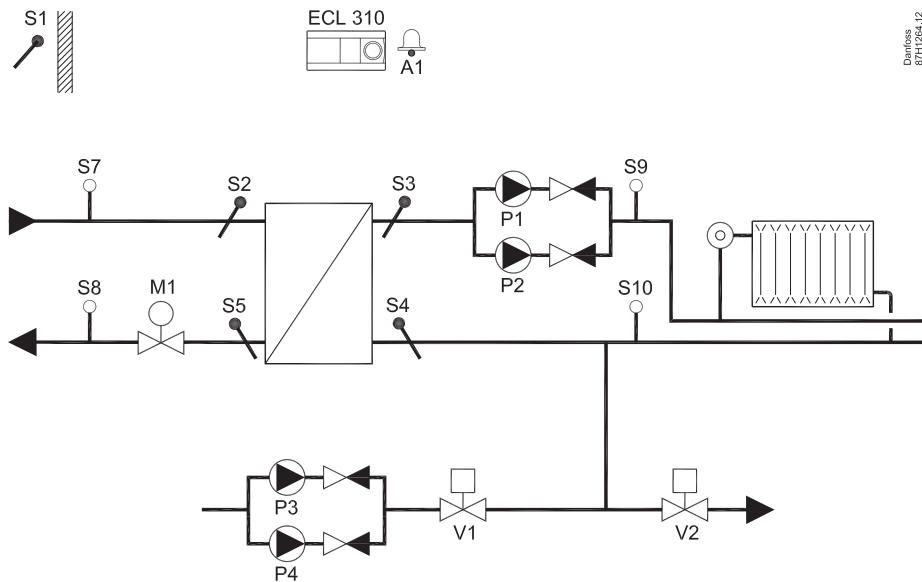


A333.1 (ex. b):

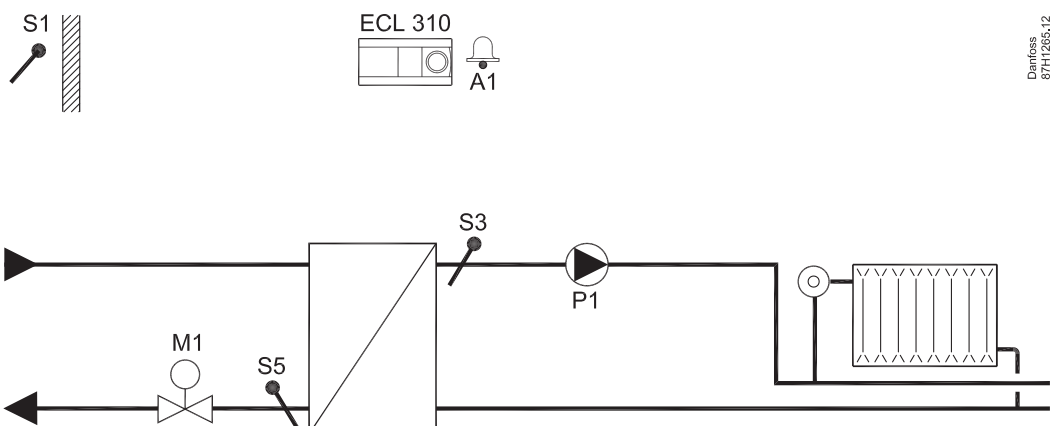


Danfoss
87H1265,12

 A333.1 (ex. c):

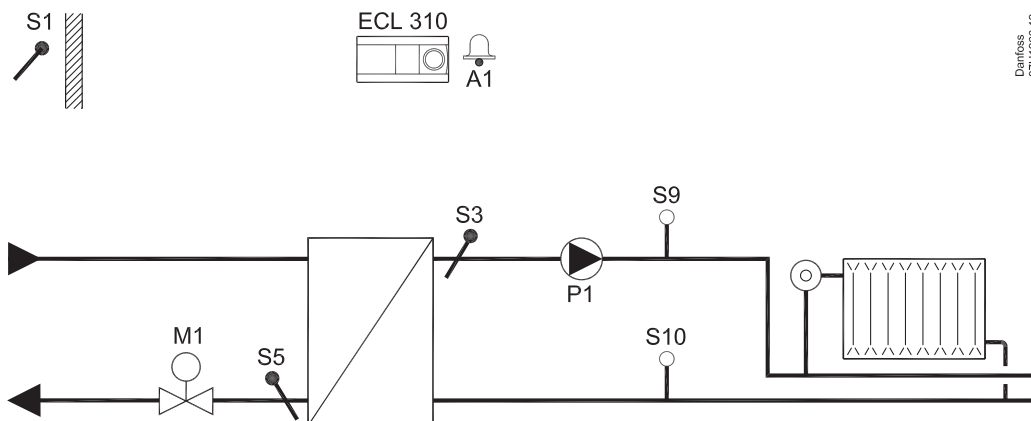


Danfoss
87H1266,12

 
A333.1 (ex. d):

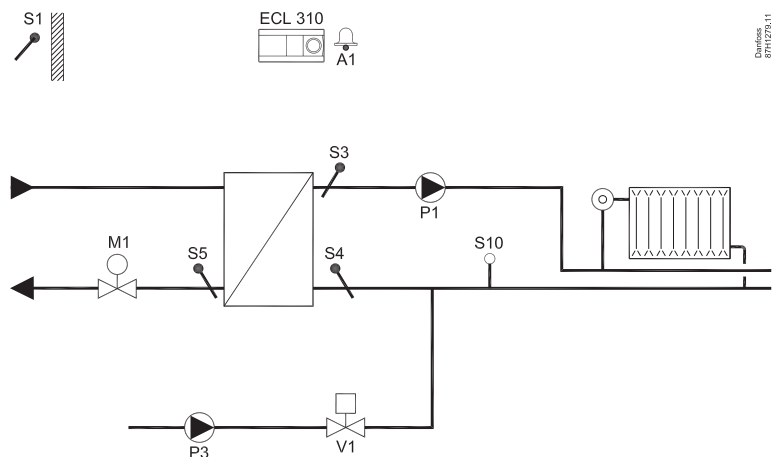


A333.1 (ex. e):

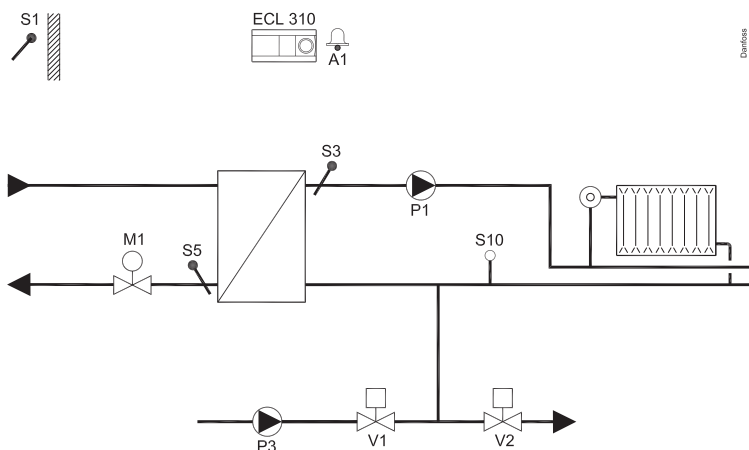 

A333.2:

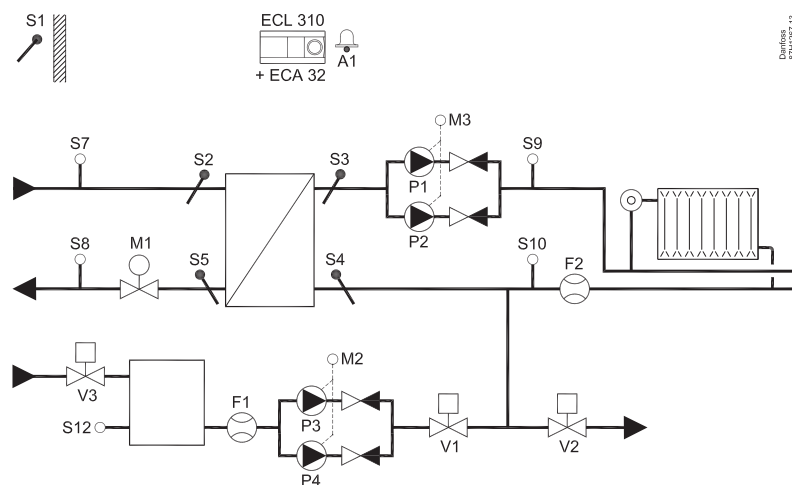 


A333.3:

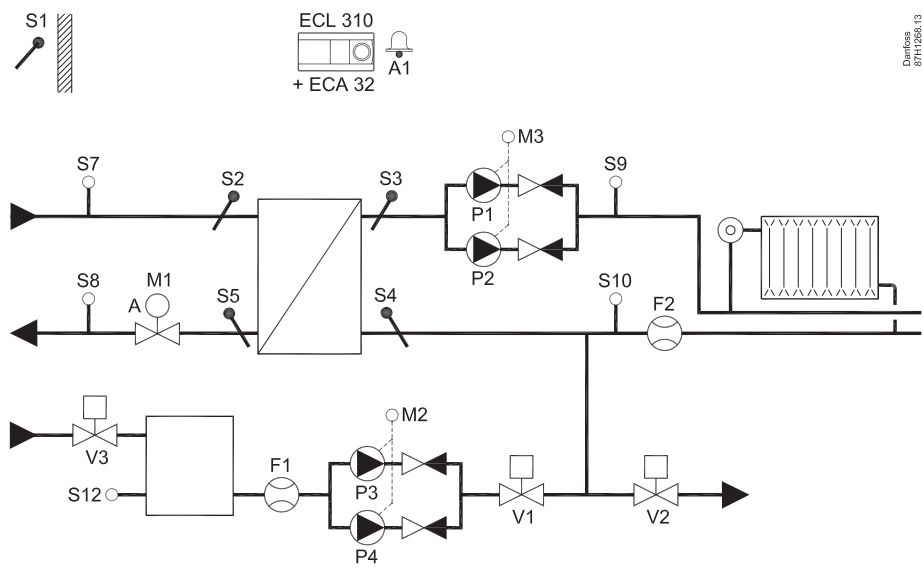 


ECL Comfort 310:
230 V a.c.

R	4 (2) A / 230 V a.c.
R	
Tr	0,2 A / 230 V a.c.

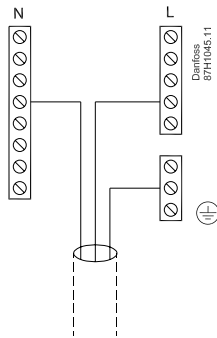 


Installation Guide, ECL Comfort 310, A333

 
230 V a.c. (A333.1, A333.2)

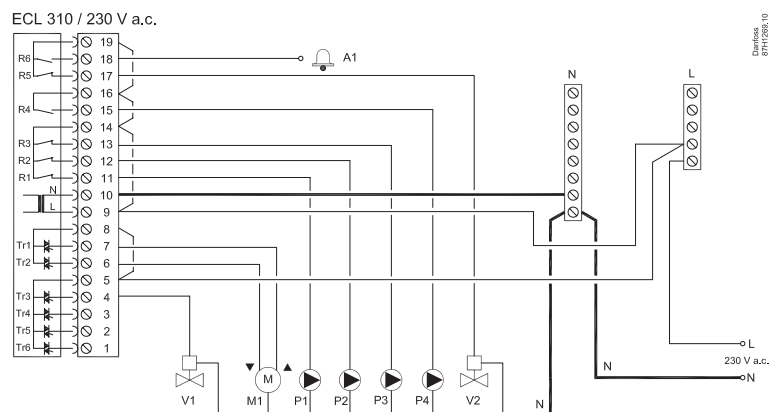

230 V a.c. (A333.3)

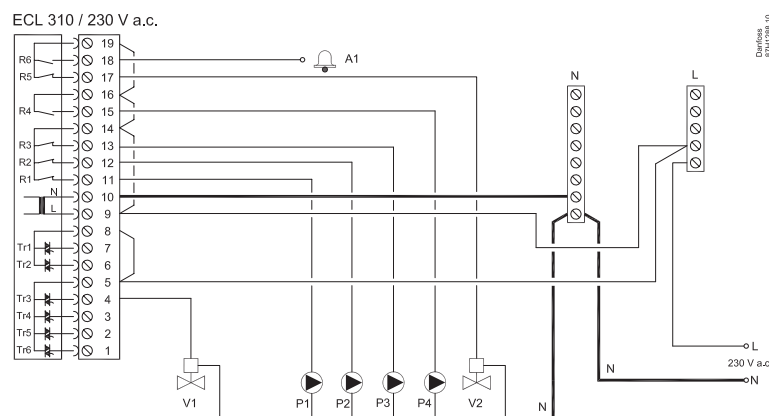 


230 V a.c. (A333.1)

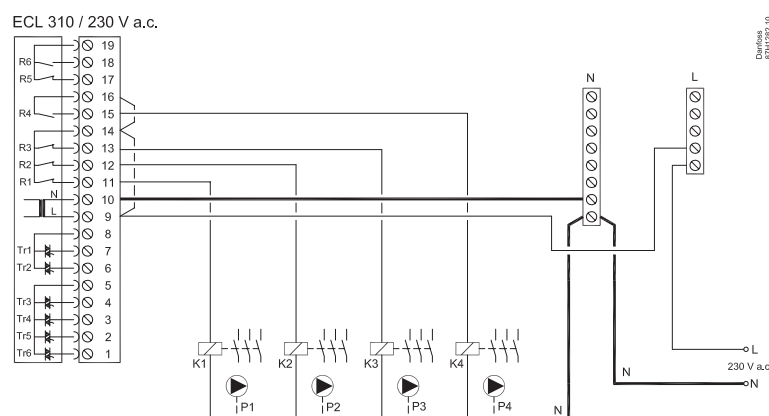 


Installation Guide, ECL Comfort 310, A333

 
230 V a.c. (A333.2, A333.3)

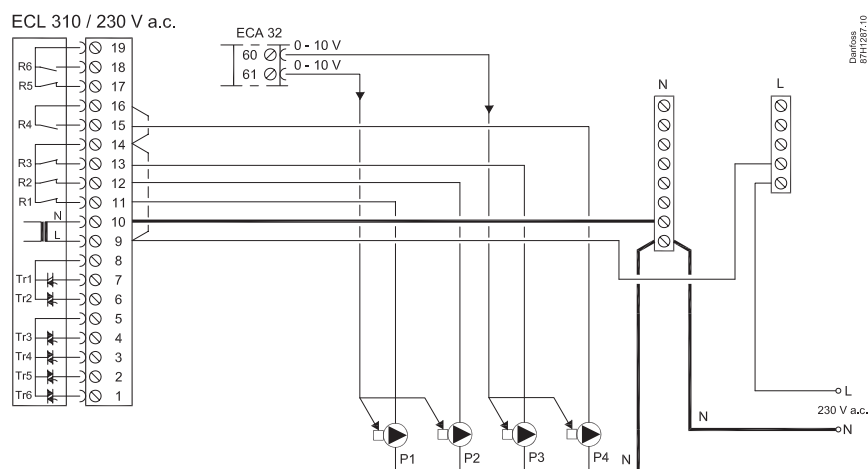

230 V a.c. (A333.2, A333.3)

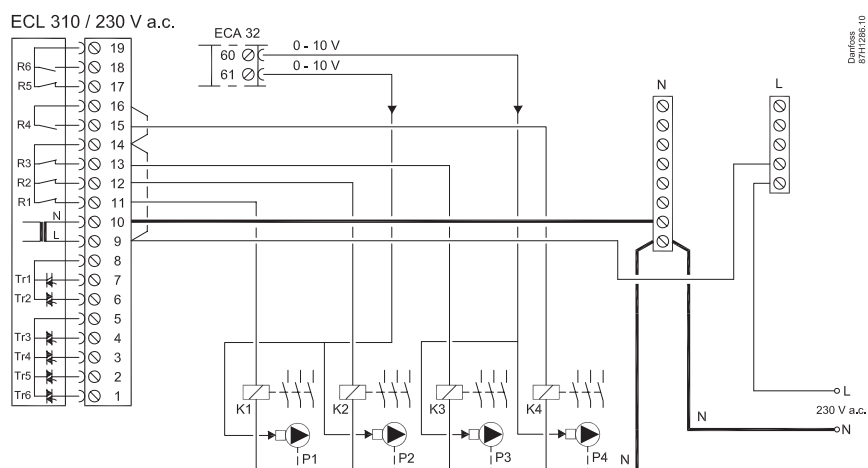 


230 V a.c. (A333.2, A333.3)

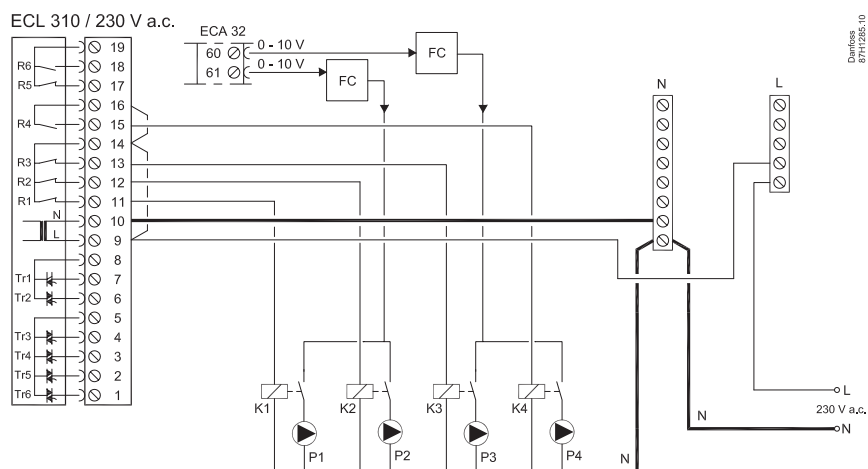 

FC = Frequency converter


Installation Guide, ECL Comfort 310, A333

 230 V a.c. (A333.2, A333.3)

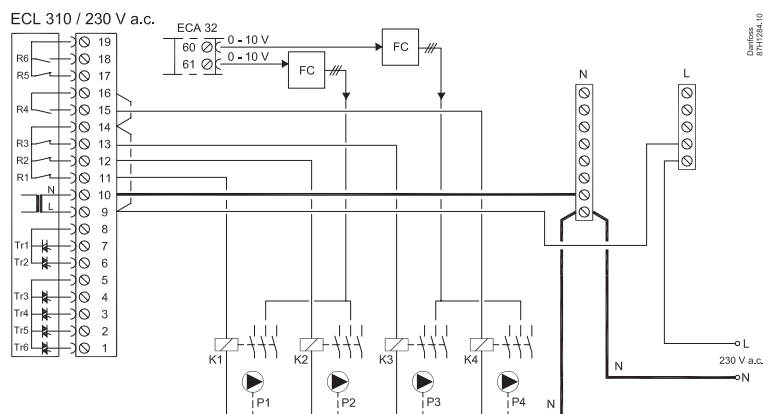


FC = Frequency converter

 
230 V a.c. (A333.2, A333.3)

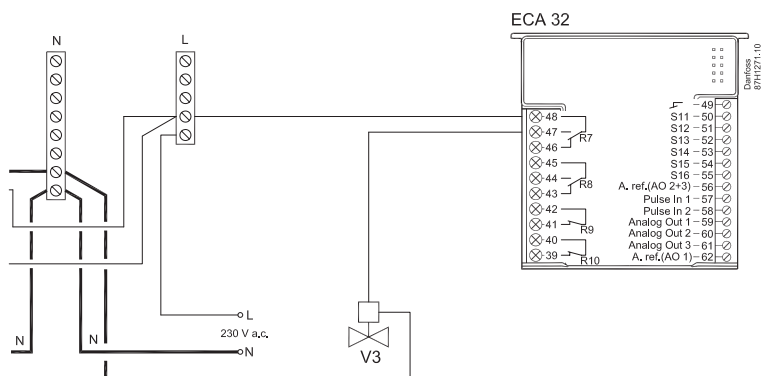


A333.2, A333.3

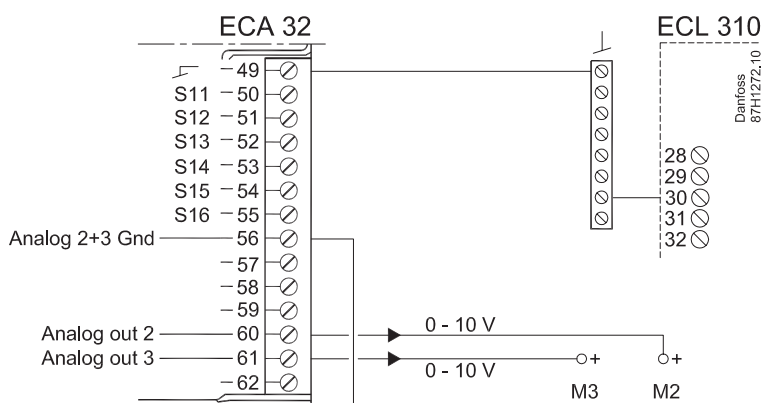 


A333.2, A333.3

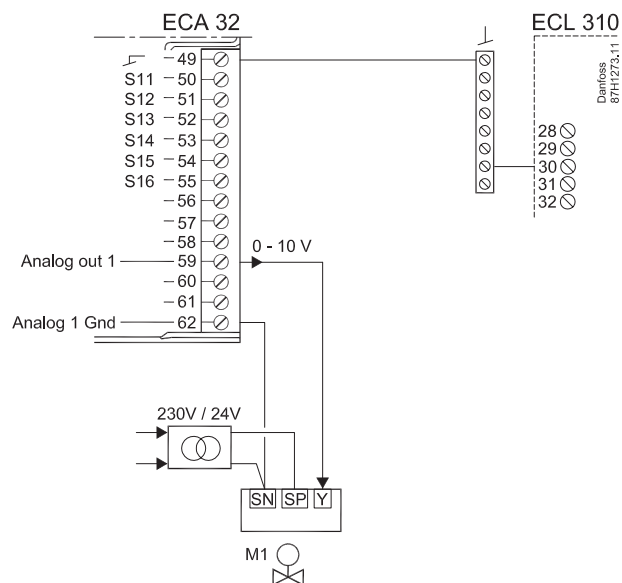 

 A333.2, A333.3: External Start / Stop control, P1 / P2

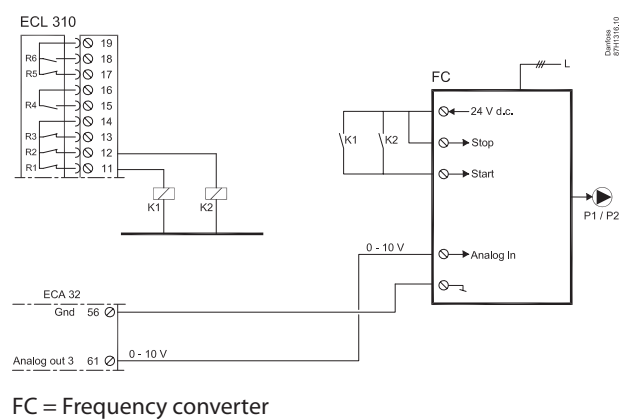


 
A333.2, A333.3: External Start / Stop control, P3 / P4

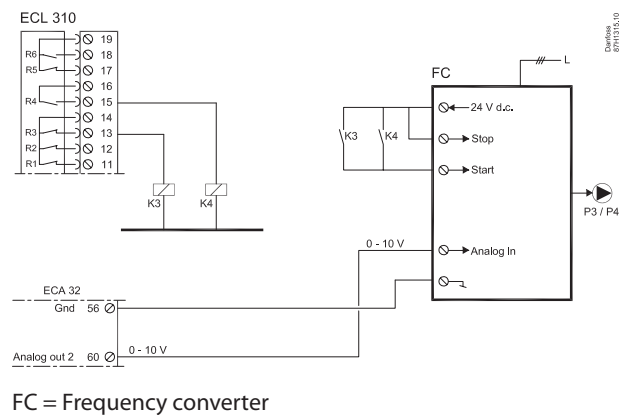


**ECL Comfort 310:
24 V a.c.**

R		4 (2) A / 24 V a.c.
R		
Tr		1 A / 24 V a.c.

  **230 V a.c and 24 V a.c., safety thermostat
1-step closing**

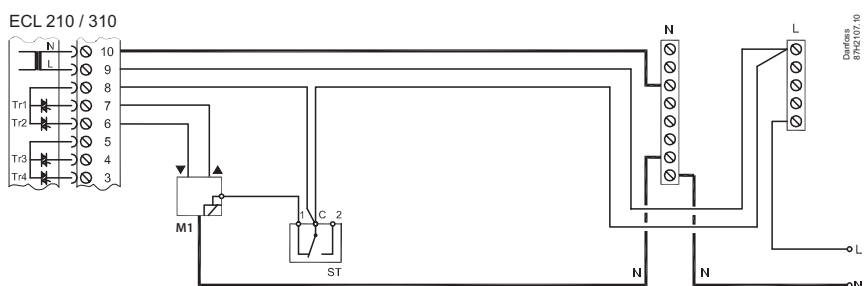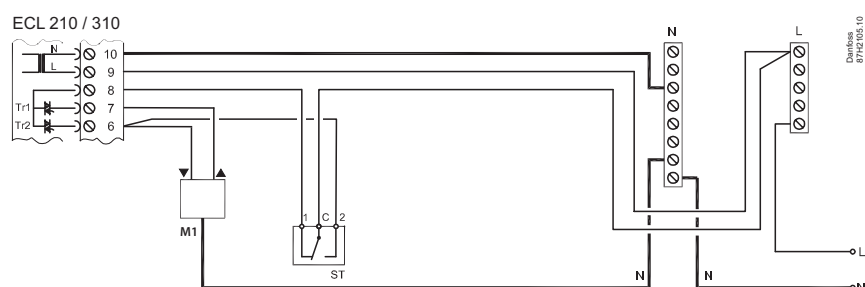


 **230 V a.c and 24 V a.c., safety thermostat
2-step closing**

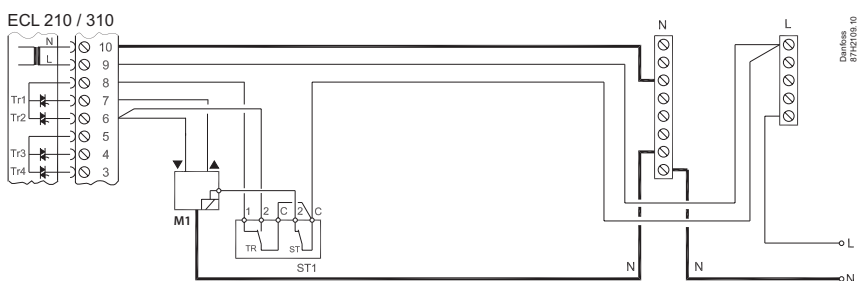


Installation Guide, ECL Comfort 310, A333

 
24 V a.c. (A333.1, A333.2)

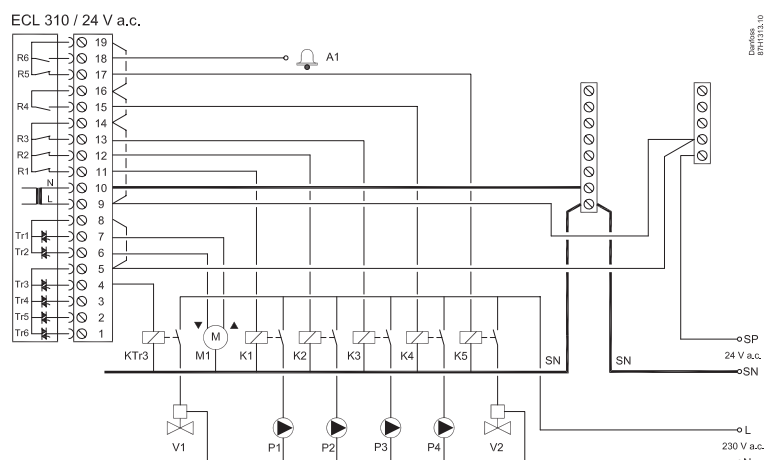


24 V a.c. (A333.3)

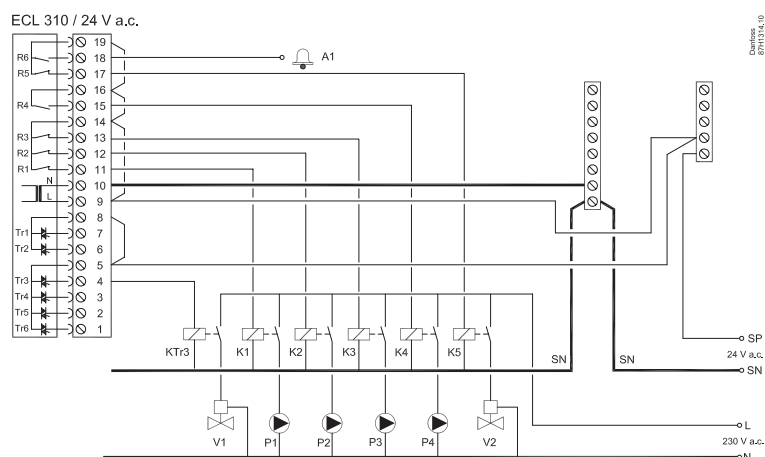 


24 V a.c. (A333.2, A333.3)

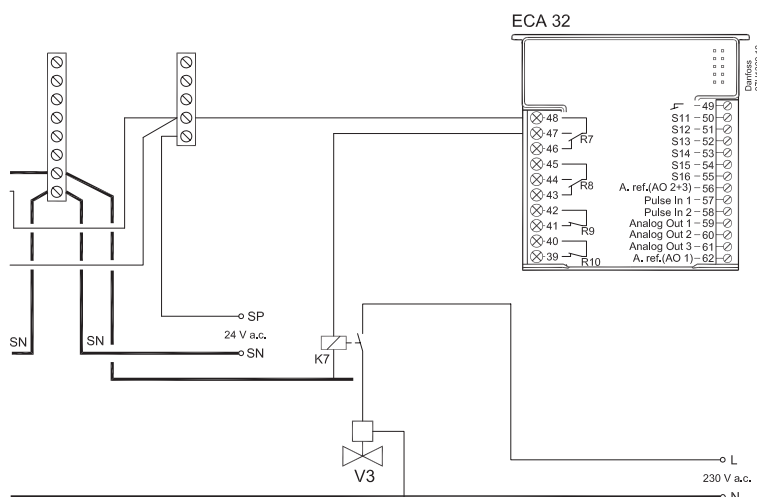 


A333.3

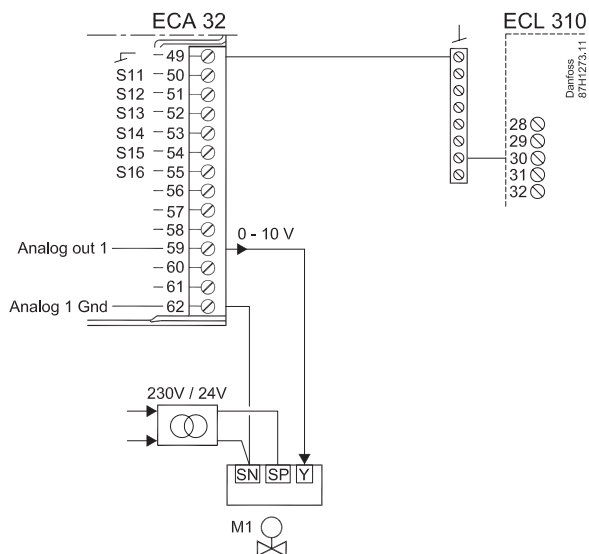 

24 V a.c. (A333.2, A333.3)

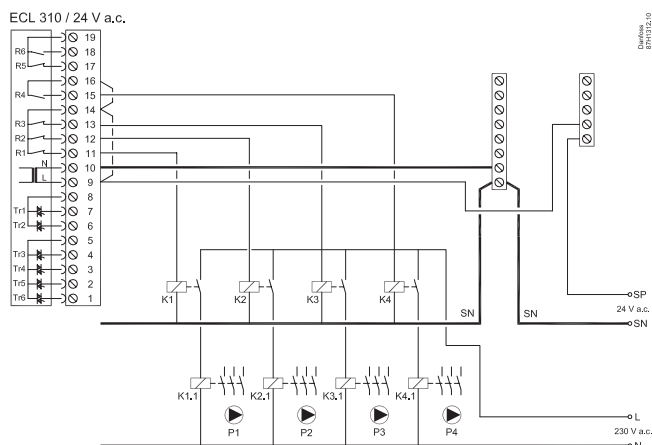 


24 V a.c. (A333.2, A333.3)

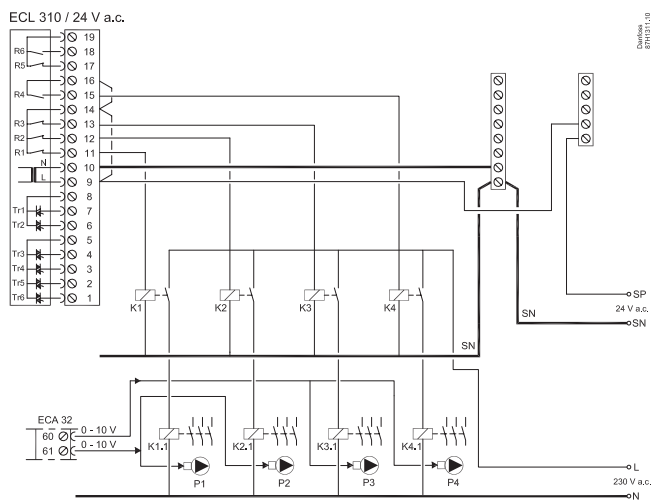 


Installation Guide, ECL Comfort 310, A333

 
24 V a.c. (A333.2, A333.3)

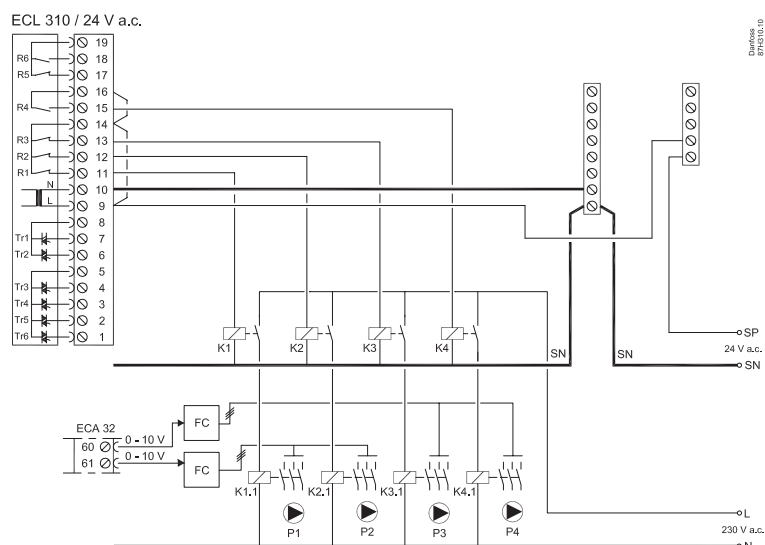

Pt 1000 (1000 Ω / 0 $^{\circ}$ C)

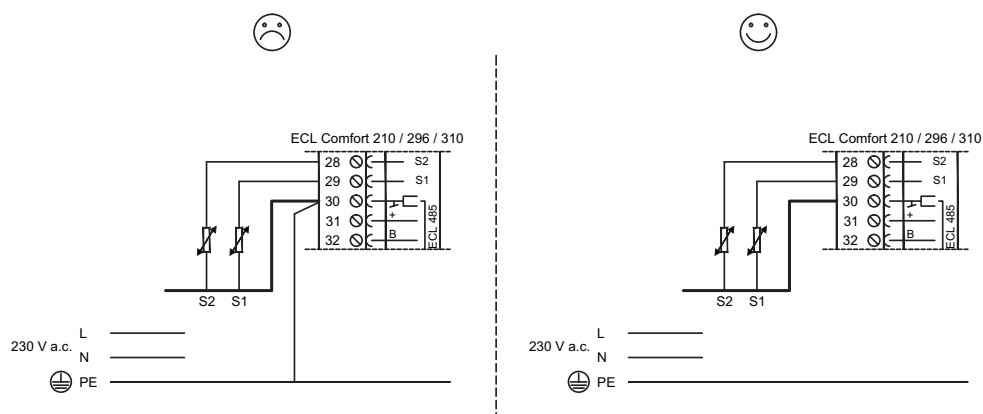 


A333.1, A333.2, A333.3

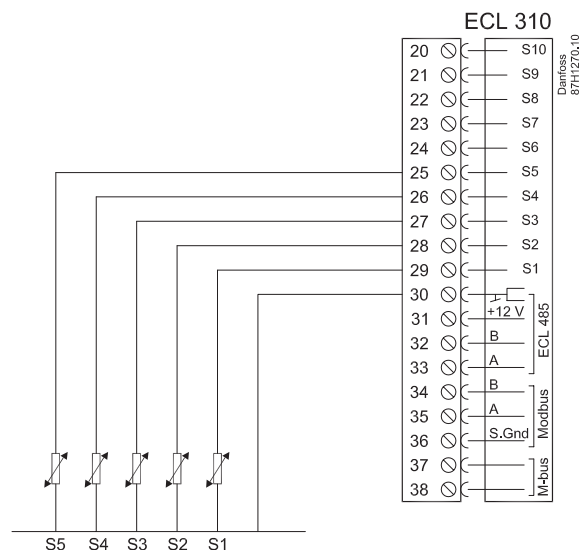 


Installation Guide, ECL Comfort 310, A333

 A333.1, A333.2, A333.3

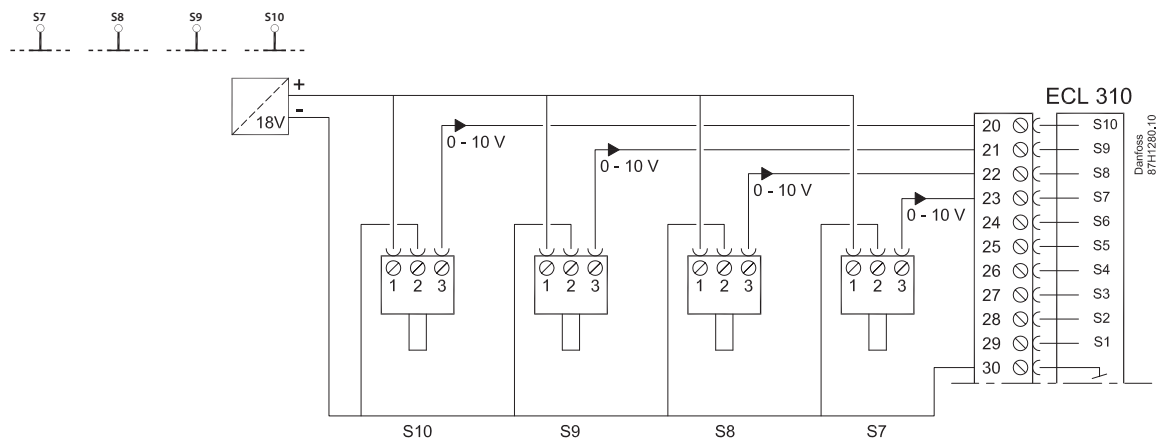


A333.1, A333.2, A333.3

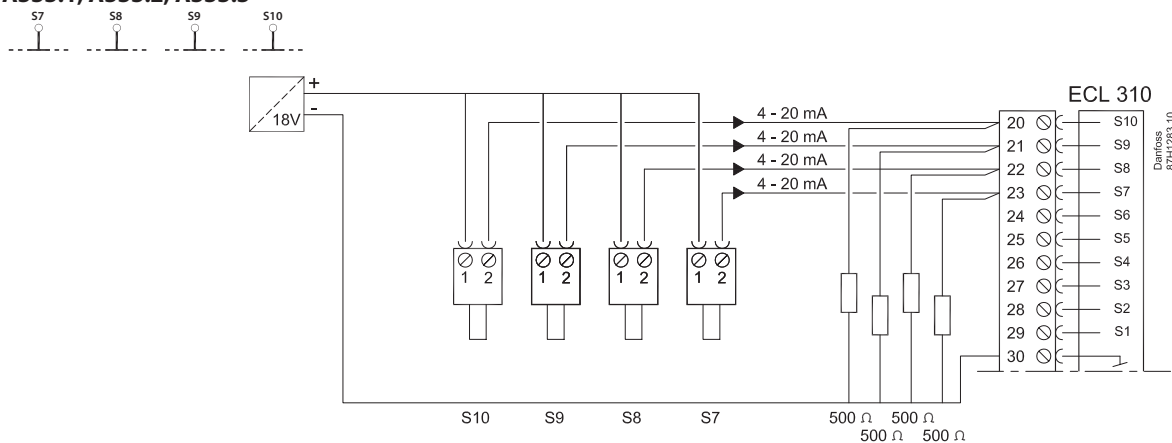 


Pulse input, F1, F2


 
A333.2, A333.3

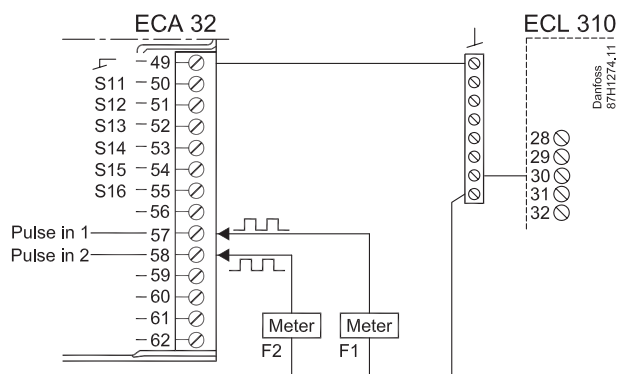


M1 position (A333.2, A333.3)

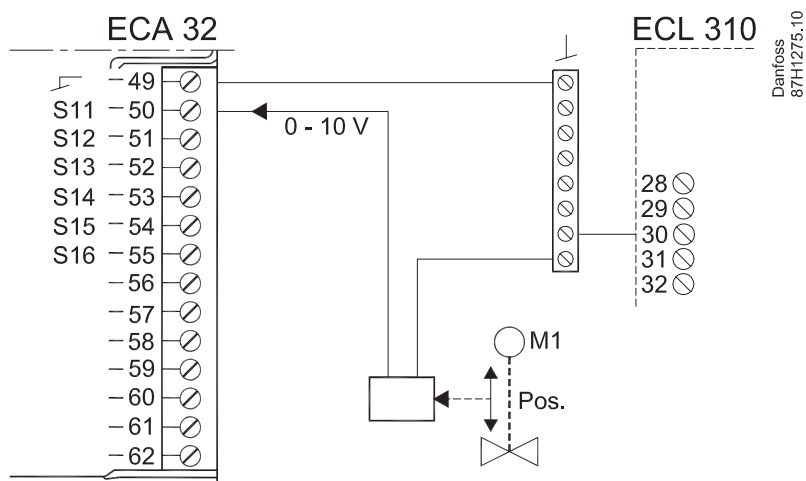 


S12, level (A333.2, A333.3)

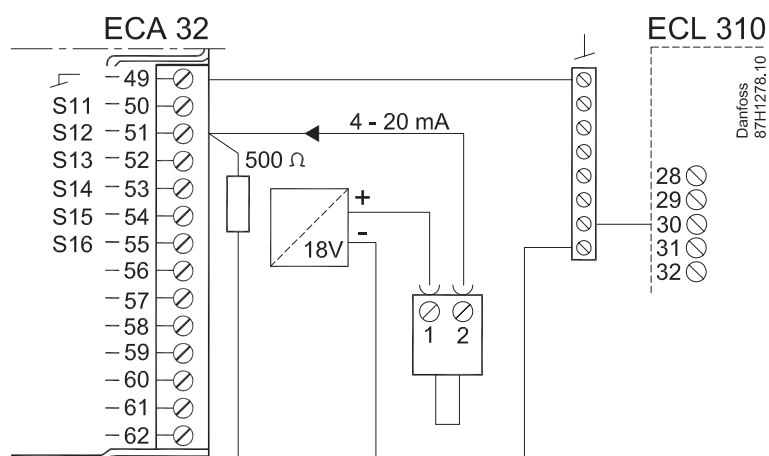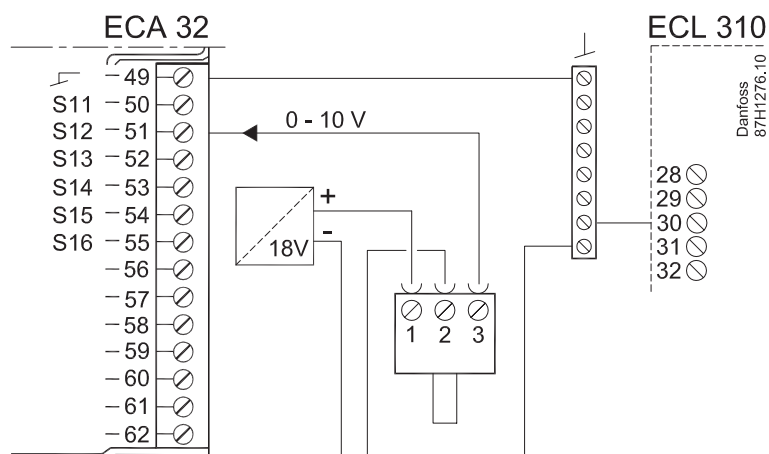  


F2, 0-10 V input (A333.2, A333.3)

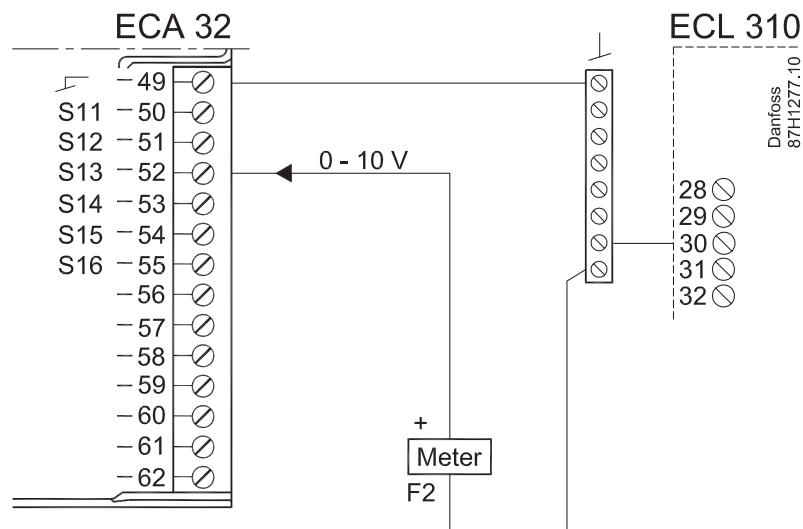 


ECA 30 / 31

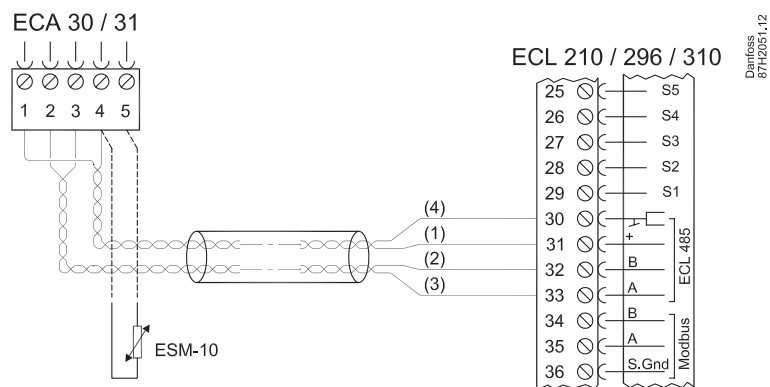 


ECA 30 / 31

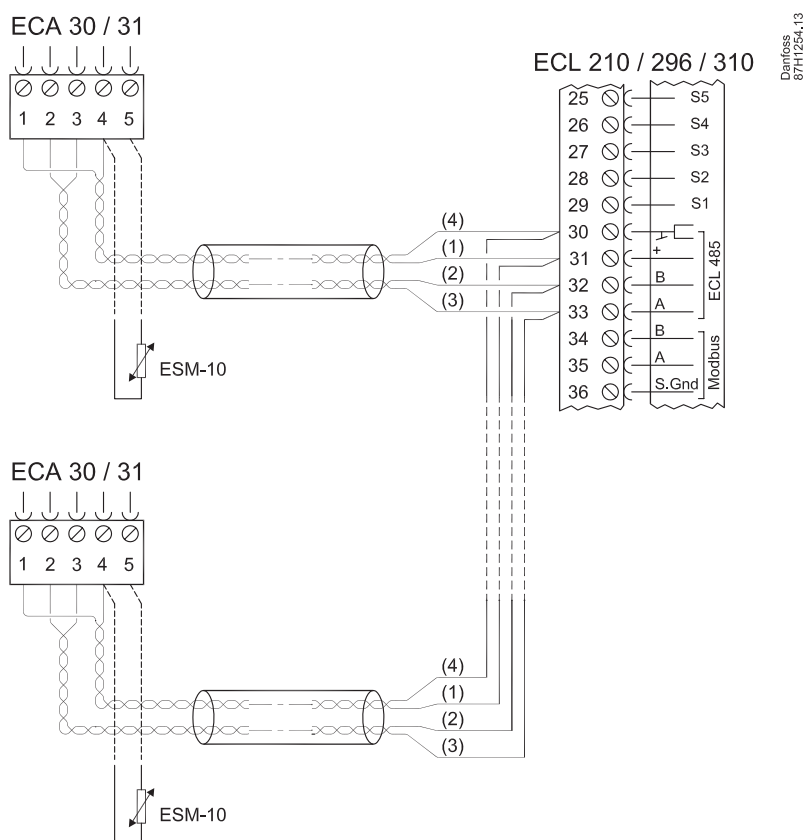 


Master / slave

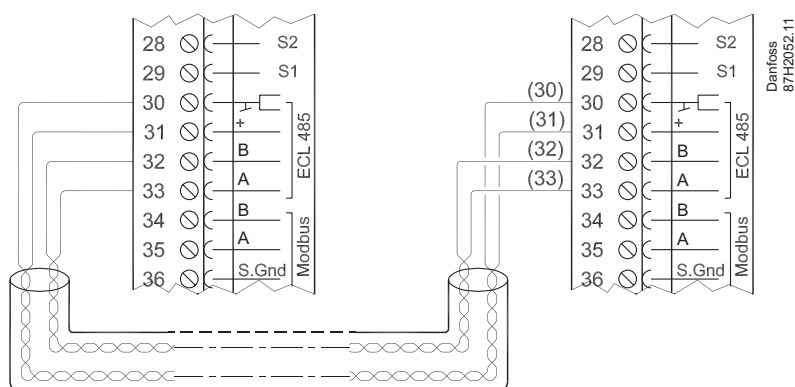 


Modbus

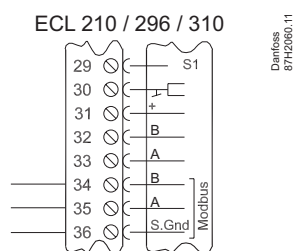 


M-bus

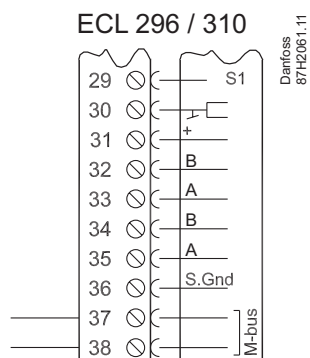 


M-bus

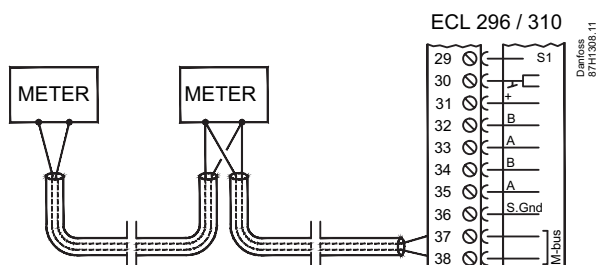 

Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

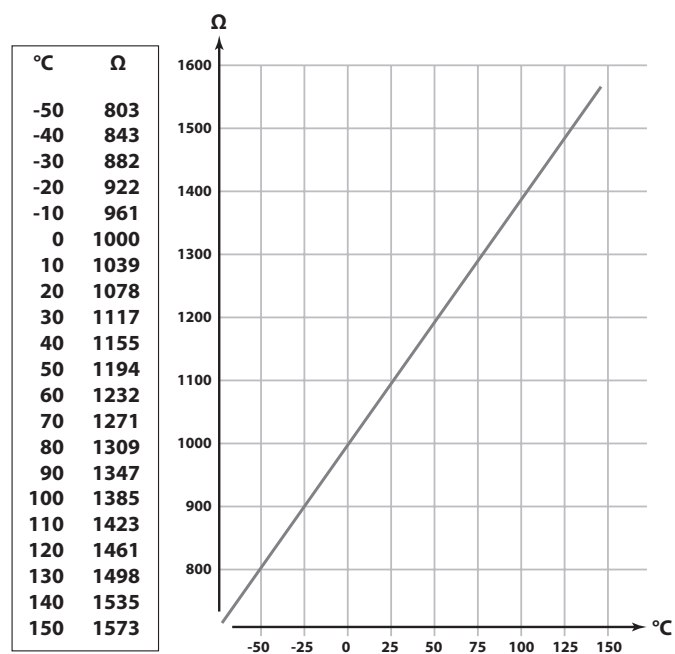 


Heat curves

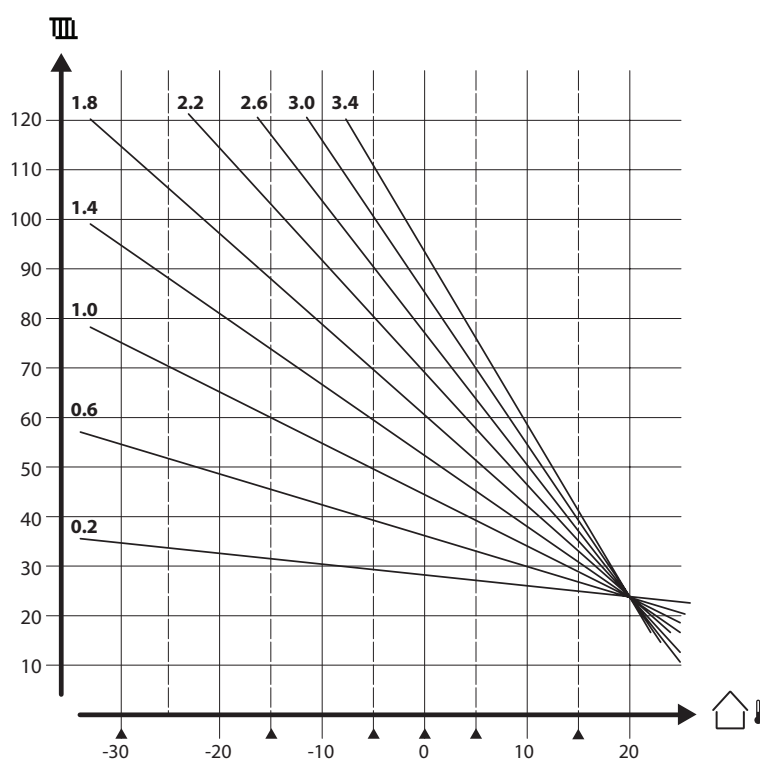 


ECA 30

 
1

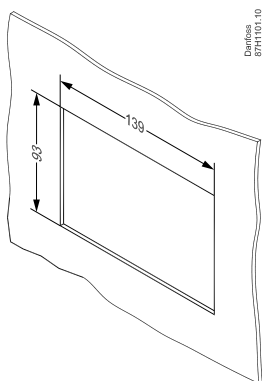


2

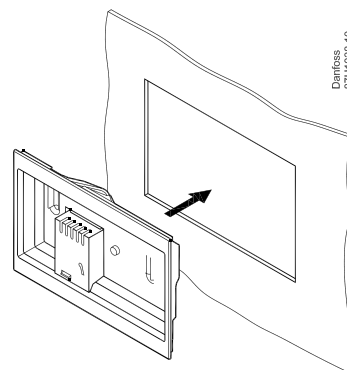 


3

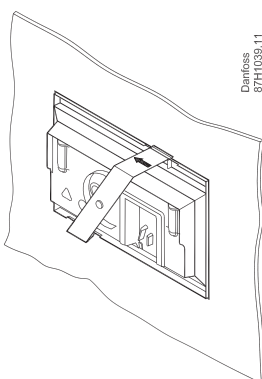 


4

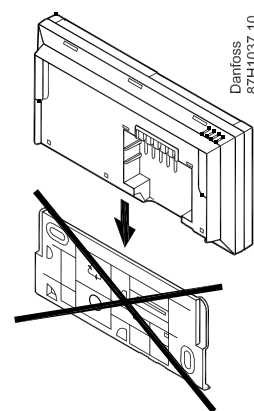 


5

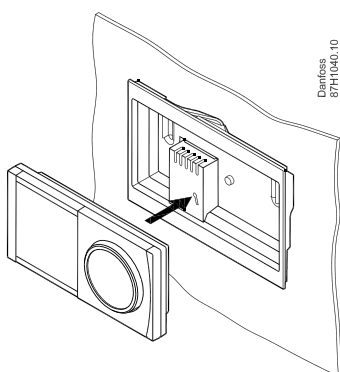 


6

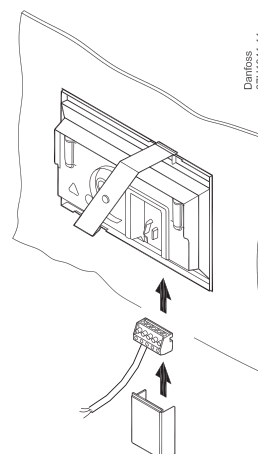 

7

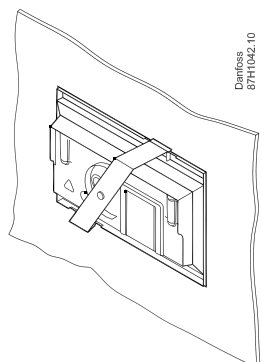 


8

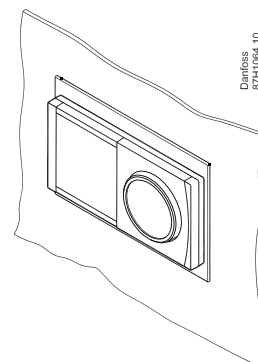 


Installation Guide, ECL Comfort 310, A333

 
Danfoss
87H1021.11

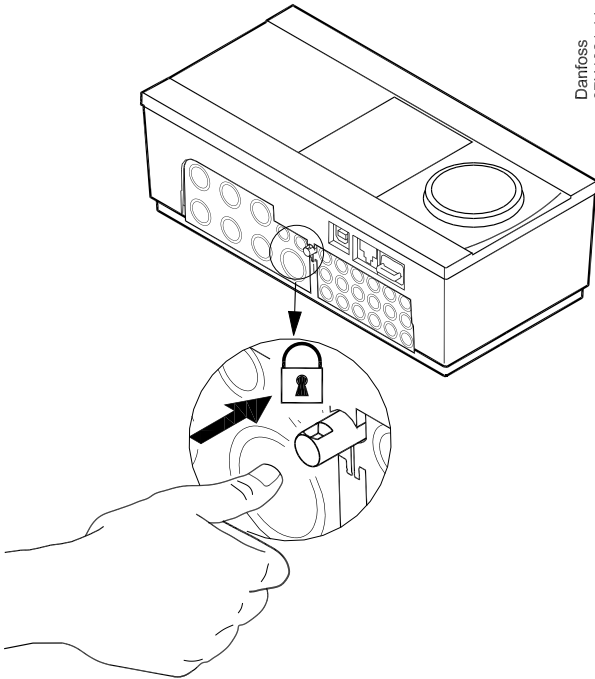


Danfoss
87H1017.11

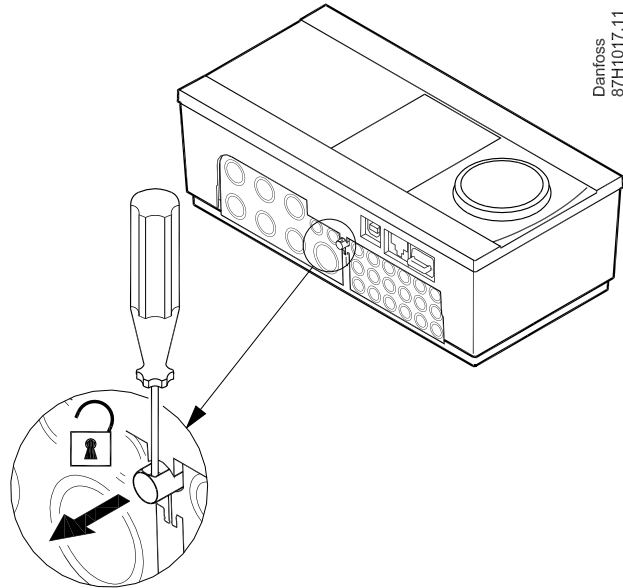 

Danfoss
87H1073.11

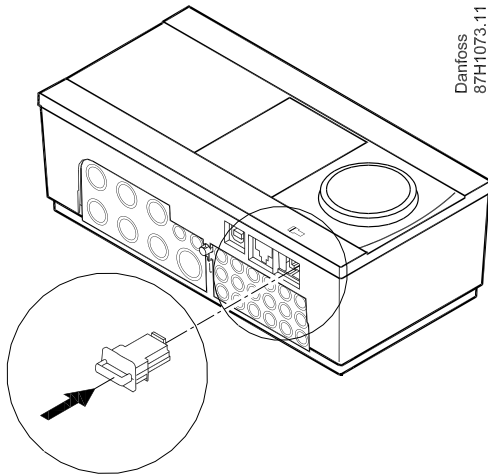 

Danfoss
87H1074.11

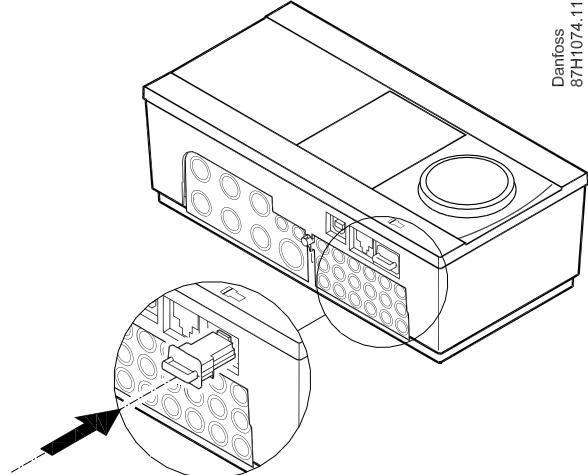 

?  **ECL Comfort 310, A333: www.heating.danfoss.com**

?  **<https://www.youtube.com/user/DanfossHeating>**
-> Playlists -> How-to Videos -> District Energy installation videos



Danfoss A/S

Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.