

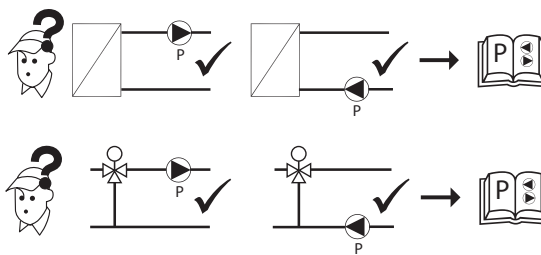
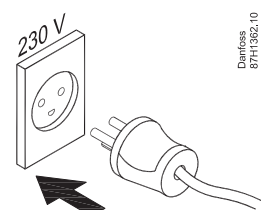
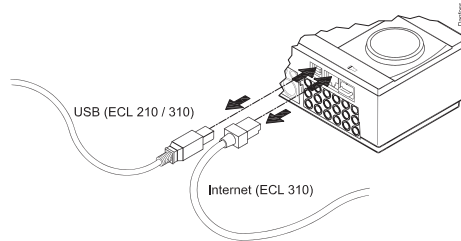


Installation Guide


# ECL Comfort 210 / 296 / 310, A267 (code no. 087H3816)

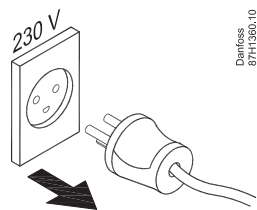


**A267.1 (ex. a):**

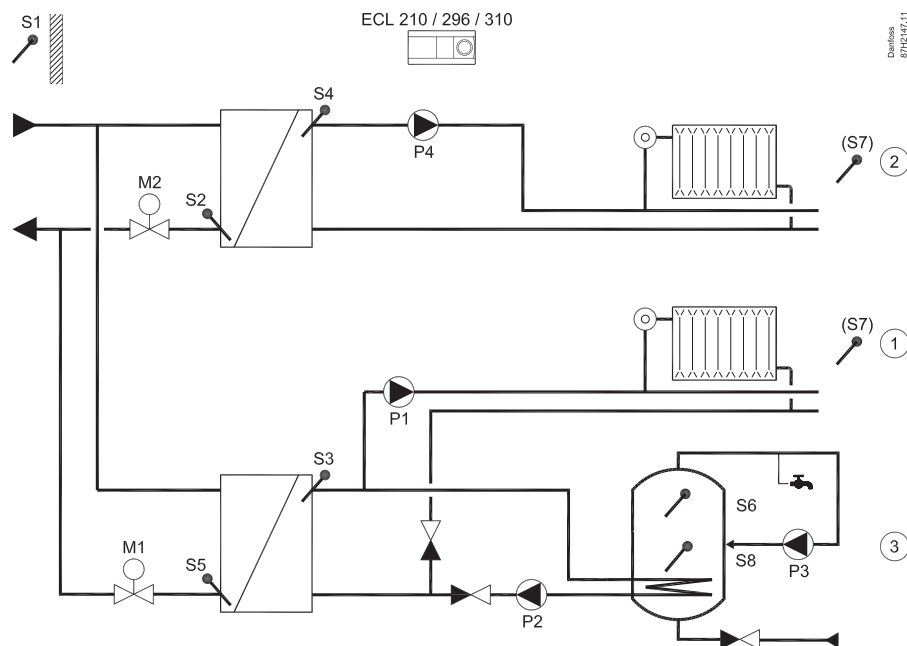


A267.1 (ex. b):

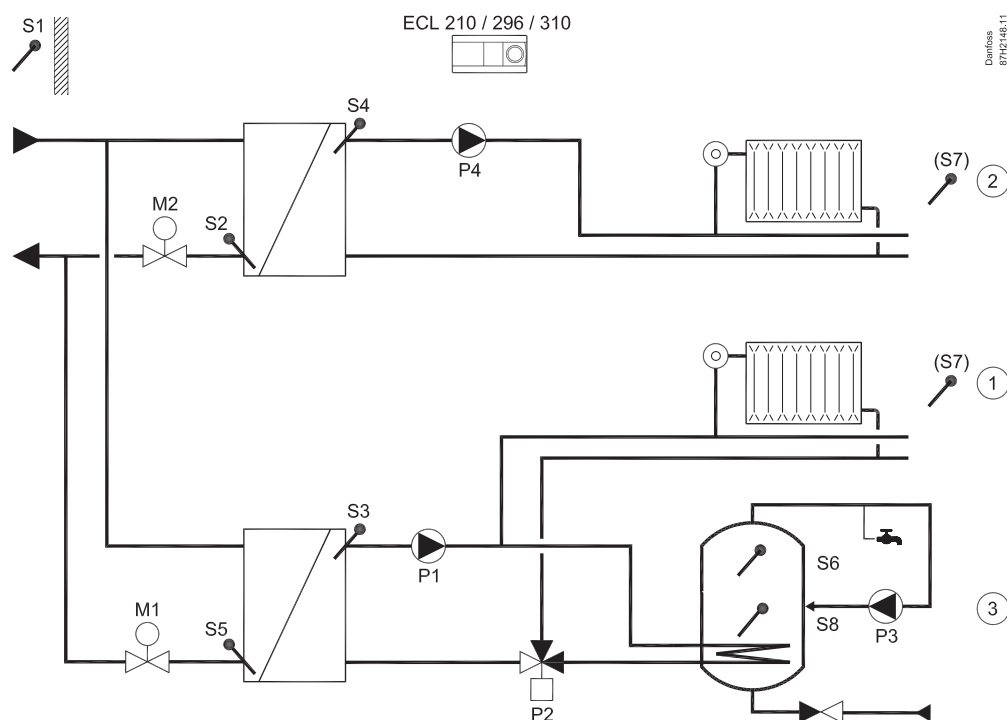

A267.1 (ex. c):

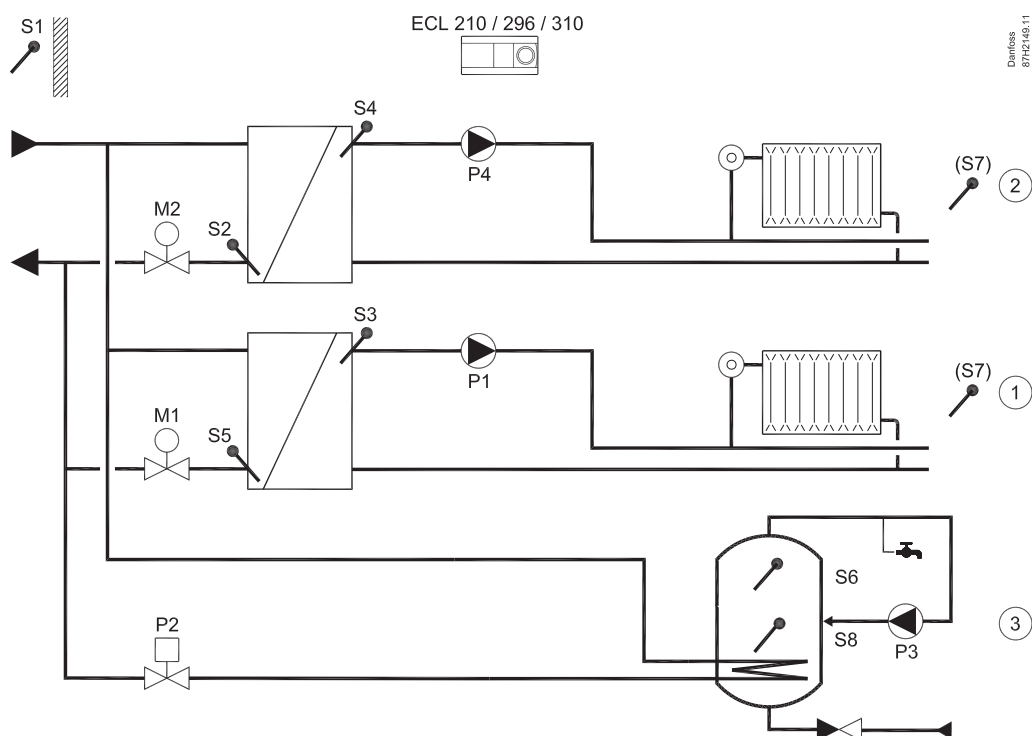


**A267.1 (ex. d):**

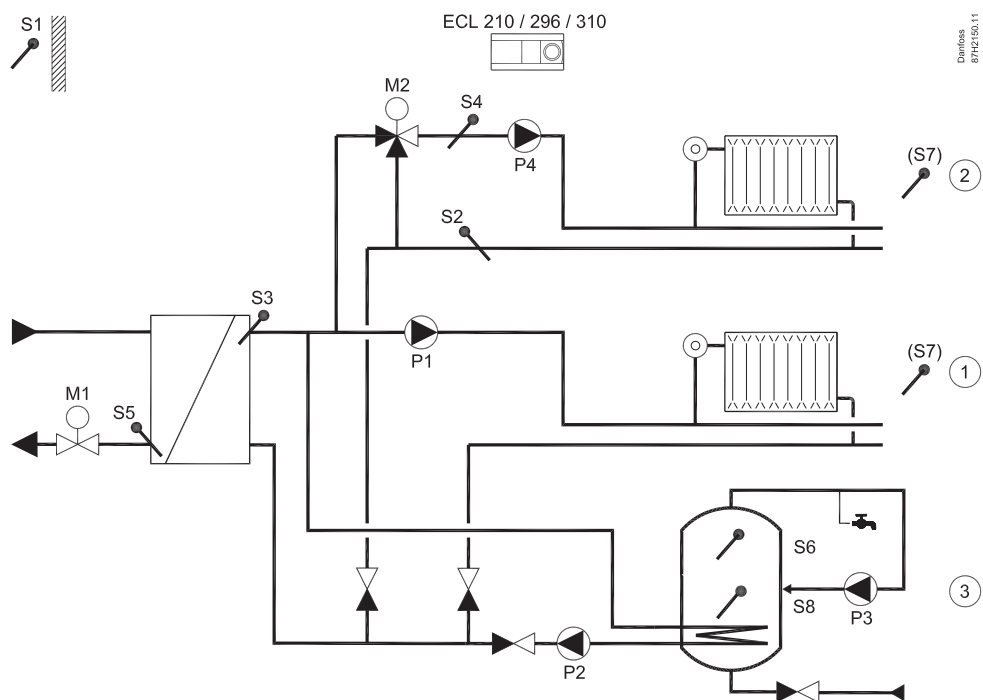


Danfoss  
87H2150,11

**A267.1 (ex. e):**

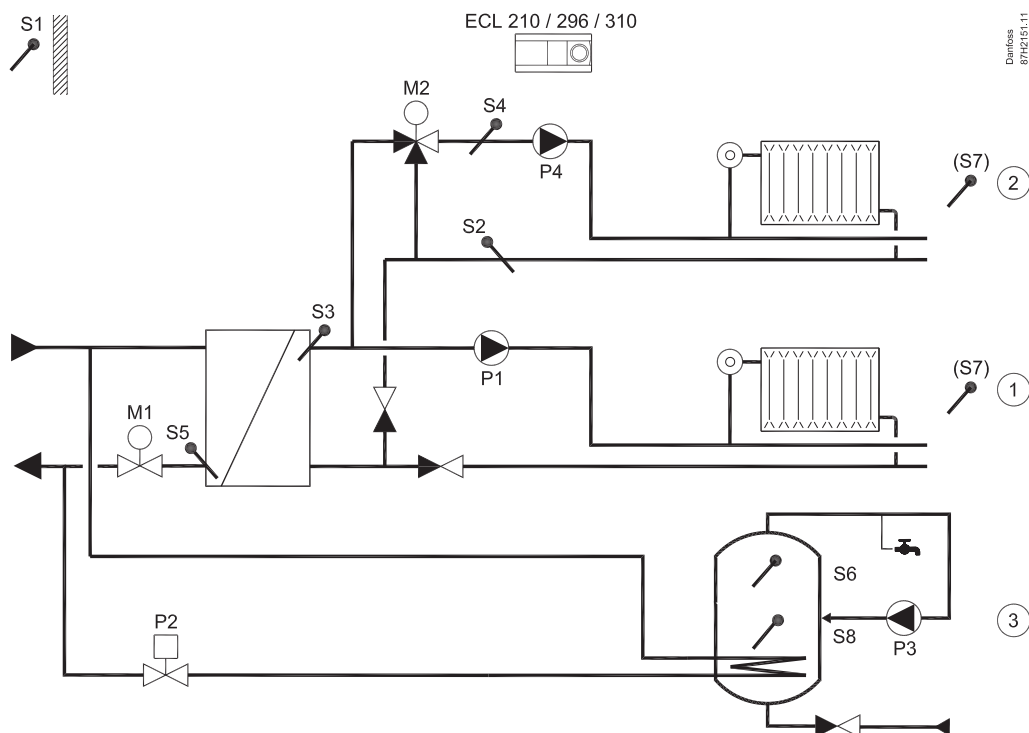


Danfoss  
87H2151,11

A267.1, ex. f:

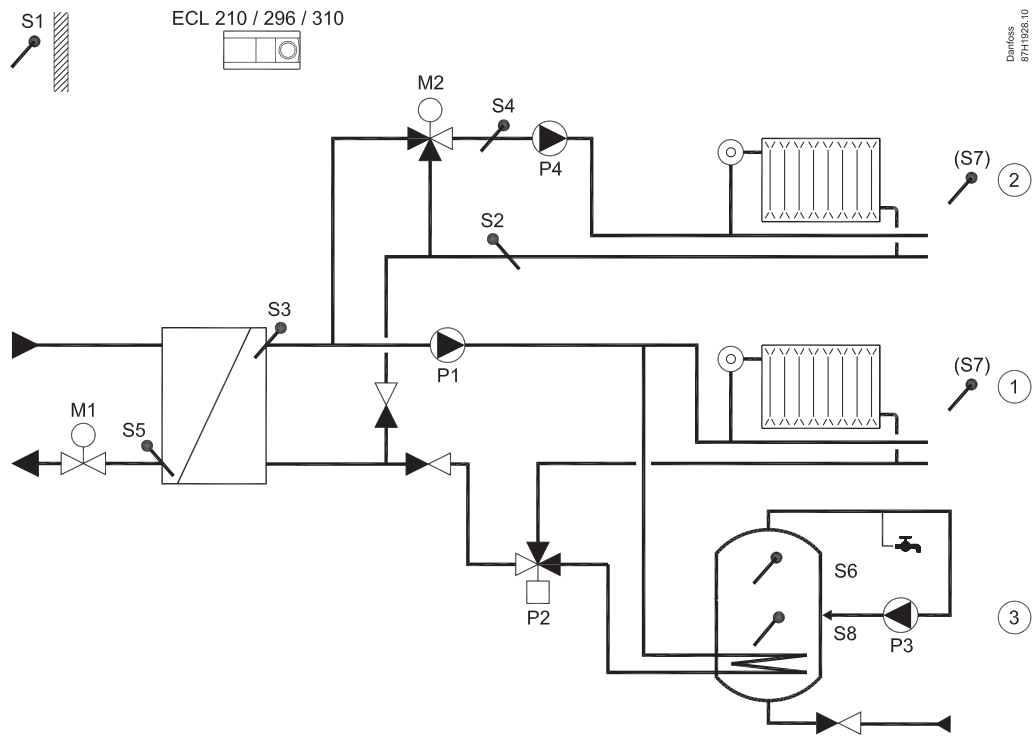

ECL Comfort 210 / 296 / 310:  
230 V a.c.

|    |                      |
|----|----------------------|
| R  | 4 (2) A / 230 V a.c. |
| R  |                      |
| Tr | 0,2 A / 230 V a.c.   |

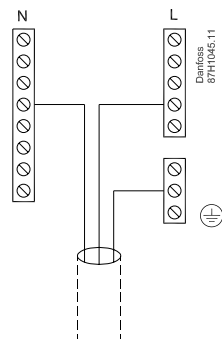


## 230 V a.c.

A267.1 ex. a, A267.1 ex. d: P2

A267.1 ex. b, A267.1 ex. f: P2

A267.1 ex. c, A267.1 ex. e: P2

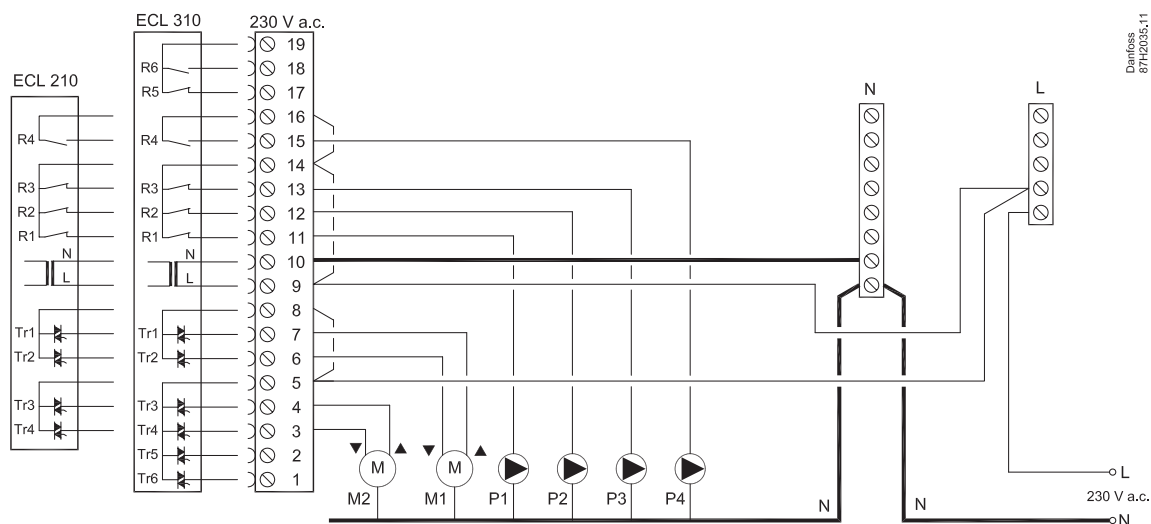

Danfoss  
67H2035.11

## ECL Comfort 310:

### 24 V a.c.


|    |                     |
|----|---------------------|
| R  | 4 (2) A / 24 V a.c. |
| R  |                     |
| Tr | 1 A / 24 V a.c.     |

## 24 V a.c.

A267.1 ex. a, A267.1 ex. d: P2

A267.1 ex. b, A267.1 ex. f: P2





A267.1 ex. c, A267.1 ex. e: P2

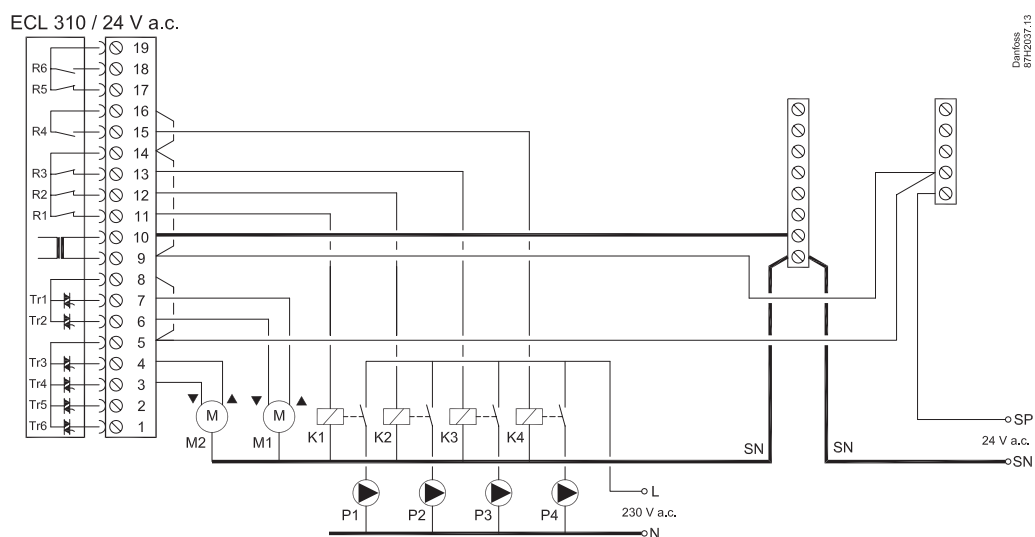

Danfoss  
67H2037.13



230 V a.c. / 24 V a.c. safety thermostat

1-step closing

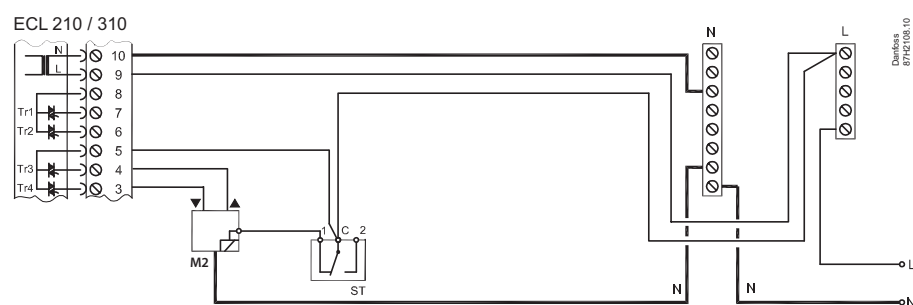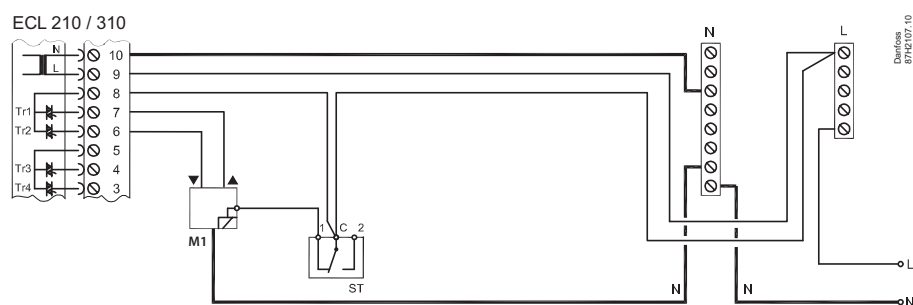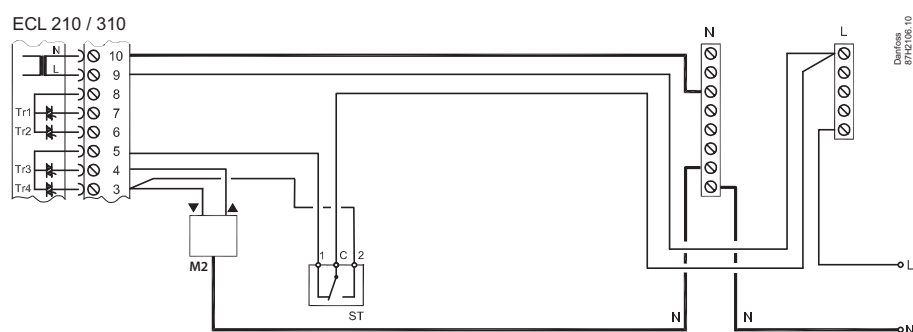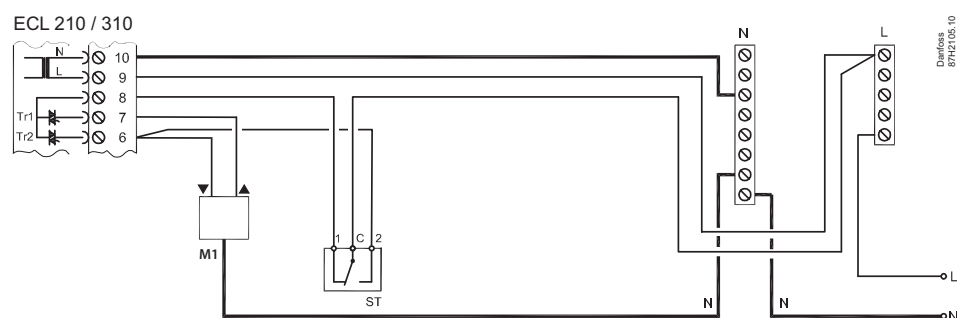



**230 V a.c. / 24 V a.c. safety thermostat**

**2-step closing**

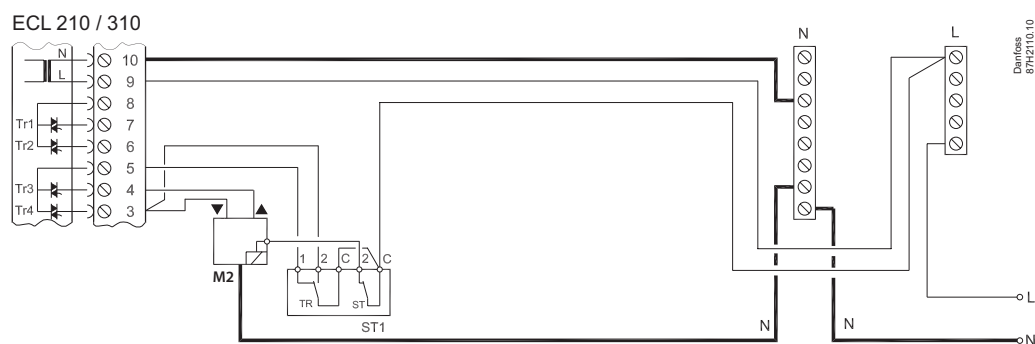
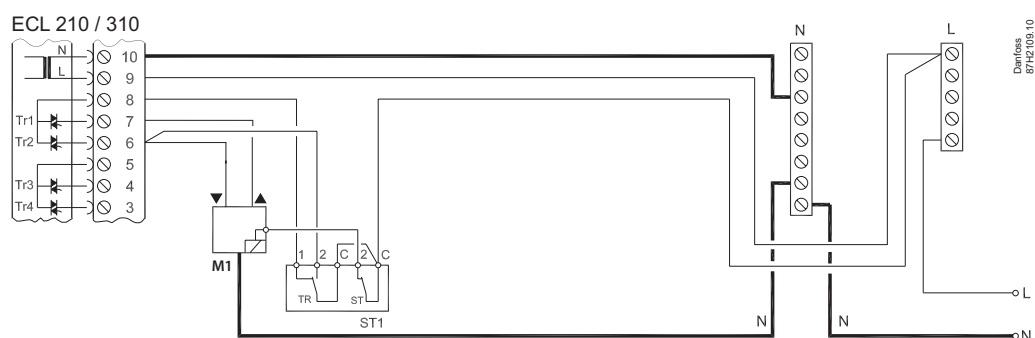


**A267 (ECL 210)**


**Pt 1000** (1000  $\Omega$  / 0 °C)

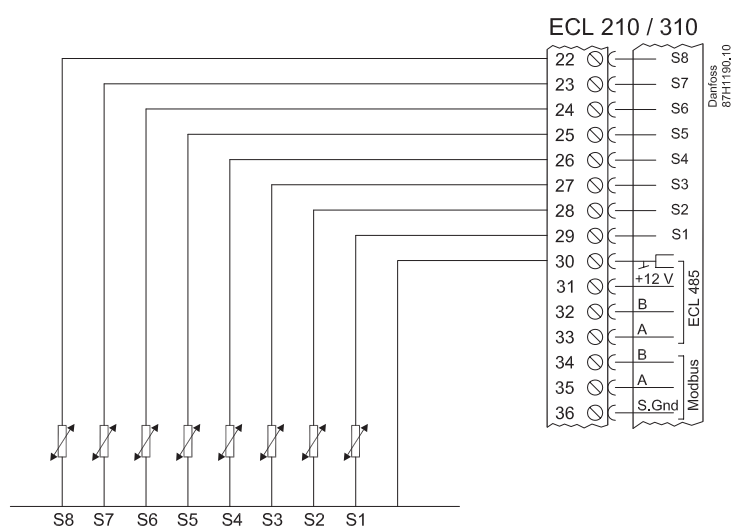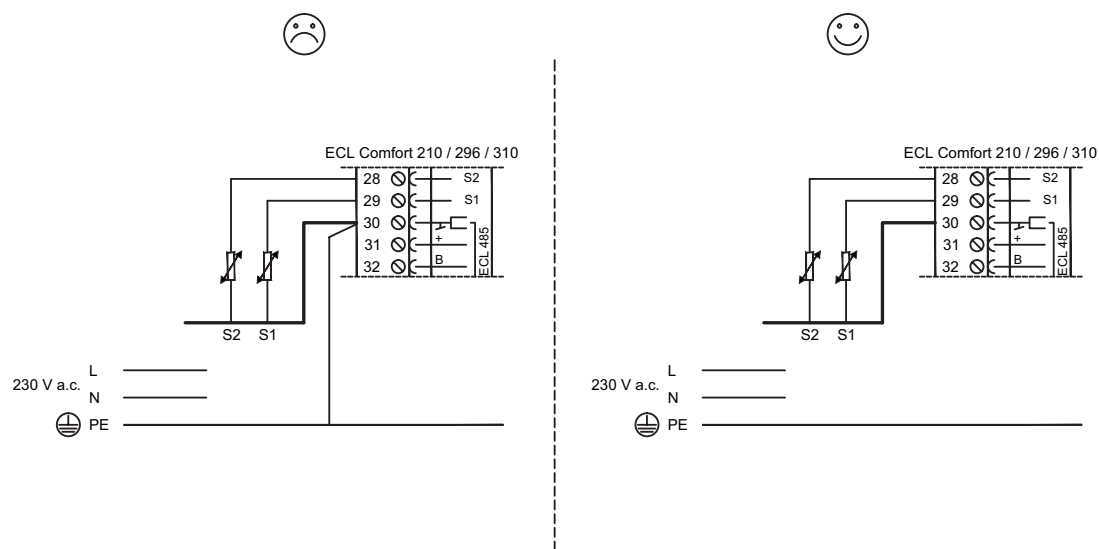


## ECA 30 / 31

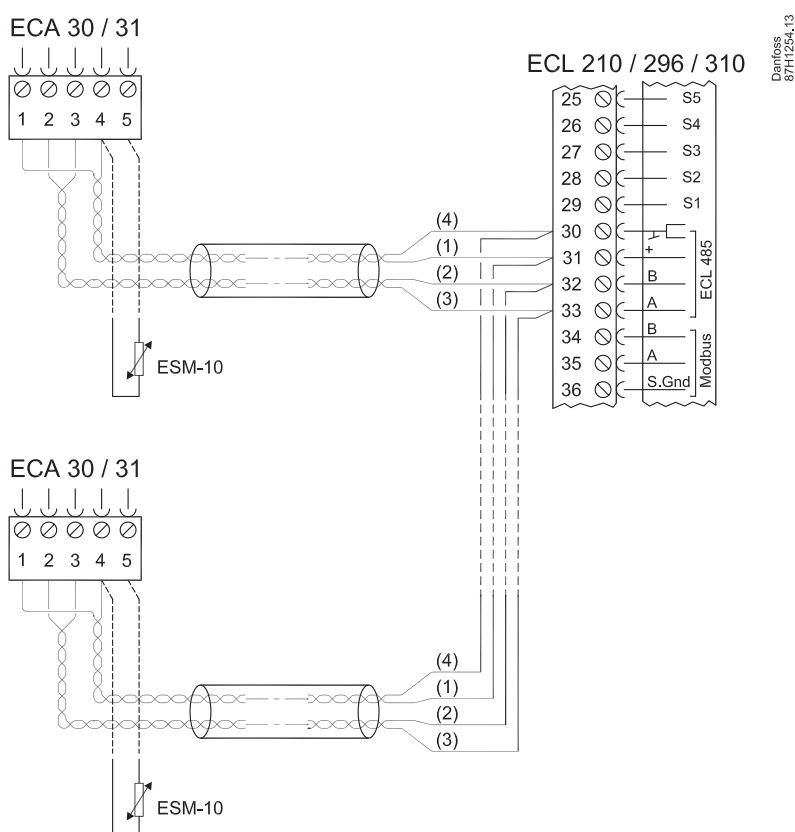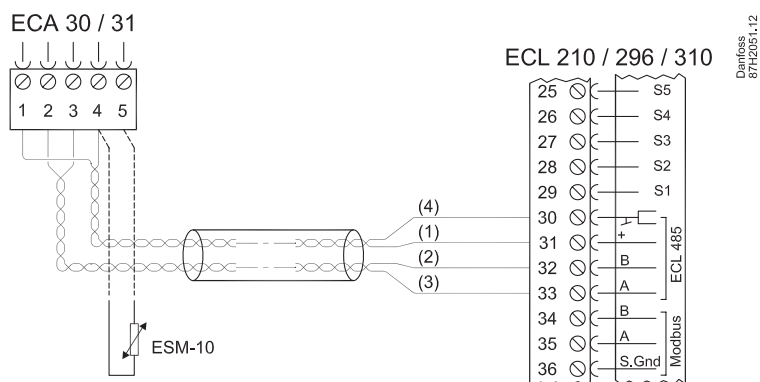


## Master / slave

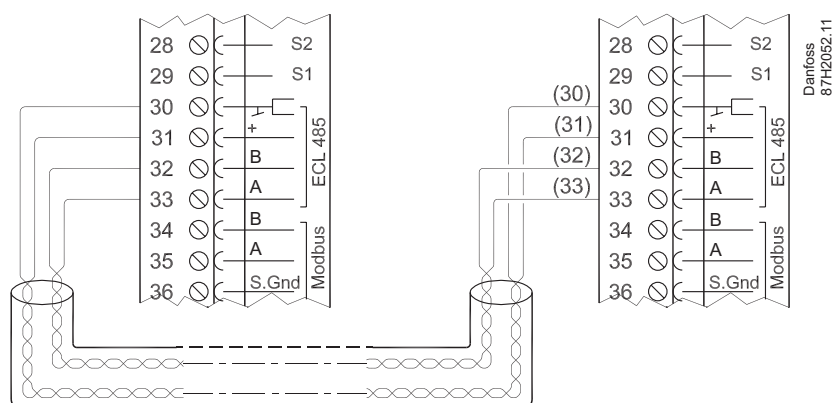


Modbus

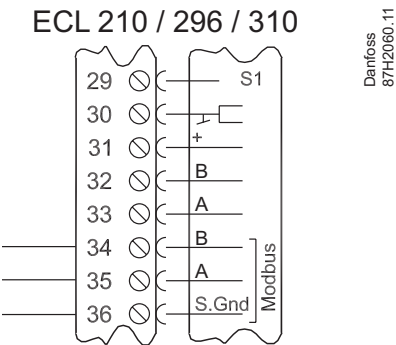


M-bus

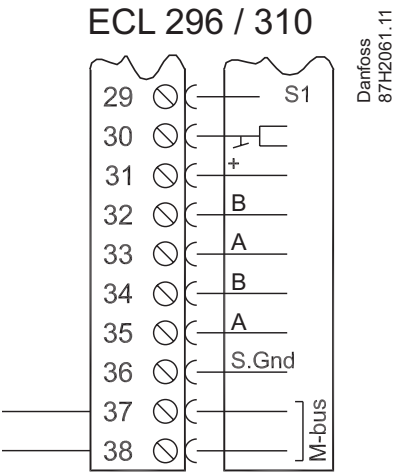


M-bus

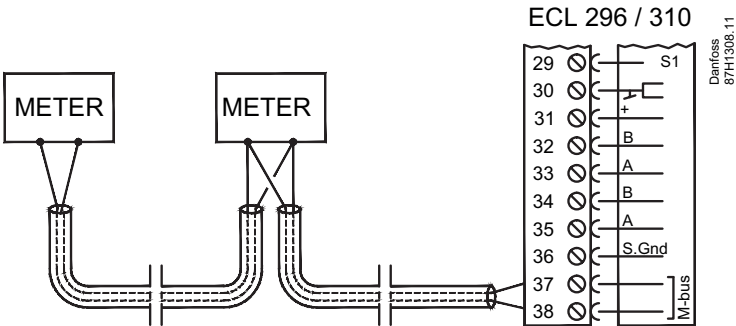

Pt 1000 (IEC 751B, 1000  $\Omega$  / 0 °C)

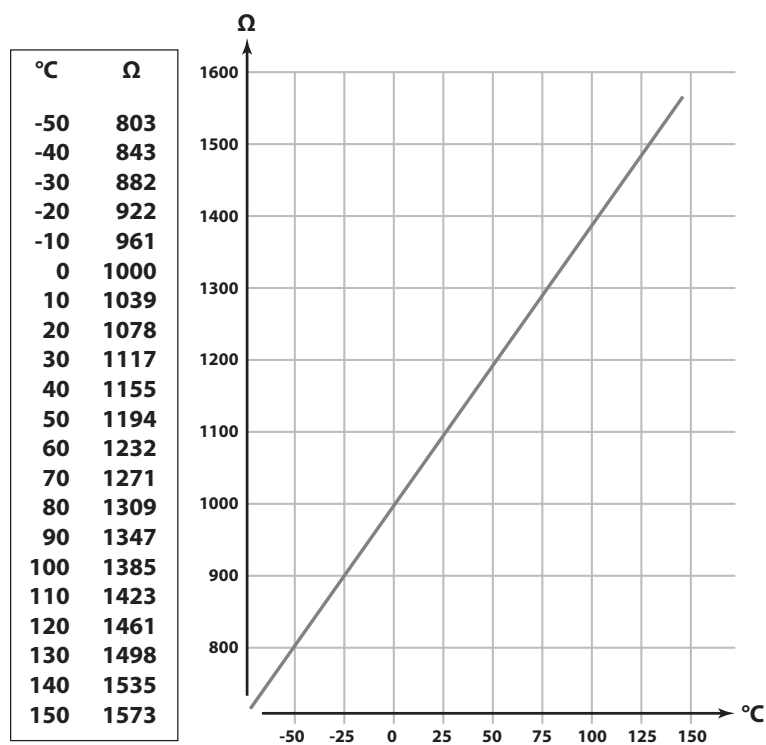


Heat curves

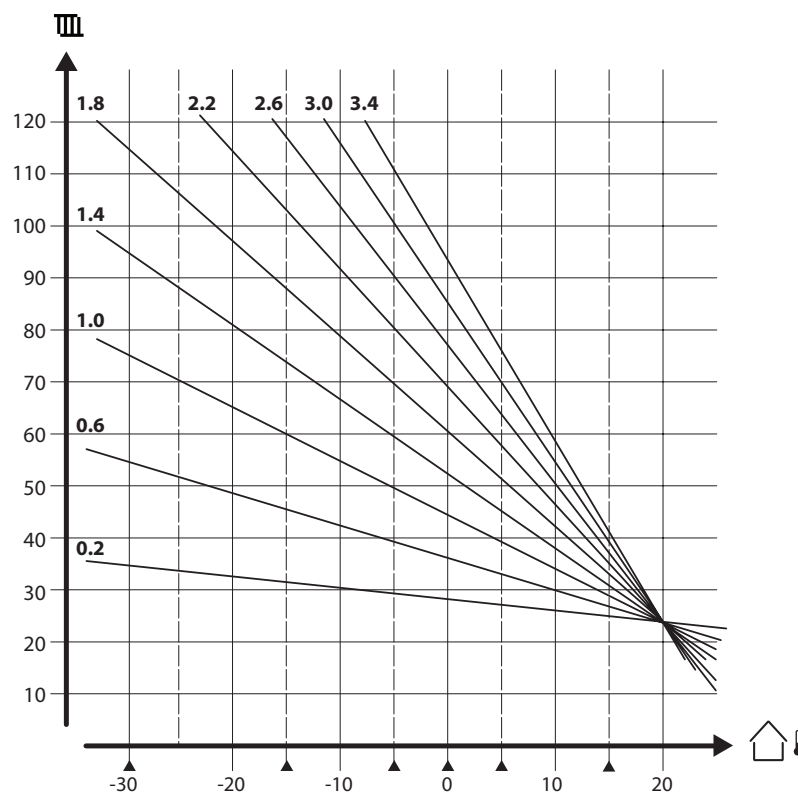


ECA 30


1

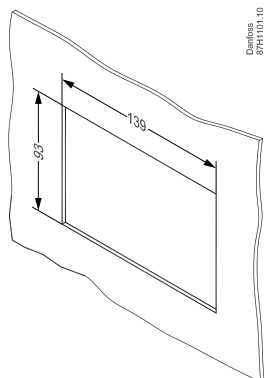


2

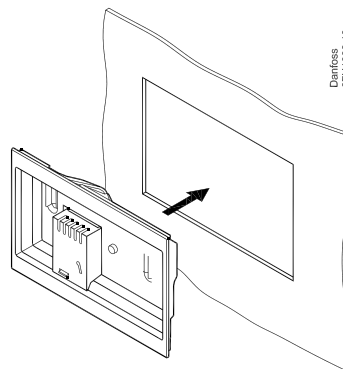


3

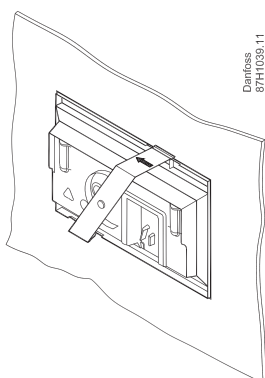


4

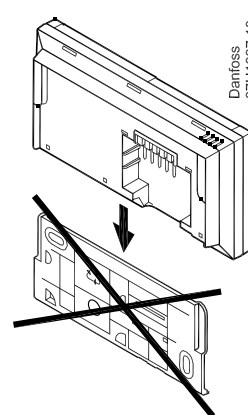


5

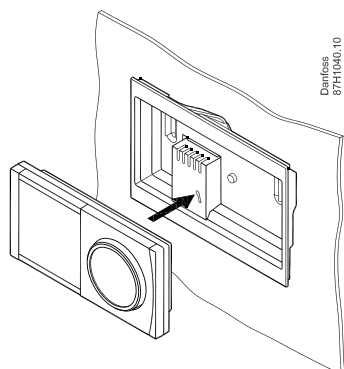


6

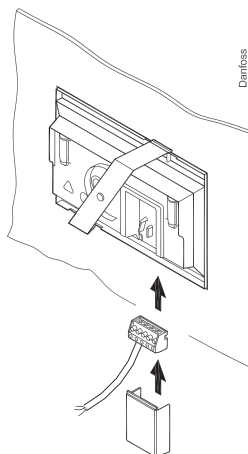

7

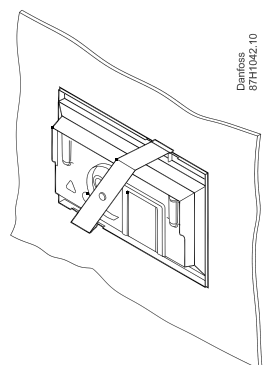

8

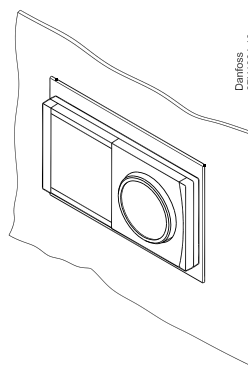









Installation Guide, ECL Comfort 210 / 296 / 310, A267


Danfoss  
87H1021.11

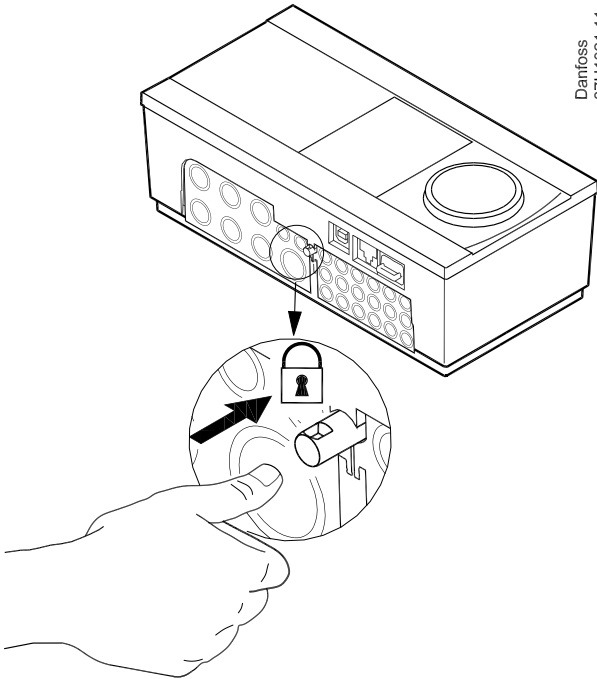


Danfoss  
87H1017.11

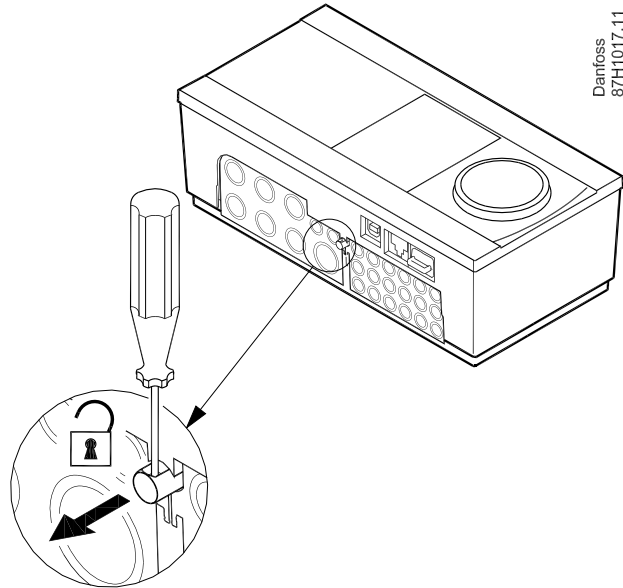

Danfoss  
87H1073.11

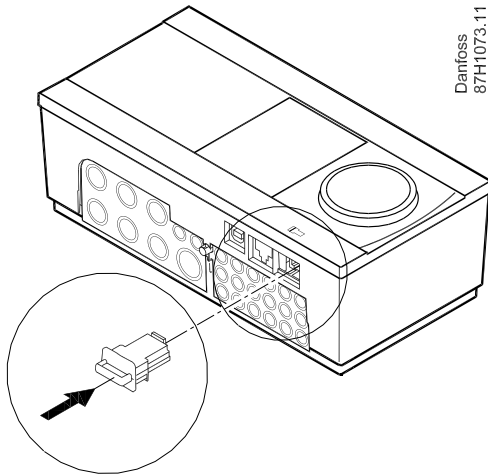

Danfoss  
87H1074.11

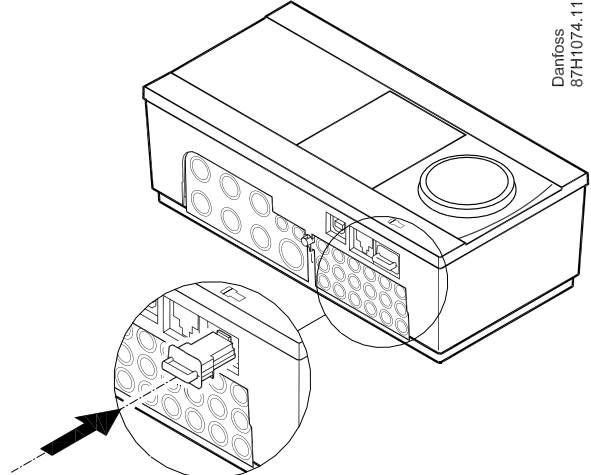

? **ECL Comfort 210 / 296 / 310, A267: [www.heating.danfoss.com](http://www.heating.danfoss.com)**

? **<https://www.youtube.com/user/DanfossHeating>  
-> Playlists -> How-to Videos -> District Energy installation videos**



**Danfoss A/S**

Heating Segment • [danfoss.com](http://danfoss.com) • +45 7488 2222 • E-Mail: [heating@danfoss.com](mailto:heating@danfoss.com)

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.