

Operating Guide

MCXS


How to add a language

Summary


MCXShape allows adding new languages to the available one. The procedure is quite easy and is explained below.

Description


1. Enable developer mode from the menu "View":

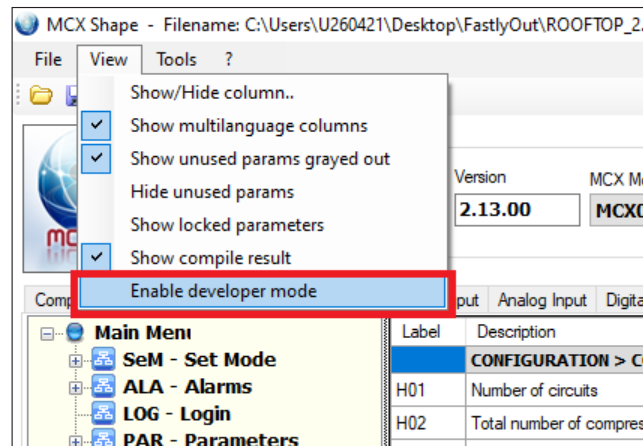


2. Edit Languages from the menu "Tools":

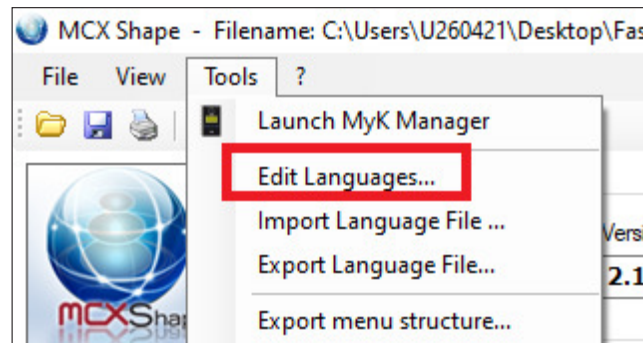

3. Add new languages:

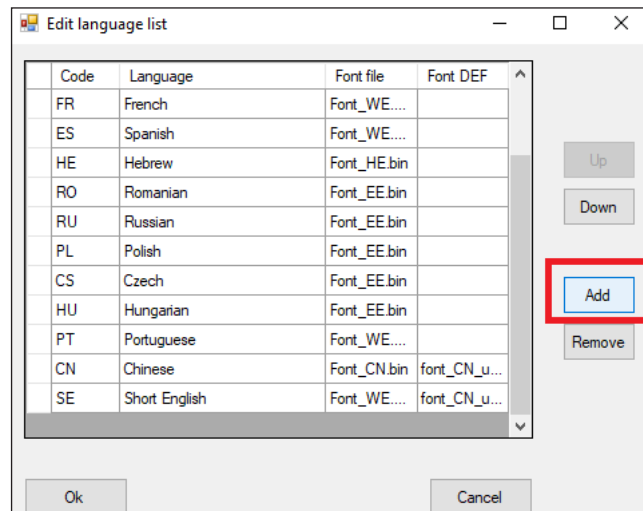


4. Type the "Font" that will be used for the language:
The ones available are in the folder "bin". By opening them with a text editor, you can check the characters inside

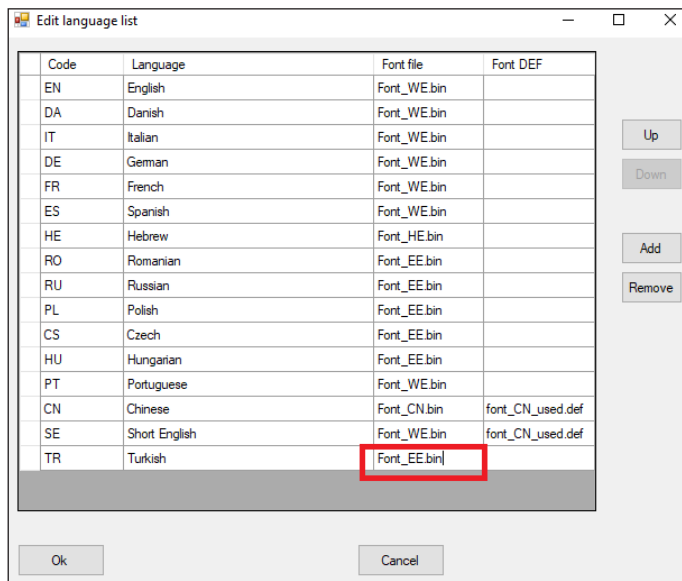


5. Save the changes with the button "OK":



Note: now there will be an additional column containing the new language.

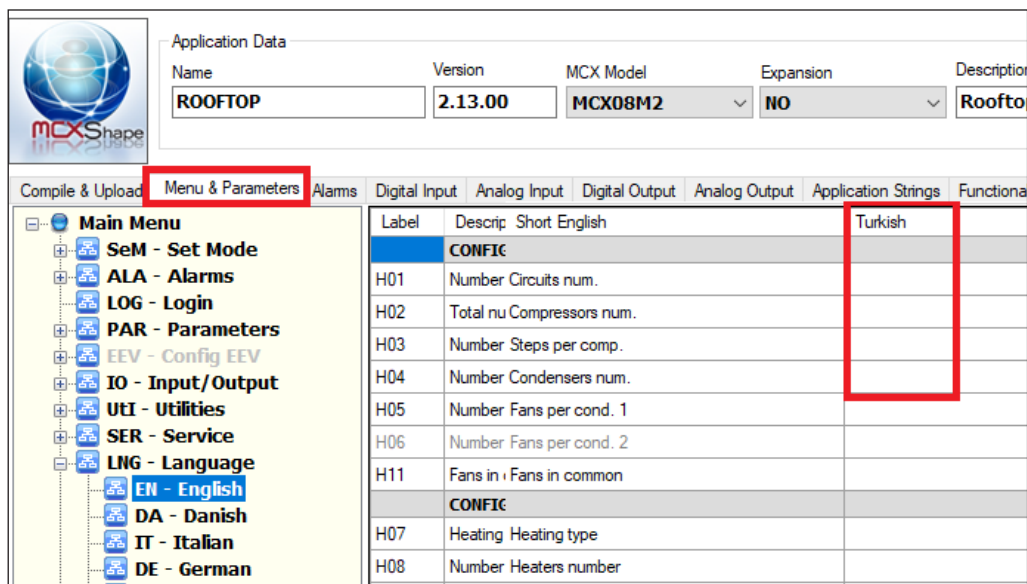

6. Add the new language to the menu "LNG-Language"

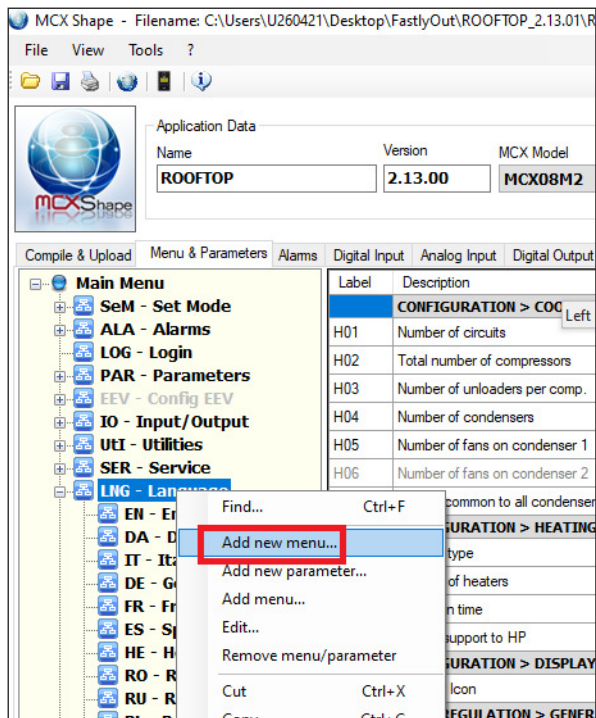

7. The "Out Code" must be set in such an order that it will be consecutive with the previous menu:

Menu settings ID 755

Label:

Description:

Level:

Enabled:

Out Code:

Variable Name:

Functionality:

Visibility:

Refresh Languages

Language	Description
English	Turkish
Danish	
Italian	
German	
French	
Spanish	
Hebrew	
Romanian	
Russian	
Polish	

Save Cancel


Application Data

Name:

Compile & Upload | Menu & Parameters | Alarms | Digital In

Label
SeM - Set Mode
ALA - Alarms
LOG - Login
PAR - Parameters
EEV - Config EEV
IO - Input/Output
UTI - Utilities
SER - Service
LNG - Language
EN - English
DA - Danish
IT - Italian
DE - German
FR - French
ES - Spanish
HE - Hebrew
RO - Romanian
RU - Russian
PL - Polish
CS - Czech
HU - Hungarian ...
PT - Portuguese 183
CN - Chinese 184
TU - Turkish 185
STV - Status var

8. Export Language File from the menu "Tools":

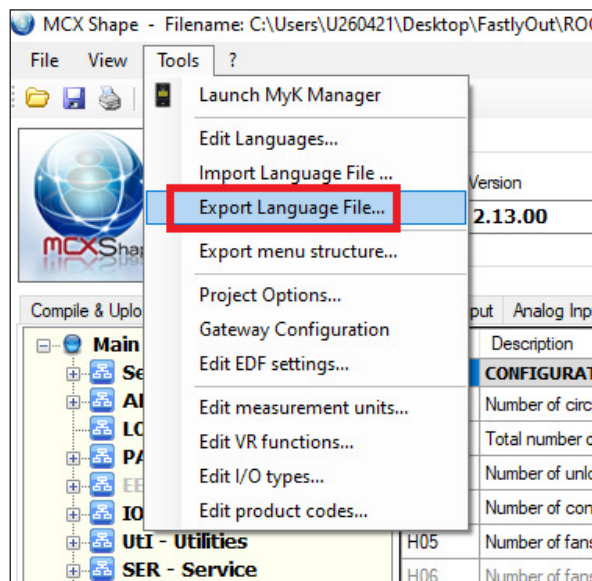

9. Fulfill the translation in the file export_lang.XLS

10. Import language file from the menu "Tools":

