



**Operating Guide** 


NovoCon® L/XL / 73690670


# NovoCon® L/XL

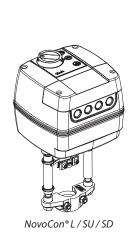




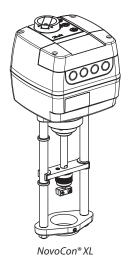

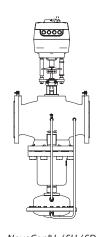

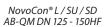

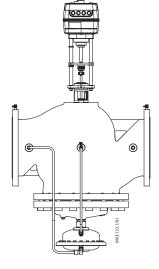

NovoCon®XL AB-QM DN 200 - 250HF













no condensing

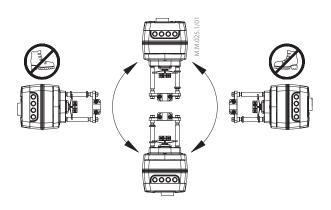


NovoCon® L

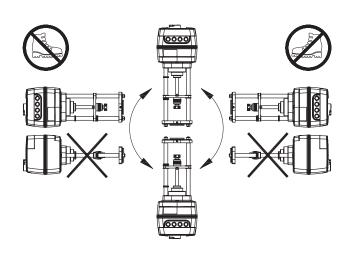


NovoCon® XL




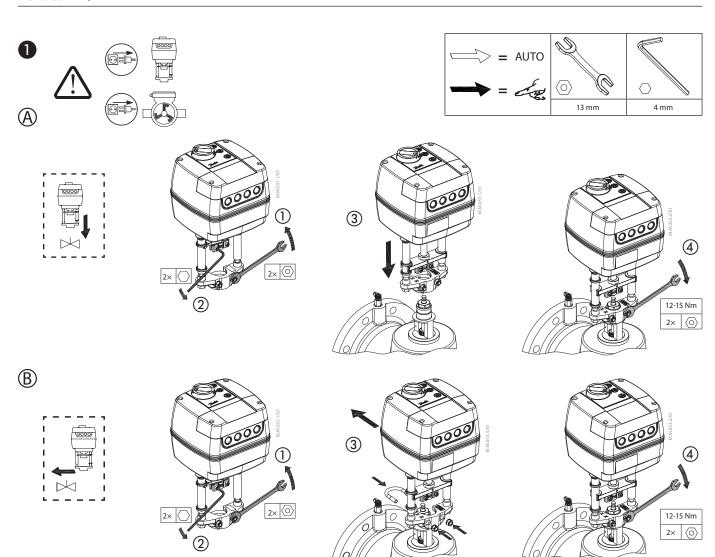






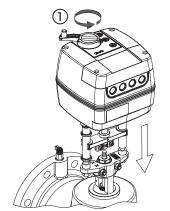

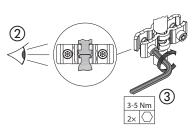

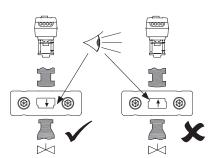

 $\bigcirc$ 

4 mm

T 10


3,5 - 4,5 mm × 0,7mm




= AUTO



## B NovoCon® L SD

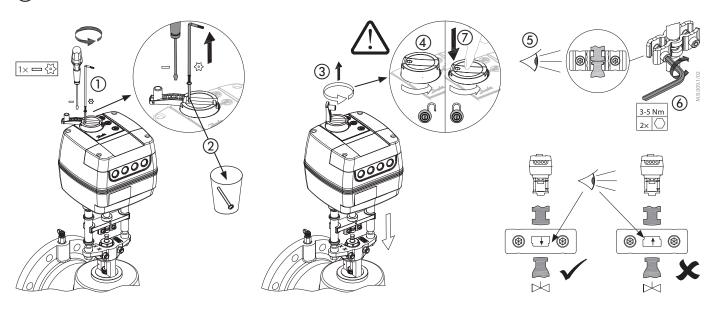

# NovoCon® L SU

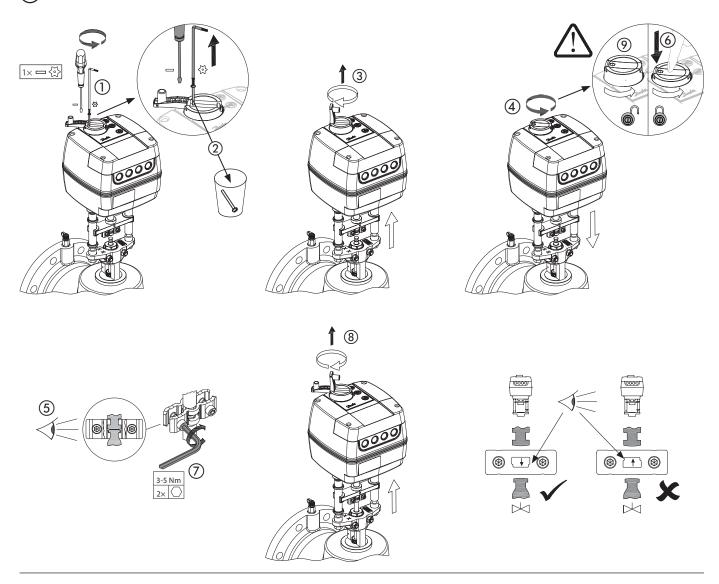







### NovoCon® XL









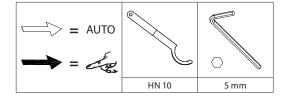


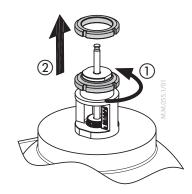


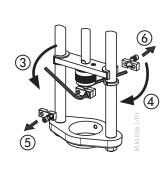


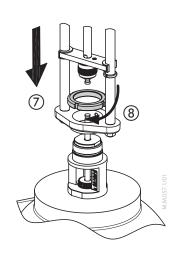




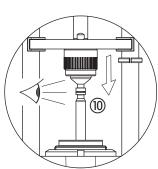

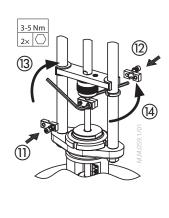

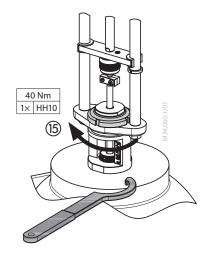

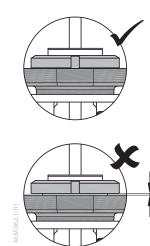





NovoCon® XL






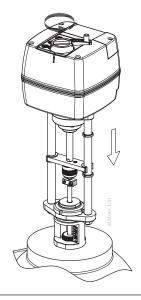

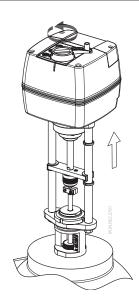



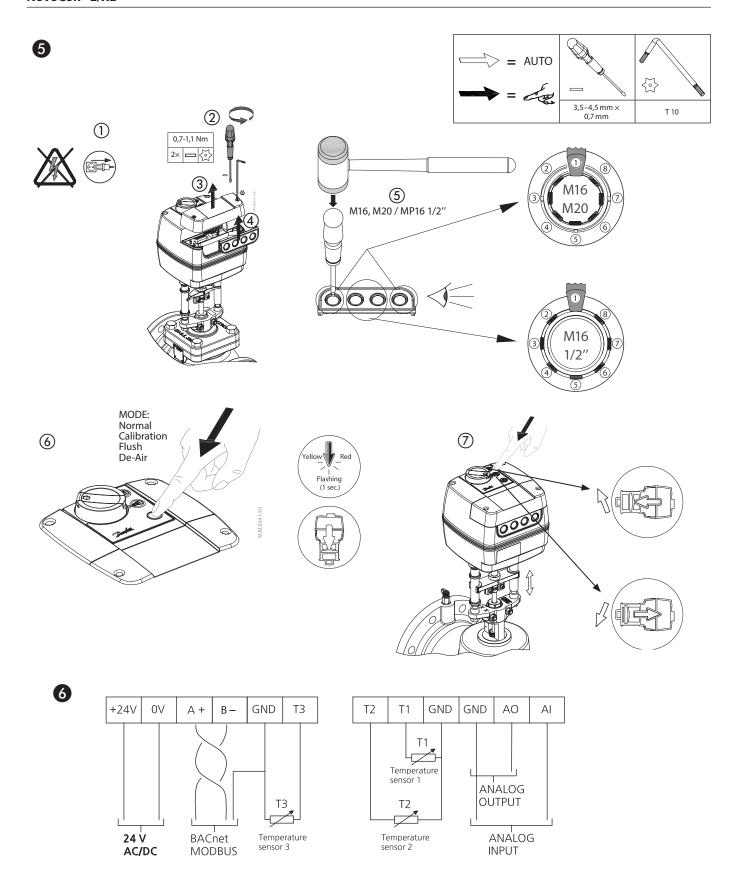

GND is common for all signals


AQ321852892717en-010301 © Danfoss | 2021.09 | 5








8

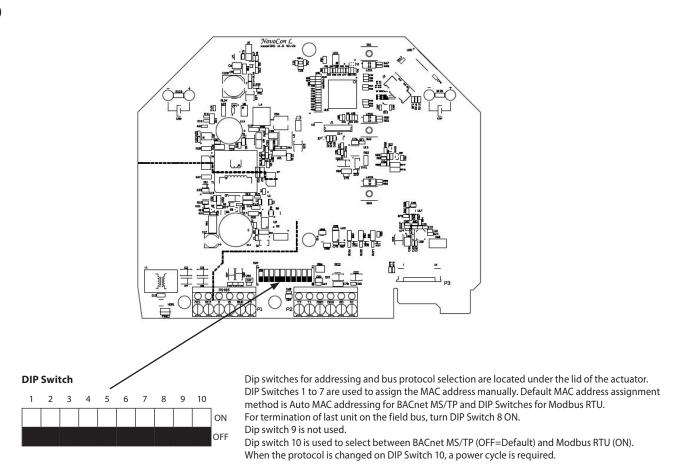

9 Initial configuration

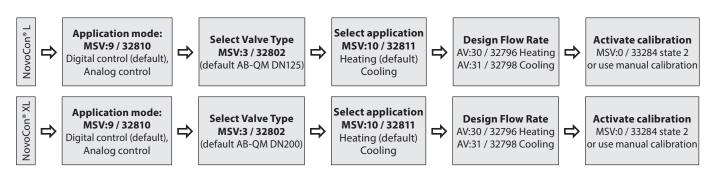

6 | © Danfoss | 2021.09 AQ321852892717en-010301





#### **Safety Note**



To avoid injury and damage to persons and devices, it is absolutely necessary these instructions are carefully read and observed prior to assembly and commissioning. Necessary assembly, start-up, and maintenance work must be performed only by qualified, trained and authorised personnel. Switch off the pump and the power line before mounting and wiring the actuator.

#### **Safety Note**



Connect via safety isolating transformer.  ${\it Galvanic separations shall be provided for segments crossing}$ buildings.

#### **Safety Note**



 $If the Novo Con^*L/XL\ network\ is\ supplied\ with\ two\ or\ more\ AC\ power\ boosters,\ caution\ must\ be\ observed\ when\ disconnecting\ one\ of\ the\ transformers\ from\ the\ high\ voltage\ power\ line.\ As$ the NovoCons may be connected in a daisy chain, there may be high voltage on the primary side of the disconnected power supply. Disconnect always both the primary and secondary side of the transformer.

#### Firmware update

We recommend to validate the firmware version before installation. The latest firmware can be downloaded at www.novocon.com by selecting the tab: Support files.

AQ321852892717en-010301 © Danfoss | 2021.09 | 7



Part Name	Hazardous Substances Table					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Motor	Х	0	0	0	0	0
O: Indicates that this hazardous substance contained in all of the homogeneous material for this part is below the limit requirement in GB/T 26572;						
X: Indicates that this hazardous substance contained in at least one of the homogeneous material for this part is above the limit requirement in GB/T 26572:						

#### ІМПОРТЕР:

UA: ТОВ з II «Данфосс ТОВ», вул. Вікентія Хвойки, 15/15/6, м. Київ, 04080, Україна

### Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.