

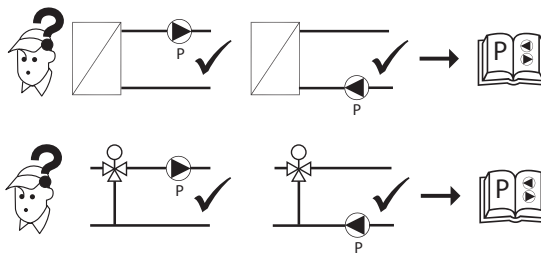
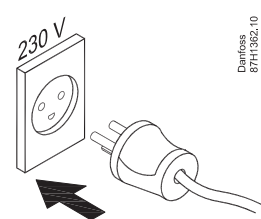
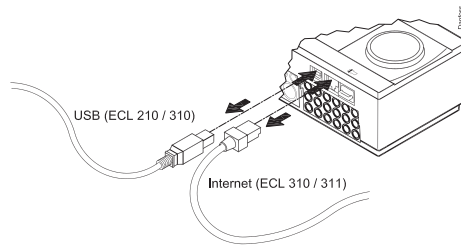


Installation Guide

ECL Comfort 210 / 296 / 310, A230 (code no. 087H3802) (A230.1, A230.2, A230.3, A230.4, A230.5)

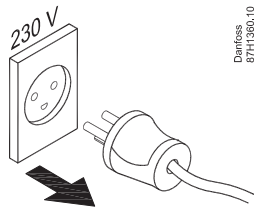


A230.1 ex. a

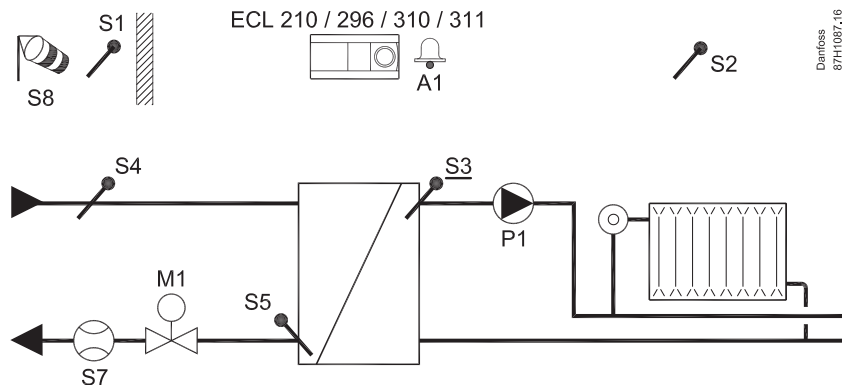


ECL 310 + ECA 32: M1 = 0 - 10 V


A230.1 ex. b:

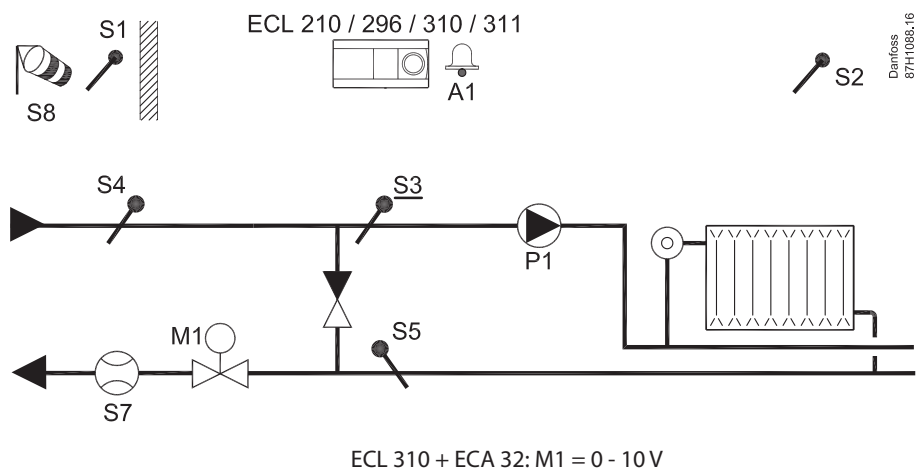


A230.1 ex. c:

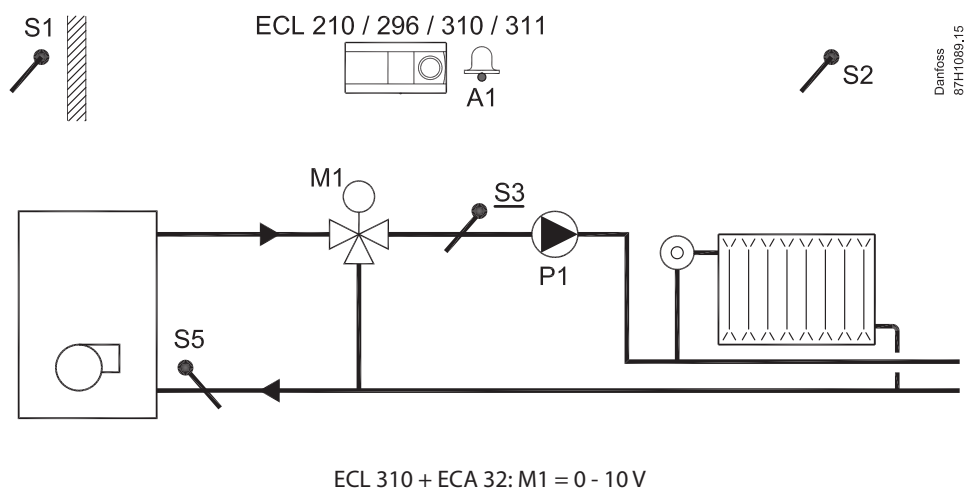


A230.1 ex. d:

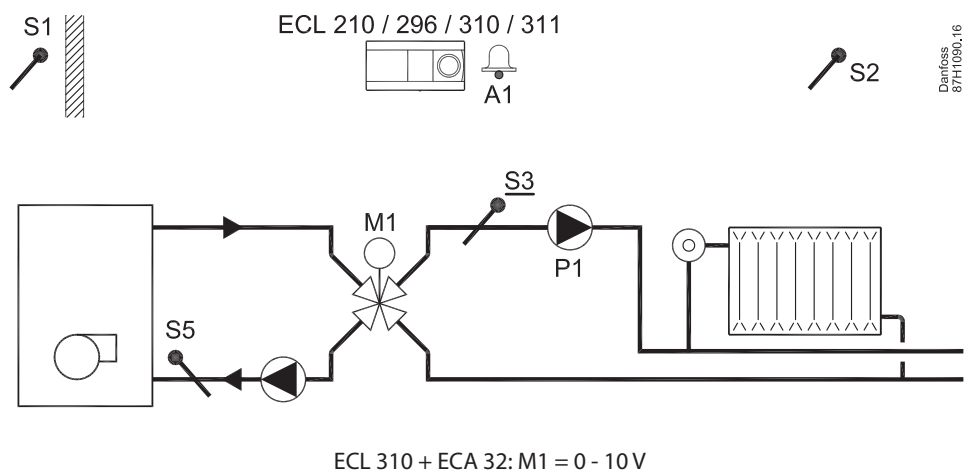


A230.2 ex. a:

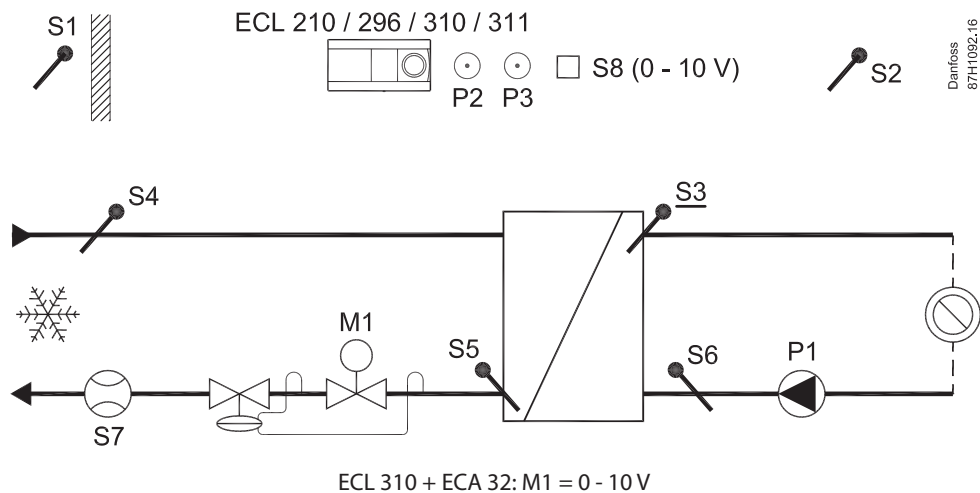


A230.2 ex. b:

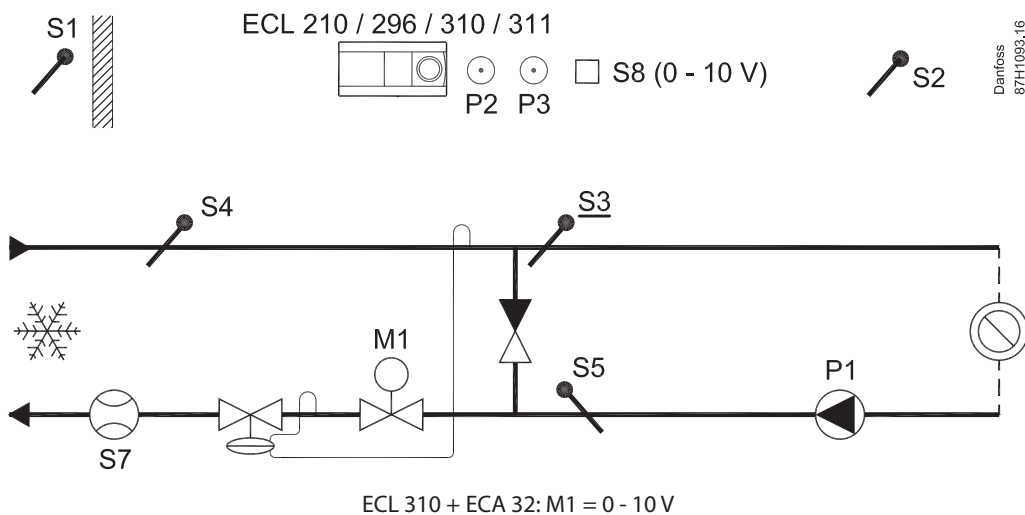


A230.2 ex. c:

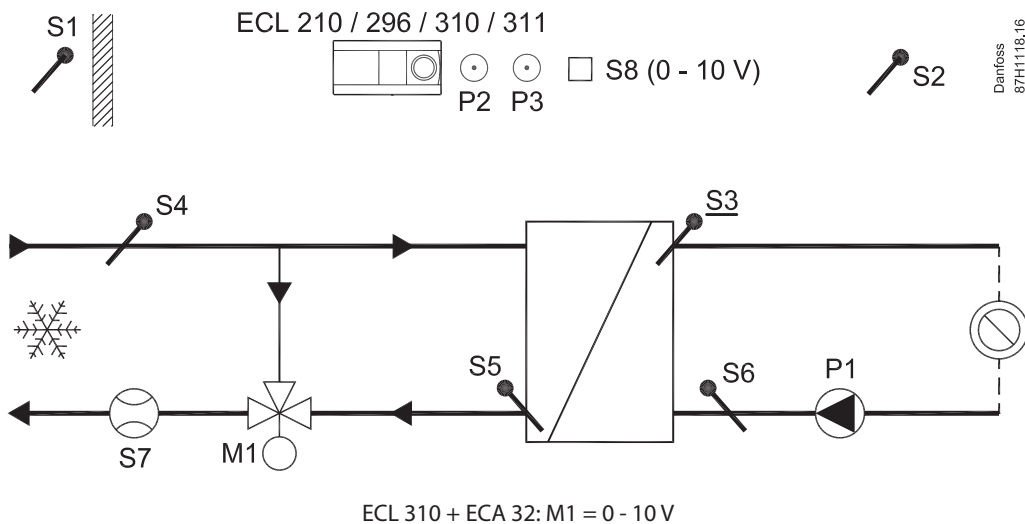

A230.2 ex. d:

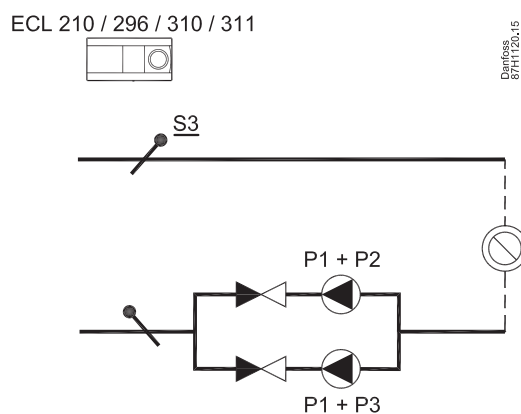


A230.3, ex. a

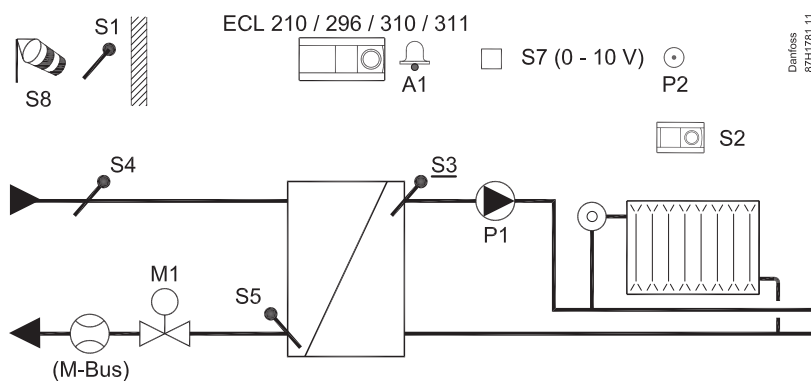


ECL 310 + ECA 32: M1 = 0 - 10 V

A230.3, ex. b

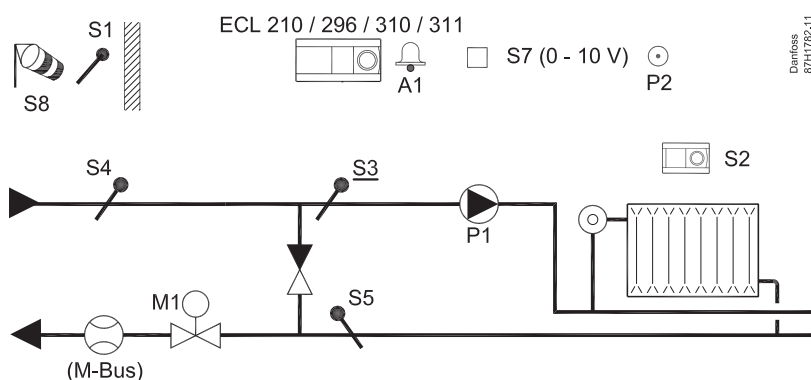


ECL 310 + ECA 32: M1 = 0 - 10 V

A230.3, ex. c

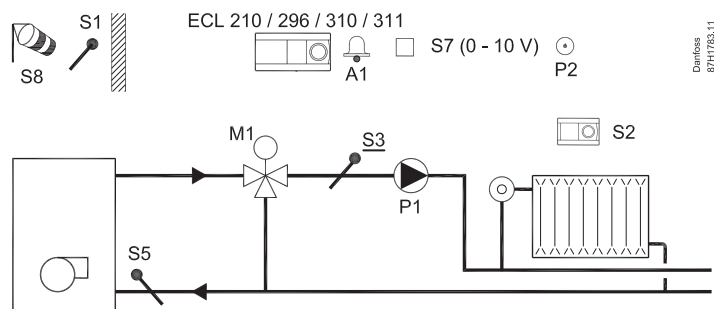


ECL 310 + ECA 32: M1 = 0 - 10 V

A230.3, ex. d

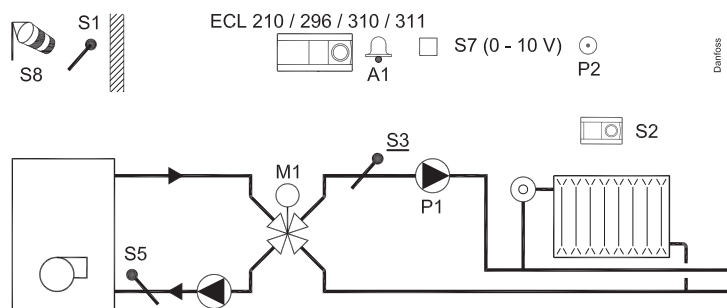


ECL 310 + ECA 32: M1 = 0 - 10 V

A230.4, ex. a

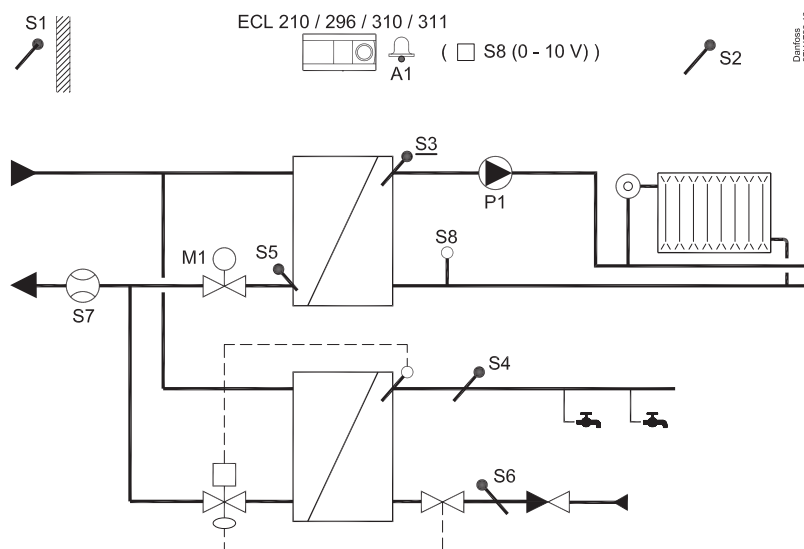


ECL 310 + ECA 32: M1 = 0 - 10 V

A230.4, ex. b

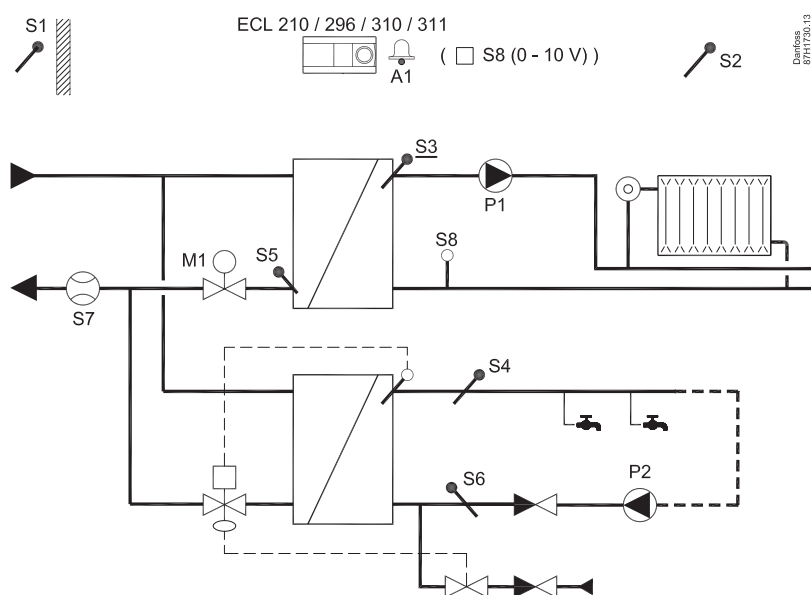


ECL 310 + ECA 32: M1 = 0 - 10 V

A230.4, ex. c

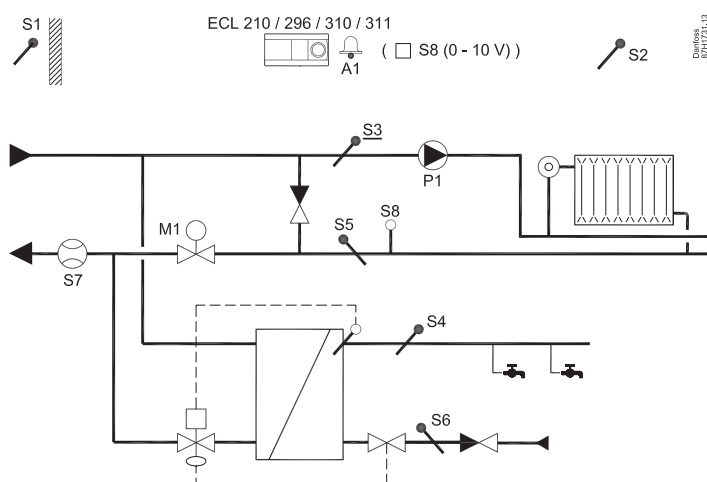


ECL 310 + ECA 32: M1 = 0 - 10 V

A230.4, ex. d

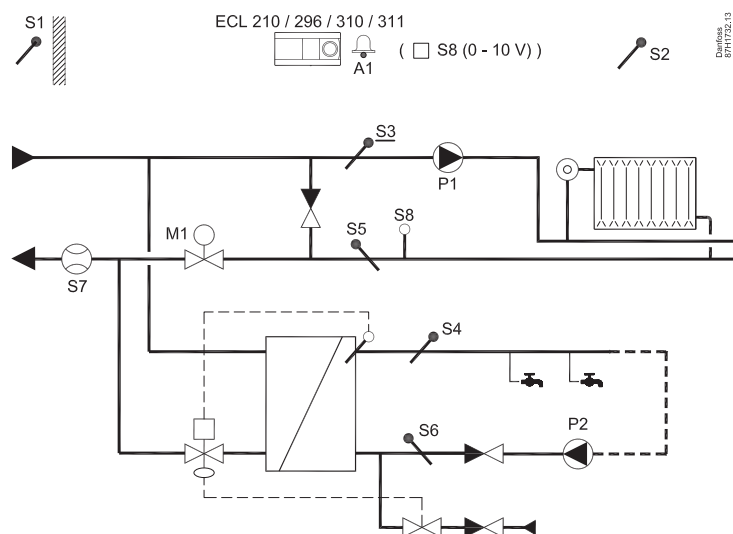

ECL 310 + ECA 32: M1 = 0 - 10 V

A230.5, ex. a

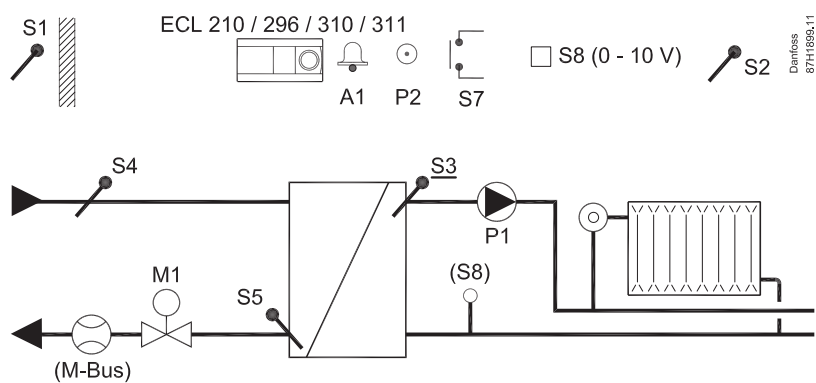


ECL 310 + ECA 32: M1 = 0 - 10 V


A230.1, A230.3, A230.5
S4, S5



A:

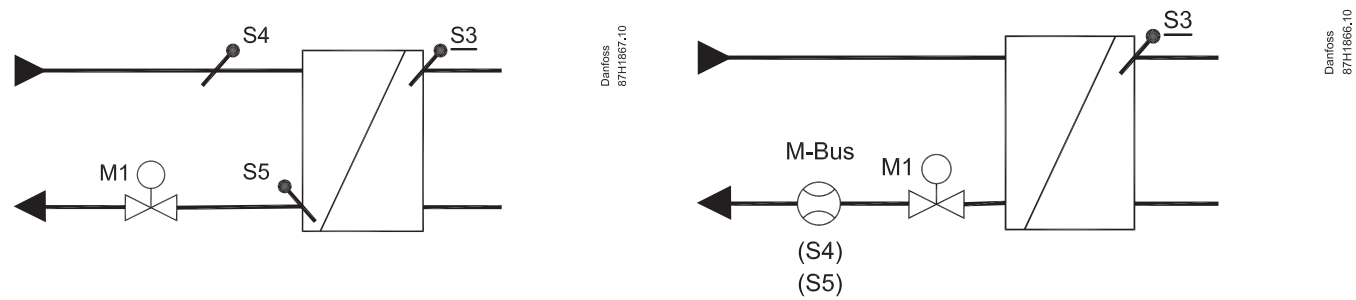


B:

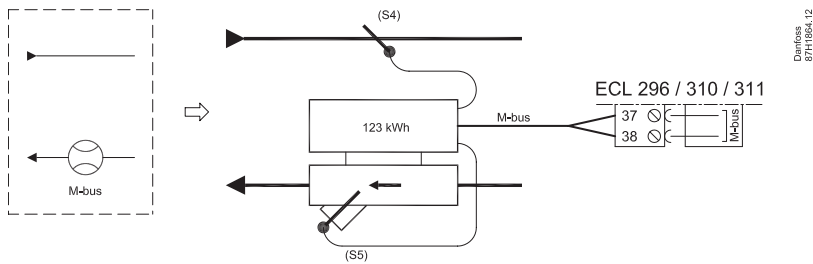


ECL Comfort 210 / 296 / 310:
230 V a.c.

R	4 (2) A / 230 V a.c.
R	
Tr	0,2 A / 230 V a.c.

ECL 210 / 310:

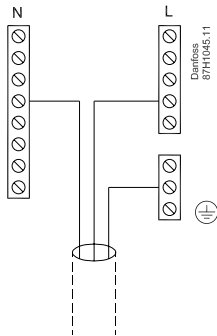


ECL 296:

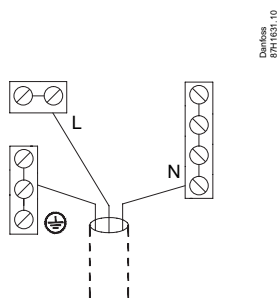


	R1	R2	R3	R4
A230.1	P1	(P2)		A1 (🔔)
A230.2	P1	(P2)	(P3)	
A230.3	P1	(P2)		A1 (🔔)
A230.4	P1	(P2)		A1 (🔔)
A230.5	P1	(P2)		A1 (🔔)

230 V a.c.

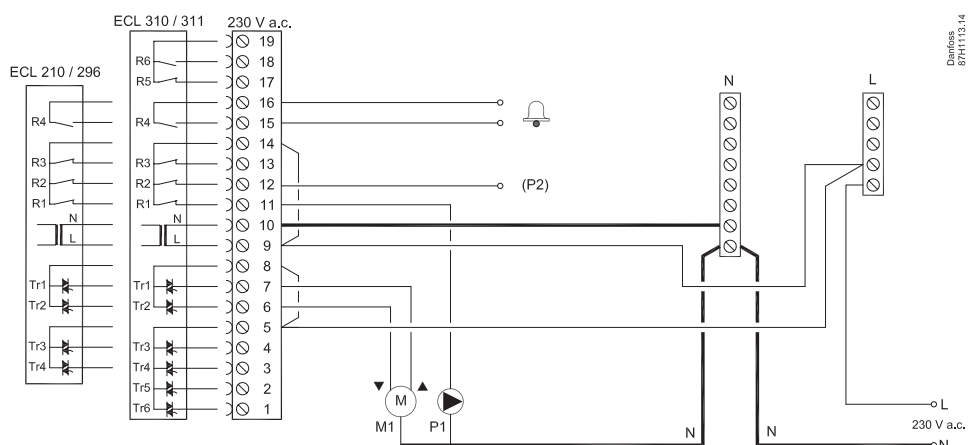


230 V a.c.

(Danfoss thermo-actuator ABV)

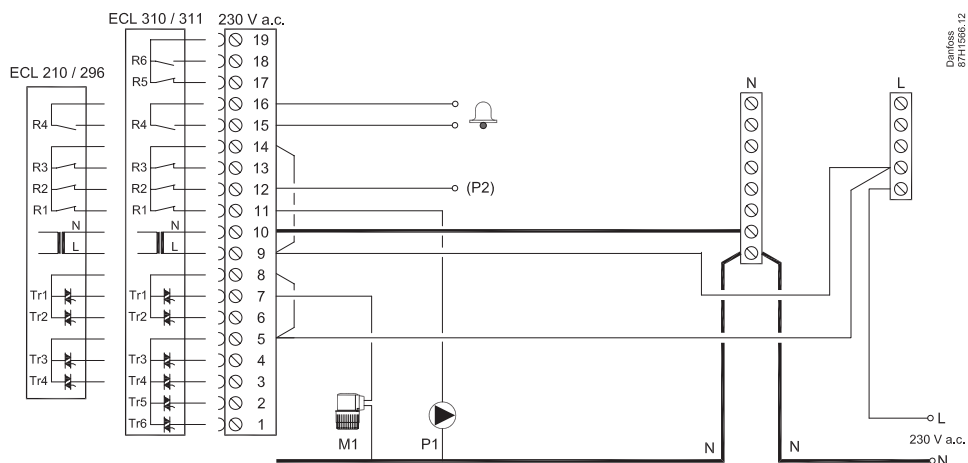


ECL 310 + ECA 32


M1 = V1 (0 - 10 V)

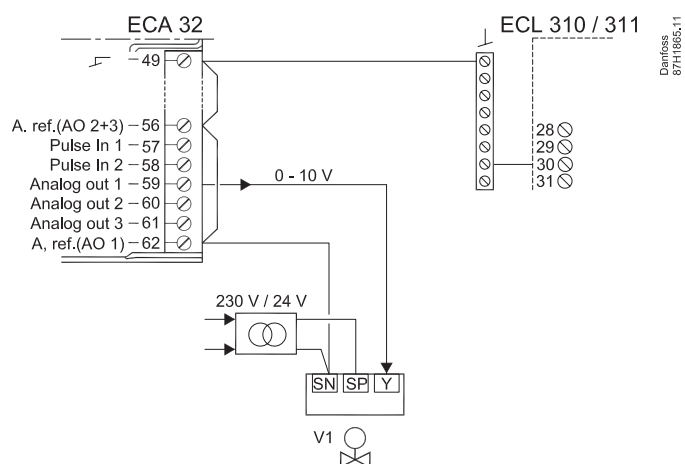

A230.2, P2 + P3

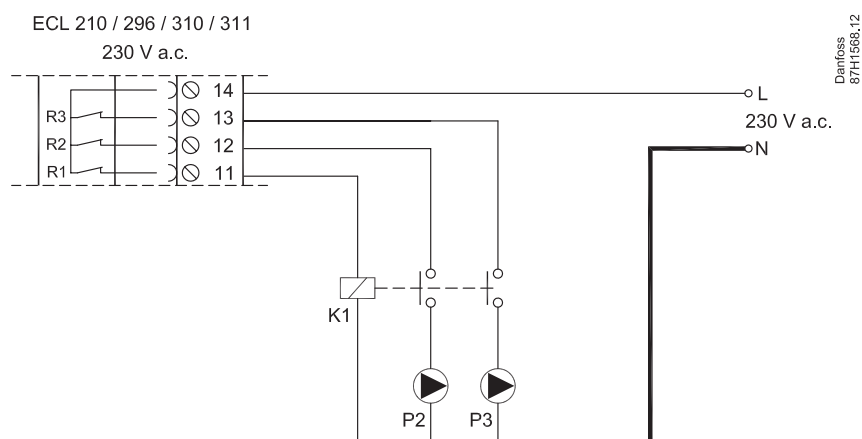


ECL Comfort 296:
230 V a.c.

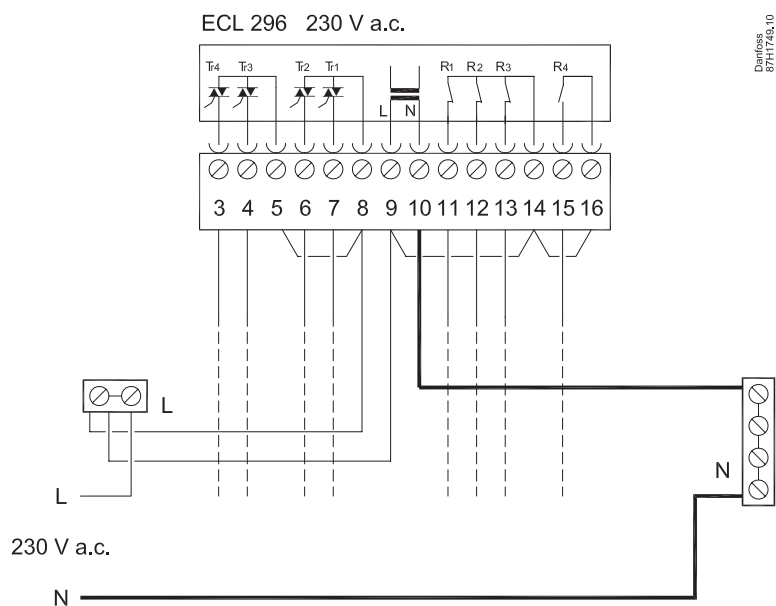


ECL Comfort 310:
24 V a.c.

R	4 (2) A / 24 V a.c.
Tr	1 A / 24 V a.c.


24 V a.c.

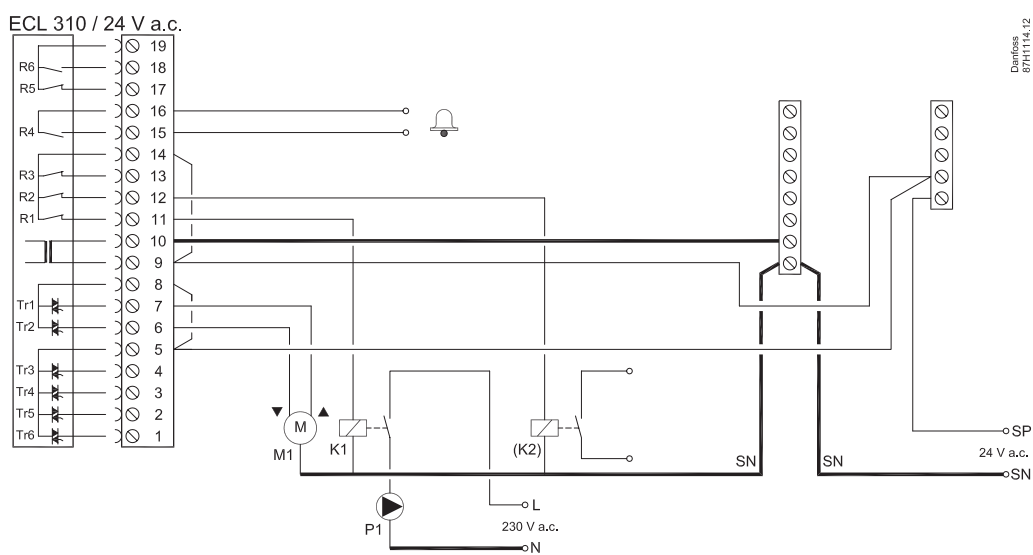


24 V a.c.
(Danfoss thermo-actuator ABV)

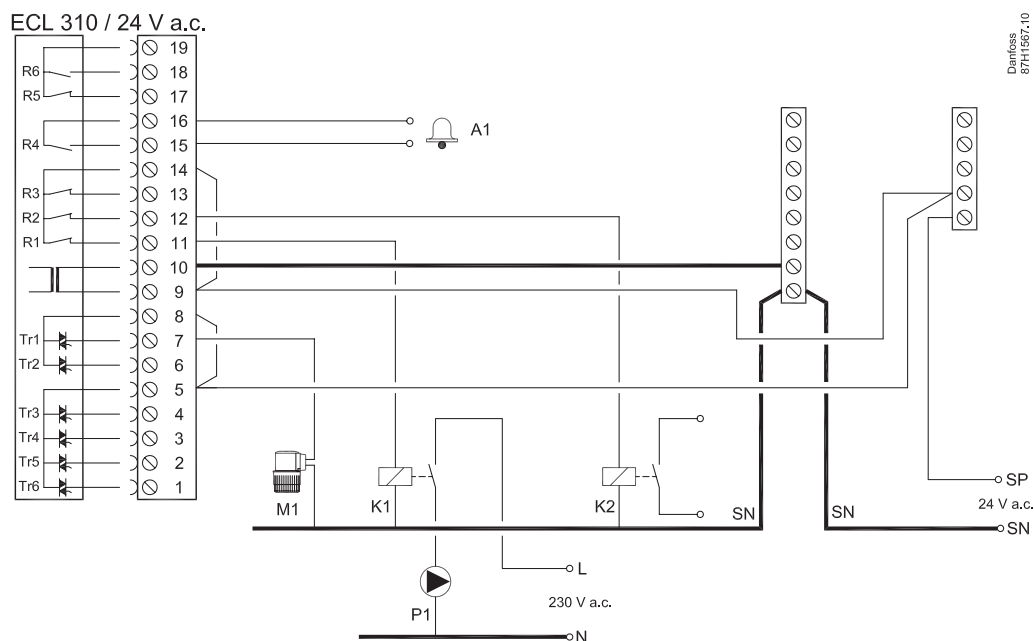


ECL 310 + ECA 32
M1 = V1 (0 - 10 V)

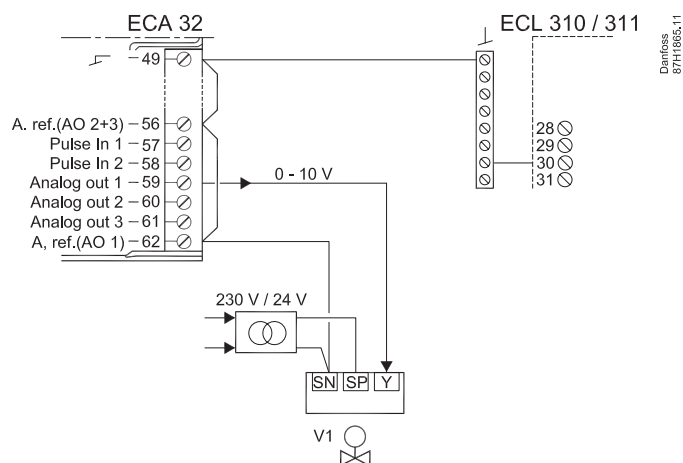


A230.2, P2 + P3

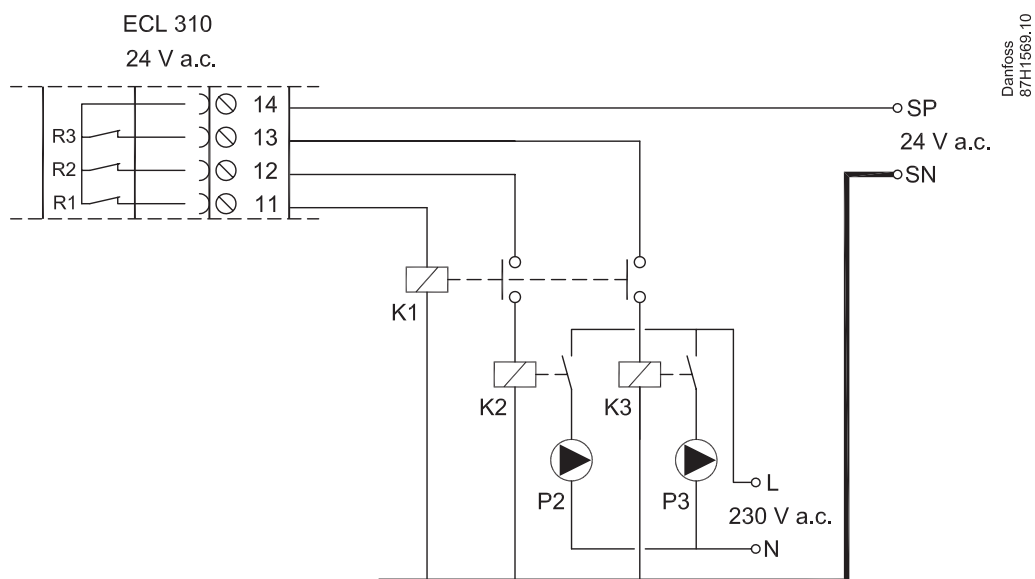


**230 V a.c. / 24 V a.c. , safety thermostat
1-step closing**

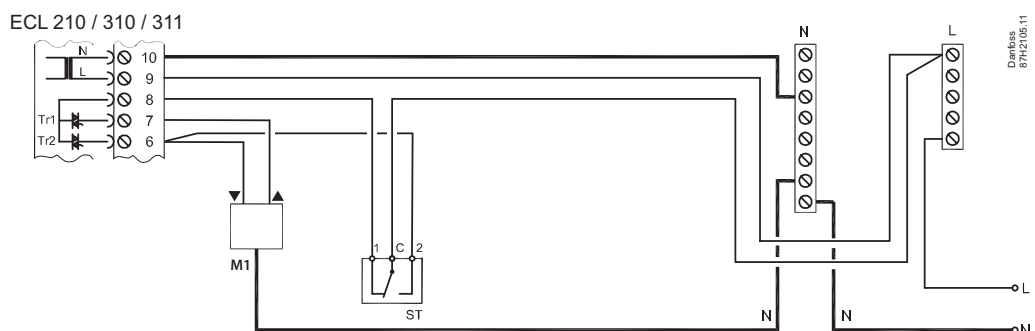



**230 V a.c. / 24 V a.c. , safety thermostat
1-step closing**

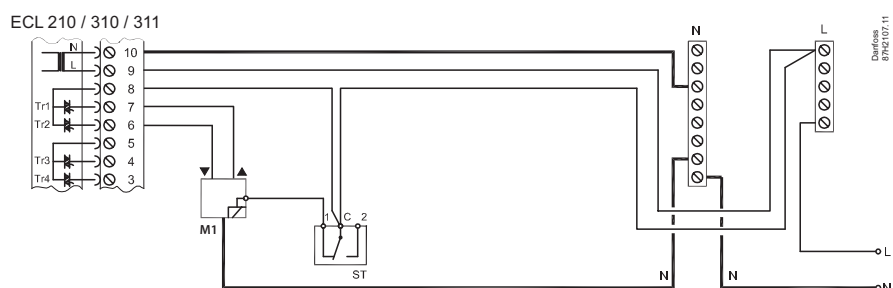

230 V a.c. / 24 V a.c. , safety thermostat
2-step closing

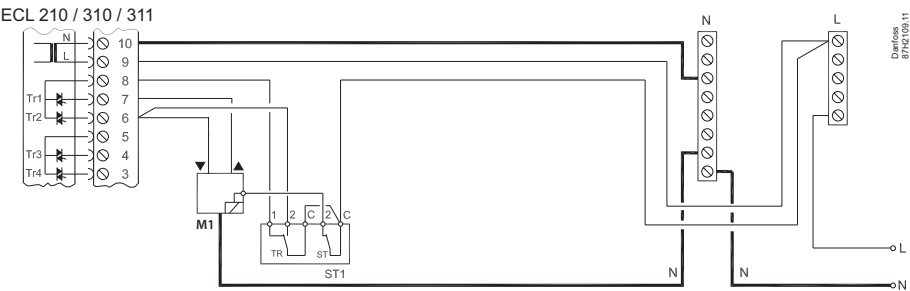

 Pt 1000 (1000 Ω / 0 °C)

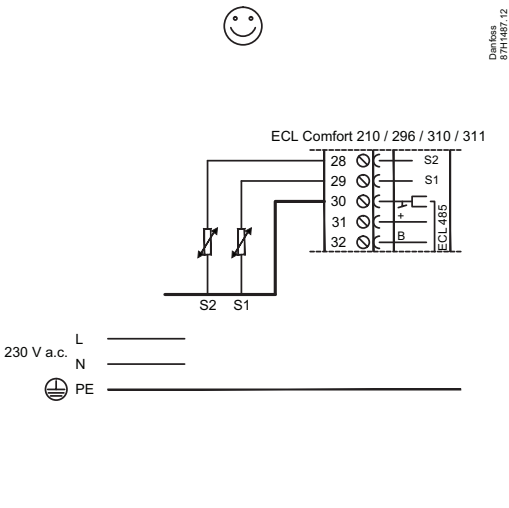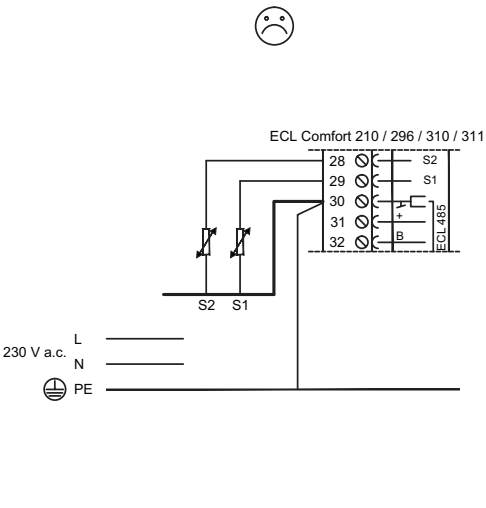

 Pt 1000 (1000 Ω / 0 °C)
ECL 210 / 296 / 310

	S1	S2	S3	S4	S5	S6	S7	S8
A230.1	x	x	x	x	x			
A230.2	x	x	x	x	x	x		
A230.3	x	(x)	x	x	x			
A230.4	x	x	x	x	x	x		
A230.5	x	x	x	x	x			


Pulse 

	S7
A230.1	x
A230.2	x
A230.3	
A230.4	x
A230.5	

0 - 10 V

	S7	S8
A230.1		0 - 10 V ⇒ 
A230.2		0 - 10 V ⇒  S3 (x °C!)
A230.3	0 - 10 V ⇒ % RH	0 - 10 V ⇒ 
A230.4		 / 0 - 10 V ⇒  S3 (x °C!)
A230.5		 / 0 - 10 V ⇒  S3 (x °C!)


A230

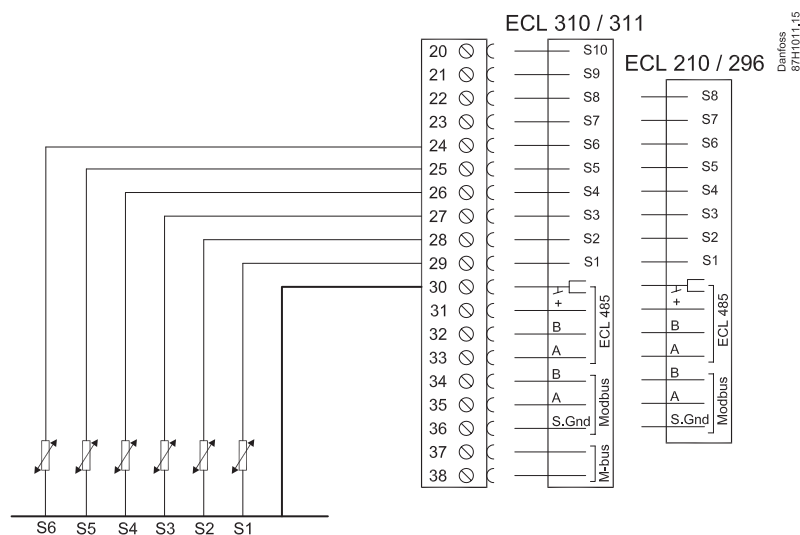

A230.1, A230.2, A230.4



S7

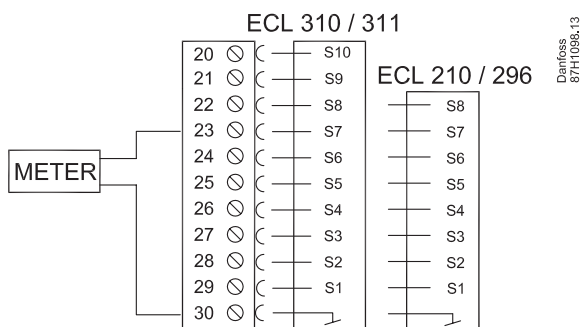

A230.1, A230.2, A230.4




S7




A / B ?


A:

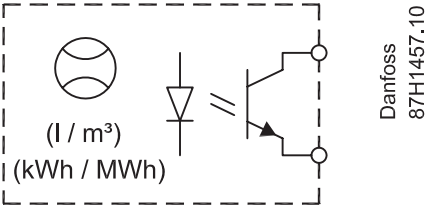


B:

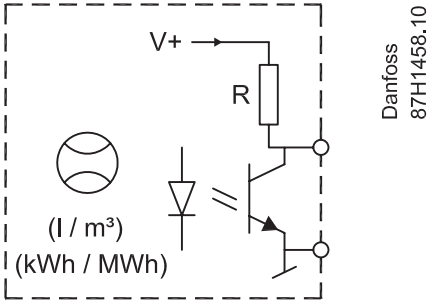

A:

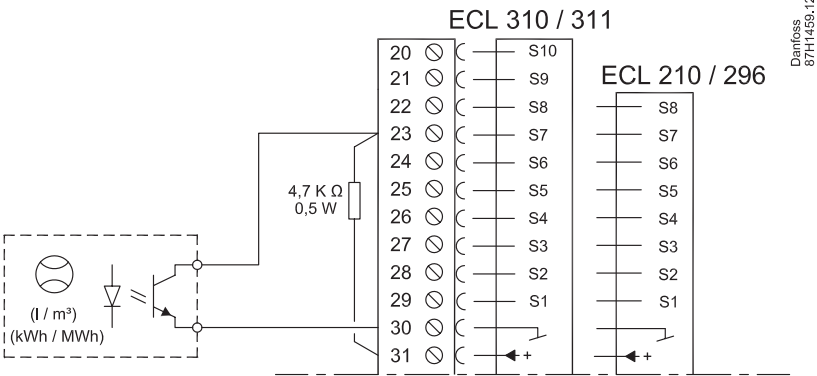


B:

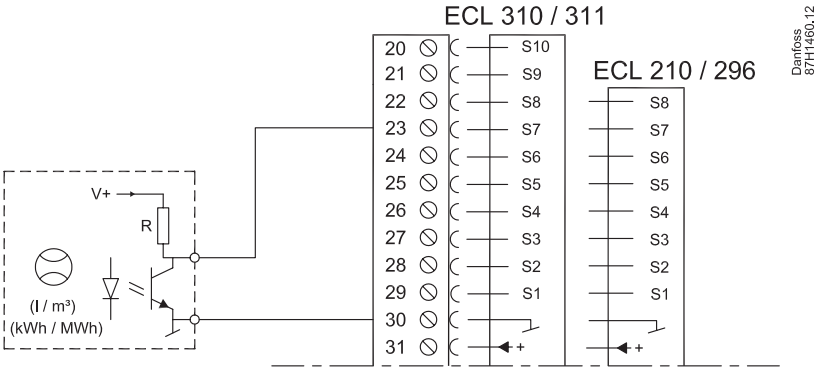

A230.5


S6

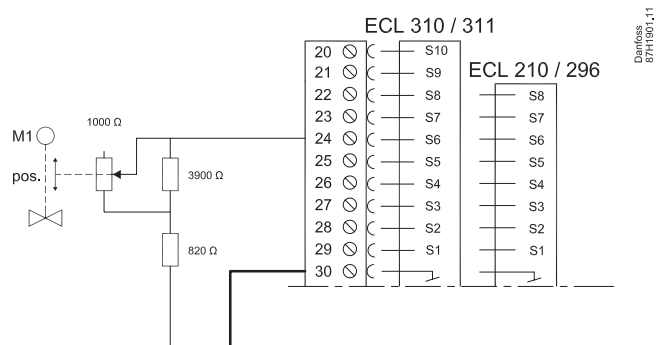

A230.5




S7

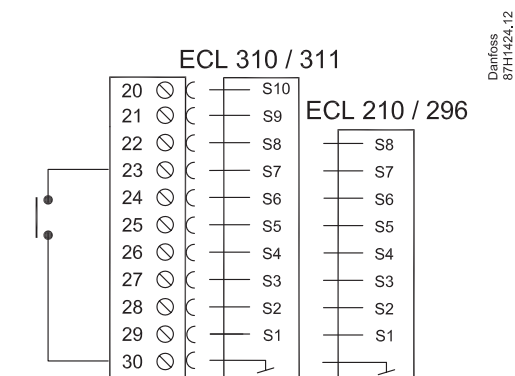


A230.1, A230.3




S8

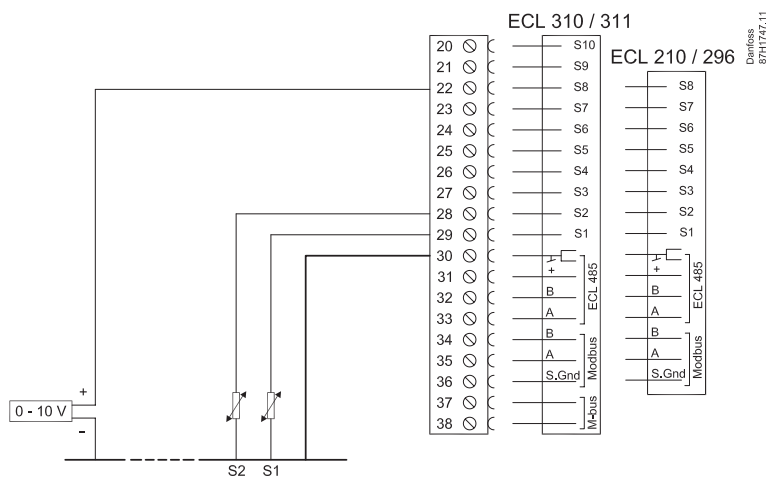


A230.2
0 – 10 V

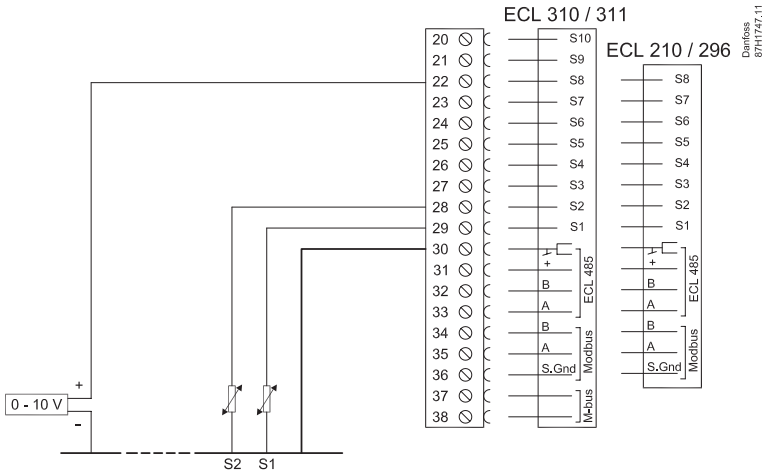


A230.4, A230.5

 

S8

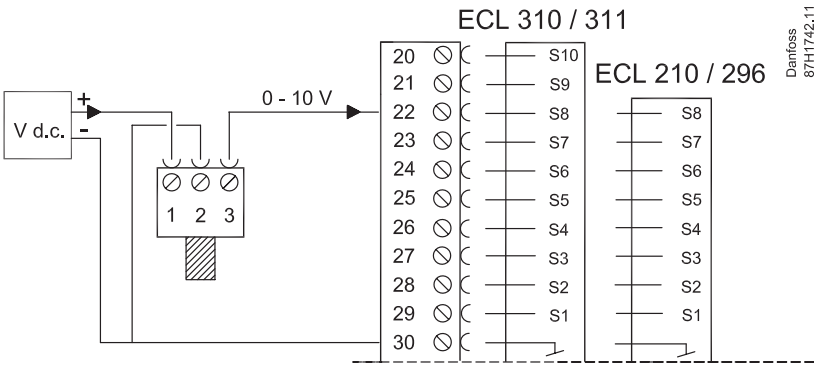


A230.1, A230.2, A230.3, A230.4, A230.5

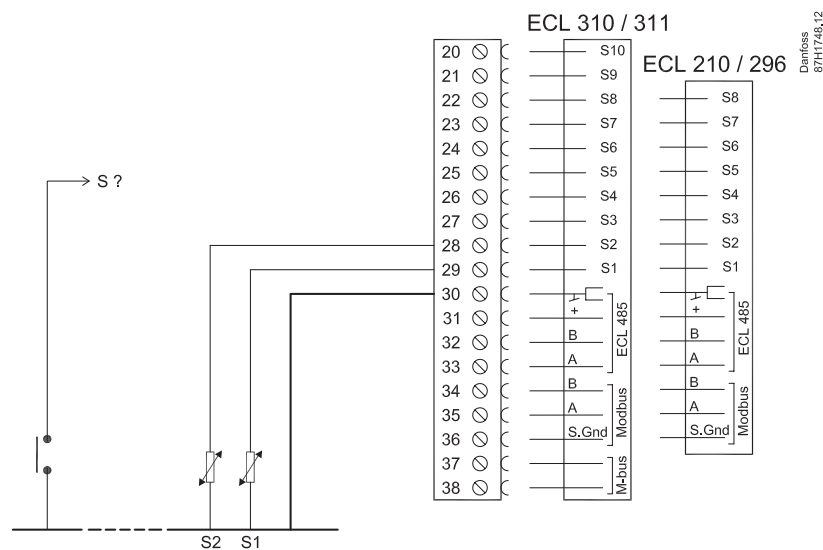


?
 ECL 210 / 296: S7 - S8
 ECL 310: S7 - S10
 ECL 310 + ECA 32: S7 - S16


ECA 30 / 31

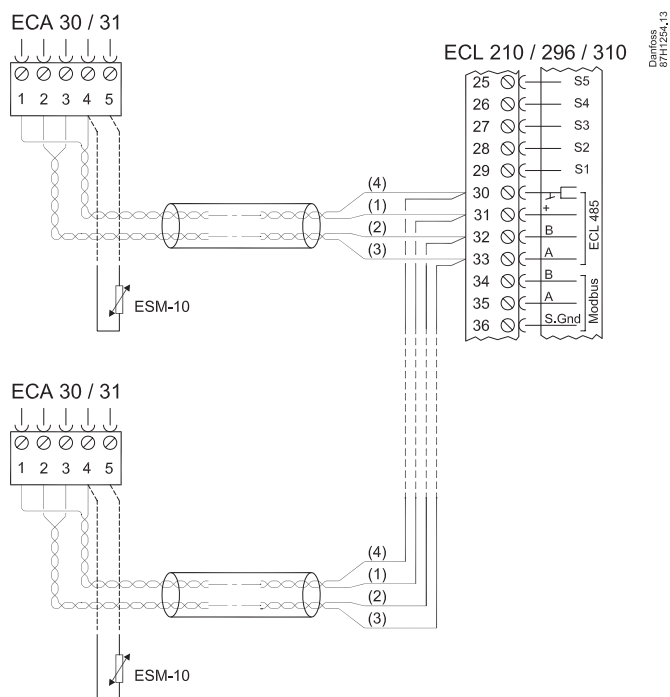


Master / slave

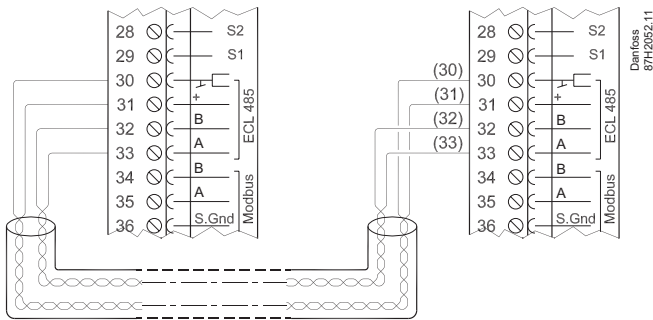


Modbus

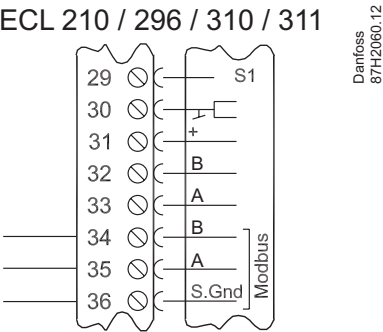



M-bus

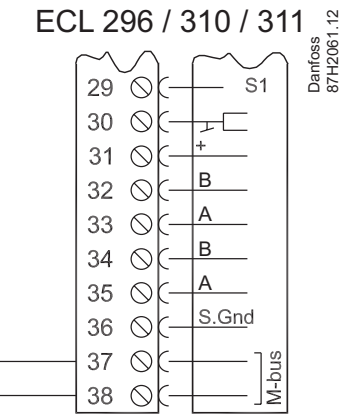

M-bus

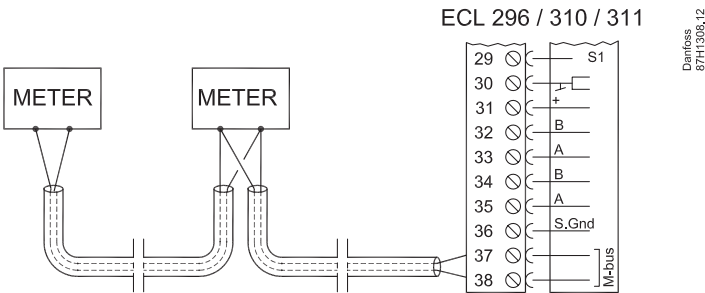


Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

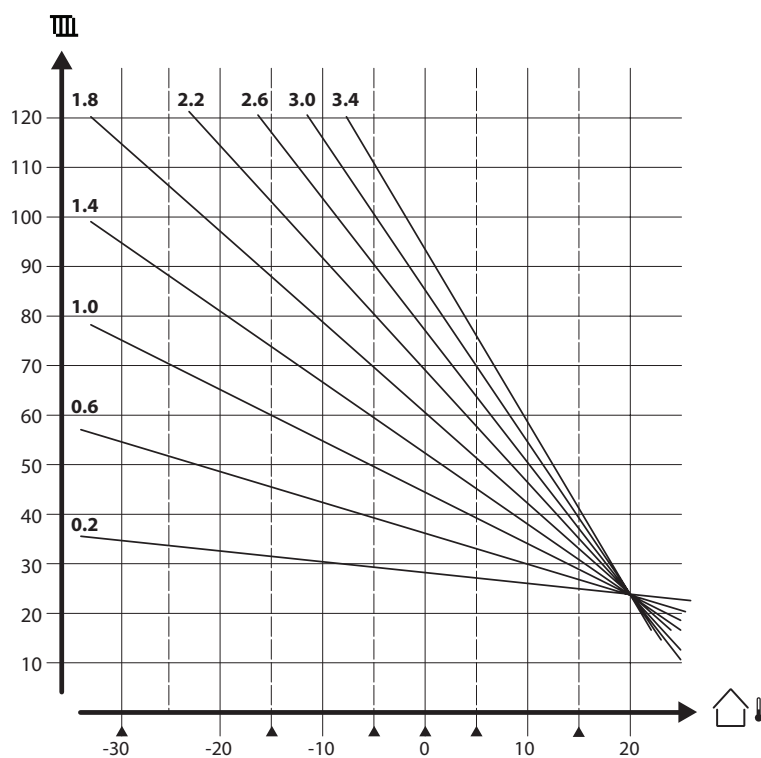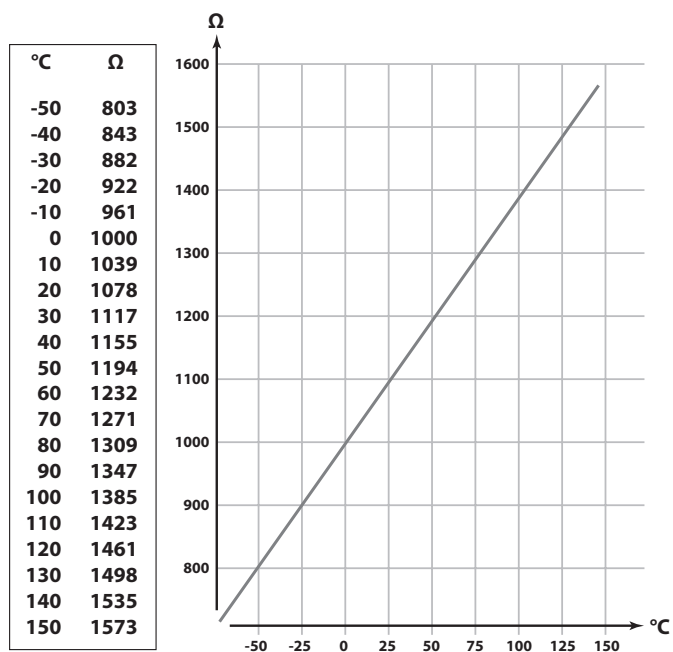


ECA 30


1

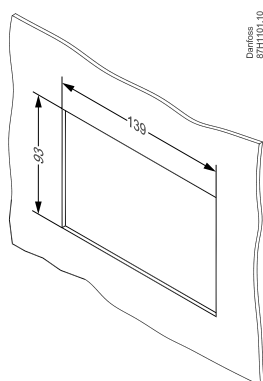


2

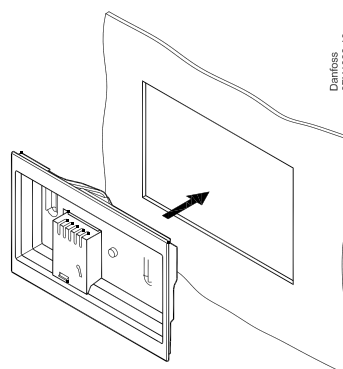


3

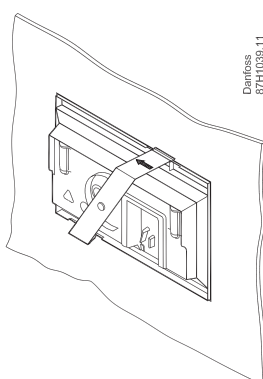


4

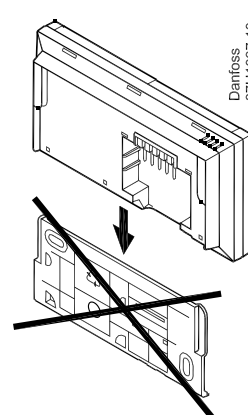


5

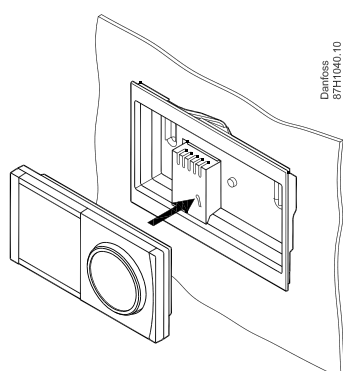


6

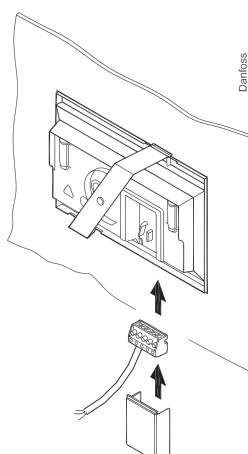

7

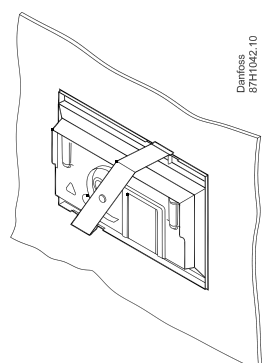


8

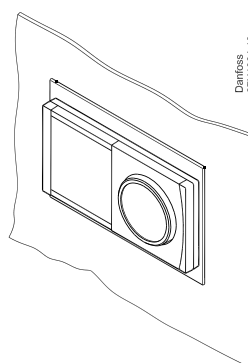


Installation Guide, ECL Comfort 210 / 296 / 310, A230


Danfoss
87H1021.11

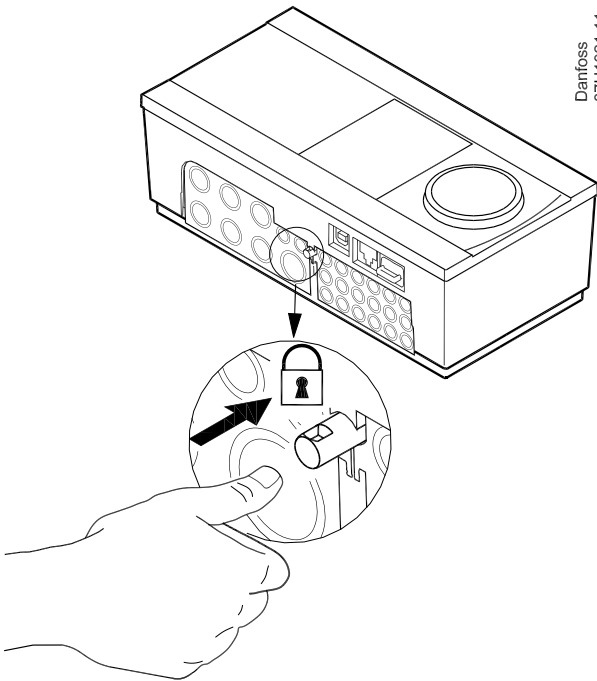


Danfoss
87H1017.11

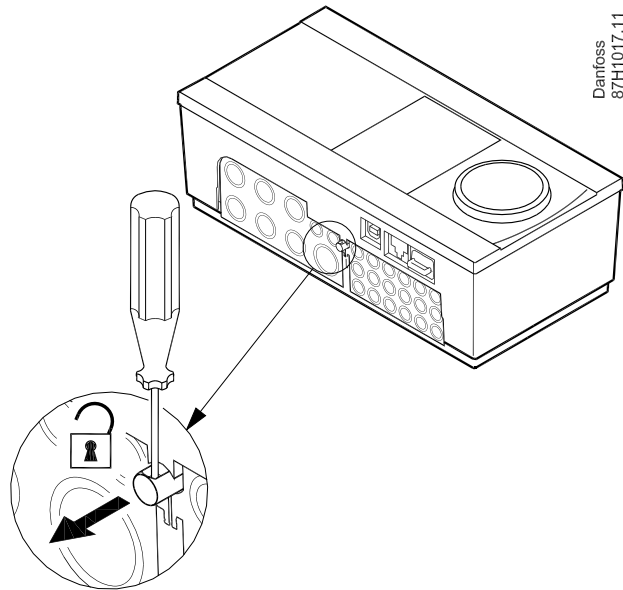

Danfoss
87H1073.11

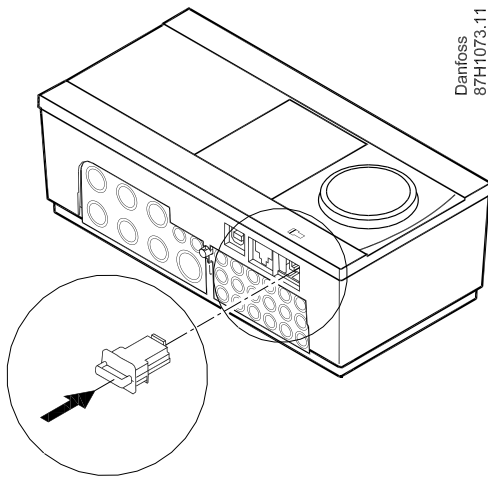

Danfoss
87H1074.11

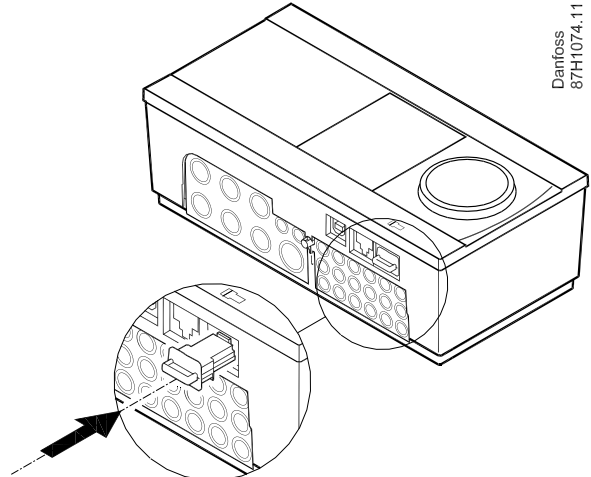

?  **ECL Comfort 210 / 296 / 310, A230: www.danfoss.com or store.danfoss.com**

?  **<https://www.youtube.com/user/DanfossHeating>
-> Playlists -> How-to Videos -> District Energy installation videos**



Danfoss A/S
Climate Solutions • danfoss.com • +45 7488 2222



Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.