 

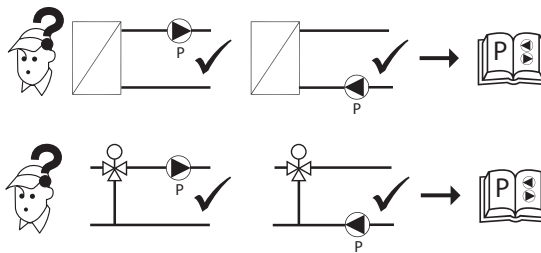 
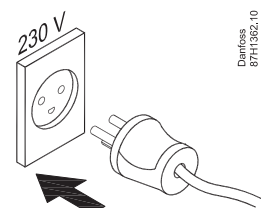 
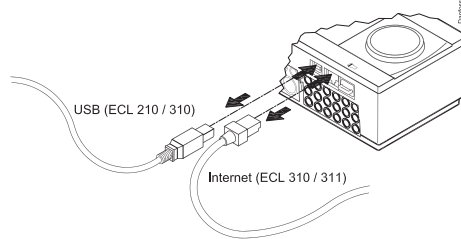 


Installation Guide

ECL Comfort 310, P501, 230 Volt (code no. 087H3842)

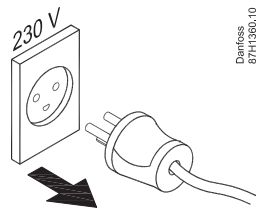 


P501.1, ex. a:
P501.2, ex. a:

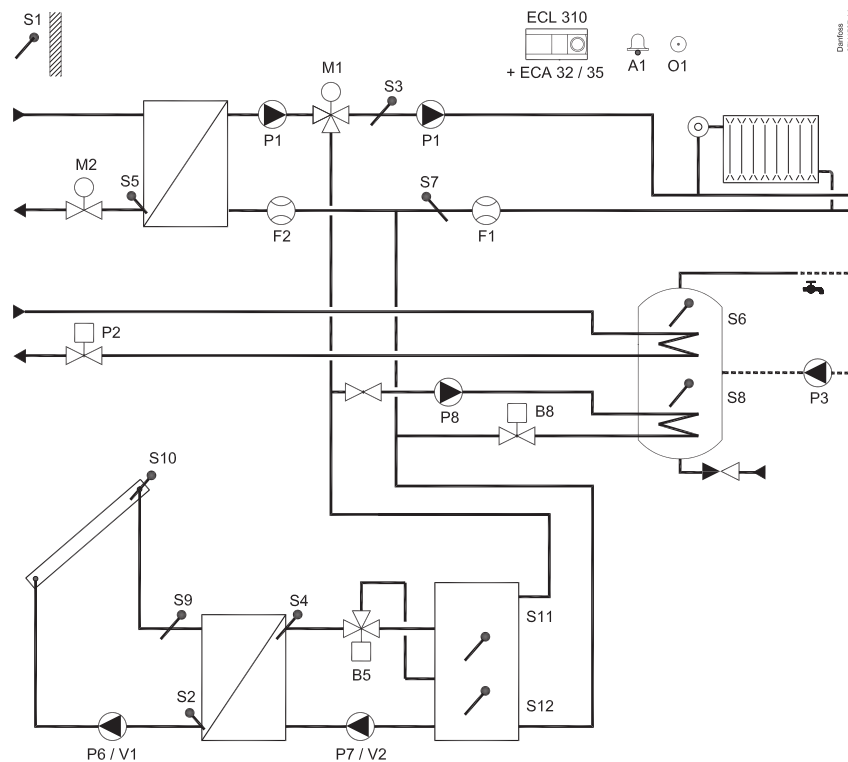


Installation Guide, ECL Comfort 310, P501


P501.1, ex. b:
P501.2, ex. b:

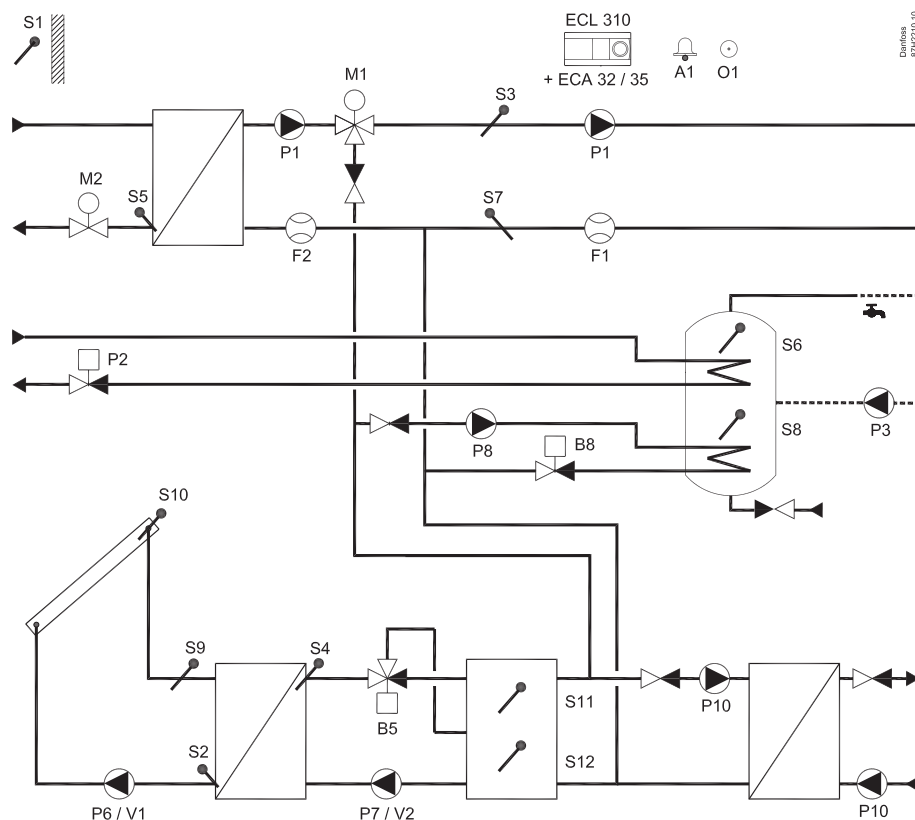


P501.1, ex. c:
P501.2, ex. c:

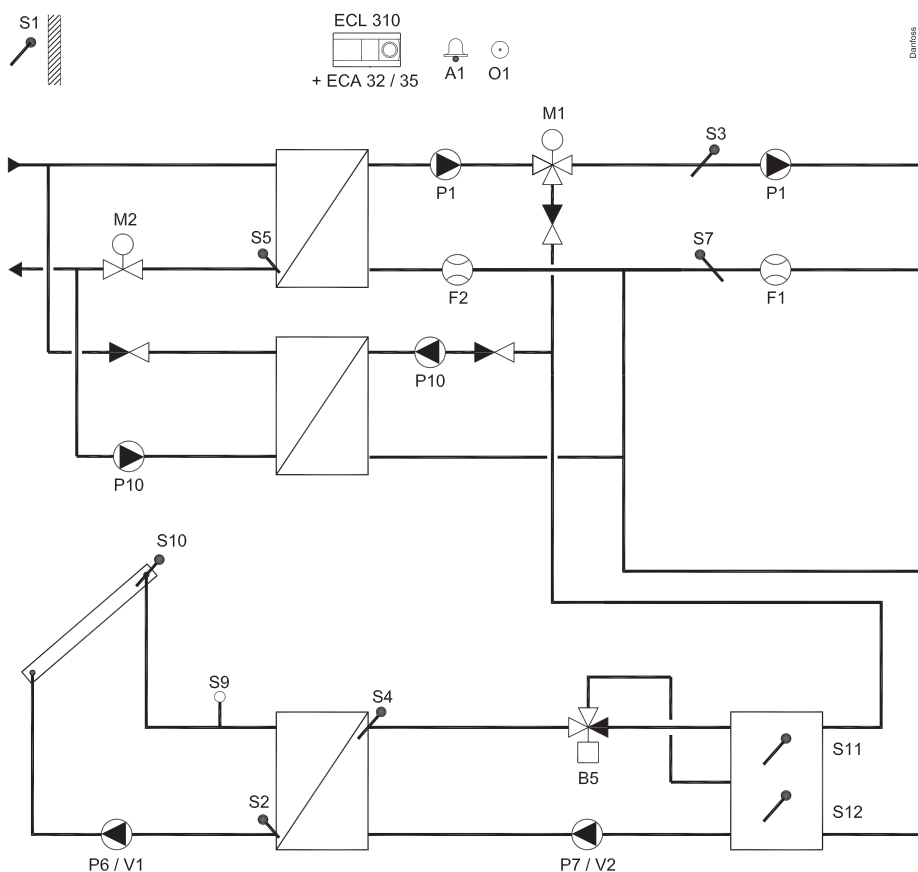 


P501.11, ex. a:

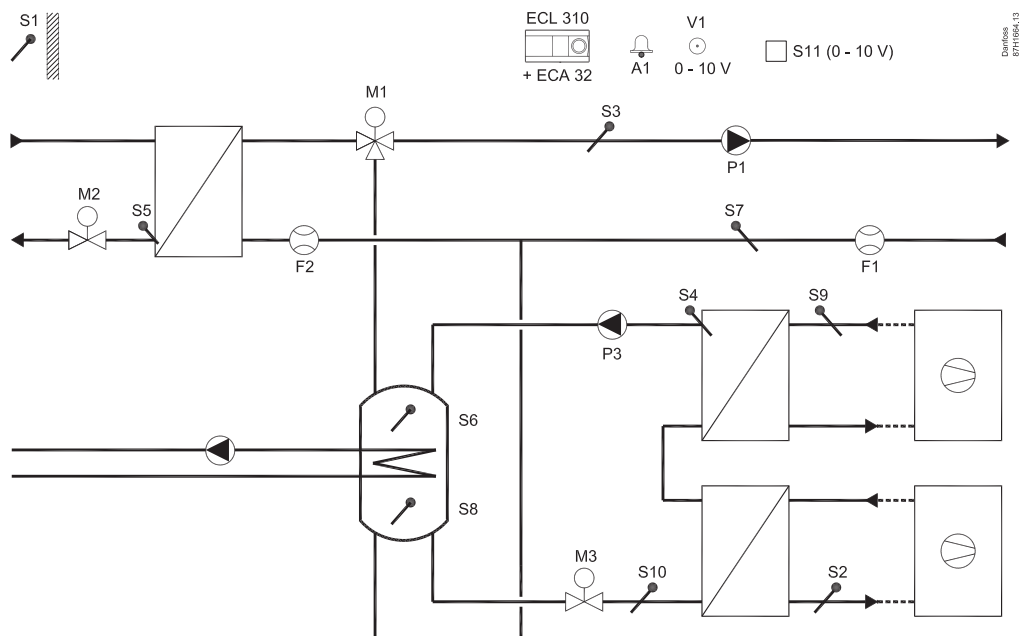 


P501.12, ex. a:

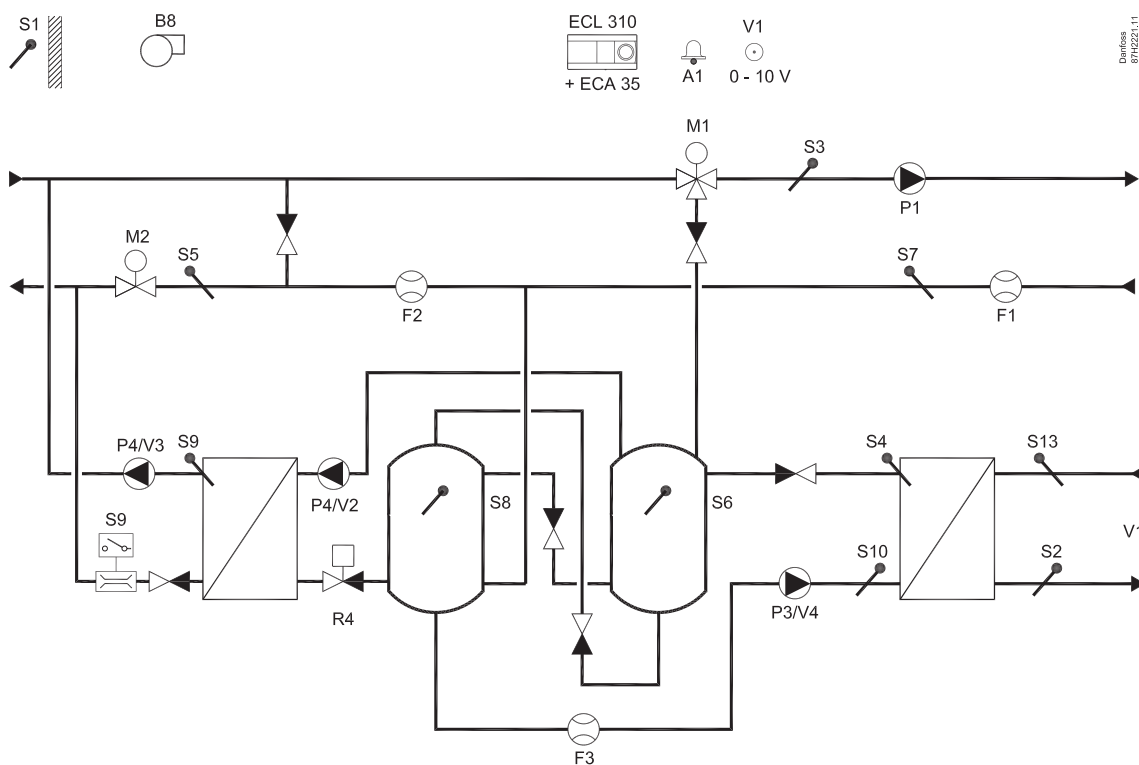 


P501.12, ex. b:

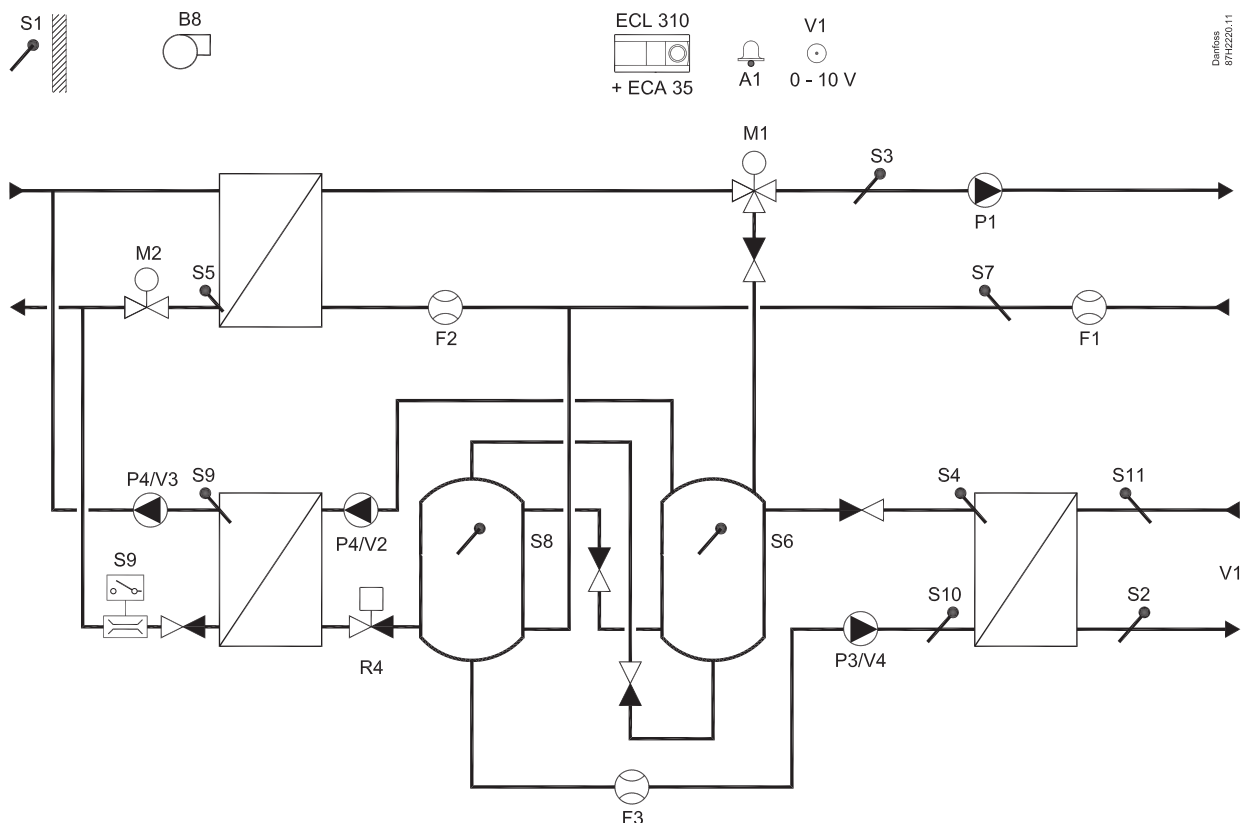 

P501.12, ex. c:

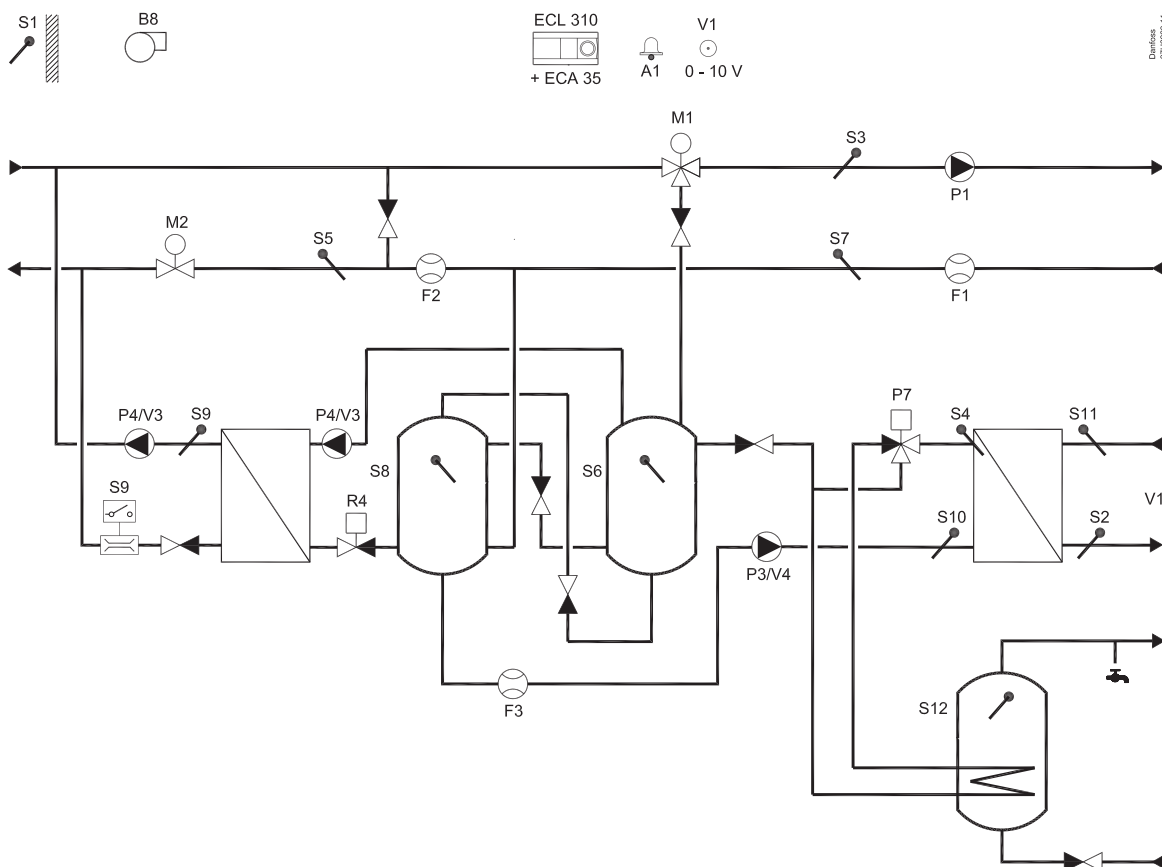 


P501.12, ex. d:

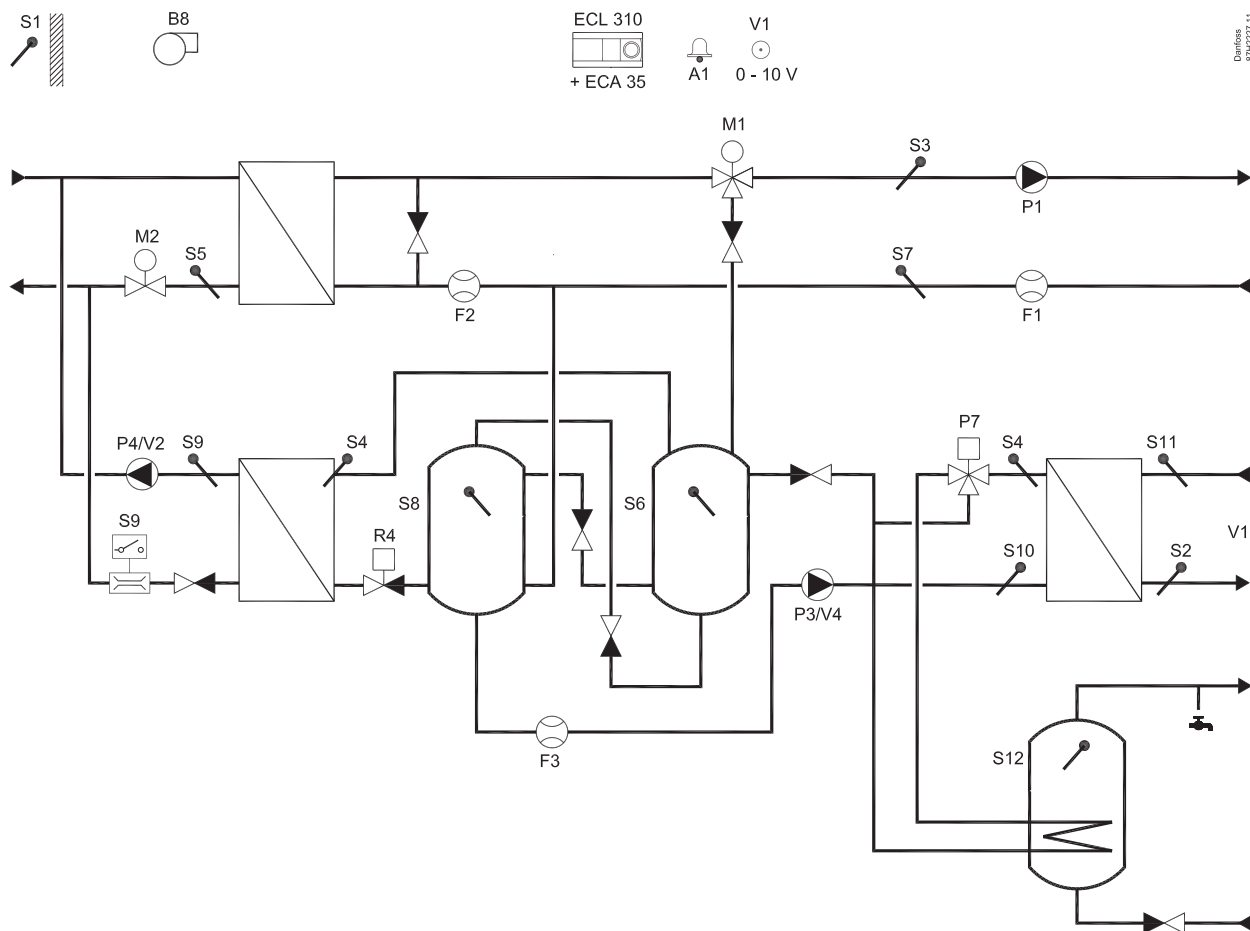 


Danfoss
8714227.11

 P501.12, ex. e:

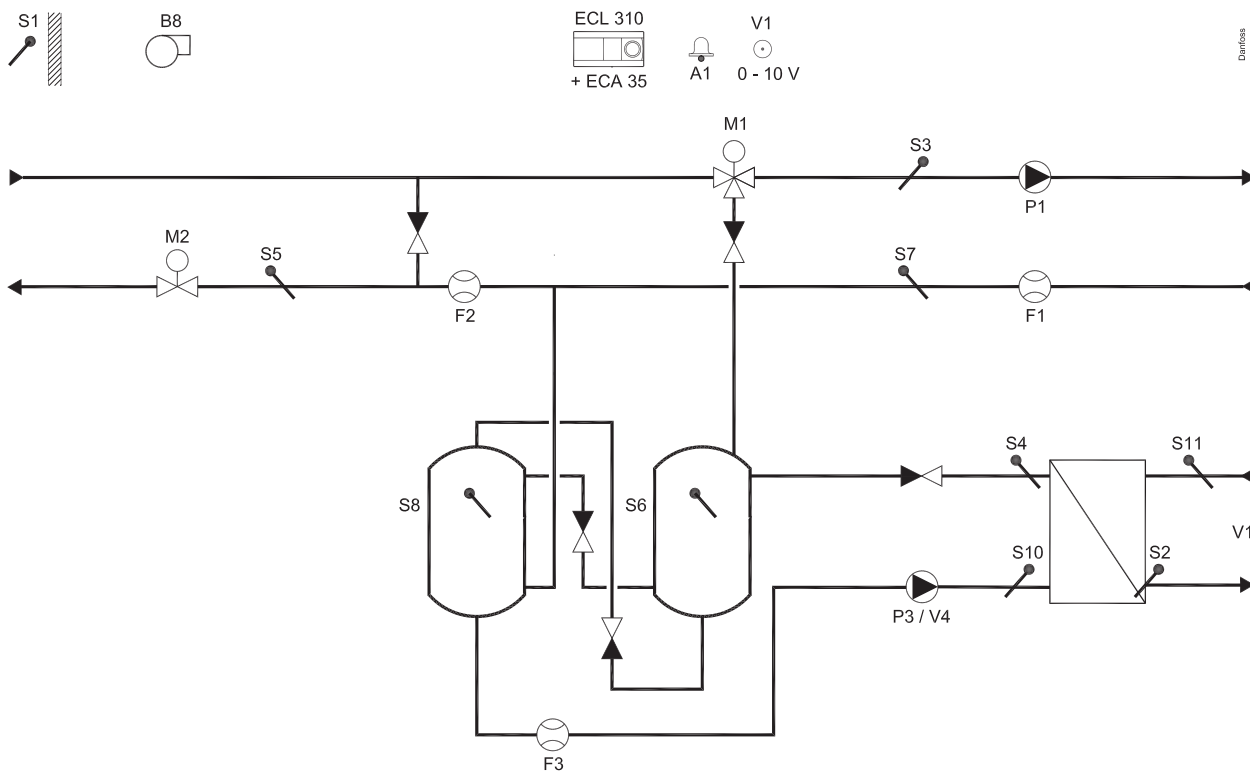


Danfoss
8714228.11

 
P501.12, ex. f:

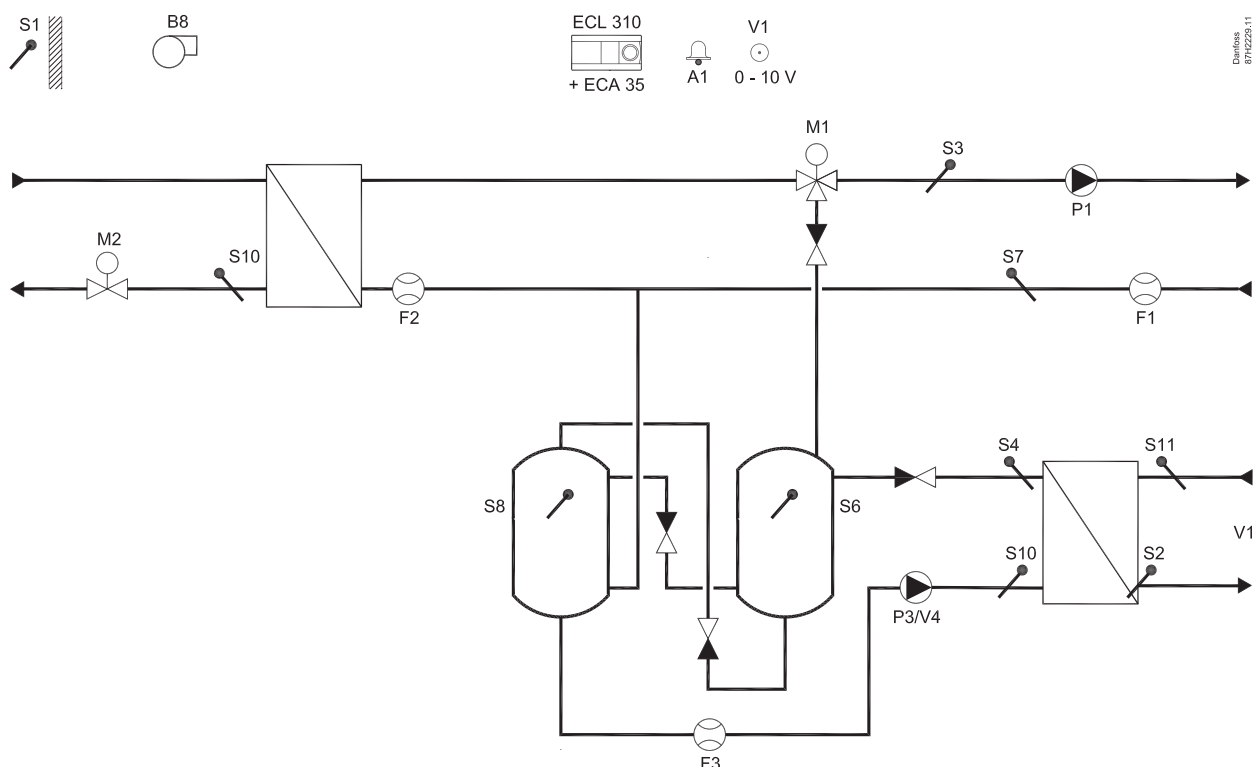

P501.13, ex. a:

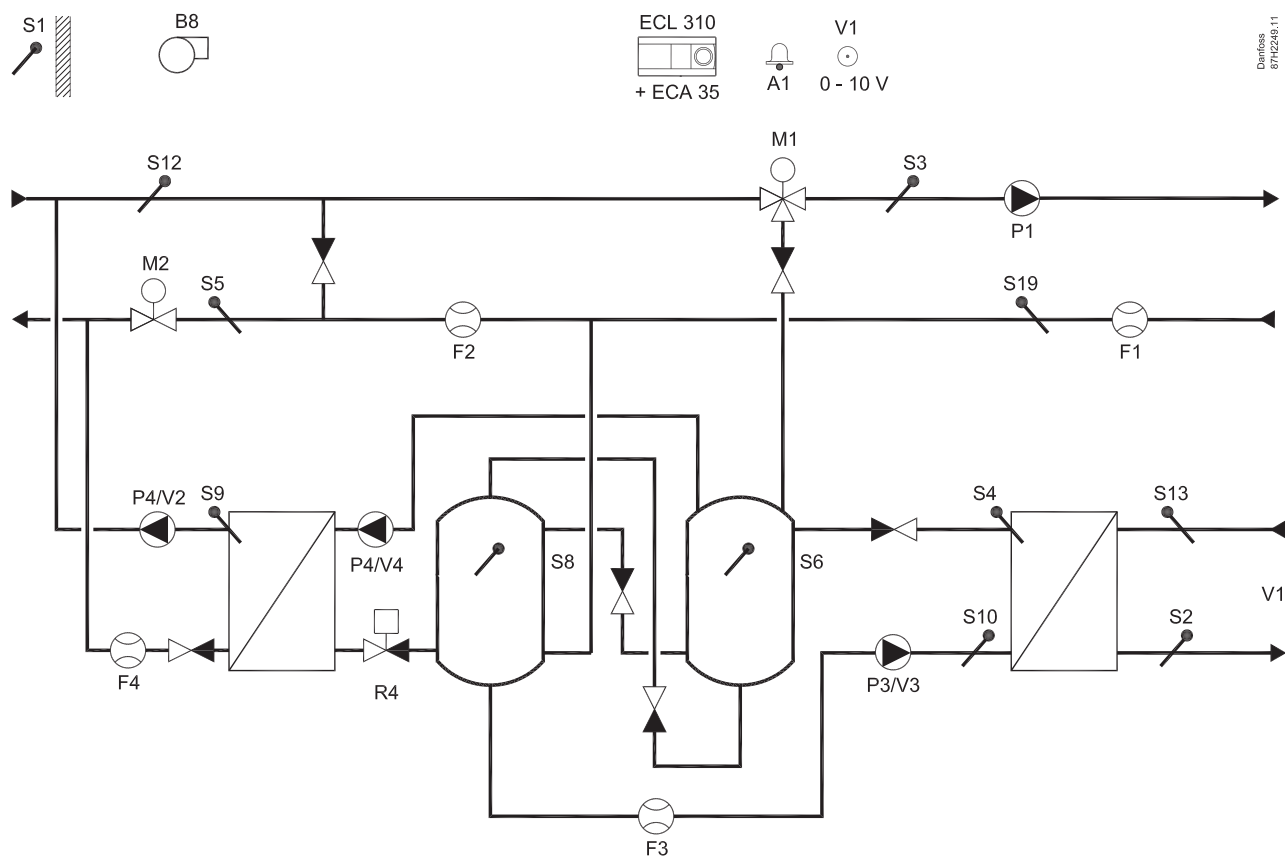 


P501.13, ex. b:

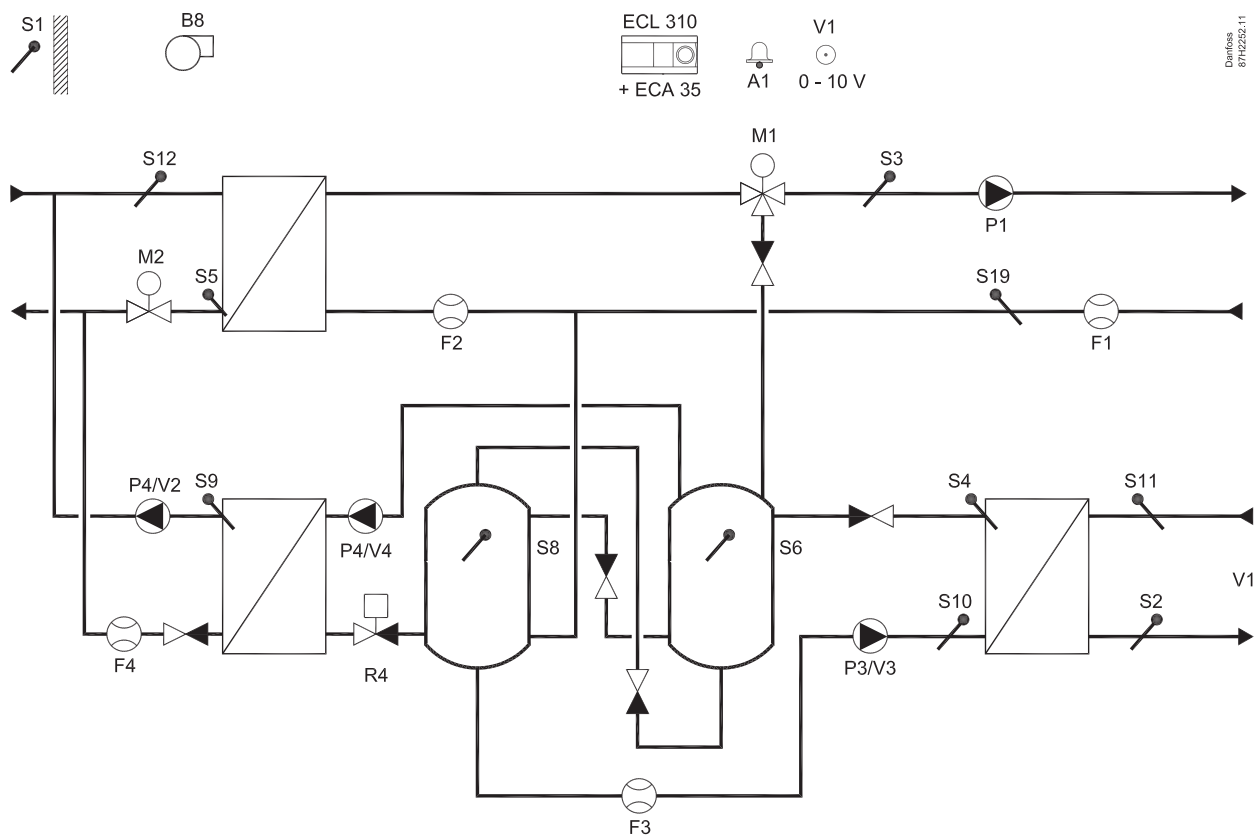 


Danfoss
87H2252.11

 P501.13, ex. e:

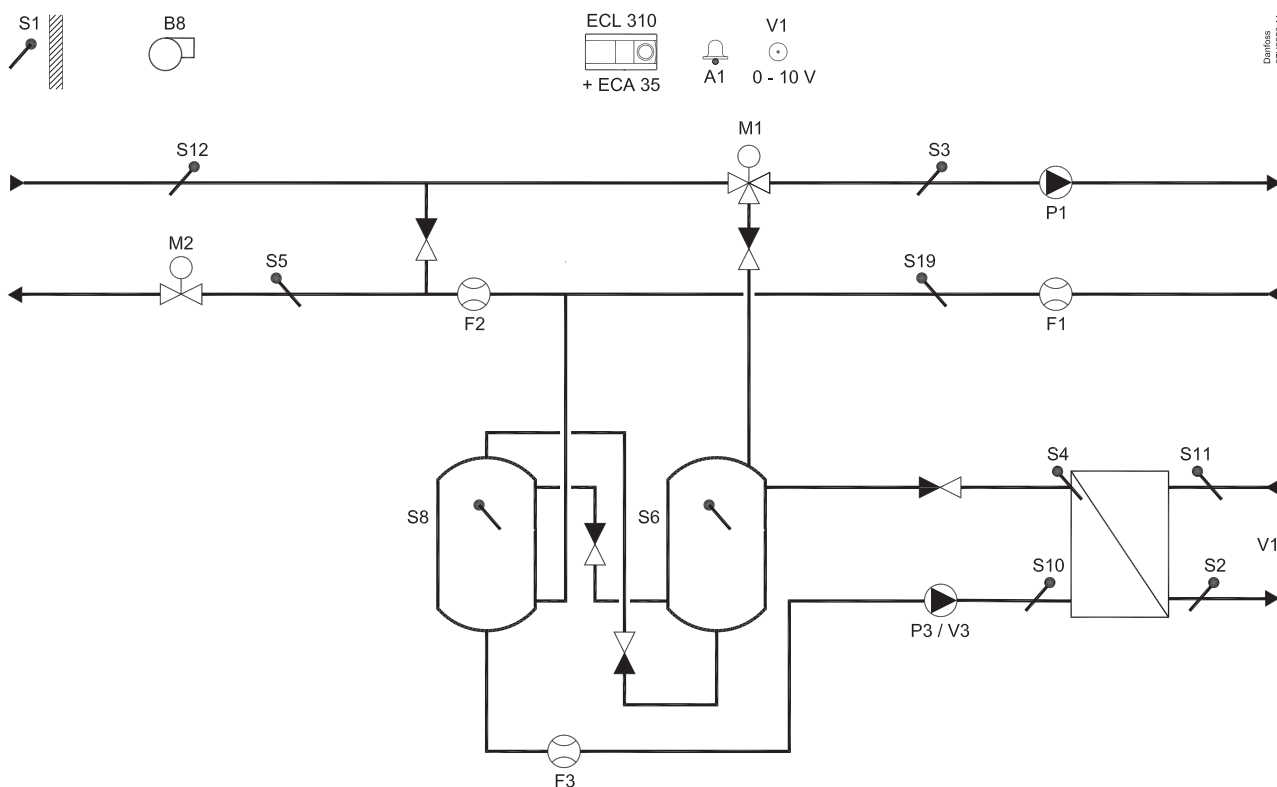


Danfoss
87H2252.11

 P501.13, ex. f:

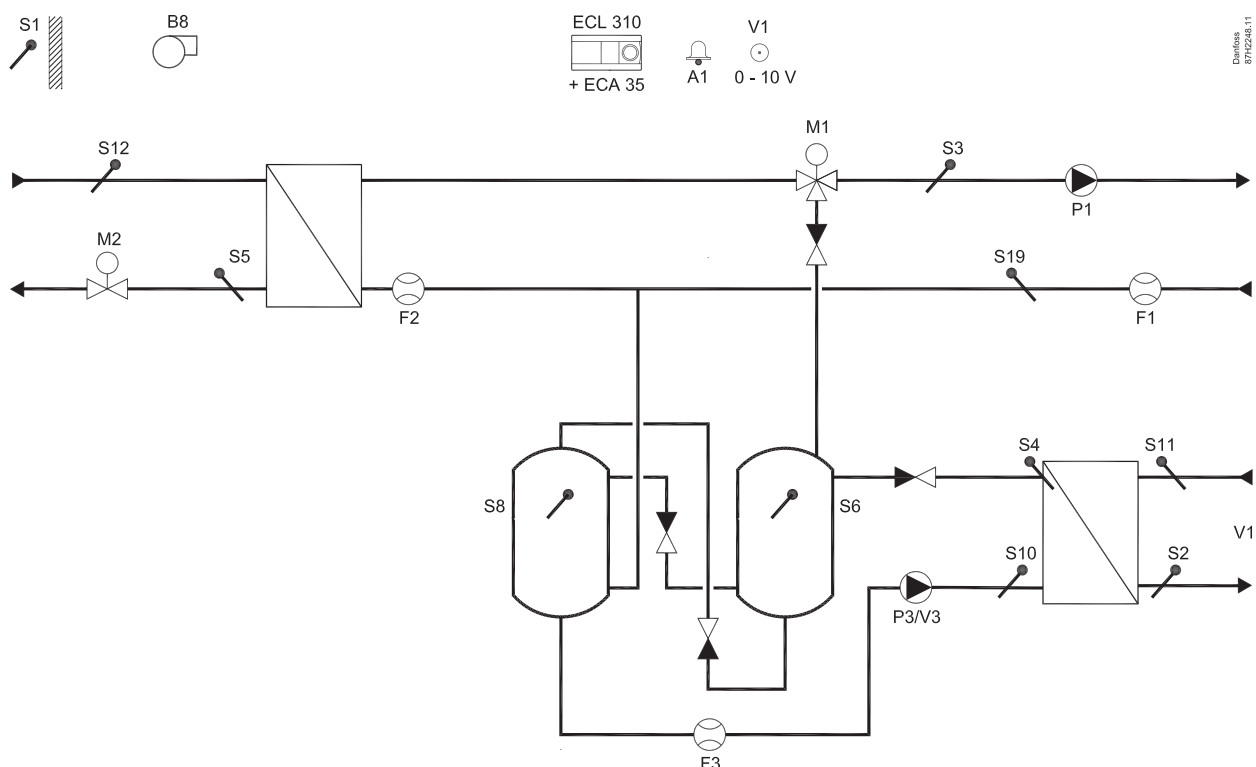

Danfoss
87H2248.11

 P501.13, ex. i1:

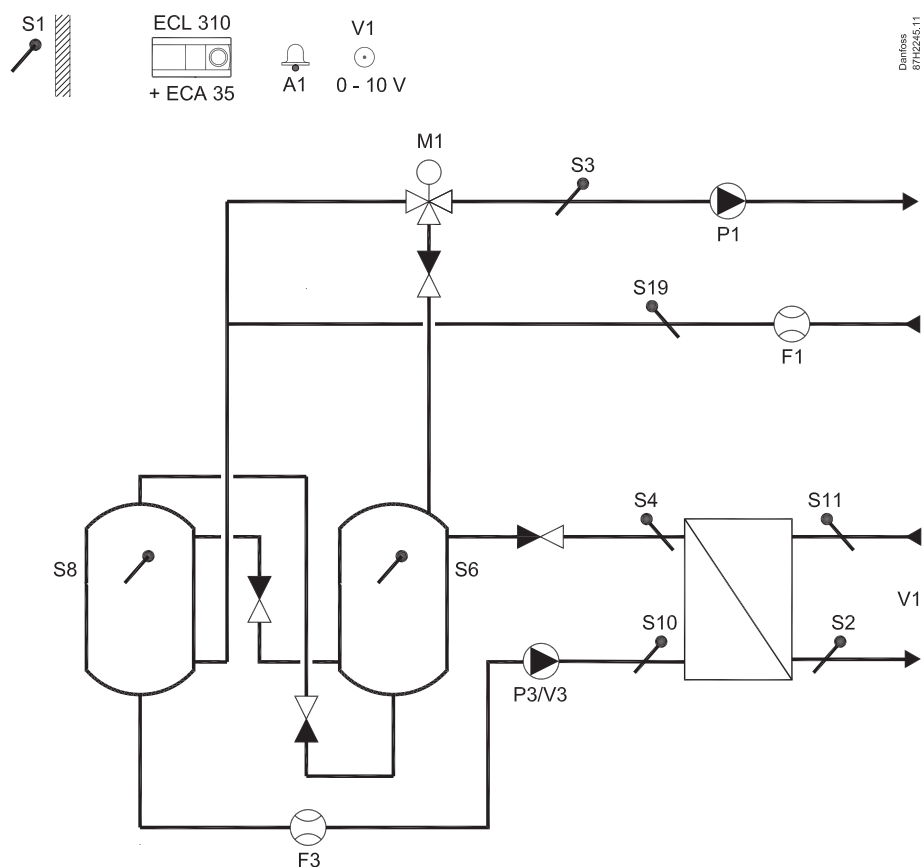


Danfoss
87H2245.11

P501.1


P501.2

 ECL 310, 230 V a.c.:

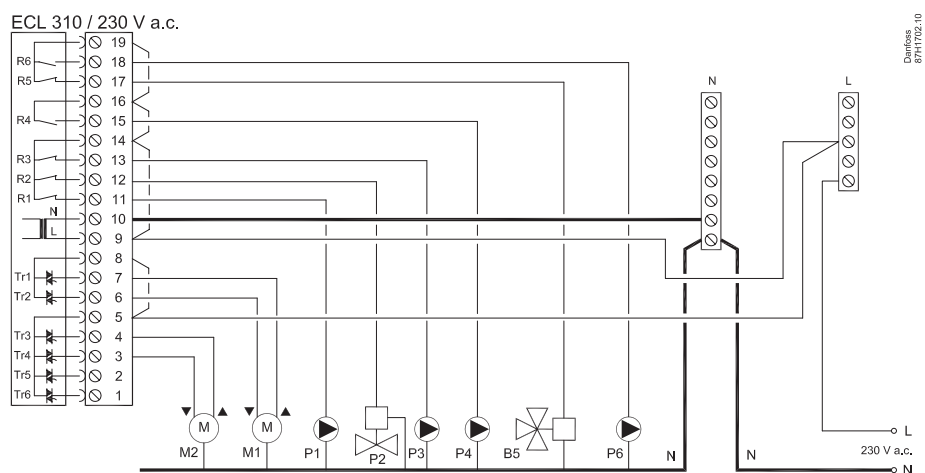


P501.13

 ECL 310, 230 V a.c.:

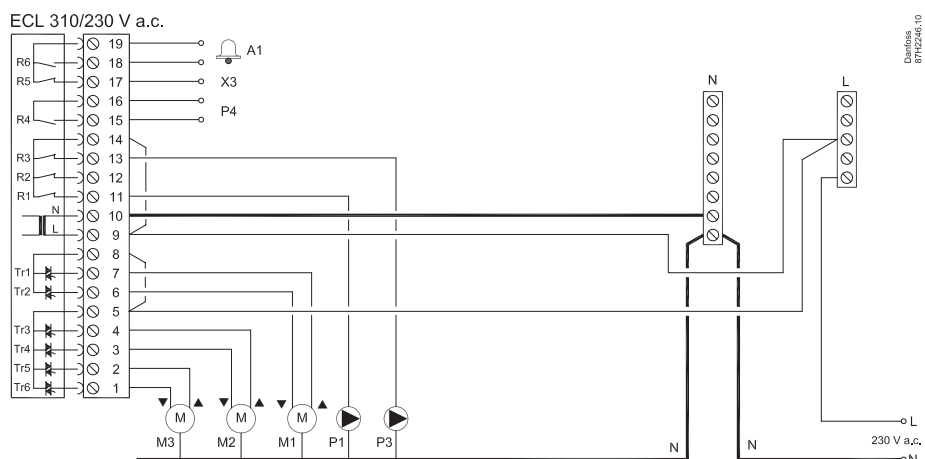


	ECA 32	ECA 35
P501.1	X	X
P501.2	X	X
P501.11	X	
P501.12		X
P501.13		X

 ECA 32 / 35

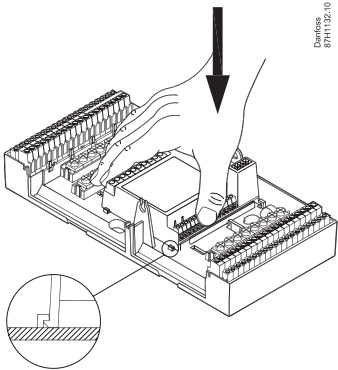

 P501.1
P501.2
ECA 32 / ECA 35
P7, B8, O1, A1

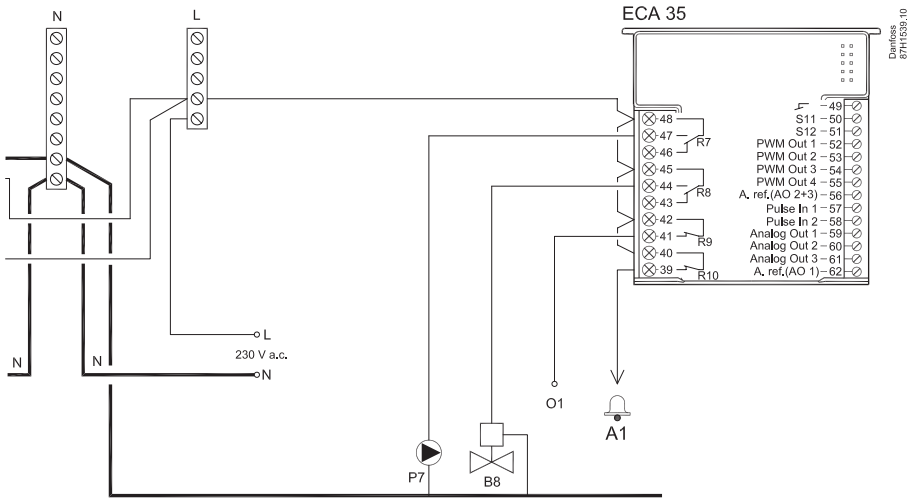

P501.12


P501.13

ECA 35

P7 (P501.12)


X1 (B8)

 X2 (P501.13)

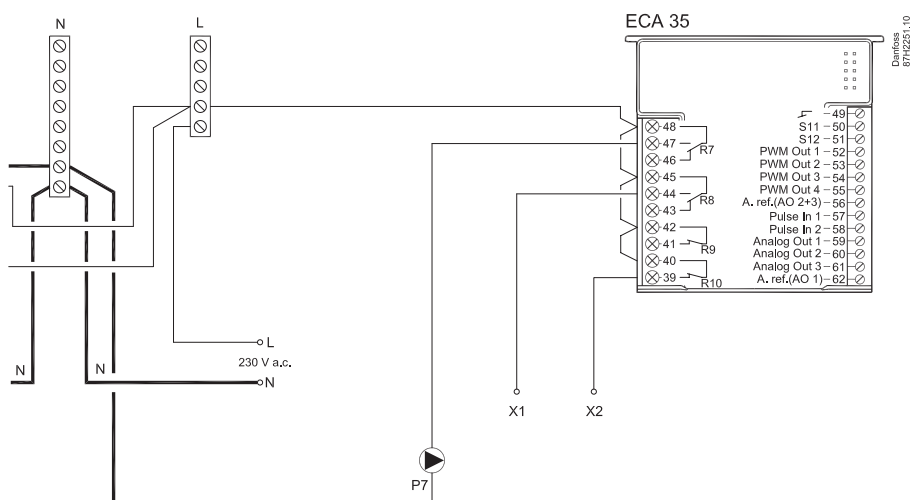


Installation Guide, ECL Comfort 310, P501

 
P501.1
P501.2
ECA 35
PWM Out 1

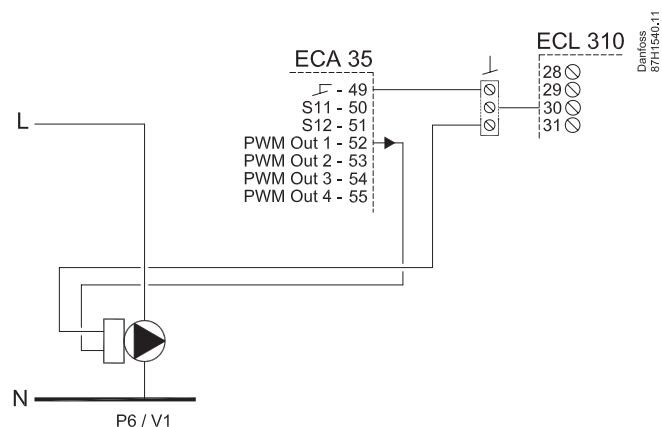


P501.1
P501.2
ECA 35
PWM Out 2

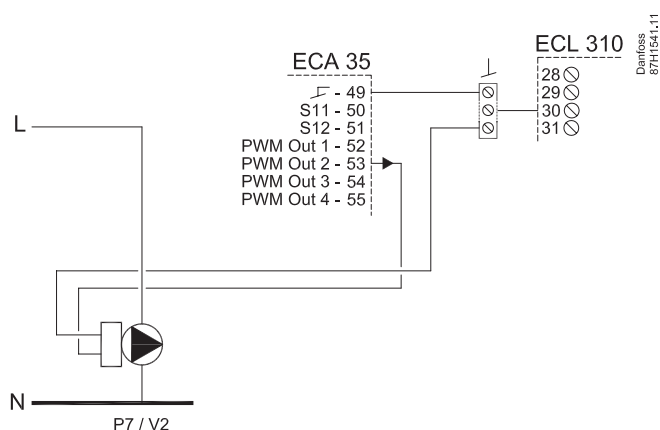 

 
P501.1
P501.2
ECA 32 / 35
P6 / V1, Analog Out 1
0 - 10 V

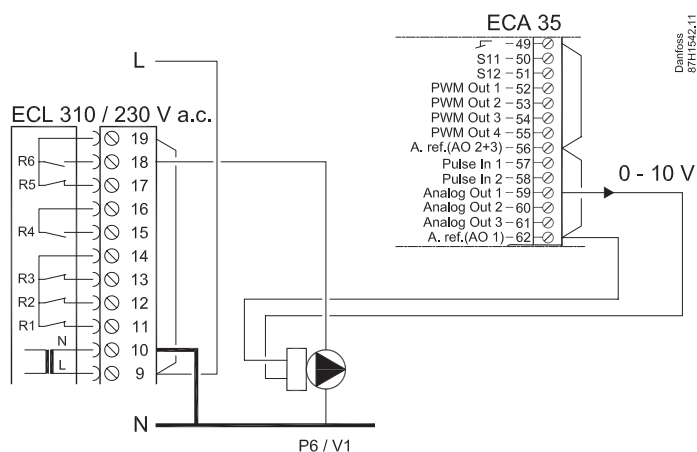

 
P501.1
P501.2
ECA 32 / 35
P7 / V2, Analog Out 2
0 - 10 V

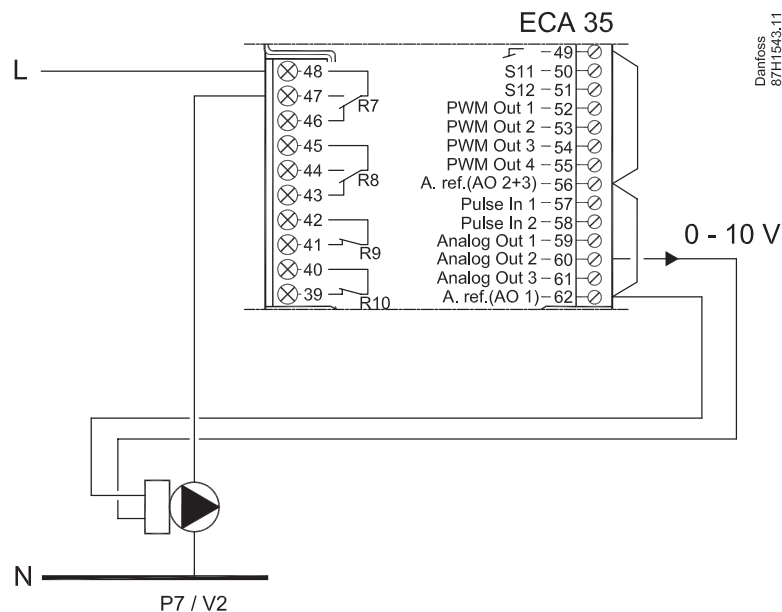

 
P501.11
ECA 32
V1, Analog Out 1
0 - 10 V

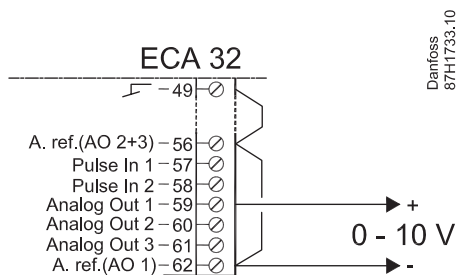

 
P501.11
ECA 32
V3, Analog Out 3
0 - 10 V

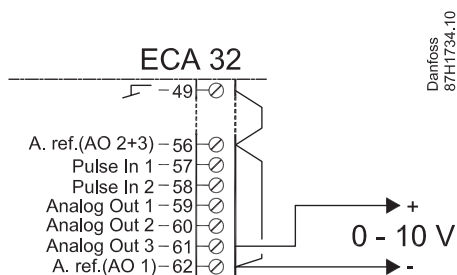

 P501.12
P501.13
ECA 35
V1, V2, V3
0-10 V

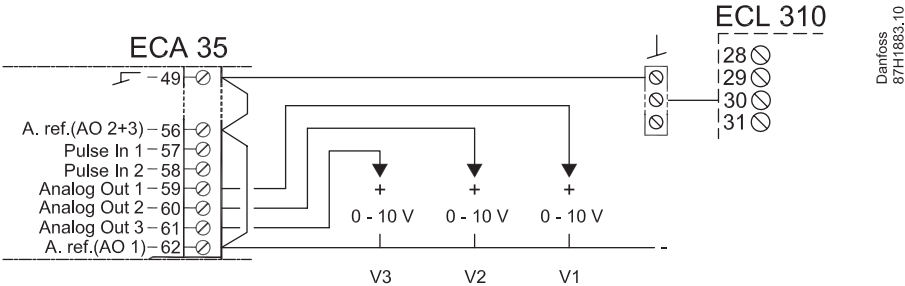


P501.12
P501.13
ECA 35
V2, V3, V4
PWM

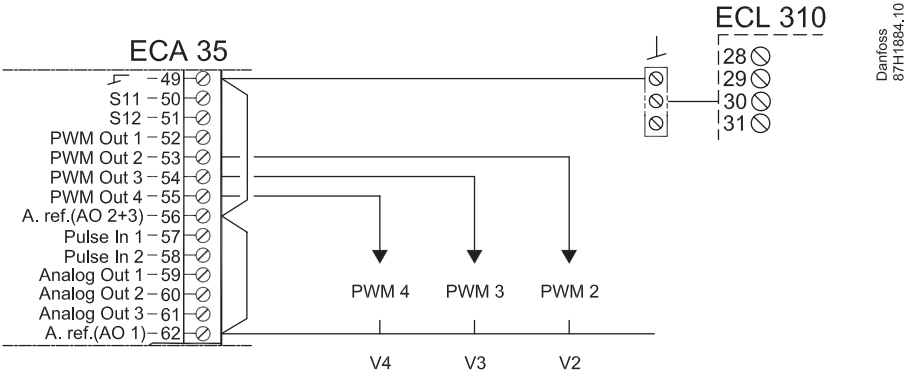 


230 V a.c. / 24 V a.c., safety thermostat

1-step closing

 
ECL 210 / 310 / 311

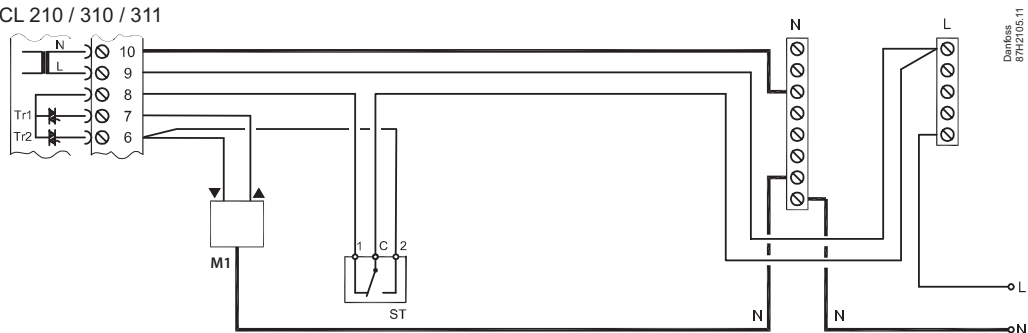


ECL 210 / 310 / 311

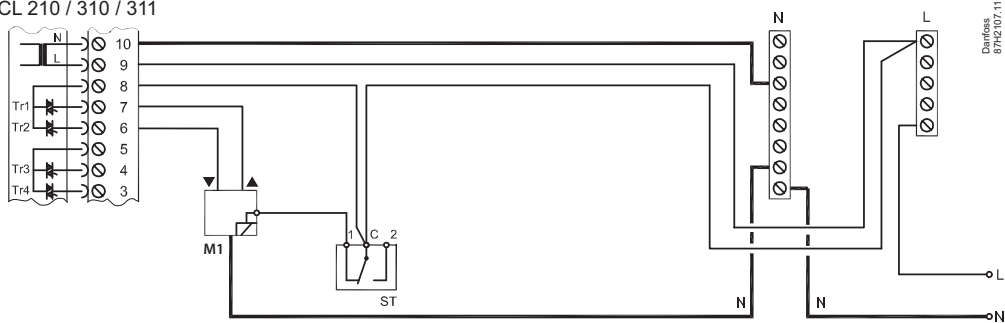 



ECL 210 / 310

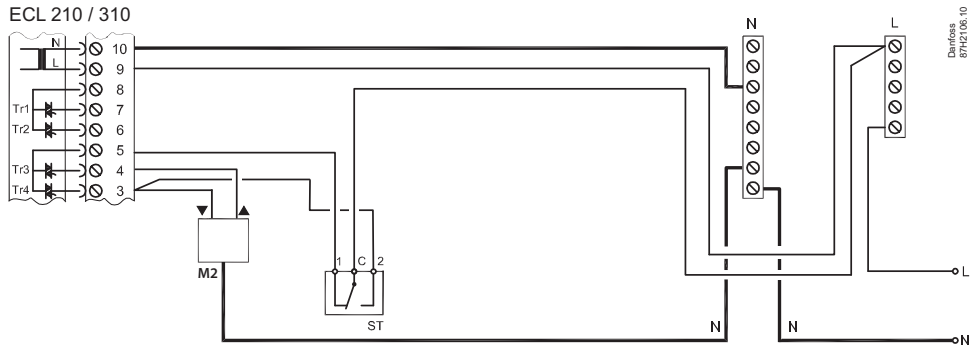 



ECL 210 / 310

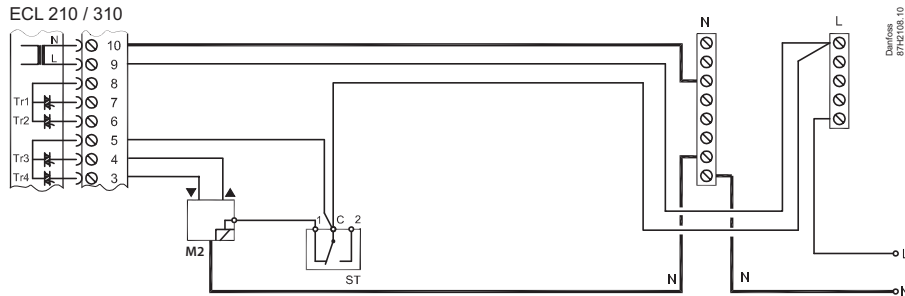 

  230 V a.c. / 24 V a.c., safety thermostat
2-step closing

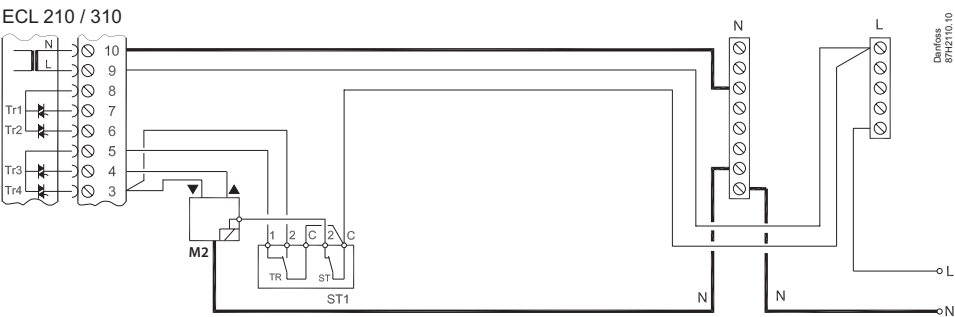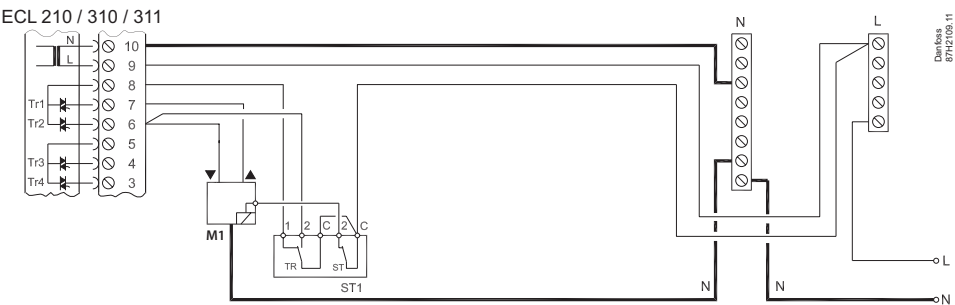

Pt 1000 (1000 Ω / 0 °C)

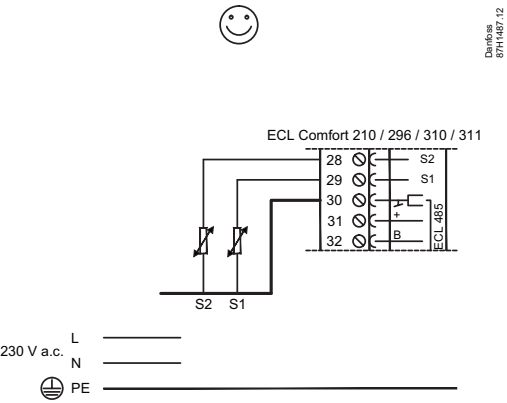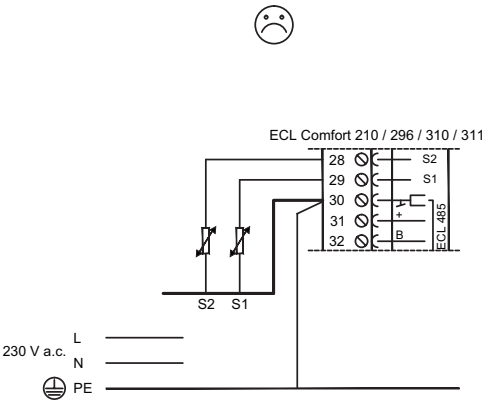  


Pt 1000


	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10
P501.1	x	x	x	x	x	x	x	x	x	x
P501.2	x	x	x	x	x	x	x	x	x	x
P501.11	x	x	x	x	x	x	x	x	x	x
P501.12	x	x	x	x	x	x	x	x	x	x
P501.13	x	x	x	x	x	x		x	x	x

P501.1, P501.2, P501.11, P501.12

 Pt 1000 (1000 Ω / 0 °C)

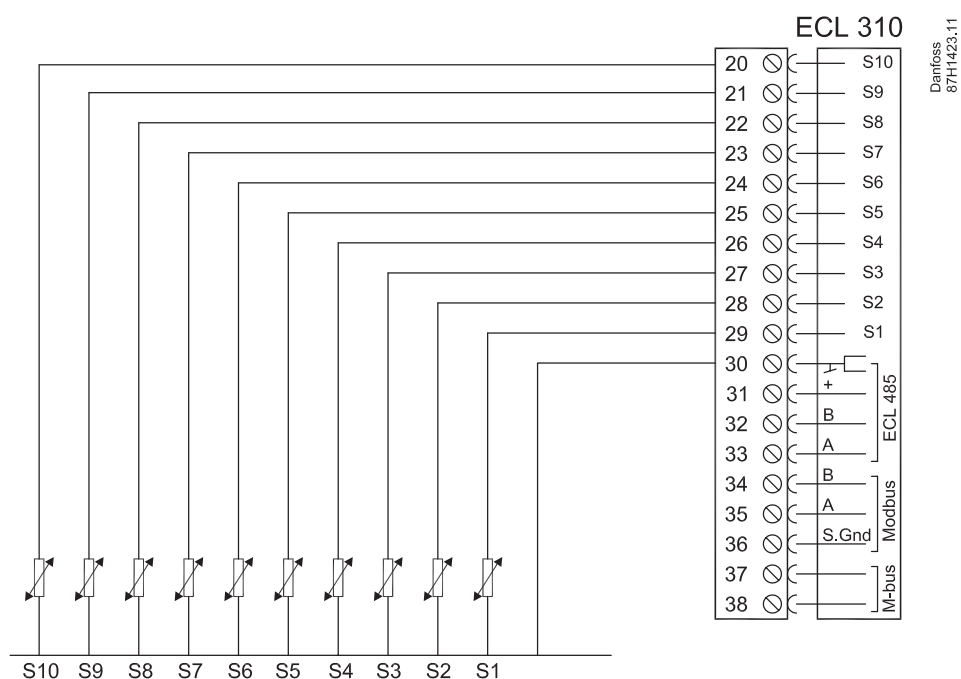

P501.13
Pt 1000 (1000 Ω / 0 °C)

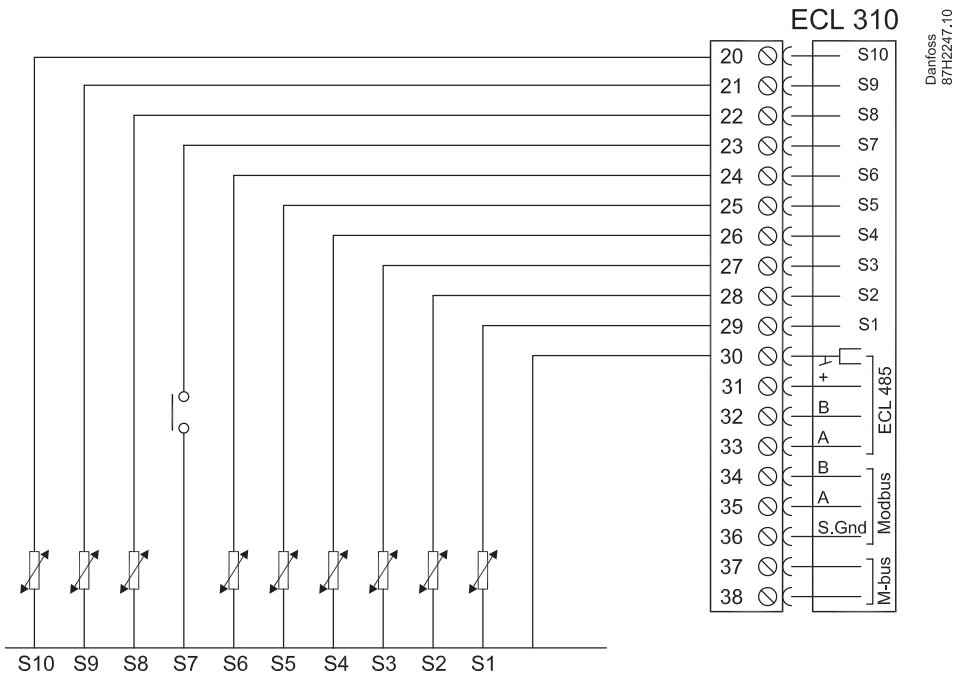 


	ECA 32					
	S11	S12	S13	S14	S15	S16
P501.1	Pt 1000	Pt 1000				
P501.2	Pt 1000	Pt 1000				
P501.11	0 – 10 V		Pt 1000		Pt 1000	
P501.12						
P501.13						

	ECA 35					
	S11	S12	S13	S14	S15	S16
P501.1	Pt 1000	Pt 1000				
P501.2	Pt 1000	Pt 1000				
P501.11	0 - 10 V					
P501.12	Pt 1000	Pt 1000				
P501.13	Pt 1000	Pt 1000				


P501.1

 ECA 32 / 35, S11, S12, Pt 1000

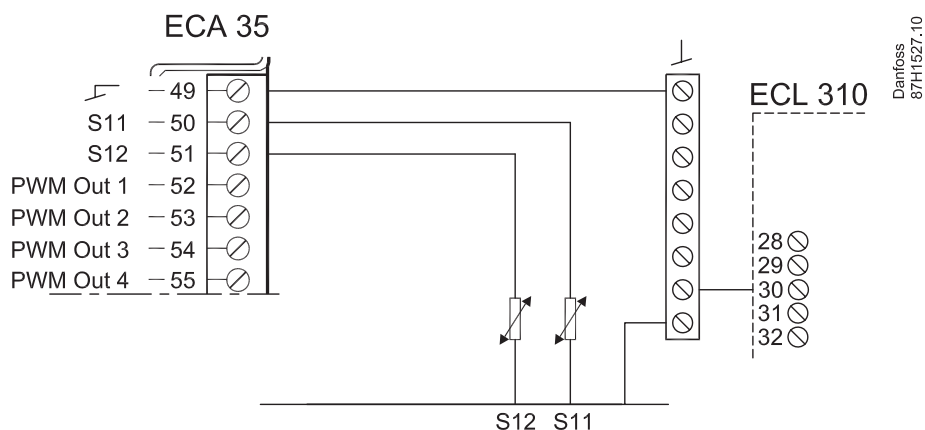

P501.11

 
ECA 32, S11, 0 - 10 V

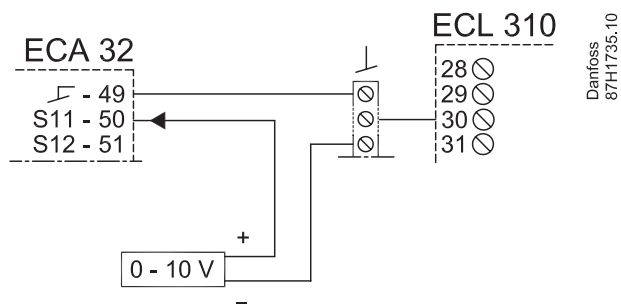

P501.11


ECA 32

 S13, S15, Pt 1000

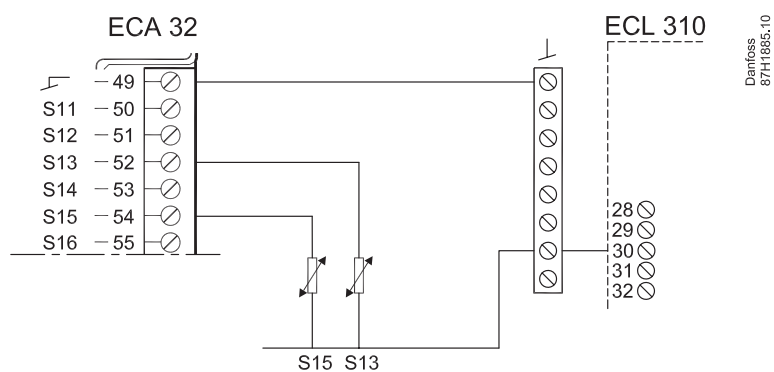


Installation Guide, ECL Comfort 310, P501

 
P501.12
P501.13
ECA 35
S11, S12

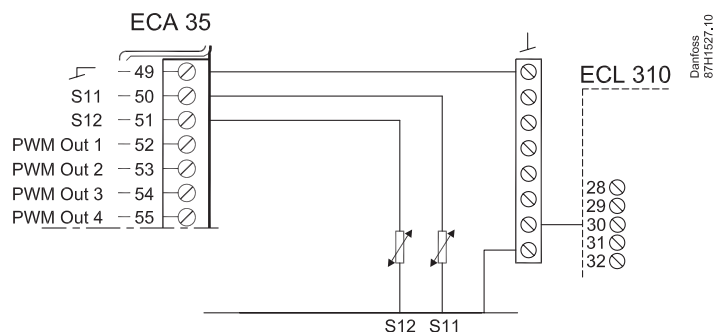


ECA 30 / 31

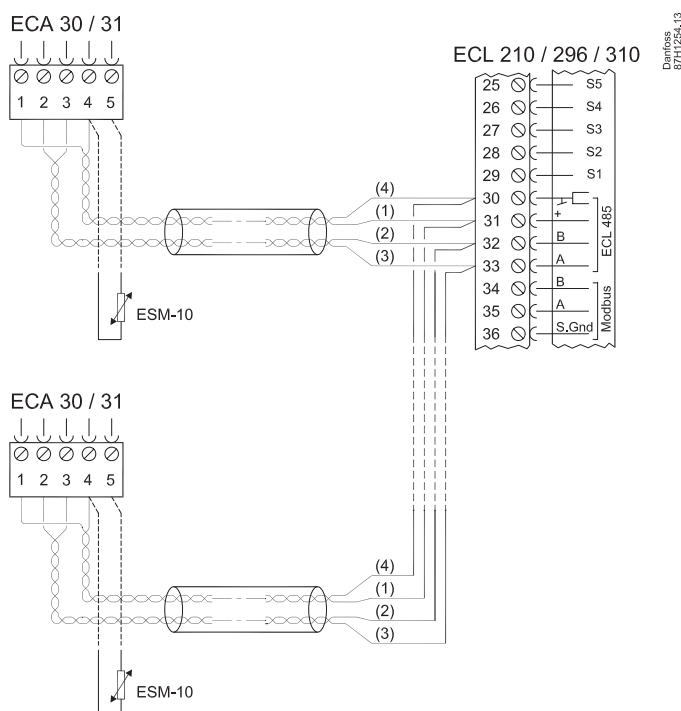 


Master / slave

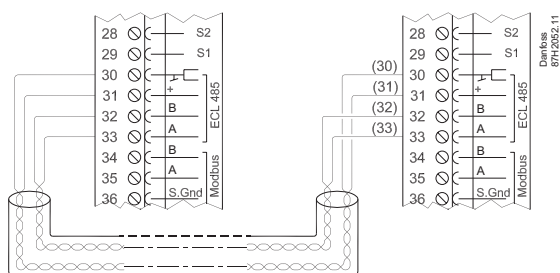 

Modbus

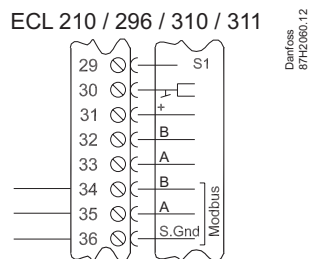 


M-bus

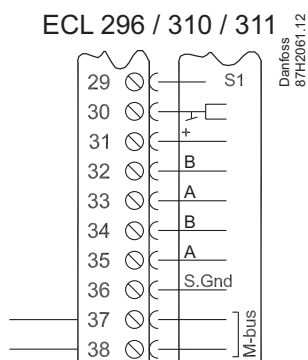 

P501.1, P501.2, P501.11, P501.12, P501.13:



F1+ F2+F3+F4

 M-bus

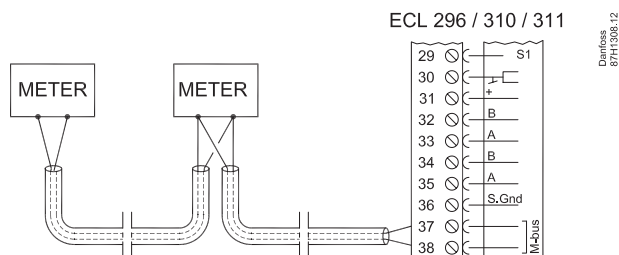


	F1	F2	F3	F4
P501.1	x	x		
P501.2	x	x		
P501.11	x	x	x	
P501.12	x	x	x	
P501.13	x (S19)	x	x	x

  Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

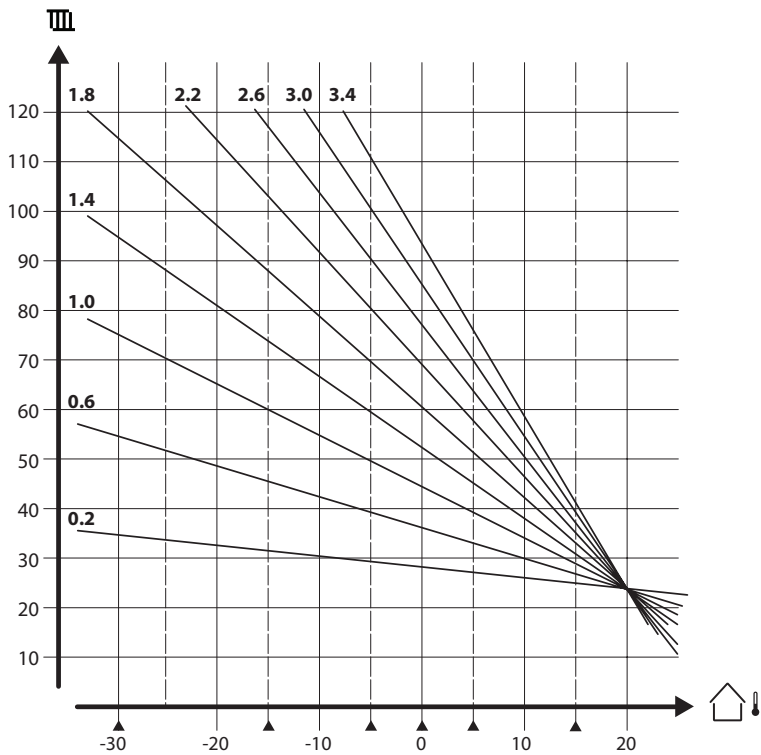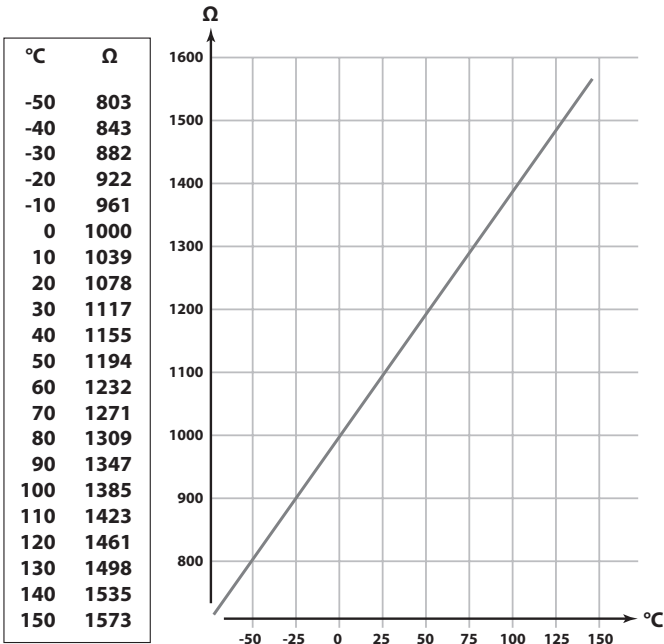


ECA 30

 
1

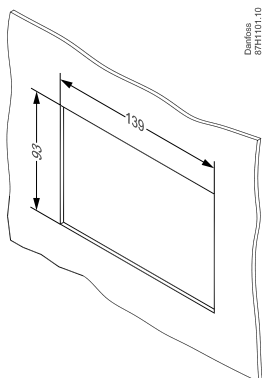


2

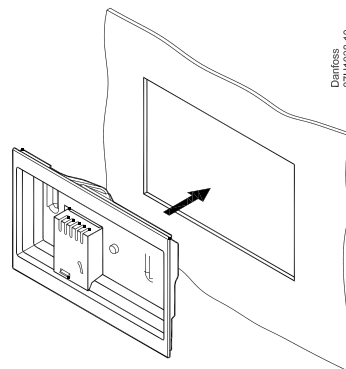 


3

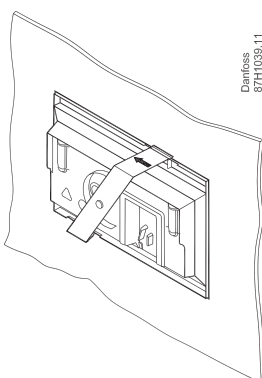 


4

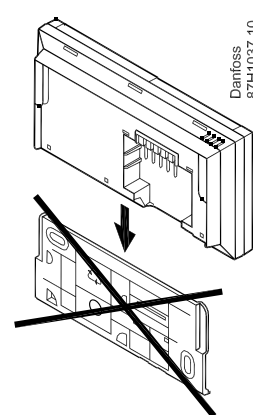 


5

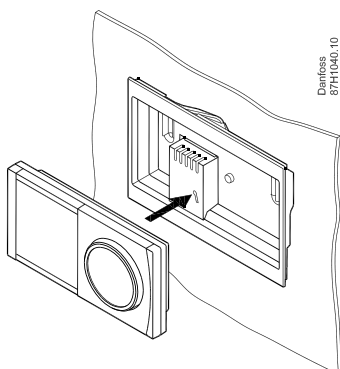 


6

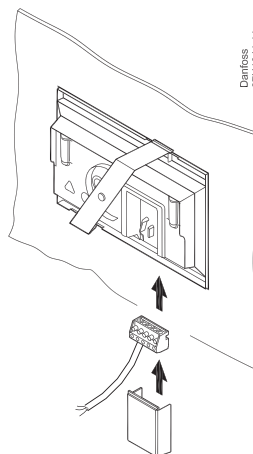 





7

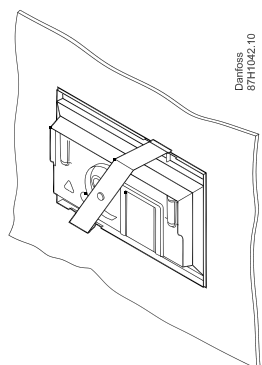 

8

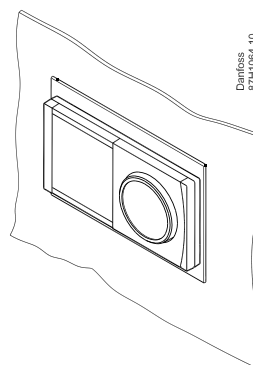 

    Installation Guide, ECL Comfort 310, P501

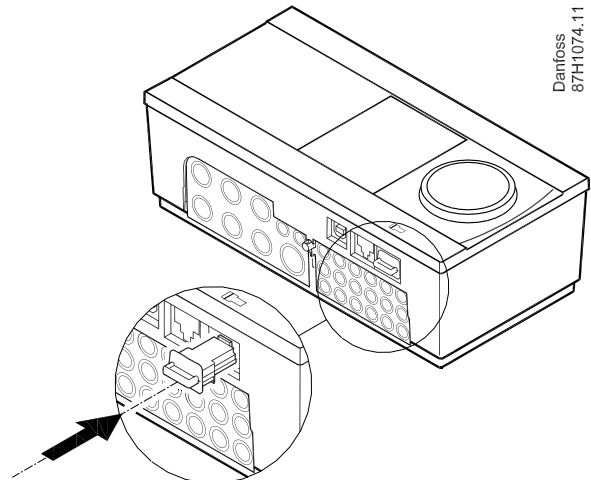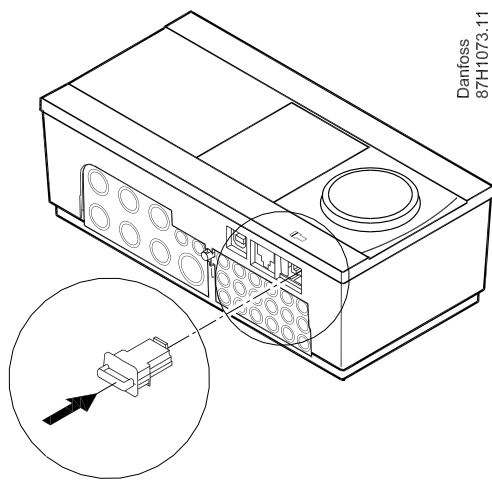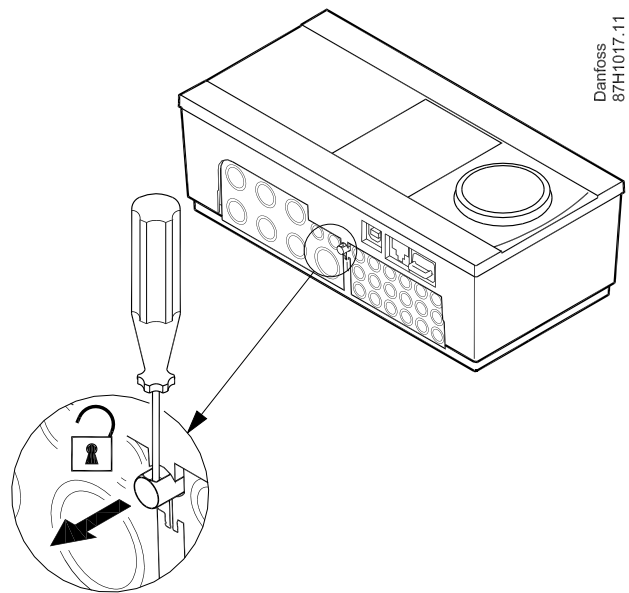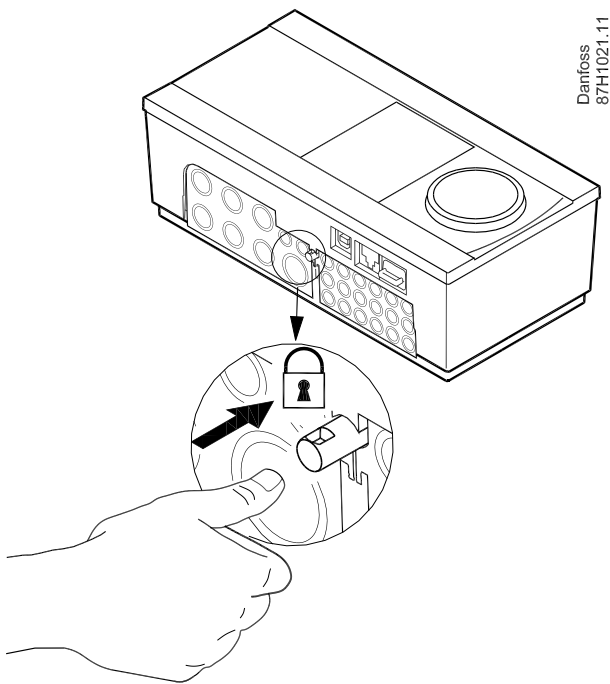

?  **ECL Comfort 310, P501: www.danfoss.com**

?  **<https://www.youtube.com/user/DanfossHeating>**
-> Playlists -> How-to Videos -> District Energy installation videos



Danfoss A/S
Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.