



# Operating Guide

## VLT® AQUA Drive FC 202

355–800 kW, Enclosure Sizes E1h–E4h





## Contents

<b>1 Introduction</b>	<b>3</b>
1.1 Purpose of the Manual	3
1.2 Additional Resources	3
1.3 Manual and Software Version	3
1.4 Approvals and Certifications	3
1.5 Disposal	3
<b>2 Safety</b>	<b>4</b>
2.1 Safety Symbols	4
2.2 Qualified Personnel	4
2.3 Safety Precautions	4
<b>3 Product Overview</b>	<b>6</b>
3.1 Intended Use	6
3.2 Power Ratings, Weights, and Dimensions	6
3.3 Interior View of Enclosures E1h and E2h	7
3.4 Interior View of Enclosures E3h and E4h	8
3.5 Control Shelf	9
3.6 Local Control Panel (LCP)	10
<b>4 Mechanical Installation</b>	<b>12</b>
4.1 Items Supplied	12
4.2 Tools Needed	12
4.3 Storage	12
4.4 Operating Environment	13
4.5 Installation and Cooling Requirements	14
4.6 Lifting the Unit	14
4.7 E1h/E2h Mechanical Installation	15
4.8 E3h/E4h Mechanical Installation	17
<b>5 Electrical Installation</b>	<b>20</b>
5.1 Safety Instructions	20
5.2 EMC-compliant Installation	20
5.3 Wiring Schematic	23
5.4 Connecting the Motor	24
5.5 Connecting the AC Mains	26
5.6 Connecting to Ground	28
5.7 Terminal Dimensions	30
5.8 Control Wiring	40
5.9 Pre-start Check List	45

<b>6 Commissioning</b>	<b>46</b>
6.1 Safety Instructions	46
6.2 Applying Power	46
6.3 LCP Menu	47
6.4 Programming the Drive	48
6.5 Testing Before System Start-up	51
6.6 System Start-up	51
6.7 Parameter Settings	52
<b>7 Wiring Configuration Examples</b>	<b>54</b>
7.1 Wiring for Open-loop Speed Control	54
7.2 Wiring for Start/Stop	55
7.3 Wiring for External Alarm Reset	56
7.4 Wiring for a Motor Thermistor	57
7.5 Wiring for Regeneration	57
<b>8 Maintenance, Diagnostics, and Troubleshooting</b>	<b>58</b>
8.1 Maintenance and Service	58
8.2 Heat Sink Access Panel	58
8.3 Status Messages	59
8.4 Warning and Alarm Types	61
8.5 List of Warnings and Alarms	62
8.6 Troubleshooting	71
<b>9 Specifications</b>	<b>73</b>
9.1 Electrical Data	73
9.2 Mains Supply	78
9.3 Motor Output and Motor Data	78
9.4 Ambient Conditions	78
9.5 Cable Specifications	79
9.6 Control Input/Output and Control Data	79
9.7 Fuses	82
9.8 Enclosure Dimensions	83
9.9 Enclosure Airflow	99
9.10 Fastener Torque Ratings	100
<b>10 Appendix</b>	<b>101</b>
10.1 Abbreviations and Conventions	101
10.2 International/North American Default Parameter Settings	102
10.3 Parameter Menu Structure	102
<b>Index</b>	<b>108</b>



# 1 Introduction

## 1.1 Purpose of the Manual

This operating guide provides information for safe installation and commissioning of the VLT® drives in an enclosure size E (E1h, E2h, E3h, and E4h).

The operating guide is intended for use by qualified personnel. To use the unit safely and professionally, read and follow this operating guide. Pay particular attention to the safety instructions and general warnings. Always keep the operating guide with the drive.

VLT® is a registered trademark.

## 1.2 Additional Resources

Other resources are available to understand advanced E1h–E4h drive functions and programming.

- The *VLT® AQUA Drive FC 202 Programming Guide* provides greater detail on working with parameters and aqua application examples.
- The *VLT® AQUA Drive FC 202, 110–1400 kW Design Guide* provides detailed capabilities and functionality to design motor control systems for aqua applications.
- The *Safe Torque Off Operating Guide*.

Supplementary publications and manuals are available from Danfoss. See [www.danfoss.com/en/search/?filter=type%3Adocumentation](http://www.danfoss.com/en/search/?filter=type%3Adocumentation) for listings.

## 1.3 Manual and Software Version

This manual is regularly reviewed and updated. All suggestions for improvement are welcome. *Table 1.1* shows the version of the manual and the corresponding software version.

Manual version	Remarks	Software version
MG22A2xx	Added output contactor warning and other corrections.	2.70

Table 1.1 Manual and Software Version

## 1.4 Approvals and Certifications



Table 1.2 Approvals and Certifications

More approvals and certifications are available. Contact the local Danfoss office or partner. Drives of voltage T7 (525–690 V) are UL certified for only 525–690 V.

The drive complies with UL 61800-5-1 thermal memory retention requirements. For more information, refer to the section *Motor Thermal Protection* in the product-specific *design guide*.

### NOTICE


#### IMPOSED LIMITATIONS ON THE OUTPUT FREQUENCY

From software version 1.99, the output frequency of the drive is limited to 590 Hz due to export control regulations.

### 1.4.1 Compliance with ADN

For compliance with the European Agreement concerning International Carriage of Dangerous Goods by Inland Waterways (ADN), refer to *ADN-compliant Installation* in the *design guide*.

## 1.5 Disposal

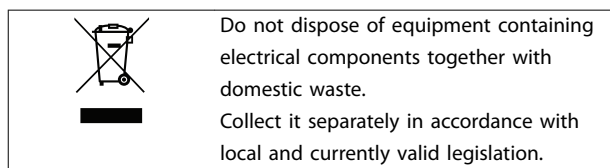

## 2

## 2 Safety

### 2.1 Safety Symbols

The following symbols are used in this guide:

#### **⚠ WARNING**

Indicates a potentially hazardous situation that could result in death or serious injury.

#### **⚠ CAUTION**

Indicates a potentially hazardous situation that could result in minor or moderate injury. It can also be used to alert against unsafe practices.

#### **NOTICE**

Indicates important information, including situations that can result in damage to equipment or property.

### 2.2 Qualified Personnel

Correct and reliable transport, storage, installation, operation, and maintenance are required for the trouble-free and safe operation of the drive. Only qualified personnel are allowed to install or operate this equipment.

Qualified personnel are defined as trained staff, who are authorized to install, commission, and maintain equipment, systems, and circuits in accordance with pertinent laws and regulations. Also, the personnel must be familiar with the instructions and safety measures described in this manual.

### 2.3 Safety Precautions

#### **⚠ WARNING**

##### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input, DC supply, load sharing, or permanent motors. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Only qualified personnel must install, start up, and maintain the drive.

#### **⚠ WARNING**

##### UNINTENDED START

When the drive is connected to the AC mains, DC supply, or load sharing, the motor can start at any time.

Unintended start during programming, service, or repair work can result in death, serious injury, or property damage. The motor can start with an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up Software, or after a cleared fault condition.

To prevent unintended motor start:

- Press [Off/Reset] on the LCP before programming parameters.
- Disconnect the drive from the mains.
- Completely wire and assemble the drive, motor, and any driven equipment before connecting the drive to the AC mains, DC supply, or load sharing.

#### **⚠ WARNING**

##### DISCHARGE TIME

The drive contains DC-link capacitors, which can remain charged even when the drive is not powered. High voltage can be present even when the warning LED indicator lights are off. Failure to wait 40 minutes after power has been removed before performing service or repair work can result in death or serious injury.

1. Stop the motor.
2. Disconnect AC mains and remote DC-link supplies, including battery back-ups, UPS, and DC-link connections to other drives.
3. Disconnect or lock motor.
4. Wait 40 minutes for the capacitors to discharge fully.
5. Before performing any service or repair work, use an appropriate voltage measuring device to make sure that the capacitors are fully discharged.

#### **⚠ WARNING**

##### LEAKAGE CURRENT HAZARD

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

**⚠ WARNING****EQUIPMENT HAZARD**

Contact with rotating shafts and electrical equipment can result in death or serious injury.

- Ensure that only trained and qualified personnel install, start up, and maintain the drive.
- Ensure that electrical work conforms to national and local electrical codes.
- Follow the procedures in this guide.

**⚠ CAUTION****HOT SURFACES**

The drive contains metal components that are still hot even after the drive has been powered off. Failure to observe the high temperature symbol (yellow triangle) on the drive can result in serious burns.

- Be aware that internal components, such as busbars, can be extremely hot even after the drive has been powered off.
- Exterior areas marked by the high temperature symbol (yellow triangle) are hot while the drive is in use and immediately after being powered off.

**⚠ WARNING****INTERNAL FAILURE HAZARD**

Under certain circumstances, an internal failure can cause a component to explode. Failure to keep the enclosure closed and properly secured can cause death or serious injury.

- Do not operate the drive with the door open or panels off.
- Ensure that the enclosure is properly closed and secured during operation.

**NOTICE****MAINS SHIELD SAFETY OPTION**

A mains shield option is available for enclosures with a protection rating of IP21/IP54 (Type 1/Type 12). The mains shield is a cover installed inside the enclosure to protect against the unintended touch of the power terminals, according to BGV A2, VBG 4.

## 3 Product Overview

### 3.1 Intended Use

The drive is an electronic motor controller that converts AC mains input into a variable AC waveform output. The frequency and voltage of the output are regulated to control the motor speed or torque. The drive is designed to:

- Regulate motor speed in response to system feedback or to remote commands from external controllers.
- Monitor system and motor status.
- Provide motor overload protection.

The drive is designed for industrial and commercial environments in accordance with local laws and standards. Depending on configuration, the drive can be used in standalone applications or form part of a larger system or installation.

### NOTICE

In a residential environment, this product can cause radio interference, in which case supplementary mitigation measures can be required.

#### Foreseeable misuse

Do not use the drive in applications which are non-compliant with specified operating conditions and environments. Ensure compliance with the conditions specified in *chapter 9 Specifications*.


### 3.2 Power Ratings, Weights, and Dimensions

Table 3.1 provides dimensions for standard configurations. For dimensions on optional configurations, see *chapter 9.8 Enclosure Dimensions*.

Enclosure size	E1h	E2h	E3h	E4h
Rated power at 380–480 V [kW (hp)]	355–450 (500–600)	500–560 (650–750)	355–450 (500–600)	500–560 (650–750)
Rated power at 525–690 V [kW (hp)]	450–630 (450–650)	710–800 (750–950)	450–630 (450–650)	710–800 (750–950)
Enclosure protection rating	IP21/Type 1 IP54/Type 12	IP21/Type 1 IP54/Type 12	IP20/ Chassis	IP20/ Chassis
Unit dimensions				
Height [mm (in)]	2043 (80.4)	2043 (80.4)	1578 (62.1)	1578 (62.1)
Width [mm (in)]	602 (23.7)	698 (27.5)	506 (19.9)	604 (23.89)
Depth [mm (in)]	513 (20.2)	513 (20.2)	482 (19.0)	482 (19.0)
Weight [kg (lb)]	295 (650)	318 (700)	272 (600)	295 (650)
Shipping dimensions				
Height [mm (in)]	2191 (86.3)	2191 (86.3)	1759 (69.3)	1759 (69.3)
Width [mm (in)]	768 (30.2)	768 (30.2)	746 (29.4)	746 (29.4)
Depth [mm (in)]	870 (34.3)	870 (34.3)	794 (31.3)	794 (31.3)
Weight [kg (lb)]	–	–	–	–

Table 3.1 Enclosure Power Ratings and Dimensions


### 3.3 Interior View of Enclosures E1h and E2h

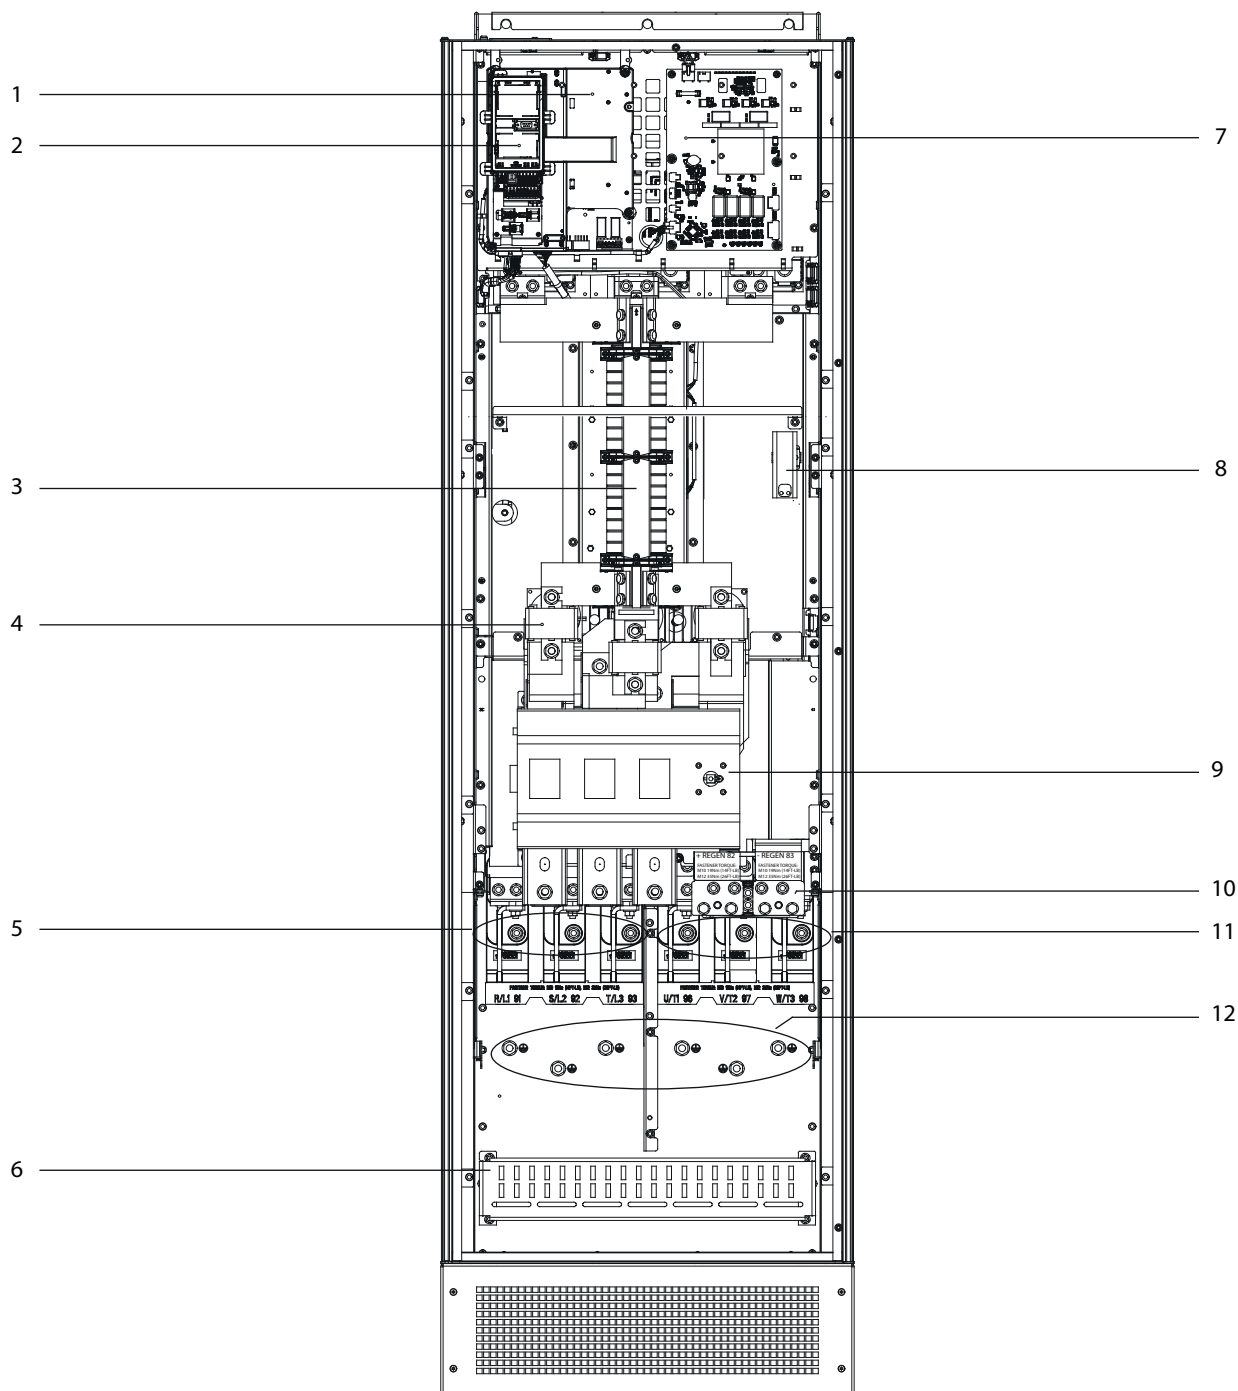

1	Control shelf (see <i>Illustration 3.3</i> )	7	Fan power card
2	Local control panel (LCP) cradle	8	Space heater (optional)
3	RFI filter (optional)	9	Mains disconnect (optional)
4	Mains fuses (required for UL compliance, but otherwise optional)	10	Brake/regeneration terminals (optional)
5	Mains terminals	11	Motor terminals
6	RFI shield termination	12	Ground terminals

Illustration 3.1 Interior View of Enclosure E1h (Enclosure E2h is Similar)

### 3.4 Interior View of Enclosures E3h and E4h

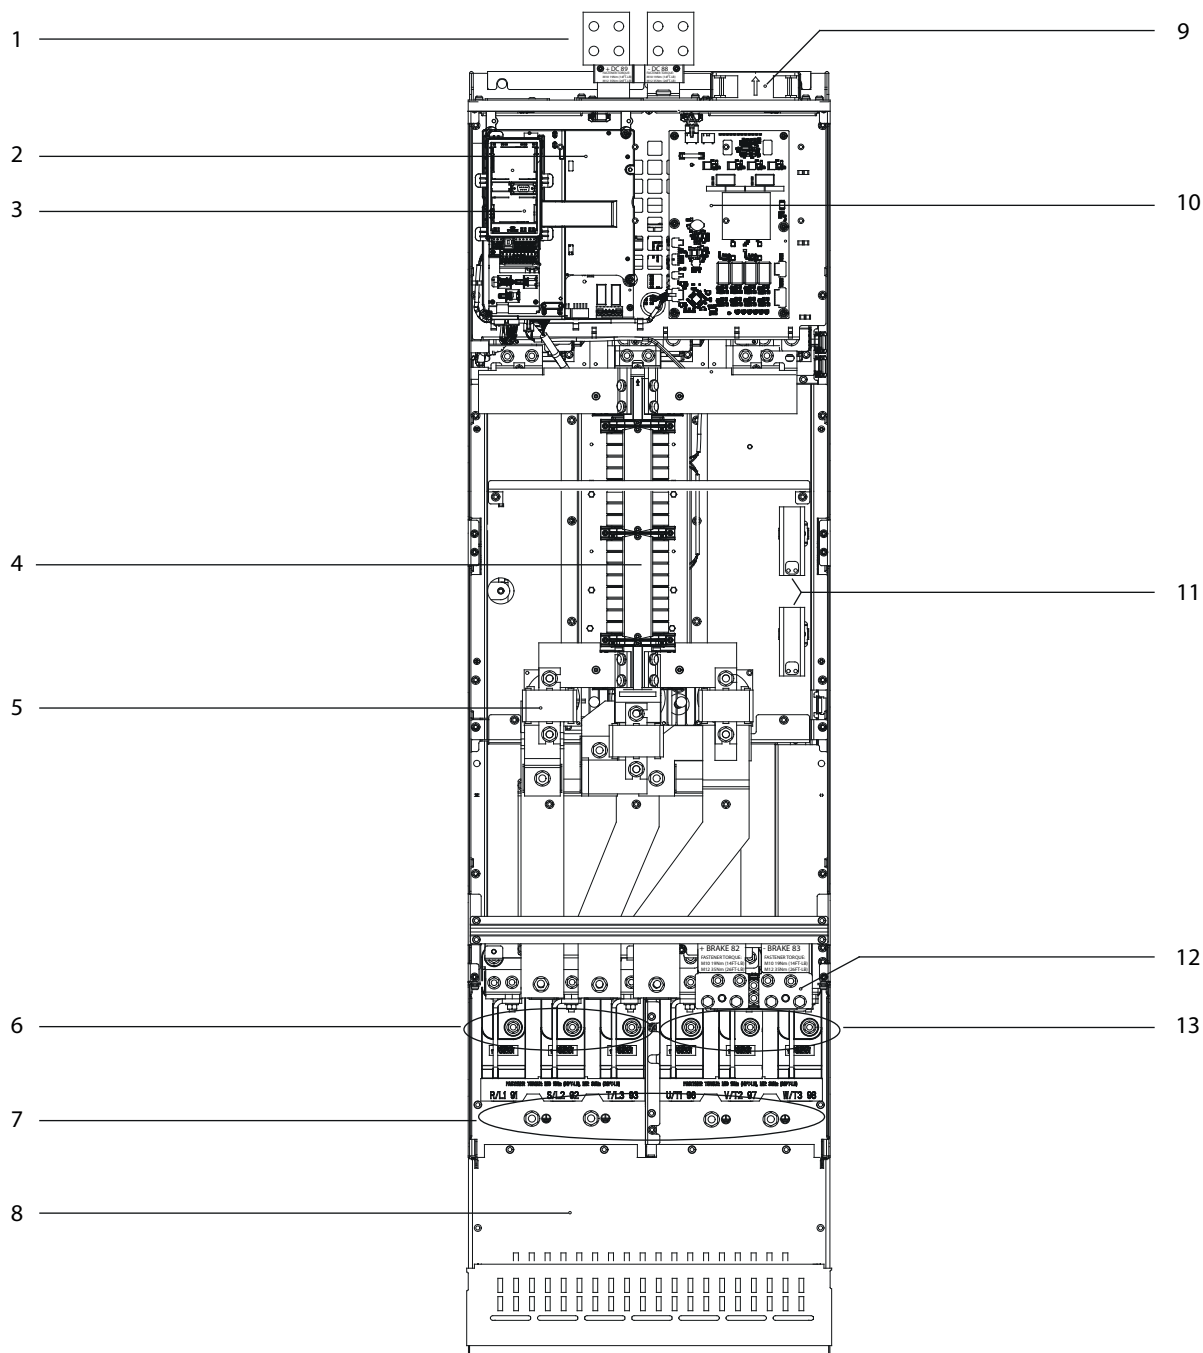


1308F211.11

1	Load share/regeneration terminals (optional)	8	RFI shield termination (optional, but is standard when RFI filter is ordered)
2	Control shelf (see <i>Illustration 3.3</i> )	9	Fans (used to cool the front section of enclosure)
3	Local control panel (LCP) cradle	10	Fan power card
4	RFI filter (optional)	11	Space heater (optional)
5	Mains fuses (optional)	12	Brake terminals (optional)
6	Mains terminals	13	Motor terminals
7	Ground terminals	–	–

Illustration 3.2 Interior View of Enclosure E3h (Enclosure E4h is Similar)

### 3.5 Control Shelf

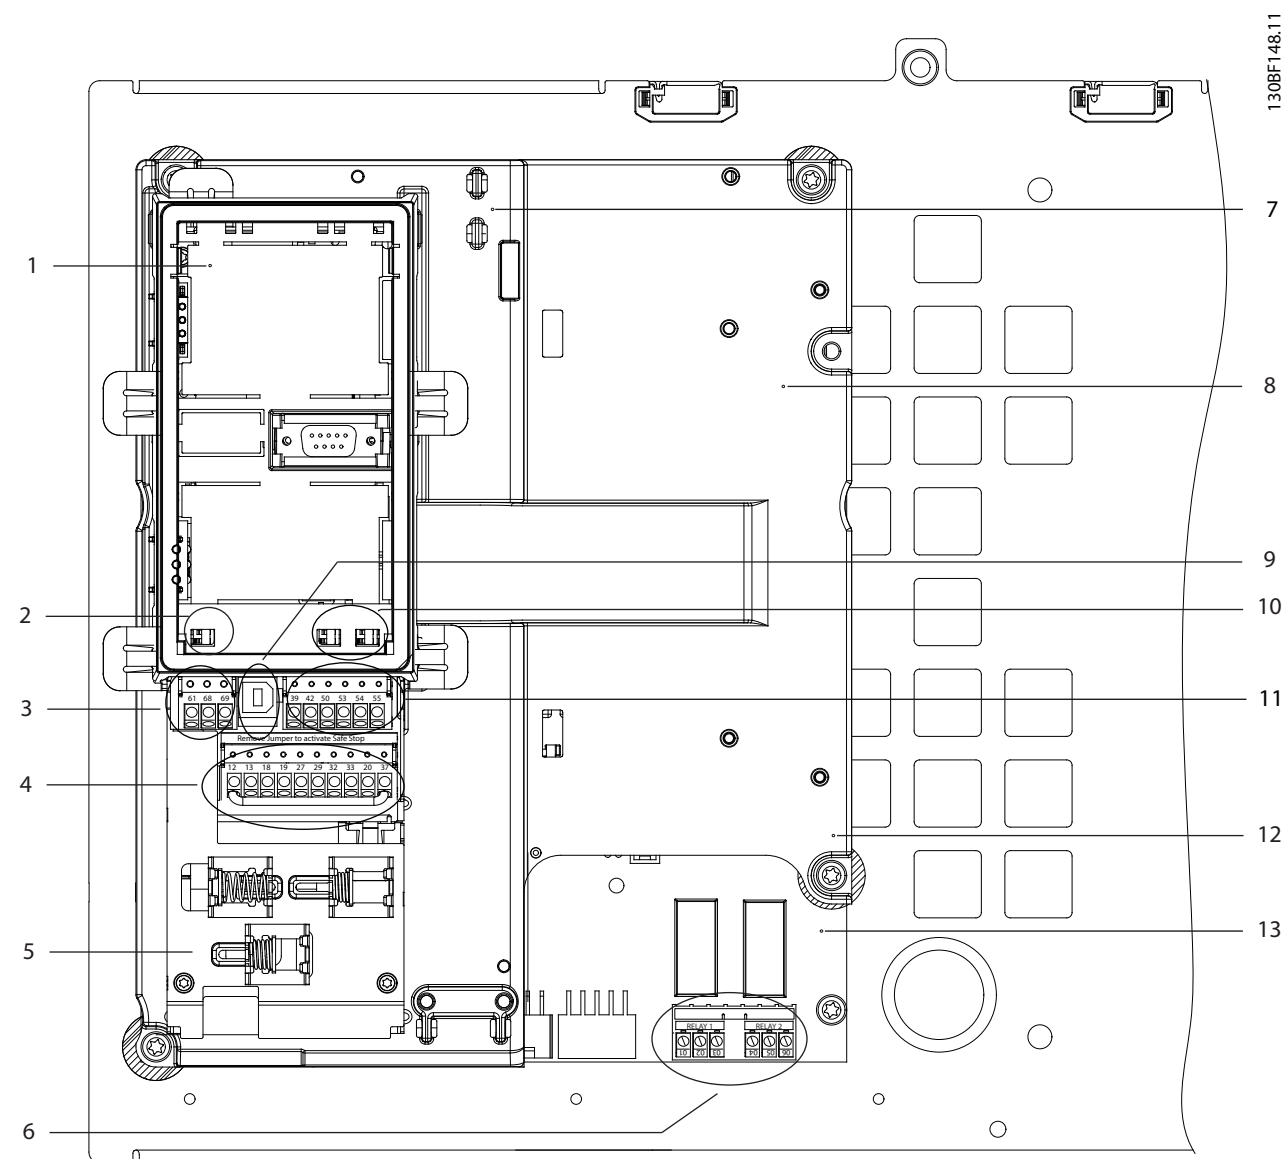

1	LCP cradle (LCP not shown)	8	Control shelf
2	Bus terminal switch (see chapter 5.8.6 Configuring RS485 Serial Communication)	9	USB port
3	Serial communication terminals (see Table 5.1)	10	Analog input switches A53/A54 (see chapter 5.8.11 Selecting Voltage/Current Input Signal)
4	Digital input/output terminals (see Table 5.2)	11	Analog input/output terminals (see Table 5.3)
5	Cable/EMC clamps	12	Brake resistor terminals, 104–106 (on power card underneath control shelf)
6	Relay 1 and relay 2 (see Illustration 5.19)	13	Power card (underneath the control shelf)
7	Control card (underneath LCP and control terminals)	–	–

Illustration 3.3 View of Control Shelf

### 3.6 Local Control Panel (LCP)

The local control panel (LCP) is the combined display and keypad on the front of the drive. The term LCP refers to the graphical LCP. A numeric local control panel (NLCP) is available as an option. The NLCP operates in a manner similar to the LCP, but there are differences. For details on how to use the NLCP, see the product-specific *programming guide*.

The LCP is used to:

- Control the drive and motor.
- Access drive parameters and program the drive.
- Display operational data, drive status, and warnings.

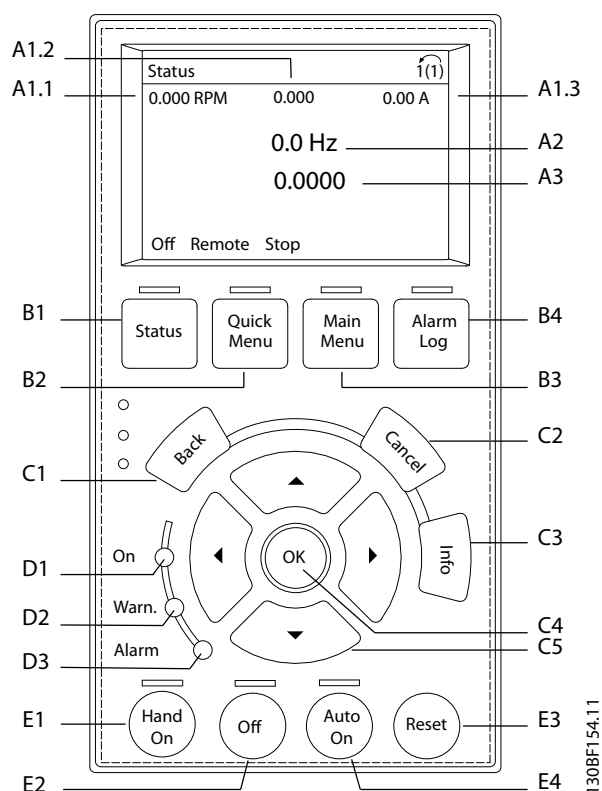


Illustration 3.4 Graphical Local Control Panel (LCP)

#### A. Display area

Each display readout has a parameter associated with it. See *Table 3.2*. The information shown on the LCP can be customized for specific applications. Refer to *chapter 6.3.1.2 Q1 My Personal Menu*.

Callout	Parameter number	Default setting
A1.1	0-20	Reference [Unit]
A1.2	0-21	Analog input 53 [V]
A1.3	0-22	Motor current [A]
A2	0-23	Frequency [Hz]
A3	0-24	Feedback [Unit]

Table 3.2 LCP Display Area



**B. Menu keys**

Menu keys are used to access the menu for setting up parameters, toggling through status display modes during normal operation, and viewing fault log data.

Callout	Key	Function
B1	Status	Shows operational information.
B2	Quick Menu	Allows access to parameters for initial set-up instructions. Also provides detailed application steps. Refer to <i>chapter 6.3.1.1 Quick Menu Mode</i> .
B3	Main Menu	Allows access to all parameters. Refer to <i>chapter 6.3.1.9 Main Menu Mode</i> .
B4	Alarm Log	Shows a list of current warnings and the last 10 alarms.

Table 3.3 LCP Menu Keys

**C. Navigation keys**

Navigation keys are used for programming functions and moving the display cursor. The navigation keys also provide speed control in local (hand) operation. To adjust the display brightness, press [Status] and [▲]/[▼] keys.

Callout	Key	Function
C1	Back	Reverts to the previous step or list in the menu structure.
C2	Cancel	Cancels the last change or command as long as the display mode has not changed.
C3	Info	Shows a definition of the function being shown.
C4	OK	Accesses parameter groups or enables an option.
C5	▲ ▼ ◀ ▶	Moves between items in the menu.

Table 3.4 LCP Navigation Keys

**D. Indicator lights**

Indicator lights are used to identify the drive status and to provide a visual notification of warning or fault conditions.

Callout	Indicator	Indicator light	Function
D1	On	Green	Activates when the drive receives power from the mains voltage or a 24 V external supply.
D2	Warn.	Yellow	Activates when warning conditions are active. Text appears in the display area identifying the problem.
D3	Alarm	Red	Activates during a fault condition. Text appears in the display area identifying the problem.

Table 3.5 LCP Indicator Lights

**E. Operation keys and reset**

The operation keys are found toward the bottom of the local control panel.

Callout	Key	Function
E1	Hand on	Starts the drive in local control. An external stop signal by control input or serial communication overrides the local [Hand On].
E2	Off	Stops the motor but does not remove power to the drive.
E3	Reset	Resets the drive manually after a fault has been cleared.
E4	Auto on	Puts the system in remote operational mode so it can respond to an external start command by control terminals or serial communication.


Table 3.6 LCP Operation Keys and Reset

## 4 Mechanical Installation

### 4.1 Items Supplied

Items supplied can vary according to product configuration.

- Make sure that the items supplied and the information on the nameplate correspond to the order confirmation.
- Visually check the packaging and the drive for damage caused by inappropriate handling during shipment. File any claim for damage with the carrier. Retain damaged parts for clarification.

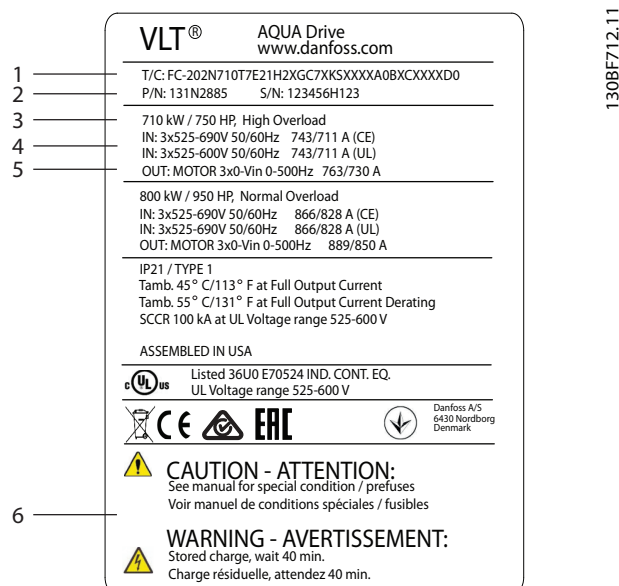

1	Type code
2	Code number
3	Power rating
4	Input voltage, frequency, and current (at low/high voltages)
5	Output voltage, frequency, and current (at low/high voltages)
6	Discharge time

Illustration 4.1 Product Nameplate for E2h Enclosure (Example)

### NOTICE

Removing the nameplate from the drive can result in the loss of warranty.

### 4.2 Tools Needed

#### Receiving/unloading

- I-beam and hooks rated to lift the weight of the drive. Refer to *chapter 3.2 Power Ratings, Weights, and Dimensions*.
- Crane or other lifting aid to place the unit into position.

#### Installation

- Drill with 10 mm or 12 mm drill bits.
- Tape measurer.
- Various sizes of Phillips and flat bladed screwdrivers.
- Wrench with relevant metric sockets (7–17 mm).
- Wrench extensions.
- Torx drives (T25 and T50).
- Sheet metal punch for conduits or cable glands.
- I-beam and hooks to lift the weight of the drive. Refer to *chapter 3.2 Power Ratings, Weights, and Dimensions*.
- Crane or other lifting aid to place the drive onto pedestal and into position.

### 4.3 Storage

Store the drive in a dry location. Keep the equipment sealed in its packaging until installation. Refer to *chapter 9.4 Ambient Conditions* for recommended ambient temperature.

Periodic forming (capacitor charging) is not necessary during storage unless storage exceeds 12 months.

## 4.4 Operating Environment

In environments with airborne liquids, particles, or corrosive gases, ensure that the IP/Type rating of the equipment matches the installation environment. For specifications regarding ambient conditions, see *chapter 9.4 Ambient Conditions*.

### NOTICE

#### CONDENSATION

Moisture can condense on the electronic components and cause short circuits. Avoid installation in areas subject to frost. Install an optional space heater when the drive is colder than the ambient air. Operating in standby mode reduces the risk of condensation as long as the power dissipation keeps the circuitry free of moisture.

### NOTICE

#### EXTREME AMBIENT CONDITIONS

Hot or cold temperatures compromise unit performance and longevity.

- Do not operate in environments where the ambient temperature exceeds 55 °C (131 °F).
- The drive can operate at temperatures down to -10 °C (14 °F). However, proper operation at rated load is only guaranteed at 0 °C (32 °F) or higher.
- If temperature exceeds ambient temperature limits, extra air conditioning of the cabinet or installation site is required.

### 4.4.1 Gases

Aggressive gases, such as hydrogen sulfide, chlorine, or ammonia can damage the electrical and mechanical components. The unit uses conformal-coated circuit boards to reduce the effects of aggressive gases. For conformal-coating class specifications and ratings, see *chapter 9.4 Ambient Conditions*.

### 4.4.2 Dust

When installing the drive in dusty environments, pay attention to the following:

#### Periodic maintenance

When dust accumulates on electronic components, it acts as a layer of insulation. This layer reduces the cooling capacity of the components, and the components become warmer. The hotter environment decreases the life of the electronic components.

Keep the heat sink and fans free from dust buildup. For more service and maintenance information, refer to *chapter 8 Maintenance, Diagnostics, and Troubleshooting*.

#### Cooling fans

Fans provide airflow to cool the drive. When fans are exposed to dusty environments, the dust can damage the fan bearings and cause premature fan failure. Also, dust can accumulate on fan blades causing an imbalance which prevents the fans from properly cooling the unit.

### 4.4.3 Potentially Explosive Atmospheres

#### ⚠ WARNING

##### EXPLOSIVE ATMOSPHERE

Do not install the drive in a potentially explosive atmosphere. Install the unit in a cabinet outside of this area. Failure to follow this guideline increases risk of death or serious injury.

Systems operated in potentially explosive atmospheres must fulfill special conditions. EU Directive 94/9/EC (ATEX 95) classifies the operation of electronic devices in potentially explosive atmospheres.

- Class d specifies that if a spark occurs, it is contained in a protected area.
- Class e prohibits any occurrence of a spark.

#### Motors with class d protection

Does not require approval. Special wiring and containment are required.

#### Motors with class e protection

When combined with an ATEX approved PTC monitoring device like the VLT® PTC Thermistor Card MCB 112, installation does not need an individual approval from an approbated organization.

#### Motors with class d/e protection

The motor itself has an e ignition protection class, while the motor cabling and connection environment is in compliance with the d classification. To attenuate the high peak voltage, use a sine-wave filter at the drive output.

**When using a drive in a potentially explosive atmosphere, use the following:**

- Motors with ignition protection class d or e.
- PTC temperature sensor to monitor the motor temperature.
- Short motor cables.
- Sine-wave output filters when shielded motor cables are not used.

## NOTICE

### MOTOR THERMISTOR SENSOR MONITORING

Drives with the VLT® PTC Thermistor Card MCB 112 option are PTB-certified for potentially explosive atmospheres.

## 4.5 Installation and Cooling Requirements

## NOTICE

Improper mounting can result in overheating and reduced performance.

### Installation requirements

- Locate the unit as near to the motor as possible. See *chapter 9.5 Cable Specifications* for the maximum motor cable length.
- Ensure unit stability by mounting the unit to a solid surface.
- Enclosures E3h and E4h can be mounted:
  - Vertically on the back plate of the panel (typical installation).
  - Vertically upside down on the back plate of the panel.<sup>1)</sup>
  - Horizontally on its back, mounted on the back plate of the panel.<sup>1)</sup>
  - Horizontally on its side, mounted on floor of the panel.<sup>1)</sup>
- Ensure that the strength of the mounting location supports the unit weight.
- Ensure that there is enough space around the unit for proper cooling. Refer to *chapter 9.9 Enclosure Airflow*.
- Ensure enough access to open the door.
- Ensure cable entry from the bottom.

1) For non-typical installation, contact the factory.

### Cooling requirements

- Ensure that top and bottom clearance for air cooling is provided. Clearance requirement: 225 mm (9 in).
- Provide sufficient airflow flow rate. See *Table 4.1*.
- Consider derating for temperatures starting between 45 °C (113 °F) and 50 °C (122 °F) and elevation 1000 m (3300 ft) above sea level. See the *design guide* for detailed information.

The drive utilizes a back-channel cooling concept that removes heat sink cooling air. The heat sink cooling air carries approximately 90% of the heat out of the back channel of the drive. Redirect the back-channel air from the panel or room by using:

- **Duct cooling**  
Back-channel cooling kits are available to direct the heat sink cooling air out of the panel when IP20/Chassis drives are installed in Rittal enclosures. These kits reduce the heat in the panel and smaller door fans can be specified.
- **Back-wall cooling**  
Installing top and base covers to the unit allows the back-channel cooling air to be ventilated out of the room.

## NOTICE

For E3h and E4h enclosures (IP20/Chassis), at least 1 door fan is required on the enclosure to remove the heat not contained in the back-channel of the drive. It also removes any additional losses generated by other components inside the drive. To select the appropriate fan size, calculate the total required airflow.

Secure the necessary airflow over the heat sink.

Frame	Door fan/top fan [m³/hr (cfm)]	Heat sink fan [m³/hr (cfm)]
E1h51h	510 (300)	994 (585)
E2h	552 (325)	1053–1206 (620–710)
E3h	595 (350)	994 (585)
E4h	629 (370)	1053–1206 (620–710)

Table 4.1 Airflow Rate

## 4.6 Lifting the Unit

Always lift the drive using the dedicated lifting eyes. To avoid bending the lifting holes, use a bar.

## WARNING

### RISK OF INJURY OR DEATH

Follow local safety regulations for lifting heavy weights. Failure to follow recommendations and local safety regulations can result in death or serious injury.

- Ensure that the lifting equipment is in proper working condition.
- See *chapter 3.2 Power Ratings, Weights, and Dimensions* for the weight of the different enclosure sizes.
- Maximum diameter for bar: 20 mm (0.8 in).
- The angle from the top of the drive to the lifting cable: 60° or greater.

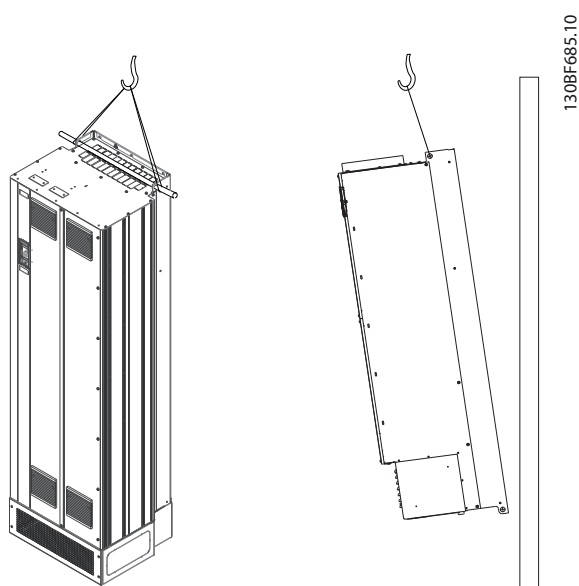


Illustration 4.2 Recommended Lifting Method

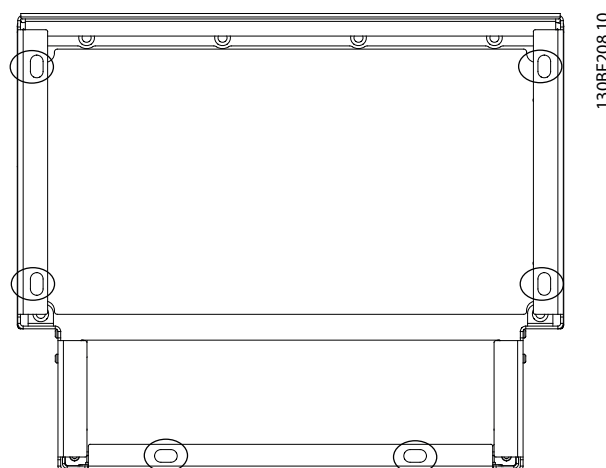


Illustration 4.3 Pedestal to Floor Mounting Points

## 4.7 E1h/E2h Mechanical Installation

The E1h and E2h enclosure size is intended only for floor installation, and is shipped with a pedestal and a gland plate. The pedestal and gland plate must be installed for proper installation.

The pedestal is 200 mm (7.9 in) and has an opening in the front to allow airflow necessary to cool the power components of the drive.

The gland plate is necessary to provide cooling air to the control components of the drive via the door fan, and to maintain the IP21/Type 1 or IP54/Type 12 protection rating.


### 4.7.1 Securing the Pedestal to the Floor

The pedestal must be secured to the floor using 6 bolts before installing the enclosure.

1. Determine proper placement of the unit, concerning operating conditions and cable access.
2. Access the mounting holes by removing the front panel of the pedestal.
3. Set the pedestal on the floor and secure using 6 bolts through the mounting holes. Refer to the circled areas in *Illustration 4.3*.


### 4.7.2 Attaching the E1h/E2h to the Pedestal

1. Lift the drive and position it on the pedestal. There are 2 bolts in the rear of the pedestal that slide into the 2 slotted holes in the rear of the enclosure. Position the drive by adjusting the bolts up or down. Loosely secure with 2 M10 nuts and locking brackets. See *Illustration 4.4*.
2. Verify that there is 225 mm (9 in) top clearance for air exhaust.
3. Verify that the air intake at the bottom front of the unit is not obstructed.
4. Around the top of the pedestal, secure the enclosure using 6 M10x30 fasteners. Refer to *Illustration 4.5*. Loosely tighten each bolt until all bolts are installed.
5. Fasten each bolt securely and torque to 19 Nm (169 in-lb).
6. Torque the 2 M10 nuts at the rear of the enclosure to 19 Nm (169 in-lb).

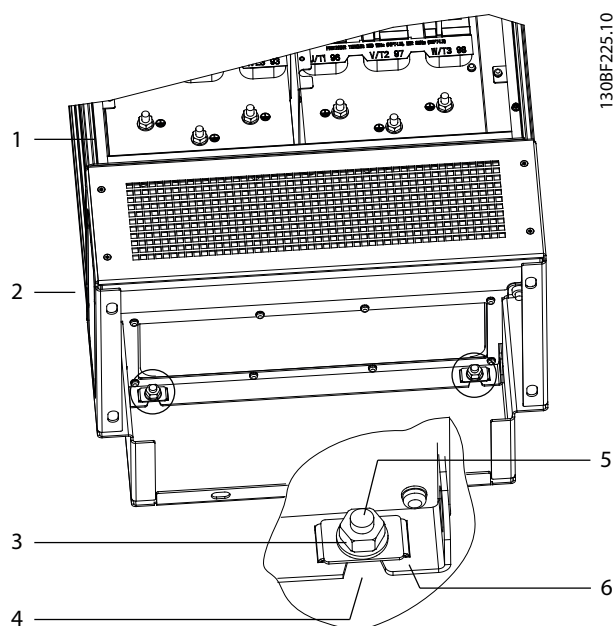

1	Enclosure	4	Slotted hole in enclosure
2	Pedestal	5	Bolt at rear of pedestal
3	M10 nut	6	Locking bracket

Illustration 4.4 Pedestal to Enclosure Back Mounting Points

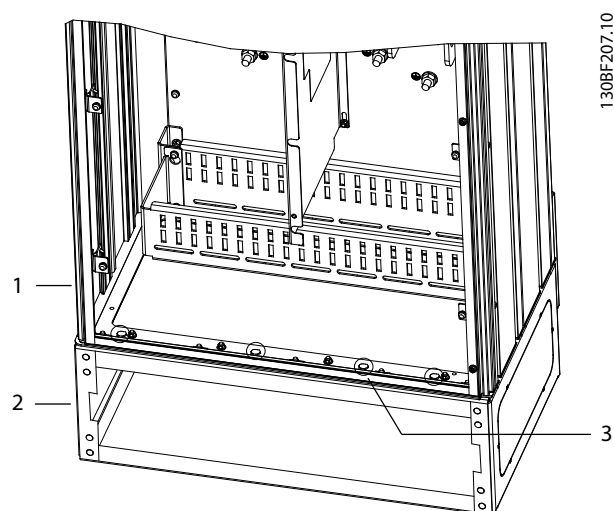

1	Enclosure	3	M10x30 fasteners (rear corner bolts not shown)
2	Pedestal	–	–


Illustration 4.5 Pedestal to Enclosure Mounting Points

### 4.7.3 Creating Cable Openings

The gland plate is a sheet of metal with studs along the outer edge. The gland plate provides cable entry and cable termination points, and must be installed to maintain the IP21/IP54 (Type 1/Type 12) protection rating. The plate is placed between the drive enclosure and the pedestal. Depending on stud orientation, the plate can be installed from inside the enclosure or the pedestal. For gland plate dimensions, see chapter 9.8.1 *E1h Exterior Dimensions*.

Refer to *Illustration 4.6* for the following steps.

1. Create cable entry holes in the gland plate using a sheet metal punch.
2. Insert the gland plate using 1 of the following methods:
  - 2a To insert the gland plate through the pedestal, slide the gland plate through the slot (4) in the front of the pedestal.
  - 2b To insert the gland plate through the enclosure, angle the gland plate until it can be slid under the slotted brackets.
3. Align the studs on the gland plate to the holes in the pedestal and secure with 10 M5 nuts (2).
4. Torque each nut to 2.3 Nm (20 in-lb).

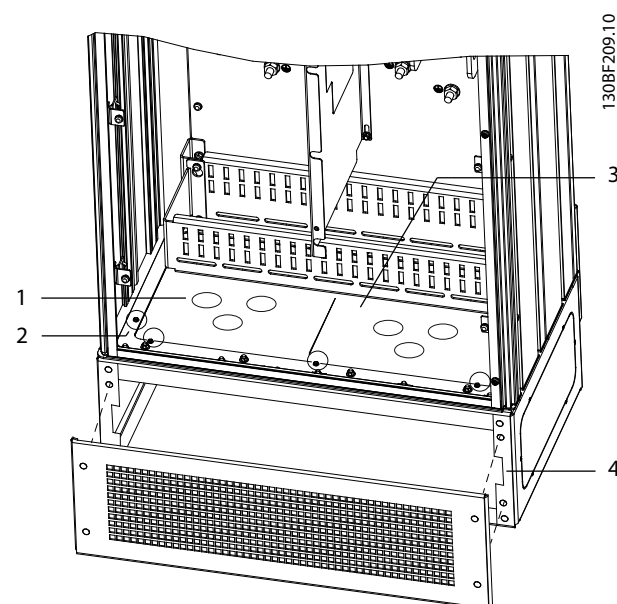

1	Cable entry hole	4	Slot in pedestal base
2	M5 nut	5	Front cover/grill
3	Gland plate	–	–

Illustration 4.6 Installing the Gland Plate

## 4.8 E3h/E4h Mechanical Installation

The E3h and E4h enclosure sizes are intended to be mounted on a wall or on a mounting panel within an enclosure. A plastic gland plate is installed on the enclosure. It is designed to prevent unintentional access to the terminals in an IP20/protected chassis unit.

### NOTICE

#### REGENERATION/LOAD SHARE OPTION

Due to the exposed terminals at the top of the enclosure, units with the regeneration/load share option have an IP00 protection rating.

### 4.8.1 Attaching the E3h/E4h to a Mounting Plate or Wall


1. Drill the mounting holes according to the enclosure size. Refer to *chapter 9.8 Enclosure Dimensions*.
2. Secure the top of the drive enclosure to the mounting plate or wall.
3. Secure the base of the drive enclosure to the mounting plate or wall.

### 4.8.2 Creating Cable Openings

The gland plate covers the bottom part of the drive enclosure and must be installed to maintain the IP20/Chassis protection rating. The gland plate consists of plastic squares that can be cut out to provide cable access to the terminals. See *Illustration 4.7*.

1. Remove the bottom panel and terminal cover. See *Illustration 4.8*.
  - 1a Detach the bottom panel by removing 4 T25 screws.
  - 1b Remove 5 T20 screws that secure the bottom of the drive to the top of the terminal cover, and then pull the terminal cover straight out.
2. Determine the size and position of the motor, mains, and ground cables. Note their position and measurements.

3. Based on the measurement and positions of the cables, create openings in the plastic gland plate by cutting out the necessary squares.
4. Slide the plastic gland plate (7) onto the bottom rails of the terminal cover.
5. Tilt the front of the terminal cover downward until the fastener points (8) rest on the slotted drive brackets (6).
6. Make sure the side panels of the terminal cover are on the outside track guide (5).
7. Push the terminal cover until it is up against the slotted drive bracket.
8. Tilt the front of the terminal cover upward until the fastener hole in the bottom of the drive aligns with the keyhole opening (9) in the terminal. Secure with 2 T25 screws and torque to 2.3 Nm (20 in-lb).
9. Secure the bottom panel with 3 T25 screws and torque to 2.3 Nm (20 in-lb).

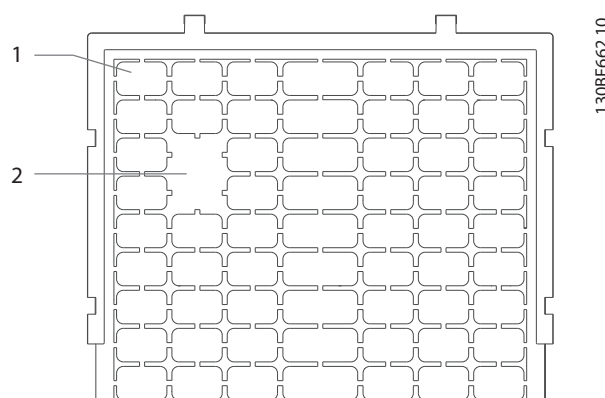


1	Plastic square
2	Squares removed for cable access

Illustration 4.7 Plastic Gland Plate

4

130BF688.10

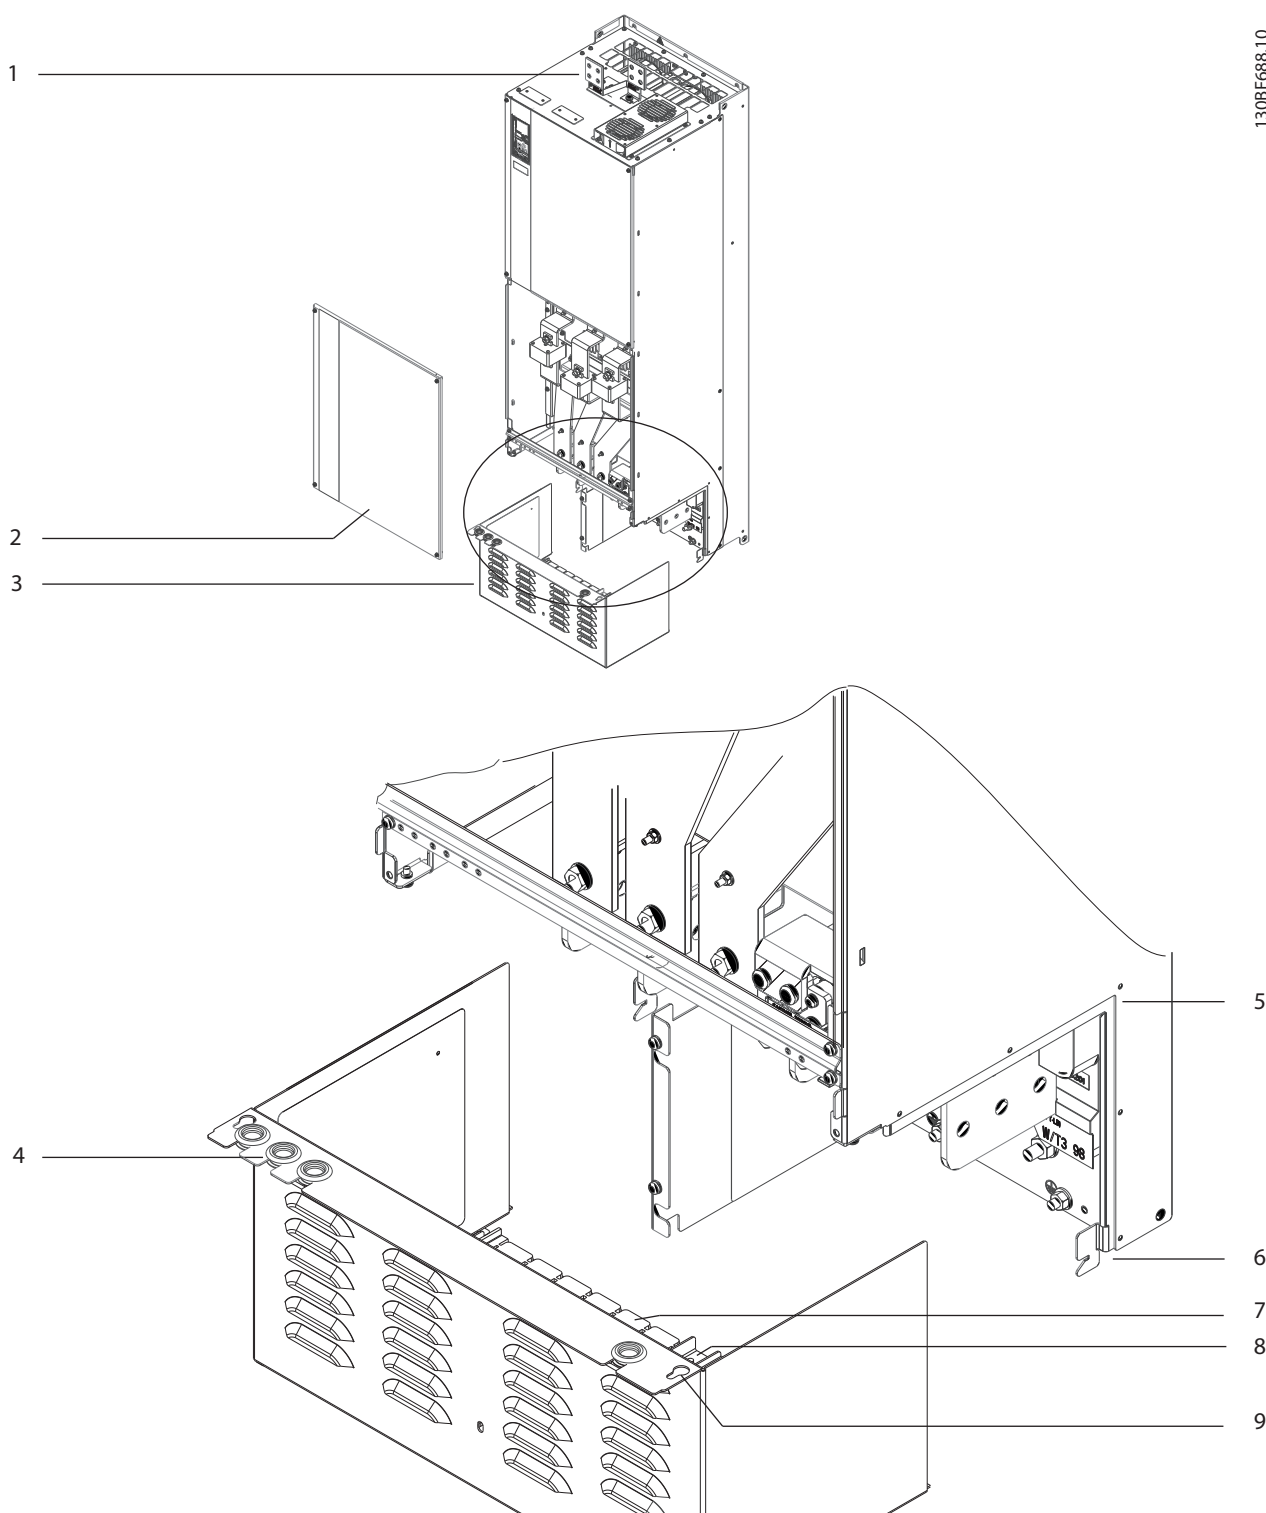


1	Load share/regeneration terminals (optional)	6	Slotted drive bracket
2	Bottom panel	7	Plastic gland plate (installed)
3	Terminal cover	8	Fastener point
4	Grommet access hole for control wiring	9	Keyhole opening
5	Track guide	-	-

Illustration 4.8 Assembling the Gland Plate and Terminal Cover



### 4.8.3 Installing Load share/Regeneration Terminals

The load share/regeneration terminals, located on the top of the drive, are not installed from the factory to prevent damage during shipping. Refer to *Illustration 4.9* for the following steps.

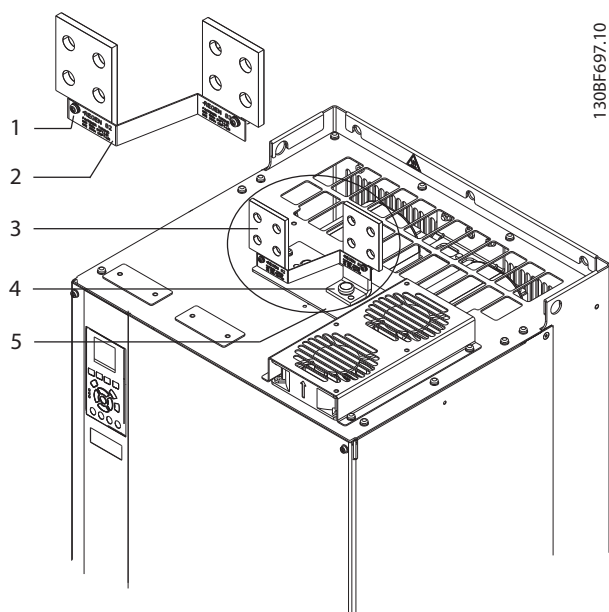

1	Label fastener, M4
2	Label
3	Load share/regeneration terminal
4	Terminal fastener, M10
5	Terminal plate with 2 openings

**Illustration 4.9 Load share/Regeneration Terminals**

1. Remove the terminal plate, 2 terminals, label, and fasteners from the accessory bag included with the drive.
2. Remove the cover from the load share/regeneration opening on the top of the drive. Put aside the 2 M5 fasteners for reuse later.
3. Remove the plastic backing and install the terminal plate over the load share/regeneration opening. Secure with the 2 M5 fasteners and torque to 2.3 Nm (20 in-lb).
4. Install both terminals to the terminal plate using 1 M10 fastener per terminal. Torque to 19 Nm (169 in-lb).
5. Install the label on the front of the terminals as shown in *Illustration 4.9*. Secure with 2 M4 screws and torque to 1.2 Nm (10 in-lb).

## 5 Electrical Installation

### 5.1 Safety Instructions

See *chapter 2 Safety* for general safety instructions.

#### **⚠ WARNING**

##### INDUCED VOLTAGE

Induced voltage from output motor cables from different drives that are run together can charge equipment capacitors even with the equipment turned off and locked out. Failure to run output motor cables separately or use shielded cables could result in death or serious injury.

- Run output motor cables separately or use shielded cables.
- Simultaneously lock out all the drives.

#### **⚠ WARNING**

##### SHOCK HAZARD

The drive can cause a DC current in the ground conductor and thus result in death or serious injury.

- When a residual current-operated protective device (RCD) is used for protection against electrical shock, only an RCD of Type B is allowed on the supply side.

Failure to follow the recommendation means that the RCD cannot provide the intended protection.

##### Overcurrent protection

- Additional protective equipment such as short-circuit protection or motor thermal protection between drive and motor is required for applications with multiple motors.
- Input fusing is required to provide short circuit and overcurrent protection. If fuses are not factory-supplied, the installer must provide them. See maximum fuse ratings in *chapter 9.7 Fuses*.

##### Wire type and ratings

- All wiring must comply with local and national regulations regarding cross-section and ambient temperature requirements.
- Power connection wire recommendation: Minimum 75 °C (167 °F) rated copper wire.

See *chapter 9.5.1 Cable Specifications* for recommended wire sizes and types.

#### **⚠ CAUTION**

##### PROPERTY DAMAGE

Protection against motor overload is not included in the default setting. To add this function, set *parameter 1-90 Motor Thermal Protection* to [ETR trip] or [ETR warning]. For the North American market, the ETR function provides class 20 motor overload protection in accordance with NEC. Failure to set *parameter 1-90 Motor Thermal Protection* to [ETR trip] or [ETR warning] means that motor overload protection is not provided and, if the motor overheats, property damage can occur.

### 5.2 EMC-compliant Installation

To obtain an EMC-compliant installation, follow the instructions provided in:

- *Chapter 5.3 Wiring Schematic.*
- *Chapter 5.4 Connecting the Motor.*
- *Chapter 5.6 Connecting to Ground.*
- *Chapter 5.8 Control Wiring.*

#### **NOTICE**

##### TWISTED SHIELD ENDS (PIGTAILS)

Twisted shield ends (pigtailed) increase the shield impedance at higher frequencies, reducing the shield effect and increasing the leakage current. Avoid twisted shield ends by using integrated shield clamps.

- For use with relays, control cables, a signal interface, fieldbus, or brake, connect the shield to the enclosure at both ends. If the ground path has high impedance, is noisy, or is carrying current, break the shield connection on 1 end to avoid ground current loops.
- Convey the currents back to the unit using a metal mounting plate. Ensure good electrical contact from the mounting plate through the mounting screws to the drive chassis.
- Use shielded cables for motor output cables. An alternative is unshielded motor cables within metal conduit.

**NOTICE****SHIELDED CABLES**

If shielded cables or metal conduits are not used, the unit and the installation do not meet regulatory limits on radio frequency (RF) emission levels.

- Ensure that motor and brake cables are as short as possible to reduce the interference level from the entire system.
- Avoid placing cables with a sensitive signal level alongside motor and brake cables.
- For communication and command/control lines, follow the particular communication protocol standards. For example, USB must use shielded cables, but RS485/ethernet can use shielded UTP or unshielded UTP cables.
- Ensure that all control terminal connections are PELV.

**NOTICE****EMC INTERFERENCE**

Use shielded cables for motor and control wiring, and separate cables for mains input, motor wiring, and control wiring. Failure to isolate power, motor, and control cables can result in unintended behavior or reduced performance. Minimum 200 mm (7.9 in) clearance between mains input, motor, and control cables are required.

**NOTICE****INSTALLATION AT HIGH ALTITUDE**


There is a risk for overvoltage. Isolation between components and critical parts could be insufficient, and not comply with PELV requirements. Reduce the risk for overvoltage by using external protective devices or galvanic isolation.

For installations above 2000 m (6500 ft) altitude, contact Danfoss regarding PELV compliance.

**NOTICE****PELV COMPLIANCE**

Prevent electric shock by using protective extra low voltage (PELV) electrical supply and complying with local and national PELV regulations.

5

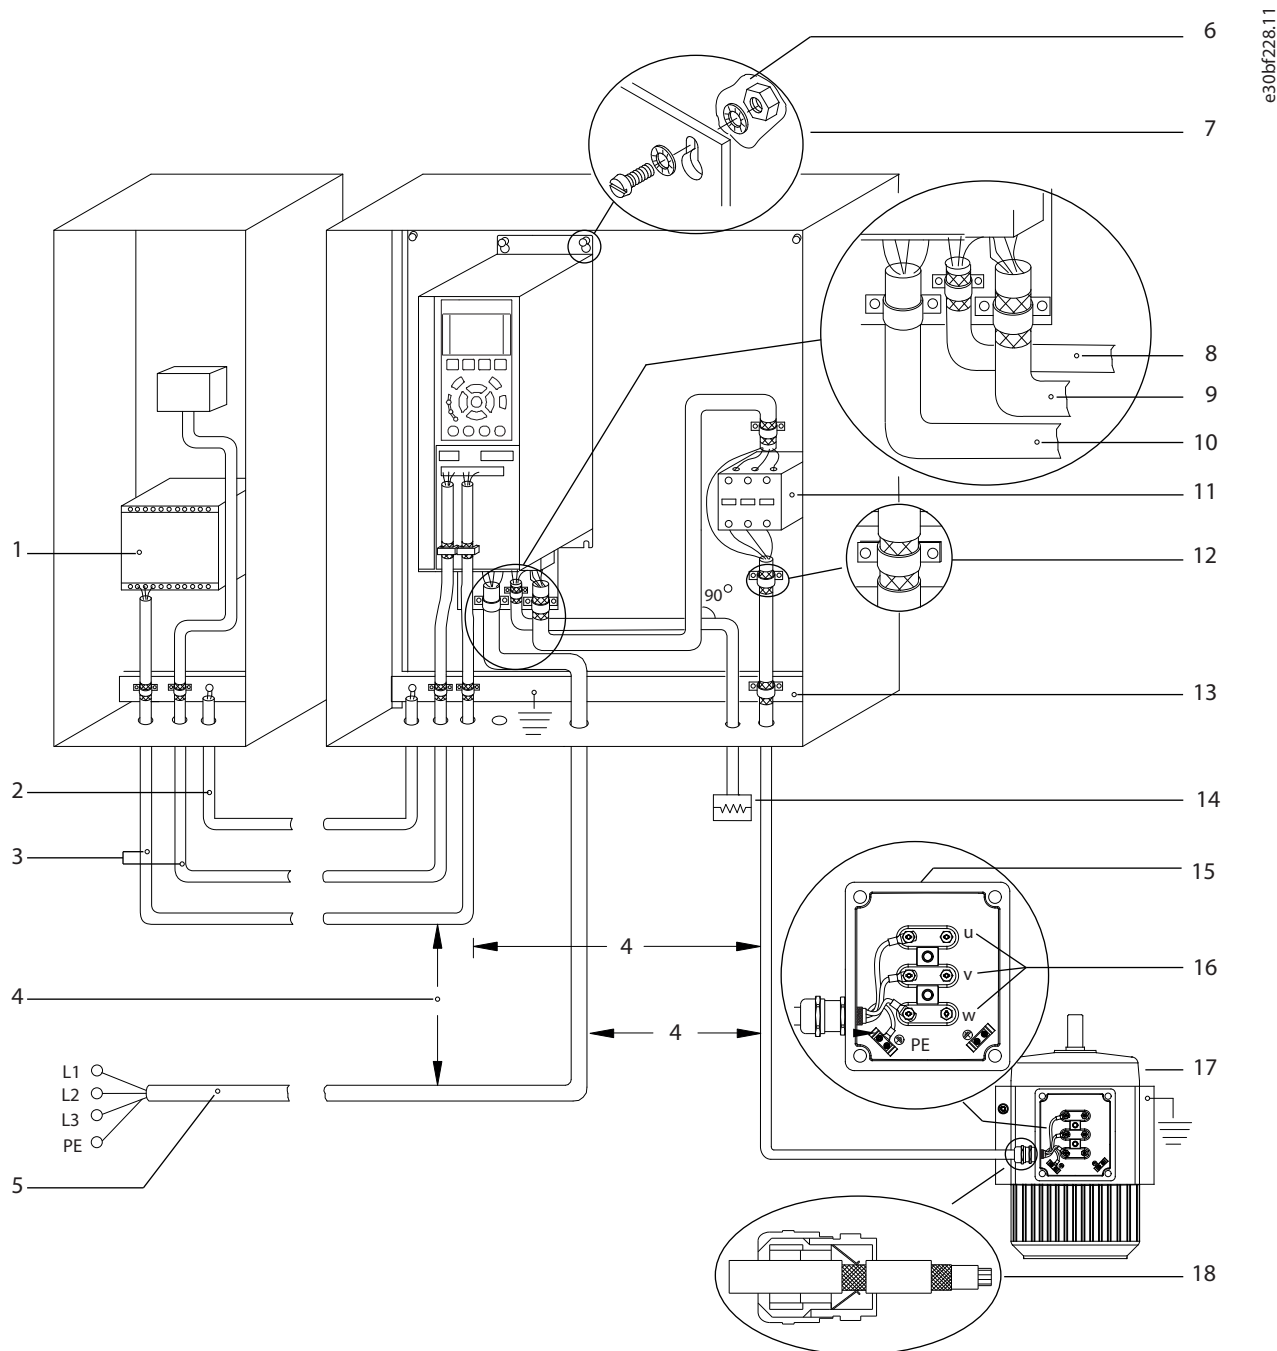

e30bf228.11

1	PLC	10	Mains cable (unshielded)
2	Minimum 16 mm <sup>2</sup> (6 AWG) equalizing cable	11	Output contactor and similar options
3	Control cables	12	Cable insulation stripped
4	Required minimum separation of 200 mm (7.9 in) between control cables, motor cables, and mains cables	13	Common ground busbar (Follow local and national requirements for enclosure grounding)
5	Mains supply	14	Brake resistor
6	Bare (unpainted) surface	15	Metal box
7	Star washers	16	Connection to motor
8	Brake cable (shielded)	17	Motor
9	Motor cable (shielded)	18	EMC cable gland

Illustration 5.1 Example of Proper EMC Installation

e30bg483.10



1) Terminal 37 (optional) is used for Safe Torque Off. Refer to the VLT® FC Series - Safe Torque Off Operating Guide for installation instructions.

## 5.4 Connecting the Motor

### WARNING

#### INDUCED VOLTAGE

Induced voltage from output motor cables that run together can charge equipment capacitors, even with the equipment turned off and locked out. Failure to run output motor cables separately or use shielded cables could result in death or serious injury.

- Comply with local and national electrical codes for cable sizes. For maximum wire sizes, see *chapter 9.1 Electrical Data*.
- Follow motor manufacturer wiring requirements.
- Motor wiring knockouts or access panels are provided on the pedestal of IP21/IP54 (Type 1/Type 12) units.
- Do not wire a starting or pole-changing device (for example Dahlander motor or slip ring asynchronous motor) between the drive and the motor.

#### Procedure

1. Strip a section of the outer cable insulation.
2. Establish mechanical fixation and electrical contact between the cable shield and ground by positioning the stripped wire under the cable clamp.
3. Connect the ground wire to the nearest grounding terminal in accordance with the grounding instructions provided in *chapter 5.6 Connecting to Ground*.
4. Connect the 3-phase motor wiring to terminals 96 (U), 97 (V), and 98 (W), see *Illustration 5.3*.
5. Tighten the terminals in accordance with the information provided in *chapter 9.10.1 Fastener Torque Ratings*.

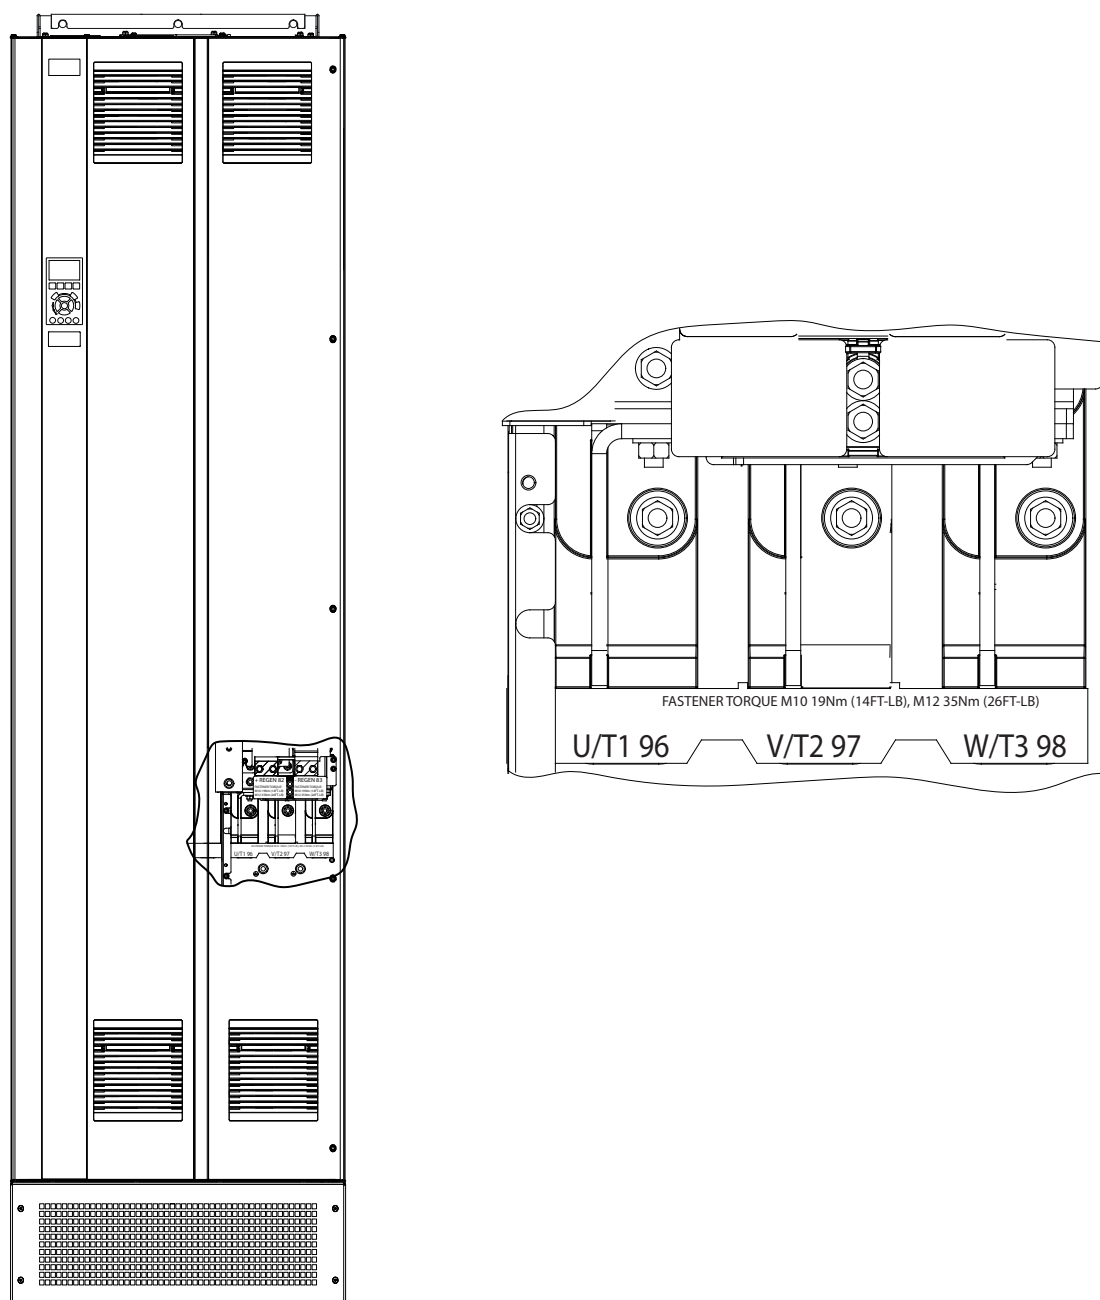


Illustration 5.3 AC motor terminals (E1h shown). For a detailed view of terminals, refer to *chapter 5.7 Terminal Dimensions*.

## 5.5 Connecting the AC Mains

- Size the wiring according to the input current of the drive. For maximum wire sizes, see *chapter 9.1 Electrical Data*.
- Comply with local and national electrical codes for cable sizes.

### Procedure

1. Strip a section of the outer cable insulation.
2. Establish mechanical fixation and electrical contact between the cable shield and ground by positioning the stripped wire under the cable clamp.
3. Connect the ground wire to the nearest grounding terminal in accordance with the grounding instructions provided in *chapter 5.6 Connecting to Ground*.
4. Connect the 3-phase AC input power wiring to terminals R, S, and T (see *Illustration 5.4*).
5. Tighten the terminals in accordance with the information provided in *chapter 9.10.1 Fastener Torque Ratings*.
6. When supplied from an isolated mains source (IT mains or floating delta) or TT/TN-S mains with a grounded leg (grounded delta), ensure that *parameter 14-50 RFI Filter* is set to [0] Off to avoid damage to the DC link and to reduce ground capacity currents.

### **NOTICE**

#### OUTPUT CONTACTOR

Danfoss does not recommend using an output contactor on 525–690 V drives that are connected to an IT mains network.



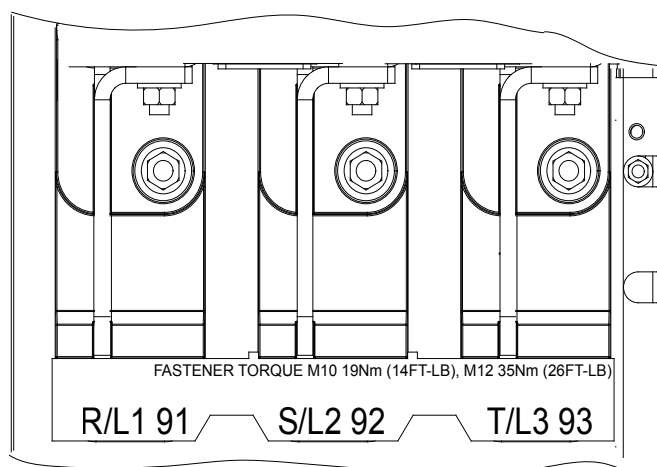
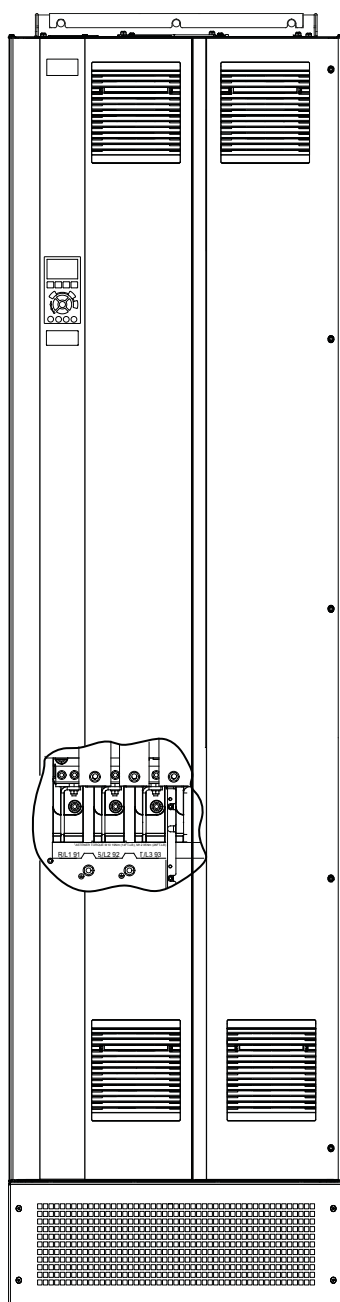


Illustration 5.4 AC mains terminals (E1h shown). For a detailed view of terminals, refer to *chapter 5.7 Terminal Dimensions*.

## 5.6 Connecting to Ground

### **⚠ WARNING**

#### **LEAKAGE CURRENT HAZARD**

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

#### **For electrical safety**

- Ground the drive in accordance with applicable standards and directives.
- Use a dedicated ground wire for input power, motor power, and control wiring.
- Do not ground 1 drive to another in a daisy chain fashion.
- Keep the ground wire connections as short as possible.
- Follow motor manufacturer wiring requirements.
- Minimum cable cross-section: 10 mm<sup>2</sup> (6 AWG) (or 2 rated ground wires terminated separately).
- Tighten the terminals in accordance with the information provided in *chapter 9.10.1 Fastener Torque Ratings*.

#### **For EMC-compliant installation**

- Establish electrical contact between the cable shield and the drive enclosure by using metal cable glands or by using the clamps provided on the equipment.
- Reduce burst transient by using high-strand wire.
- Do not use pigtails.

### **NOTICE**

#### **POTENTIAL EQUALIZATION**

There is a risk of burst transient when the ground potential between the drive and the control system is different. Install equalizing cables between the system components. Recommended cable cross-section: 16 mm<sup>2</sup> (5 AWG).


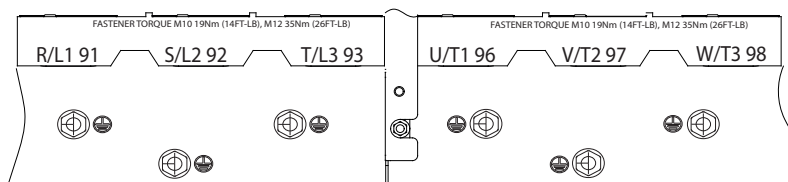


Illustration 5.5 Ground terminals (E1h shown). For a detailed view of terminals, refer to *chapter 5.7 Terminal Dimensions*.

### 5.7.1 E1h Terminal Dimensions

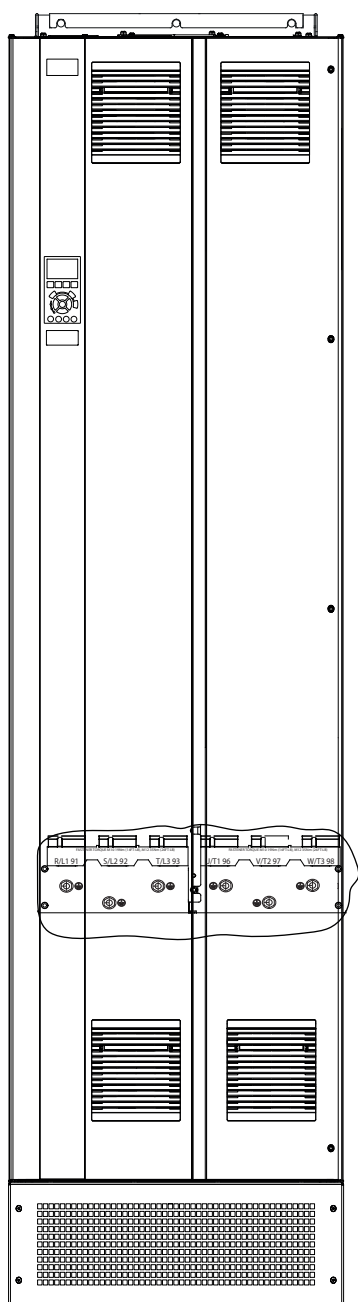

### Illustration 5.6 E1h Terminal Dimensions (Front View)


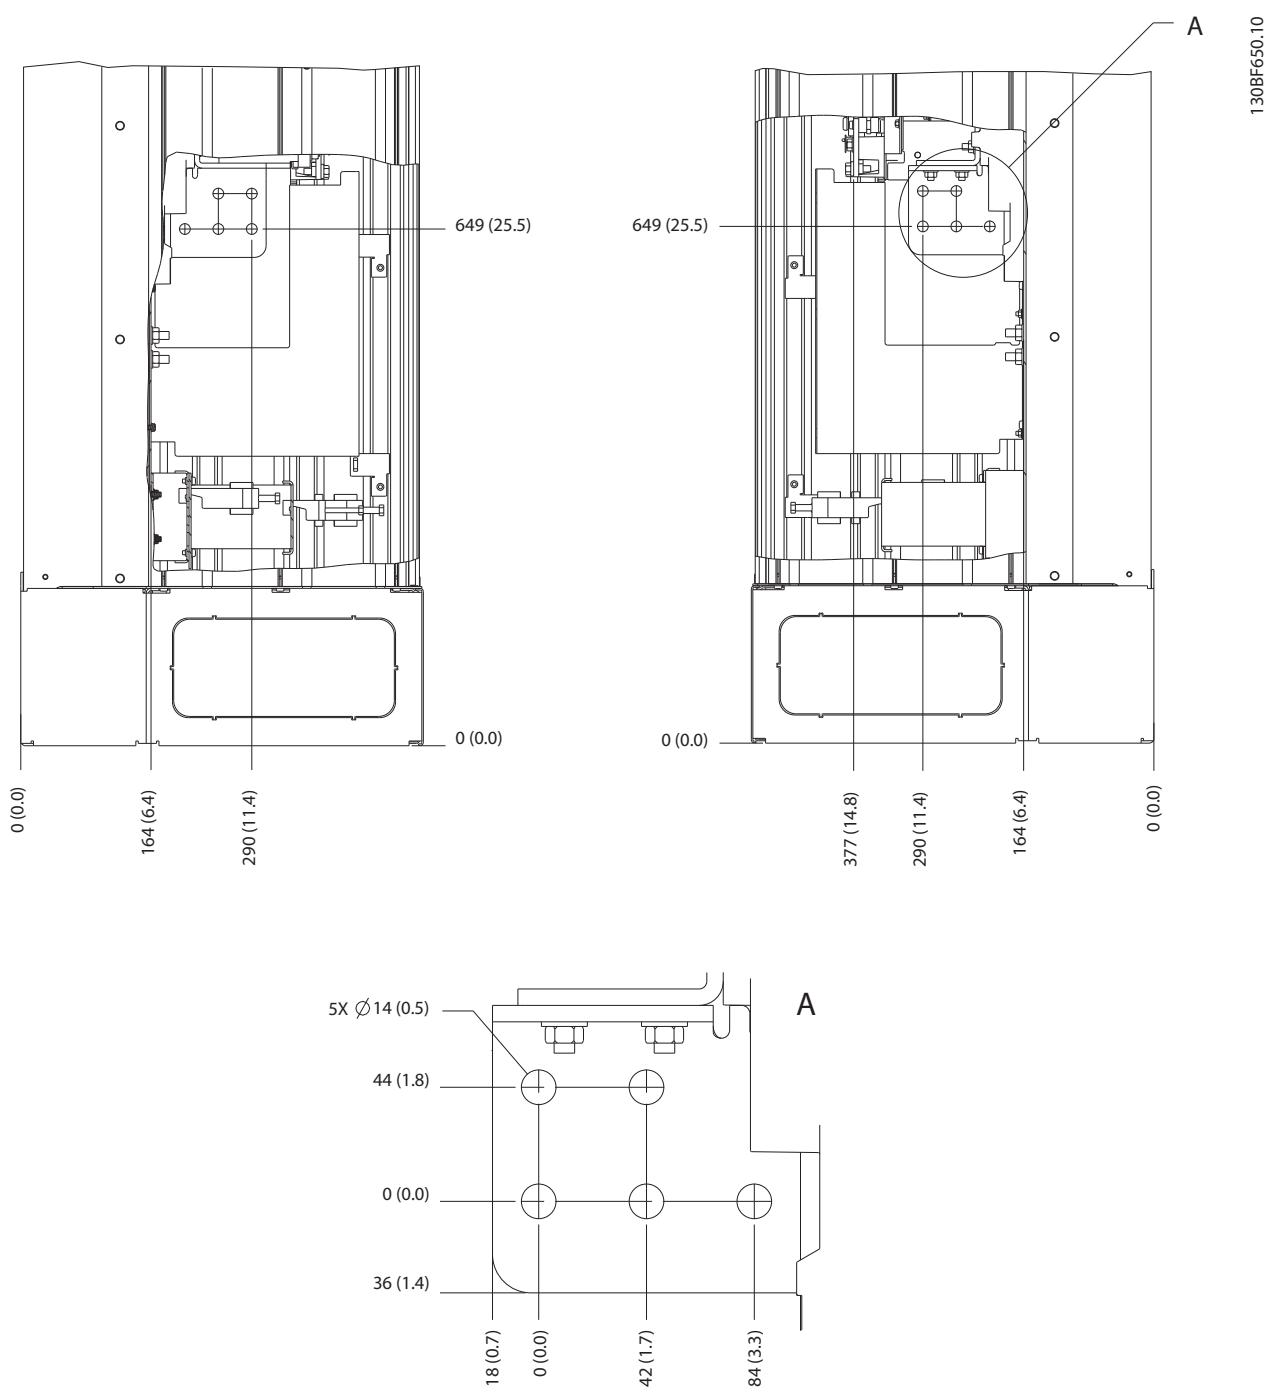



Illustration 5.7 E1h Terminal Dimensions (Side Views)

## 5.7.2 E2h Terminal Dimensions

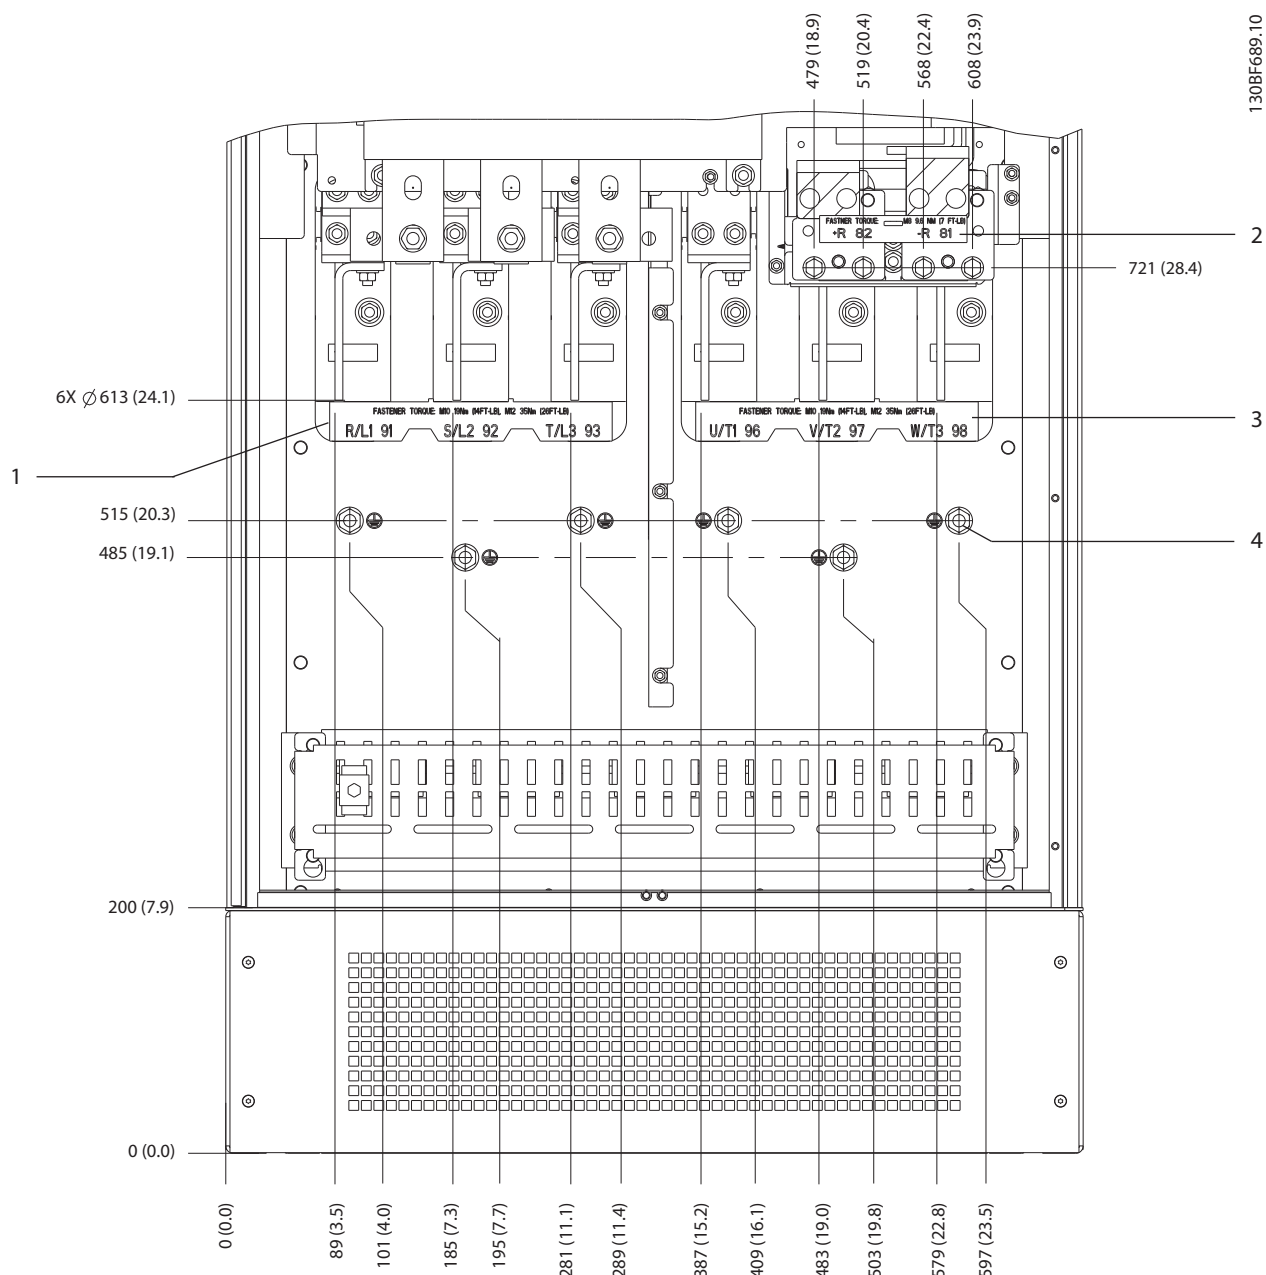

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M10 nut


Illustration 5.8 E2h Terminal Dimensions (Front View)

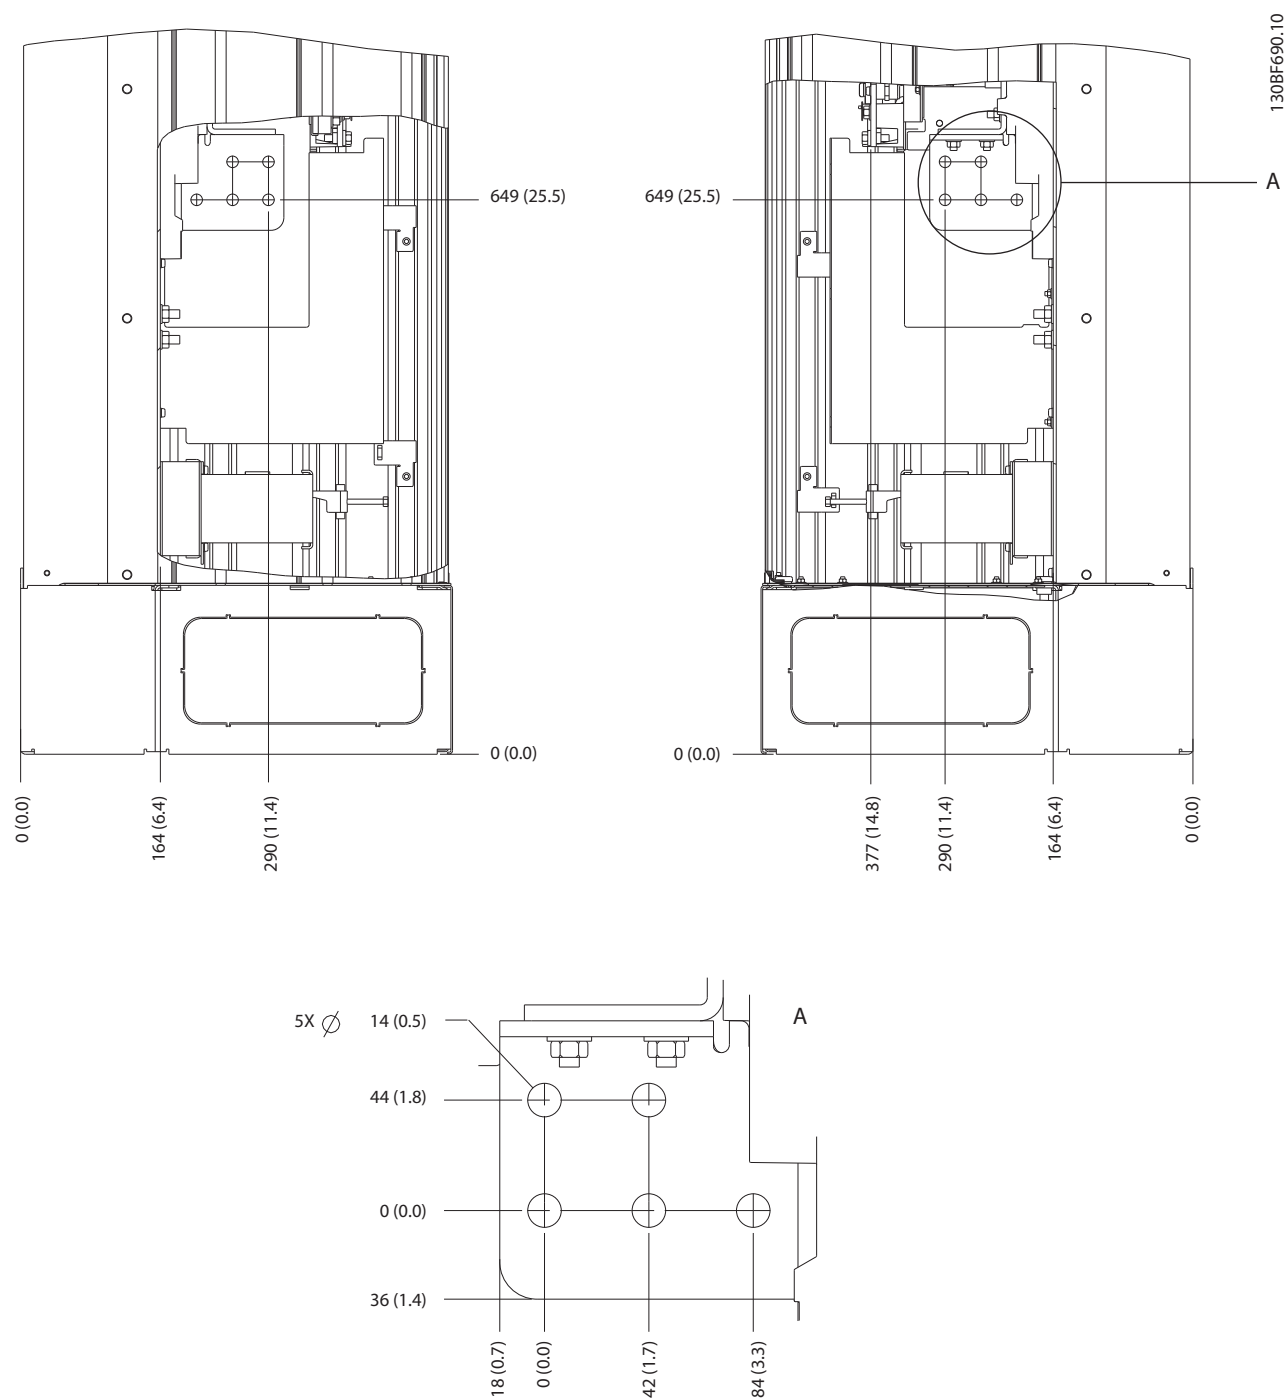

5

Illustration 5.9 E2h Terminal Dimensions (Side Views)

### 5.7.3 E3h Terminal Dimensions

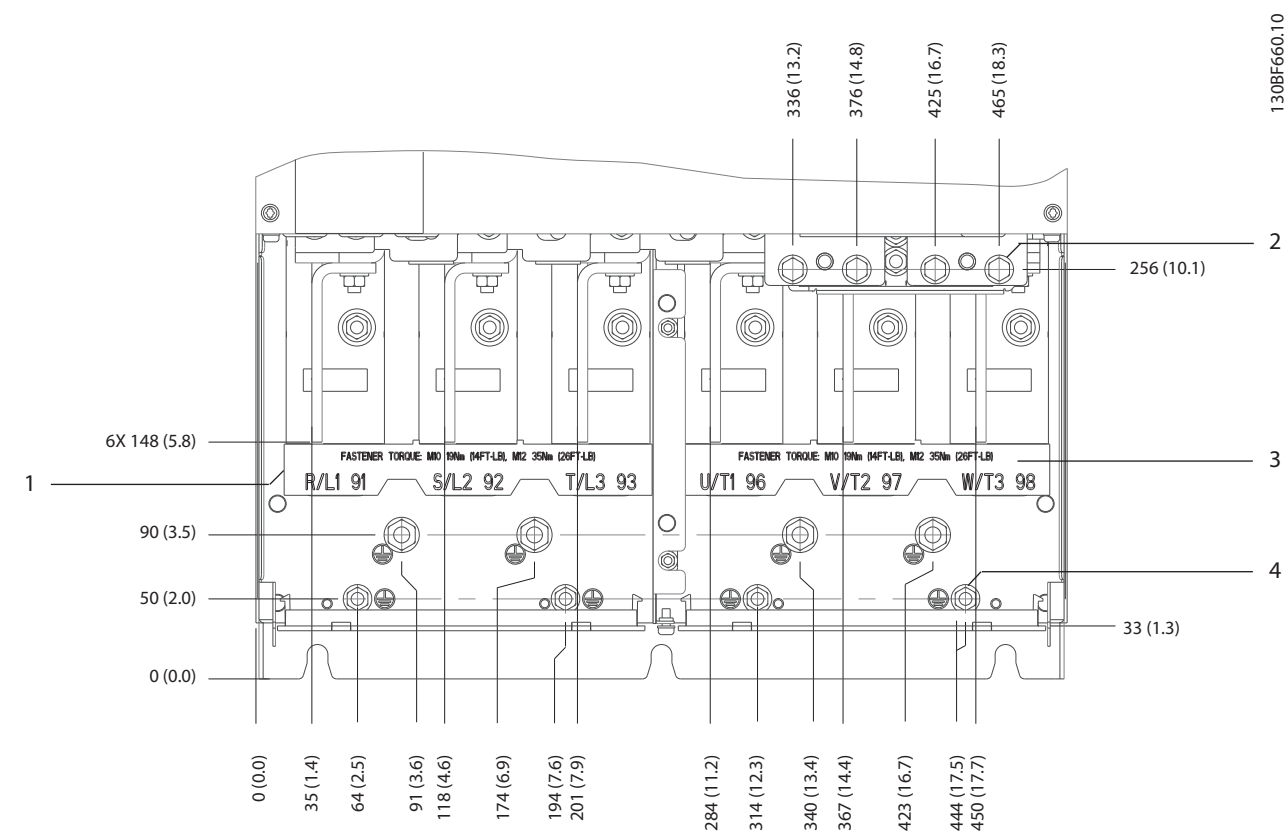

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M8 and M10 nuts

Illustration 5.10 E3h Terminal Dimensions (Front View)



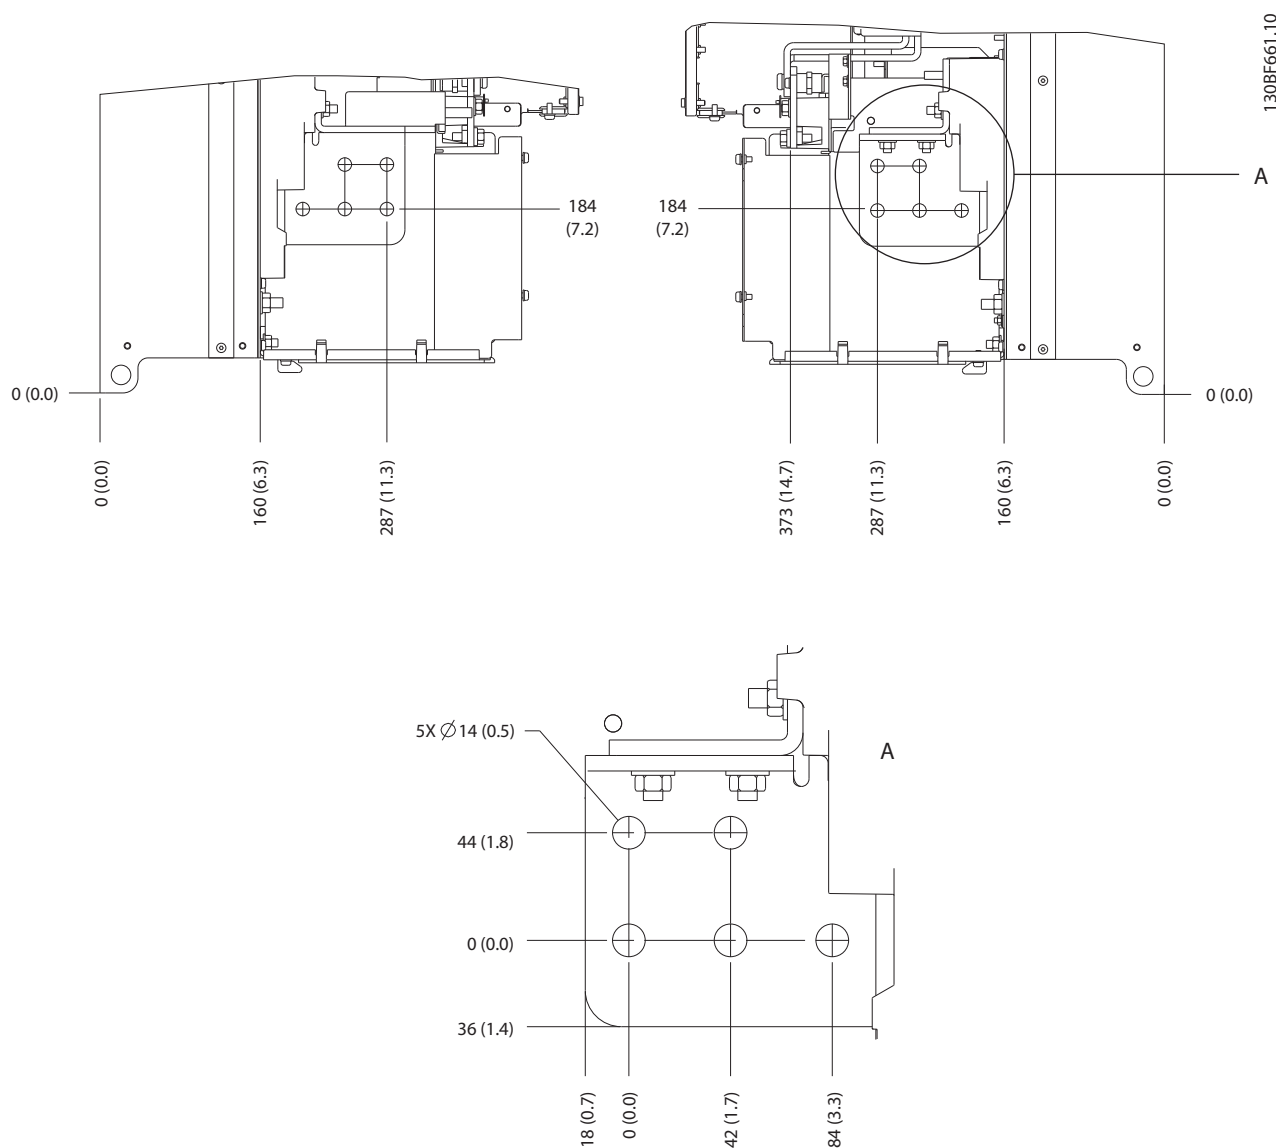


Illustration 5.11 E3h Mains, Motor, and Ground Terminal Dimensions (Side Views)

5



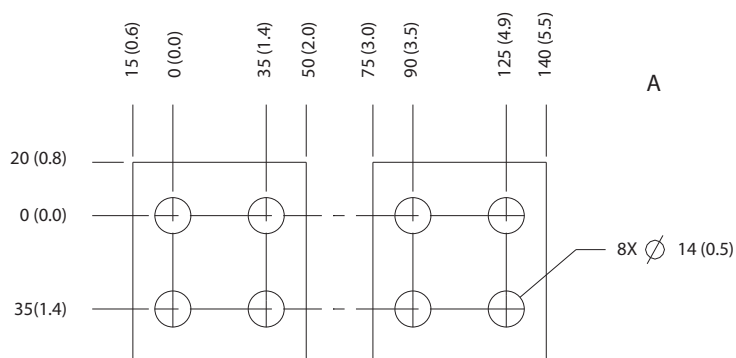


Illustration 5.12 E3h Load Share/Regeneration Terminal Dimensions

## 5.7.4 E4h Terminal Dimensions

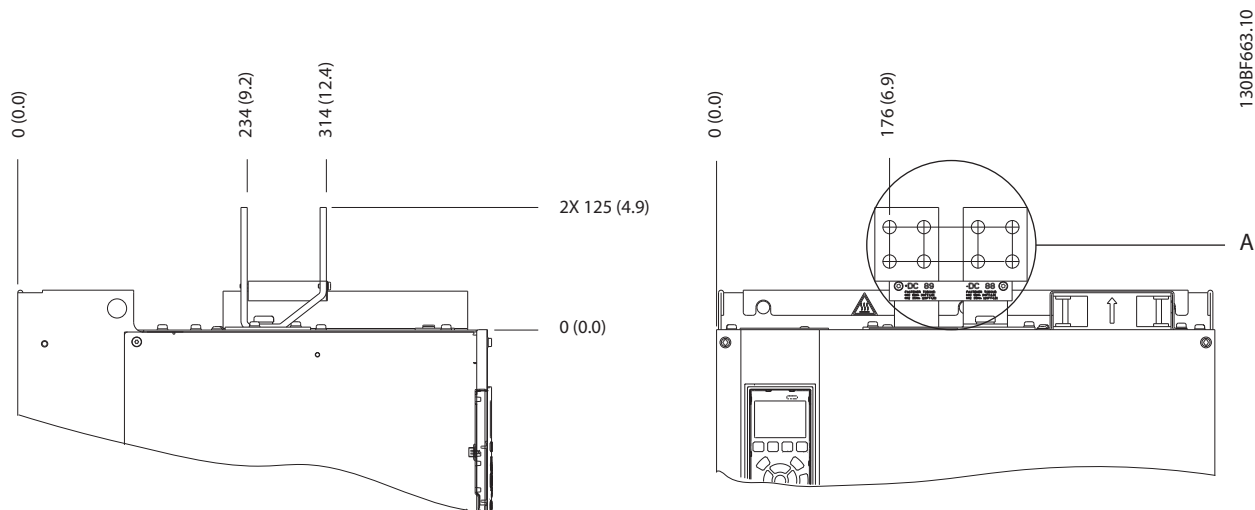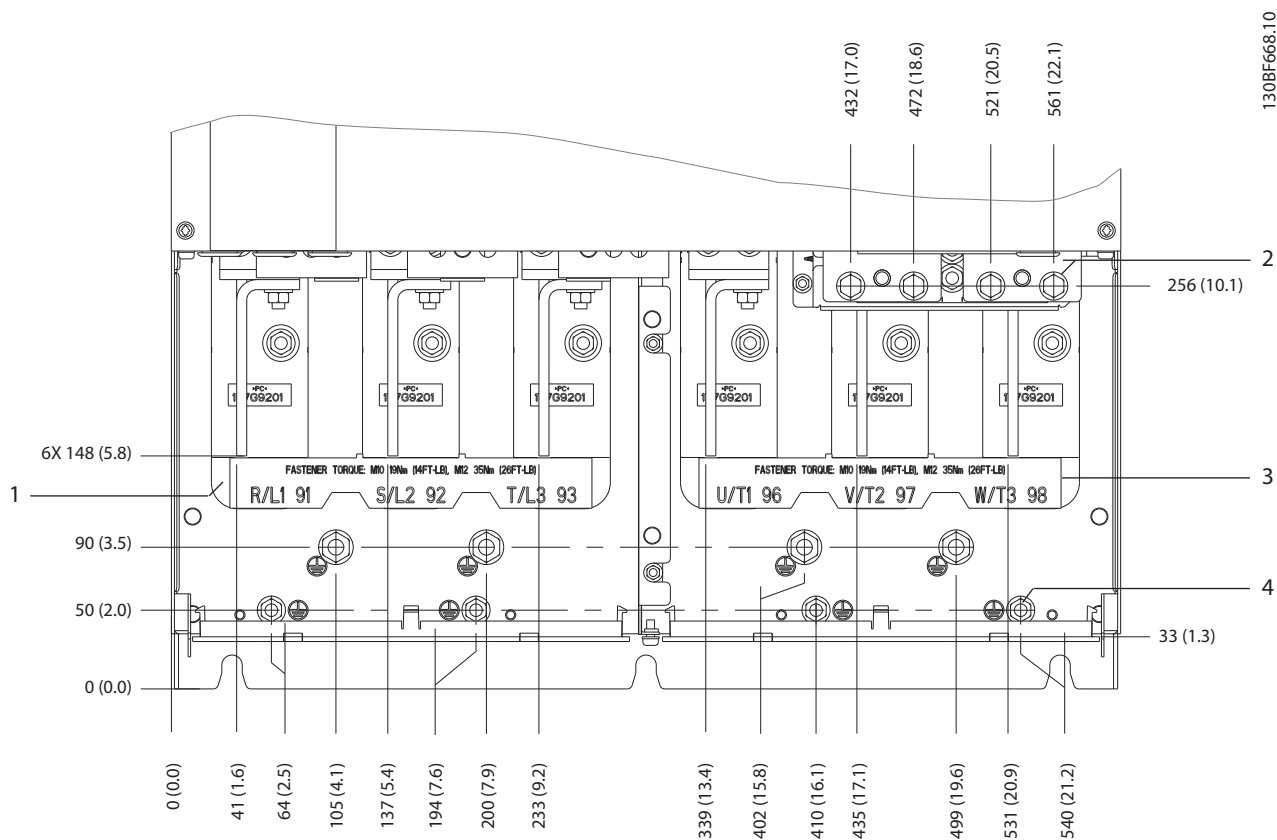

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M8 and M10 nuts

Illustration 5.13 E4h Terminal Dimensions (Front View)

5


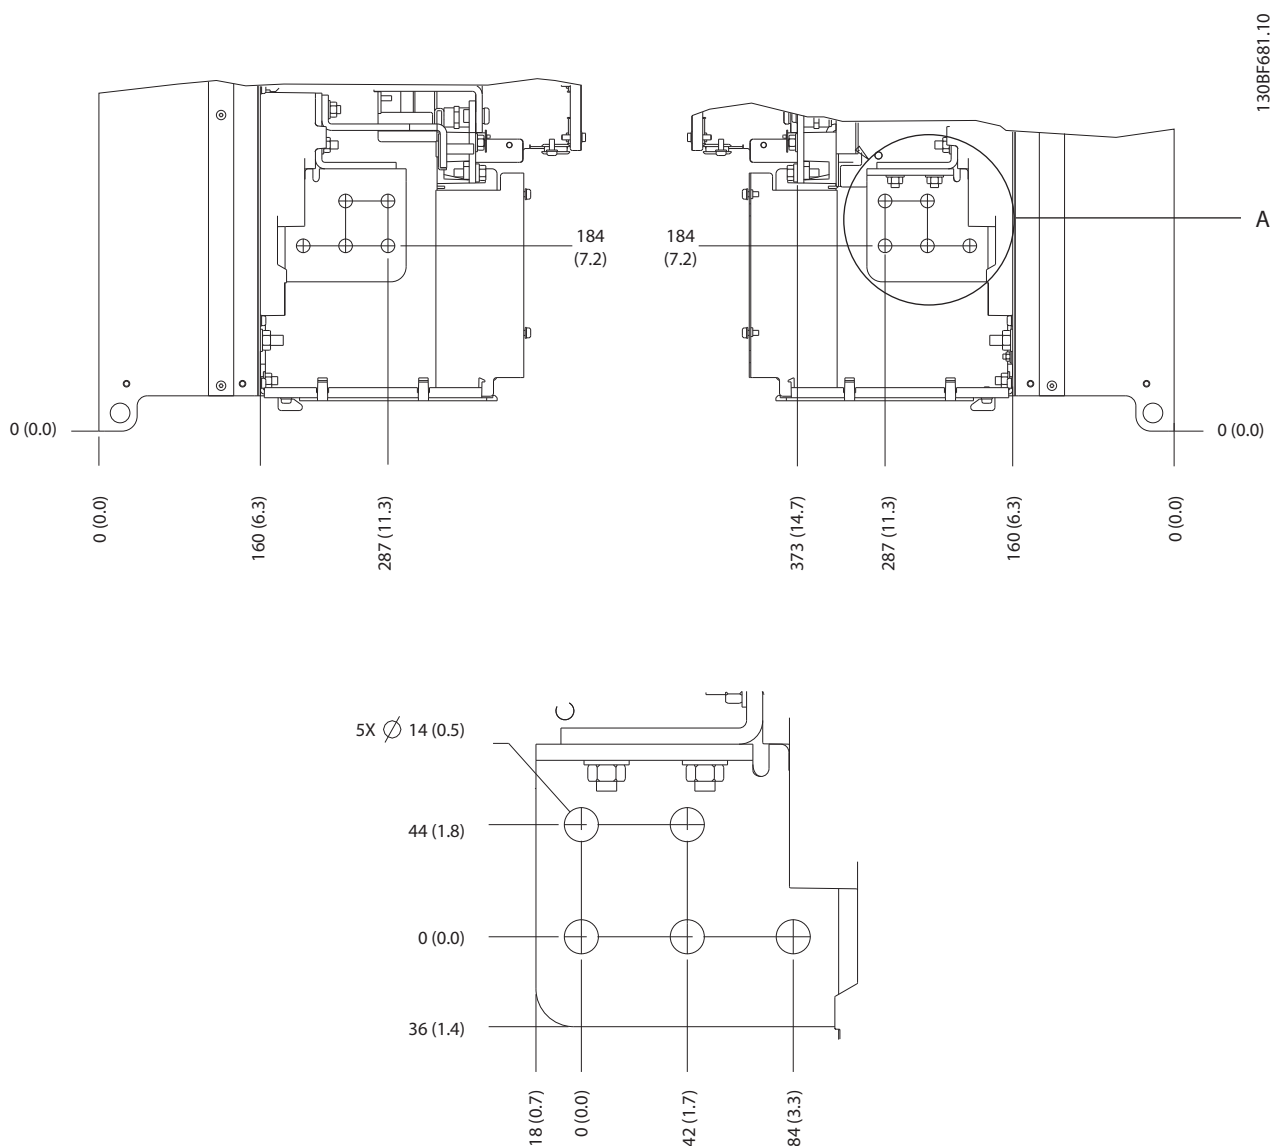


Illustration 5.14 E4h Mains, Motor, and Ground Terminal Dimensions (Side Views)

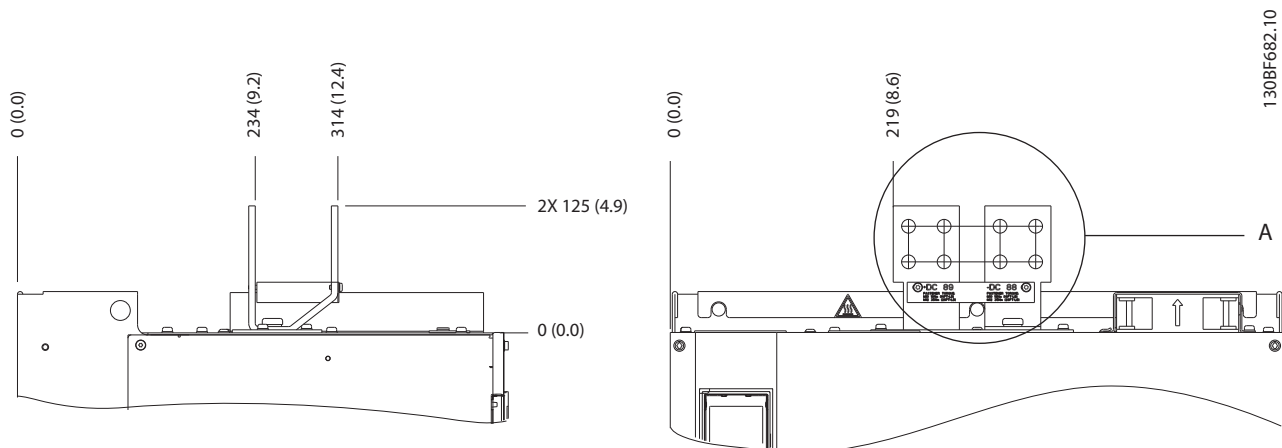

5

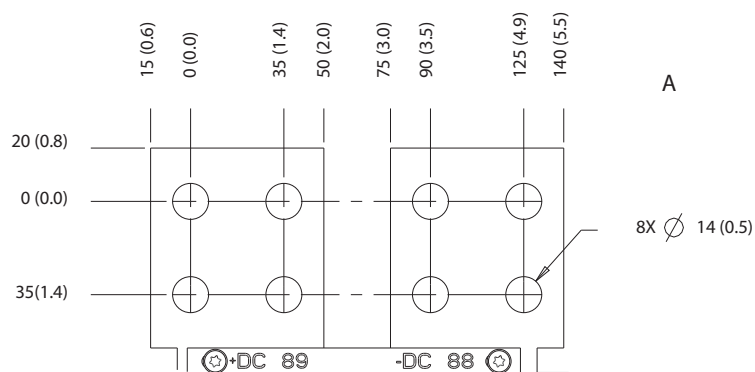


Illustration 5.15 E4h Load Share/Regeneration Terminal Dimensions

## 5.8 Control Wiring

All terminals to the control cables are inside the drive below the LCP. To access, either open the door (E1h and E2h) or remove the front panel (E3h and E4h).

### 5.8.1 Control Cable Routing

Tie down and route all control wires as shown in *Illustration 5.16*. Remember to connect the shields in a proper way to ensure optimum electrical immunity.

- Isolate control wiring from high-power cables in the drive.
- When the drive is connected to a thermistor, ensure that the thermistor control wiring is shielded and reinforced/double insulated. A 24 V DC supply voltage is recommended.

#### Fieldbus connection

Connections are made to the relevant options on the control card. For more detail, see the relevant fieldbus instruction. The cable must be tied down and routed along with other control wires inside the unit. See *Illustration 5.16*.

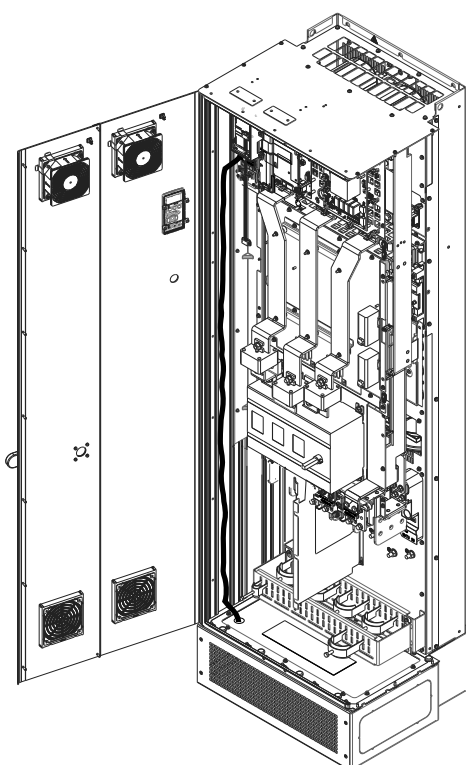


Illustration 5.16 Control Card Wiring Path

### 5.8.2 Control Terminal Types

*Illustration 5.17* shows the removable drive connectors. Terminal functions and default settings are summarized in *Table 5.1* – *Table 5.3*.


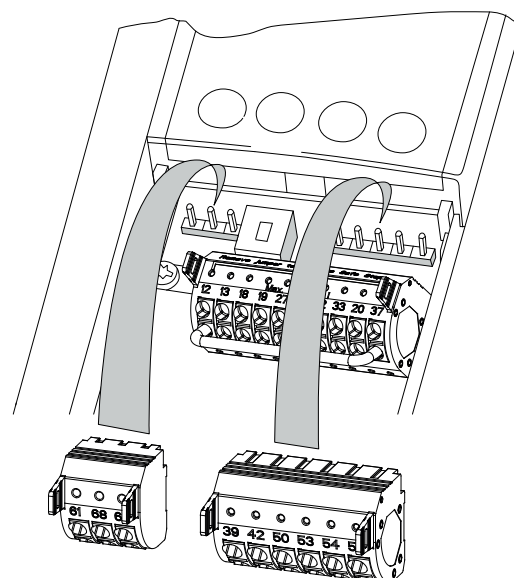


Illustration 5.17 Control Terminal Locations

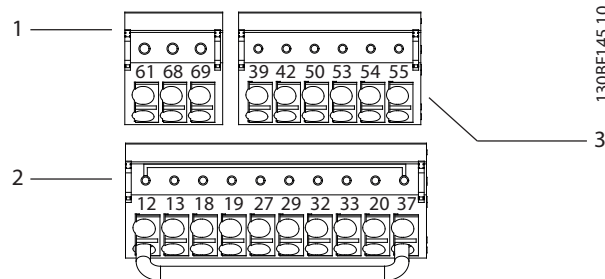

1	Serial communication terminals
2	Digital input/output terminals
3	Analog input/output terminals

Illustration 5.18 Terminal Numbers Located on the Connectors

Terminal	Parameter	Default setting	Description
61	–	–	Integrated RC-filter for cable shield. ONLY for connecting the shield to correct EMC problems.

Terminal	Parameter	Default setting	Description
68 (+)	<i>Parameter group 8-3* FC Port Settings</i>	–	RS485 interface. A switch (BUS TER.) is provided on the control card for bus termination resistance. See <i>Illustration 5.23</i> .
69 (-)	<i>Parameter group 8-3* FC Port Settings</i>	–	

Table 5.1 Serial Communication Terminal Descriptions

Digital input/output terminals			
Terminal	Parameter	Default setting	Description
12, 13	–	+24 V DC	24 V DC supply voltage for digital inputs and external transducers. Maximum output current 200 mA for all 24 V loads.
18	<i>Parameter 5-10 Terminal 18 Digital Input</i>	[8] Start	Digital inputs.
19	<i>Parameter 5-11 Terminal 19 Digital Input</i>	[10] Reversing	
32	<i>Parameter 5-14 Terminal 32 Digital Input</i>	[0] No operation	
33	<i>Parameter 5-15 Terminal 33 Digital Input</i>	[0] No operation	
27	<i>Parameter 5-12 Terminal 27 Digital Input</i>	[2] Coast inverse	For digital input or output. Default setting is input.
29	<i>Parameter 5-13 Terminal 29 Digital Input</i>	[14] JOG	
20	–	–	Common for digital inputs and 0 V potential for 24 V supply.
37	–	STO	When not using the optional STO feature, a jumper wire is required between terminal 12 (or 13) and terminal 37. This set-up allows the drive to operate with factory default programming values.

Table 5.2 Digital Input/Output Terminal Descriptions

Analog input/output terminals			
Terminal	Parameter	Default setting	Description
39	–	–	Common for analog output.
42	<i>Parameter 6-50 Terminal 42 Output</i>	[0] No operation	Programmable analog output. 0–20 mA or 4–20 mA at a maximum of 500 Ω.
50	–	+10 V DC	10 V DC analog supply voltage for potentiometer or thermistor. 15 mA maximum.
53	<i>Parameter group 6-1* Analog Input 1</i>	Reference	Analog input. For voltage or current. Switches A53 and A54 select mA or V.
54	<i>Parameter group 6-2* Analog Input 2</i>	Feedback	
55	–	–	Common for analog input.

Table 5.3 Analog Input/Output Terminal Descriptions

### 5.8.3 Relay Terminals

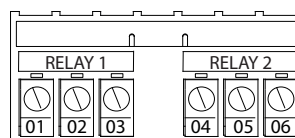


Illustration 5.19 Relay 1 and Relay 2 Terminals

- Relay 1 and relay 2. The location of the outputs depends on the drive configuration. See *chapter 3.5 Control Shelf*.
- Terminals on built-in optional equipment. See the manual provided with the equipment option.

Terminal	Parameter	Default setting	Description
01, 02, 03	<i>Parameter 5-40 Function Relay [0]</i>	[0] No operation	Form C relay output. For AC or DC voltage and resistive or inductive loads.
04, 05, 06	<i>Parameter 5-40 Function Relay [1]</i>	[0] No operation	

Table 5.4 Relay Terminal Descriptions

130BF156.10

## 5.8.4 Wiring to Control Terminals

The control terminals are located near the LCP. The control terminal connectors can be unplugged from the drive for convenience when wiring, as shown in *Illustration 5.17*. Either solid or flexible wire can be connected to the control terminals. Use the following procedures to connect or disconnect the control wires.

### NOTICE

Minimize interference by keeping control wires as short as possible and separate from high-power cables.

#### Connecting wire to control terminals

1. Strip 10 mm (0.4 in) of the outer plastic layer from the end of the wire.
2. Insert the control wire into the terminal.
  - For a solid wire, push the bare wire into the contact. See *Illustration 5.20*.
  - For a flexible wire, open the contact by inserting a small screwdriver into the slot between the terminal holes and push the screwdriver inward. See *Illustration 5.21*. Then, insert the stripped wire into the contact, and remove the screwdriver.
3. Pull gently on the wire to ensure that the contact is firmly established. Loose control wiring can be the source of equipment faults or reduced performance.

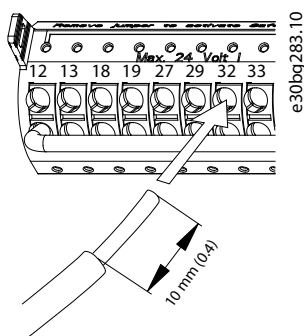


Illustration 5.20 Connecting Solid Control Wires

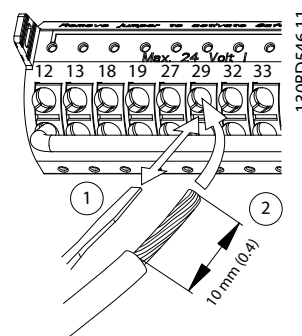


Illustration 5.21 Connecting Flexible Control Wires

#### Disconnecting wires from the control terminals

1. To open the contact, insert a small screwdriver into the slot between the terminal holes and push the screwdriver inward.
2. Pull gently on the wire to free it from the control terminal contact.

See *chapter 9.1 Electrical Data* for control terminal wiring sizes and *chapter 7 Wiring Configuration Examples* for typical control wiring connections.

## 5.8.5 Enabling Motor Operation (Terminal 27)

A jumper wire is required between terminal 12 (or 13) and terminal 27 for the drive to operate when using factory default programming values.

- Digital input terminal 27 is designed to receive 24 V DC external interlock command.
- When no interlock device is used, wire a jumper between control terminal 12 (recommended) or 13 to terminal 27. This wire provides an internal 24 V signal on terminal 27.
- When the status line at the bottom of the LCP reads *AUTO REMOTE COAST*, the unit is ready to operate, but is missing an input signal on terminal 27.
- When factory-installed optional equipment is wired to terminal 27, do not remove that wiring.

### NOTICE

The drive cannot operate without a signal on terminal 27, unless terminal 27 is reprogrammed using *parameter 5-12 Terminal 27 Digital Input*.

## 5.8.6 Configuring RS485 Serial Communication

RS485 is a 2-wire bus interface compatible with multi-drop network topology, and it contains the following features:



- Either Danfoss FC or Modbus RTU communication protocol, which are internal to the drive, can be used.
- Functions can be programmed remotely using the protocol software and RS485 connection or in *parameter group 8-\*\* Communications and Options*.
- Selecting a specific communication protocol changes various default parameter settings to match the specifications of the protocol, making more protocol-specific parameters available.
- Option cards for the drive are available to provide more communication protocols. See the option card documentation for installation and operation instructions.
- A switch (BUS TER) is provided on the control card for bus termination resistance. See *Illustration 5.23*.

For basic serial communication set-up, perform the following steps:

1. Connect RS485 serial communication wiring to terminals (+)68 and (-)69.
  - 1a Use shielded serial communication cable (recommended).
  - 1b See *chapter 5.6 Connecting to Ground* for proper grounding.
2. Select the following parameter settings:
  - 2a Protocol type in *parameter 8-30 Protocol*.
  - 2b Drive address in *parameter 8-31 Address*.
  - 2c Baud rate in *parameter 8-32 Baud Rate*.

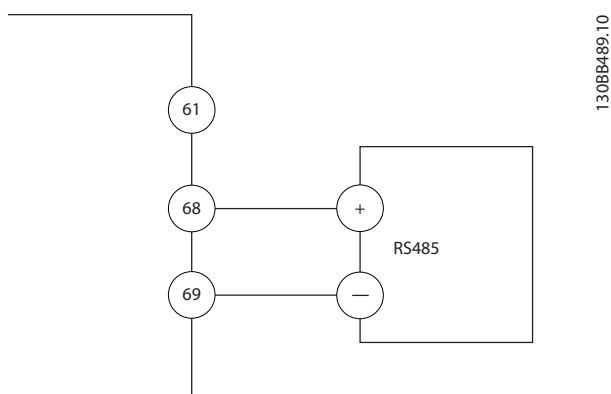


Illustration 5.22 Serial Communication Wiring Diagram

## 5.8.7 Wiring Safe Torque Off (STO)

The Safe Torque Off (STO) function is a component in a safety control system. STO prevents the unit from generating the voltage required to rotate the motor.

To run STO, more wiring for the drive is required. Refer to *Safe Torque Off Operating Guide* for further information.

## 5.8.8 Wiring the Space Heater

The space heater is an option used to prevent condensation from forming inside the enclosure when the unit is turned off. It is designed to be field wired and controlled by an HVAC management system.

### Specifications

- Nominal voltage: 100–240
- Wire size: 12–24 AWG

## 5.8.9 Wiring the Auxiliary Contacts to the Disconnect

The disconnect is an option that is installed at the factory. The auxiliary contacts, which are signal accessories used with the disconnect, are not installed at the factory to allow more flexibility during installation. The contacts snap into place without the need for tools.

Contacts must be installed in specific locations on the disconnect depending on their functions. Refer to the datasheet included in the accessory bag that comes with the drive.

### Specifications

- $U_i$ [V]: 690
- $U_{imp}$ [kV]: 4
- Pollution degree: 3
- $I_{th}$ [A]: 16
- Cable size: 1...2x0.75...2.5 mm<sup>2</sup>
- Maximum fuse: 16 A/gG
- NEMA: A600, R300, wire size: 18–14 AWG, 1(2)

## 5.8.10 Wiring the Brake Resistor Temperature Switch

The brake resistor terminal block is found on the power card and allows for the connection of an external brake resistor temperature switch. The switch can be configured as normally closed or normally open. If the input changes, a signal trips the drive and shows *alarm 27, Brake chopper fault* on the LCP display. At the same time, the drive stops braking and the motor coasts.

1. Locate the brake resistor terminal block (terminals 104–106) on the power card. See *Illustration 3.3*.
2. Remove the M3 screws that hold the jumper to the power card.

5

### 5.8.11 Selecting Voltage/Current Input Signal

The analog input terminals 53 and 54 allow setting of input signal to voltage (0–10 V) or current (0/4–20 mA).

**Default parameter setting:**

- Terminal 53: Speed reference signal in open loop (see *parameter 16-61 Terminal 53 Switch Setting*).
- Terminal 54: Feedback signal in closed loop (see *parameter 16-63 Terminal 54 Switch Setting*).

**NOTICE**

Disconnect power to the drive before changing switch positions.

1. Remove the LCP (local control panel).  
See *chapter 6.3 LCP Menu*.
2. Remove any optional equipment covering the switches.
3. Set switches A53 and A54 to select the signal type (U = voltage, I = current).

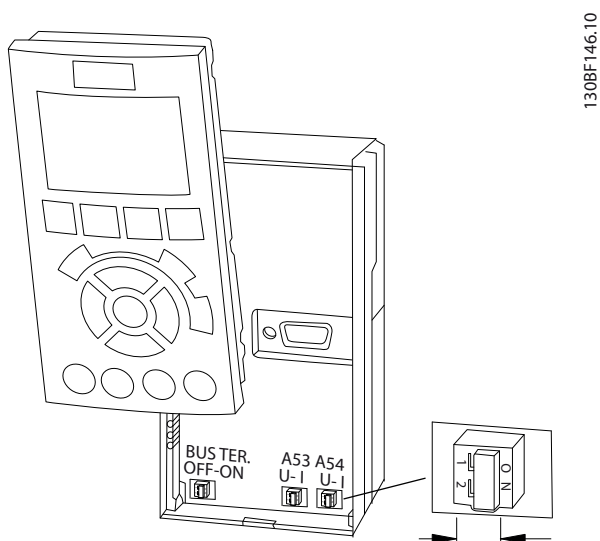


Illustration 5.23 Location of Terminal 53 and 54 Switches

## 5.9 Pre-start Check List

Before completing installation of the unit, inspect the entire installation as detailed in *Table 5.5*. Check and mark the items when completed.

Inspect for	Description	☑
Motor	<ul style="list-style-type: none"> <li>Confirm continuity of the motor by measuring ohm values on U–V (96–97), V–W (97–98), and W–U (98–96).</li> <li>Confirm that the supply voltage matches the voltage of the drive and the motor.</li> </ul>	
Switches	<ul style="list-style-type: none"> <li>Ensure that all switch and disconnect settings are in the proper positions.</li> </ul>	
Auxiliary equipment	<ul style="list-style-type: none"> <li>Look for auxiliary equipment, switches, disconnects, or input fuses/circuit breakers that reside on the input power side of the drive or output side to the motor. Ensure that they are ready for full-speed operation.</li> <li>Check function and installation of any sensors used for feedback to the drive.</li> <li>Remove any power factor correction caps on motor.</li> <li>Adjust any power factor correction caps on the mains side and ensure that they are dampened.</li> </ul>	
Cable routing	<ul style="list-style-type: none"> <li>Ensure that motor wiring, brake wiring (if equipped), and control wiring are separated or shielded, or in 3 separate metallic conduits for high-frequency interference isolation.</li> </ul>	
Control wiring	<ul style="list-style-type: none"> <li>Check for broken or damaged wires and loose connections.</li> <li>Check that control wiring is isolated from high-power wiring for noise immunity.</li> <li>Check the voltage source of the signals, if necessary.</li> <li>Use shielded cable or twisted pair and ensure that the shield is terminated correctly.</li> </ul>	
Input and output power wiring	<ul style="list-style-type: none"> <li>Check for loose connections.</li> <li>Check that motor and mains are in separate conduit or separated shielded cables.</li> </ul>	
Grounding	<ul style="list-style-type: none"> <li>Check for good ground connections that are tight and free of oxidation.</li> <li>Grounding to conduit, or mounting the back panel to a metal surface, is not a suitable grounding.</li> </ul>	
Fuses and circuit breakers	<ul style="list-style-type: none"> <li>Check for proper fusing or circuit breakers.</li> <li>Check that all fuses are inserted firmly and are in operational condition and that all circuit breakers (if used) are in the open position.</li> </ul>	
Cooling clearance	<ul style="list-style-type: none"> <li>Look for any obstructions in the airflow path.</li> <li>Measure top and bottom clearance of the drive to verify adequate airflow for cooling, see <i>chapter 4.5.1 Installation and Cooling Requirements</i>.</li> </ul>	
Ambient conditions	<ul style="list-style-type: none"> <li>Check that requirements for ambient conditions are met. See <i>chapter 9.4 Ambient Conditions</i>.</li> </ul>	
Interior of the drive	<ul style="list-style-type: none"> <li>Inspect that the unit interior is free of dirt, metal chips, moisture, and corrosion.</li> <li>Verify that all installation tools have been removed from unit interior.</li> <li>For E3h and E4h enclosures, ensure that the unit is mounted on an unpainted, metal surface.</li> </ul>	
Vibration	<ul style="list-style-type: none"> <li>Check that the unit is mounted solidly, or that shock mounts are used, if necessary.</li> <li>Check for an unusual amount of vibration.</li> </ul>	

Table 5.5 Pre-start Check List

### CAUTION

#### POTENTIAL HAZARD IN THE EVENT OF INTERNAL FAILURE

If the drive is not properly secured with covers, personal injury can occur.

- Before applying power, ensure all safety covers (door and panels) are in place and securely fastened. Refer to *chapter 9.10.1 Fastener Torque Ratings*.

## 6 Commissioning

### 6.1 Safety Instructions

See *chapter 2 Safety* for general safety instructions.

#### **⚠ WARNING**

##### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input power. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Only qualified personnel must install, start up, and maintain the drive.

##### Before applying power:

1. Ensure that input power to the unit is OFF and locked out. Do not rely on the drive disconnect switches for input power isolation.
2. Verify that there is no voltage on input terminals L1 (91), L2 (92), and L3 (93), phase-to-phase, and phase-to-ground.
3. Verify that there is no voltage on output terminals 96 (U), 97 (V), and 98 (W), phase-to-phase, and phase-to-ground.
4. Confirm continuity of the motor by measuring ohm values on U–V (96–97), V–W (97–98), and W–U (98–96).
5. Check for proper grounding of the drive and the motor.
6. Inspect the drive for loose connections on the terminals.
7. Check that all cable glands are firmly tightened.
8. Confirm that the supply voltage matches the voltage of the drive and the motor.
9. Close and securely fasten the front cover.

### 6.2 Applying Power

#### **⚠ WARNING**

##### UNINTENDED START

When the drive is connected to AC mains, DC supply, or load sharing, the motor can start at any time, causing risk of death, serious injury, and equipment, or property damage. The motor can start by activation of an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up software, or after a cleared fault.

To prevent unintended motor start:

- Press [Off] on the LCP before programming parameters.
- Disconnect the drive from mains whenever personal safety considerations make it necessary to avoid unintended motor start.
- Check that the drive, motor, and any driven equipment are in operational readiness.

1. Confirm that the input voltage between phases is balanced within 3%. If not, correct input voltage imbalance before proceeding. Repeat this procedure after the voltage correction.
2. Ensure that optional equipment wiring, if present, matches the installation application.
3. Ensure that all operator devices are in the OFF position.
4. Close all panel doors and securely fasten all covers.
5. Apply power to the unit. DO NOT start the drive now. For units with a disconnect switch, turn to the ON position to apply power to the drive.

#### **NOTICE**

If the status line at the bottom of the LCP reads AUTO REMOTE COASTING or *alarm 60, External Interlock* is shown, this status indicates that the unit is ready to operate but is missing an input signal on terminal 27. See *chapter 5.8.5 Enabling Motor Operation (Terminal 27)* for details.

## 6.3 LCP Menu

### 6.3.1.1 Quick Menu Mode

The Quick Menu mode provides a list of menus used to configure and operate the drive. Select the Quick Menu mode by pressing the [Quick Menus] key. The resulting readout appears on the LCP display.

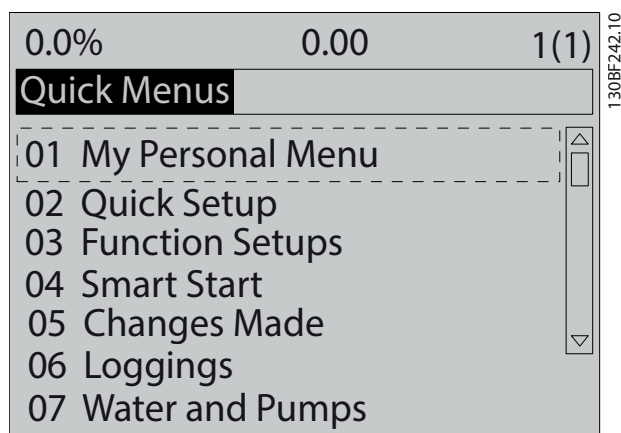


Illustration 6.1 Quick Menu View

### 6.3.1.2 Q1 My Personal Menu

Use My Personal Menu to determine what is shown in the display area. Refer to *chapter 3.6 Local Control Panel (LCP)*. This menu can also show up to 50 pre-programmed parameters. These 50 parameters are manually entered using *parameter 0-25 My Personal Menu*.

### 6.3.1.3 Q2 Quick Setup

The parameters found in the *Q2 Quick Setup* contain basic system and motor data that are always necessary for configuring the drive. See *chapter 6.4.2 Entering System Information* for the set-up procedures.

### 6.3.1.4 Q3 Function Setups

The parameters found in the *Q3 Function Setups* contain data for fan, compressor, and pump functions. This menu also includes parameters for LCP display, digital preset speeds, scaling of analog references, closed-loop single zone, and multizone applications.

### 6.3.1.5 Q4 Smart Start

Q4 Smart Setup guides the user through typical parameter settings used to configure the motor and selected pump/fan application. The [Info] key can be used to display help information for various selections, settings, and messages.

### 6.3.1.6 Q5 Changes Made

Select *Q5 Changes Made* for information about:

- The 10 most recent changes.
- Changes made from default setting.

### 6.3.1.7 Q6 Loggings

Use *Q6 Loggings* for fault finding. To get information about the display line readout, select *Loggings*. The information is shown as graphs. Only parameters selected in *parameter 0-20 Display Line 1.1 Small* through *parameter 0-24 Display Line 3 Large* can be viewed. It is possible to store up to 120 samples in the memory for later reference.

Q6 Loggings	
Parameter 0-20 Display Line 1.1 Small	Reference [Unit]
Parameter 0-21 Display Line 1.2 Small	Analog Input 53 [V]
Parameter 0-22 Display Line 1.3 Small	Motor current [A]
Parameter 0-23 Display Line 2 Large	Frequency [Hz]
Parameter 0-24 Display Line 3 Large	Feedback [Unit]

Table 6.1 Logging Parameter Examples

### 6.3.1.8 Q7 Water and Pumps

The parameters found in the *Q7 Water and Pumps* contain basic data that is necessary for configuring water pump applications.

### 6.3.1.9 Main Menu Mode

The *Main Menu* mode lists all the parameter groups available to the drive. Select the Main Menu mode by pressing the [Main Menu] key. The resulting readout appears on the LCP display.

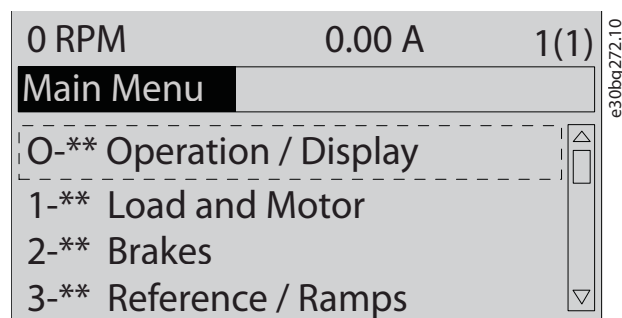


Illustration 6.2 Main Menu View

All parameters can be changed in the main menu. Option cards added to the unit enable extra parameters associated with the option device.

## 6.4 Programming the Drive

For detailed information on the key functions on the local control panel (LCP), see *chapter 3.6 Local Control Panel (LCP)*. For information on parameter settings, see the *programming guide*.

### Parameter overview

Parameter settings control the operation of the drive, and are accessed via the LCP. These settings are assigned a default value at the factory, but can be configured for their unique application. Each parameter has a name and number that remain the same regardless of the programming mode.

In the *Main Menu* mode, the parameters are divided into groups. The first digit of the parameter number (from the left) indicates the parameter group number. The parameter group is then broken down into subgroups, if necessary. For example:

0-** Operation/Display	Parameter group
0-0* Basic Settings	Parameter subgroup
Parameter 0-01 Language	Parameter
Parameter 0-02 Motor Speed Unit	Parameter
Parameter 0-03 Regional Settings	Parameter

Table 6.2 Example of Parameter Group Hierarchy

### Moving around parameters

Navigate through the parameters using the following LCP keys:

- Press [ $\blacktriangle$ ] [ $\blacktriangledown$ ] to scroll up or down.
- Press [ $\blacktriangleleft$ ] [ $\blacktriangleright$ ] to shift a space to the left or right of a decimal point while editing a decimal parameter value.
- Press [OK] to accept the change.
- Press [Cancel] to disregard the change and exit edit mode.
- Press [Back] twice to show the status view.
- Press [Main Menu] once to go back to the main menu.

### 6.4.1 Programming Example for an Open-loop Application

This procedure, which is used to configure a typical open-loop application, programs the drive to receive a 0–10 V DC analog control signal on input terminal 53. The drive responds by providing 20–50 Hz output to the motor proportional to the input signal (0–10 V DC=20–50 Hz).

Press [Quick Menu] and complete the following steps:

1. Select *Q3 Function Setups* and press [OK].
2. Select *Parameter Data Set* and press [OK].

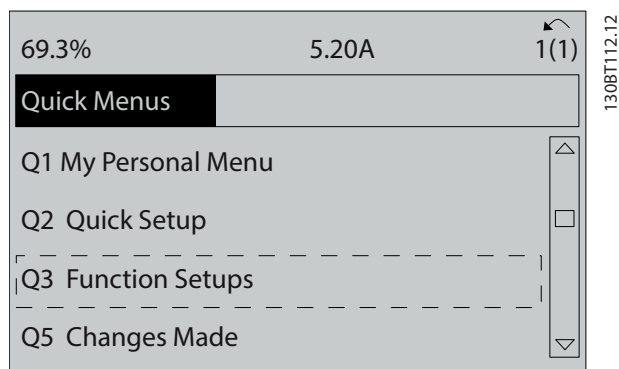


Illustration 6.3 Q3 Function Setups

3. Select *Q3-2 Open Loop Settings* and press [OK].

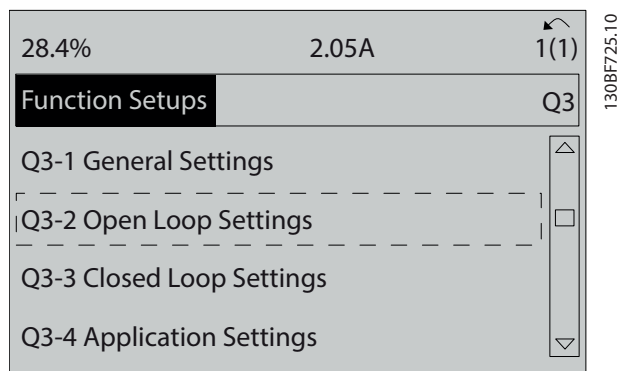


Illustration 6.4 Q3-2 Open Loop Settings

4. Select *Q3-21 Analog Reference* and press [OK].

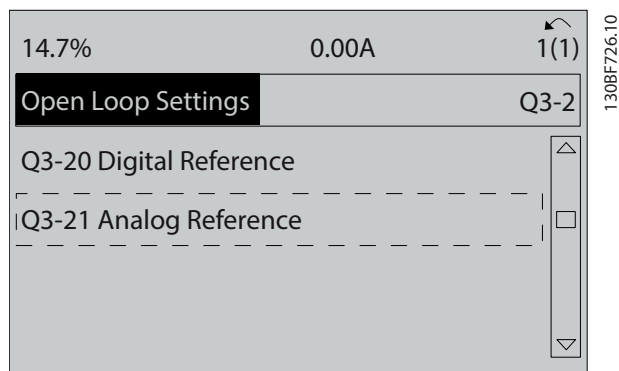


Illustration 6.5 Q3-21 Analog Reference

5. Select *parameter 3-02 Minimum Reference*. Set the minimum internal drive reference to 0 Hz and press [OK].

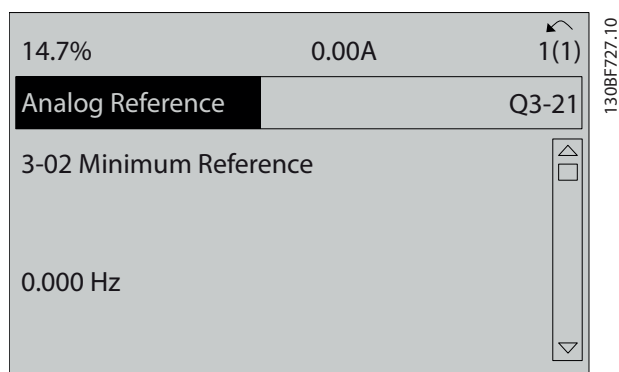


Illustration 6.6 Parameter 3-02 Minimum Reference

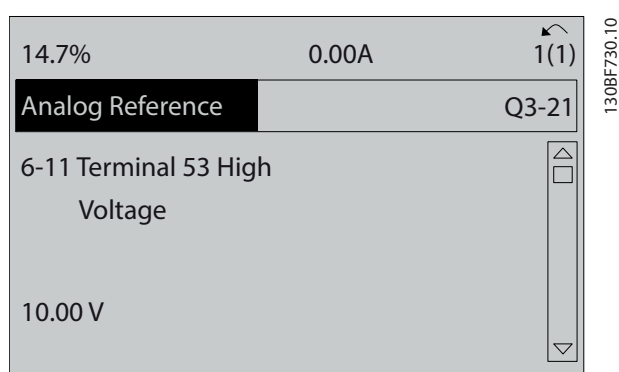


Illustration 6.9 Parameter 6-11 Terminal 53 High Voltage

6. Select *parameter 3-03 Maximum Reference*. Set the maximum internal drive reference to 60 Hz and press [OK].

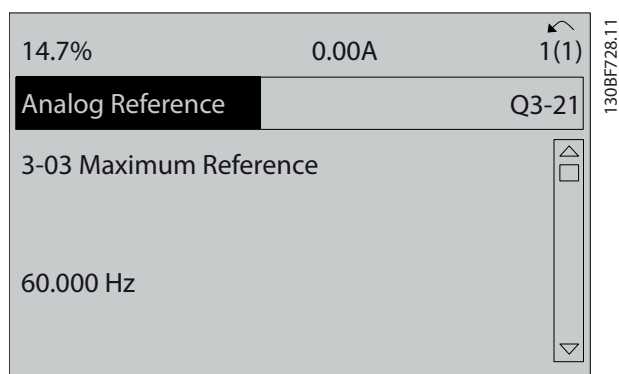


Illustration 6.7 Parameter 3-03 Maximum Reference

9. Select *parameter 6-14 Terminal 53 Low Ref./Feedb. Value*. Set minimum speed reference on terminal 53 at 20 Hz and press [OK].

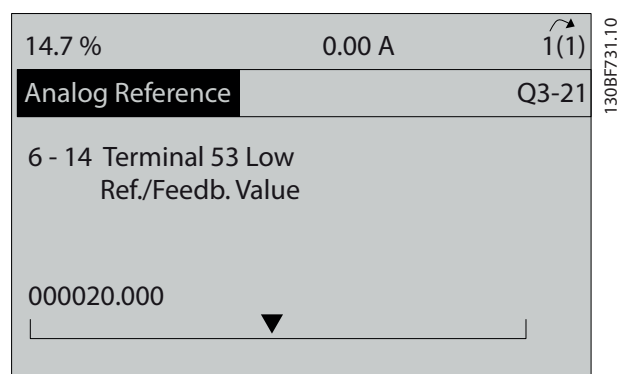


Illustration 6.10 Parameter 6-14 Terminal 53 Low Ref./Feedb. Value

7. Select *parameter 6-10 Terminal 53 Low Voltage*. Set the minimum external voltage reference on terminal 53 at 0 V and press [OK].

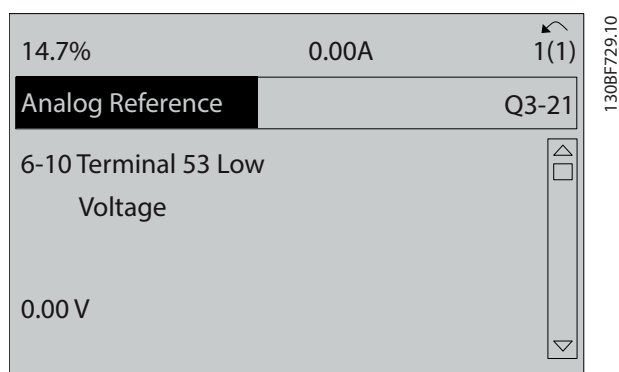


Illustration 6.8 Parameter 6-10 Terminal 53 Low Voltage

10. Select *parameter 6-15 Terminal 53 High Ref./Feedb. Value*. Set maximum speed reference on terminal 53 at 50 Hz and press [OK].

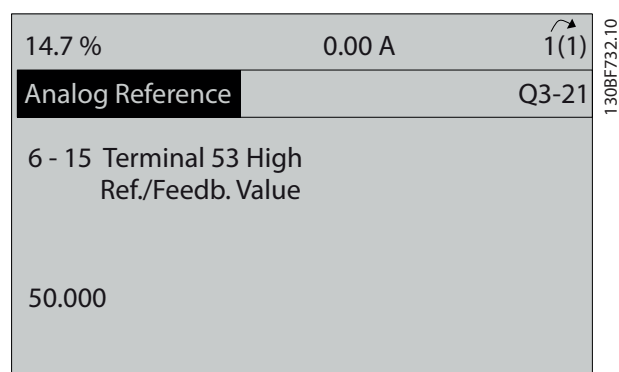


Illustration 6.11 Parameter 6-15 Terminal 53 High Ref./Feedb. Value


8. Select *parameter 6-11 Terminal 53 High Voltage*. Set maximum external voltage reference on terminal 53 at 10 V and press [OK].

With an external device providing a 0–10 V control signal connected to drive terminal 53, the system is now ready for operation.

## NOTICE

In *Illustration 6.11*, the scroll bar on the right of the display is at the bottom. This position indicates the procedure is complete.

*Illustration 6.12* shows the wiring connections used to enable the external device set up.

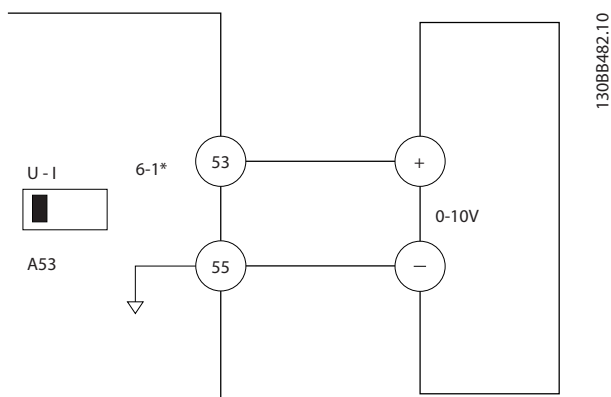

**Illustration 6.12 Wiring Example for External Device Providing 0–10 V Control Signal**

## 6.4.2 Entering System Information

## NOTICE

### SOFTWARE DOWNLOAD

For commissioning via PC, install MCT 10 Set-up Software. The software is available for download (basic version) or for ordering (advanced version, code number 130B1000). For more information and downloads, see [www.danfoss.com/en/service-and-support/downloads/dds/vlt-motion-control-tool-mct-10/](http://www.danfoss.com/en/service-and-support/downloads/dds/vlt-motion-control-tool-mct-10/).

The following steps are used to enter basic system information into the drive. Recommended parameter settings are intended for start-up and checkout purposes. Application settings vary.

## NOTICE

Although these steps assume that an asynchronous motor is used, a permanent magnet motor can be used. For more information on specific motor types, see the *product-specific programming guide*.

1. Press [Main Menu] on the LCP.
2. Select 0-\*\* Operation/Display and press [OK].
3. Select 0-0\* Basic Settings and press [OK].
4. Select parameter 0-03 Regional Settings and press [OK].

5. Select [0] International or [1] North America as appropriate and press [OK]. (This action changes the default settings for some basic parameters).
6. Press [Quick Menus] on the LCP and then select 02 Quick Setup.
7. Change the following parameters settings listed in *Table 6.3* if necessary. The motor data is found on the motor nameplate.

Parameter	Default setting
Parameter 0-01 Language	English
Parameter 1-20 Motor Power [kW]	4.00 kW
Parameter 1-22 Motor Voltage	400 V
Parameter 1-23 Motor Frequency	50 Hz
Parameter 1-24 Motor Current	9.00 A
Parameter 1-25 Motor Nominal Speed	1420 RPM
Parameter 5-12 Terminal 27 Digital Input	Coast inverse
Parameter 3-02 Minimum Reference	0.000 RPM
Parameter 3-03 Maximum Reference	1500.000 RPM
Parameter 3-41 Ramp 1 Ramp up Time	3.00 s
Parameter 3-42 Ramp 1 Ramp Down Time	3.00 s
Parameter 3-13 Reference Site	Linked to Hand/ Auto
Parameter 1-29 Automatic Motor Adaptation (AMA)	Off

**Table 6.3 Quick Set-up Settings**

## NOTICE

### MISSING INPUT SIGNAL

When the LCP shows AUTO REMOTE COASTING or *alarm 60, External Interlock*, the unit is ready to operate but is missing an input signal. See *chapter 5.8.5 Enabling Motor Operation (Terminal 27)* for details.

## 6.4.3 Configuring Automatic Energy Optimization

Automatic energy optimization (AEO) is a procedure that minimizes voltage to the motor, reducing energy consumption, heat, and noise.

1. Press [Main Menu].
2. Select 1-\*\* Load and Motor and press [OK].
3. Select 1-0\* General Settings and press [OK].
4. Select parameter 1-03 Torque Characteristics and press [OK].
5. Select either [2] Auto Energy Optim CT or [3] Auto Energy Optim VT and press [OK].



## 6.4.4 Configuring Automatic Motor Adaptation

Automatic motor adaptation is a procedure that optimizes compatibility between the drive and the motor.

The drive builds a mathematical model of the motor for regulating output motor current. The procedure also tests the input phase balance of electrical power. It compares the motor characteristics with the data entered in *parameters 1-20 to 1-25*.

### NOTICE

If warnings or alarms occur, see *chapter 8.5 List of Warnings and Alarms*. Some motors are unable to run the complete version of the test. In that case, or if an output filter is connected to the motor, select *[2] Enable reduced AMA*.

Run this procedure on a cold motor for best results.

1. Press [Main Menu].
2. Select *1-\*\* Load and Motor* and press [OK].
3. Select *1-2\* Motor Data* and press [OK].
4. Select *parameter 1-29 Automatic Motor Adaptation (AMA)* and press [OK].
5. Select *[1] Enable complete AMA* and press [OK].
6. Press [Hand On] and then [OK].  
The test runs automatically and indicates when it is complete.

## 6.5 Testing Before System Start-up

### ⚠ WARNING

#### MOTOR START

Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage. Before start,

- Ensure that equipment is safe to operate under any condition.
- Ensure that the motor, system, and any attached equipment are ready for start.

### 6.5.1 Motor Rotation

#### NOTICE

If the motor runs in the wrong direction, it can damage equipment. Before running the unit, check the motor rotation by briefly running the motor. The motor runs briefly at either 5 Hz or the minimum frequency set in *parameter 4-12 Motor Speed Low Limit [Hz]*.

1. Press [Hand On].
2. Move the left cursor to the left of the decimal point by using the left arrow key, and enter an RPM that slowly rotates the motor.
3. Press [OK].
4. If the motor rotation is wrong, set *parameter 1-06 Clockwise Direction* to *[1] Inverse*.

## 6.5.2 Encoder Rotation

If encoder feedback is used, perform the following steps:

1. Select *[0] Open Loop* in *parameter 1-00 Configuration Mode*.
2. Select *[1] 24 V encoder* in *parameter 7-00 Speed PID Feedback Source*.
3. Press [Hand On].
4. Press [►] for positive speed reference (*parameter 1-06 Clockwise Direction* at *[0] Normal*).
5. In *parameter 16-57 Feedback [RPM]*, check that the feedback is positive.

For more information on the encoder option, refer to the option manual.

### NOTICE

#### NEGATIVE FEEDBACK

If the feedback is negative, the encoder connection is wrong. Use either *parameter 5-71 Term 32/33 Encoder Direction* or *parameter 17-60 Feedback Direction* to inverse the direction, or reverse the encoder cables. *Parameter 17-60 Feedback Direction* is only available with the VLT® Encoder Input MCB 102 option.

## 6.6 System Start-up

### ⚠ WARNING

#### MOTOR START

Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage. Before start,

- Ensure that equipment is safe to operate under any condition.
- Ensure that the motor, system, and any attached equipment are ready for start.

The procedure in this section requires user-wiring and application programming to be completed. The following procedure is recommended after application set-up is completed.

6

1. Press [Auto On].
2. Apply an external run command.  
Examples of external run commands are a switch, button, or programmable logic controller (PLC).
3. Adjust the speed reference throughout the speed range.
4. Ensure that the system is working as intended by checking sound and vibration level of the motor.
5. Remove the external run command.

If warnings or alarms occur, see *chapter 8.5 List of Warnings and Alarms*.

## 6.7 Parameter Settings

### NOTICE

#### REGIONAL SETTINGS

Some parameters have different default settings for international or North America. For a list of the different default values, see *chapter 10.2 International/North American Default Parameter Settings*.

Establishing the correct programming for applications requires setting several parameter functions. Details for parameters are provided in the *programming guide*.

Parameter settings are stored internally in the drive, allowing the following advantages:

- Parameter settings can be uploaded into the LCP memory and stored as a back-up.
- Multiple units can be programmed quickly by connecting the LCP to the unit and downloading the stored parameter settings.
- Settings that are stored in the LCP are not changed when restoring factory default settings.
- Changes made to default settings as well as any programming entered into parameters are stored and available for viewing in the quick menu. See *chapter 6.3 LCP Menu*.

## 6.7.1 Uploading and Downloading Parameter Settings

The drive operates using parameters stored on the control card, which is located within the drive. The upload and download functions move the parameters between the control card and the LCP.

1. Press [Off].
2. Go to *parameter 0-50 LCP Copy* and press [OK].
3. Select 1 of the following:
  - 3a To upload data from the control card to the LCP, select [1] *All to LCP*.
  - 3b To download data from the LCP to the control card, select [2] *All from LCP*.
4. Press [OK]. A progress bar shows the uploading or downloading process.
5. Press [Hand On] or [Auto On].

## 6.7.2 Restoring Factory Default Settings

### NOTICE

#### LOSS OF DATA

Loss of programming, motor data, localization, and monitoring records occurs when restoring default settings. To create a back-up, upload data to the LCP before initialization. Refer to *chapter 6.7.1 Uploading and Downloading Parameter Settings*.

Restore the default parameter settings by initializing the unit. Initialization is carried out through *parameter 14-22 Operation Mode* or manually.

*Parameter 14-22 Operation Mode* does not reset settings such as the following:

- Running hours.
- Serial communication options.
- Personal menu settings.
- Fault log, alarm log, and other monitoring functions.

#### Recommended initialization

1. Press [Main Menu] twice to access parameters.
2. Go to *parameter 14-22 Operation Mode* and press [OK].
3. Scroll to *Initialization* and press [OK].
4. Remove power to the unit and wait for the display to turn off.
5. Apply power to the unit. Default parameter settings are restored during start-up. Start-up takes slightly longer than normal.

6. After *alarm 80, Drive initialized to default value* appears, press [Reset].

**Manual initialization**

Manual initialization resets all factory settings except for the following:

- *Parameter 15-00 Operating Hours.*
- *Parameter 15-03 Power Up's.*
- *Parameter 15-04 Over Temp's.*
- *Parameter 15-05 Over Volt's.*

To perform manual initialization:

1. Remove power to the unit and wait for the display to turn off.
2. Press and hold [Status], [Main Menu], and [OK] simultaneously while applying power to the unit (approximately 5 s or until an audible click sounds and the fan starts). Start-up takes slightly longer than normal.

## 7 Wiring Configuration Examples

The examples in this section are intended as a quick reference for common applications.

- Parameter settings are the regional default values unless otherwise indicated (selected in *parameter 0-03 Regional Settings*).
- Parameters associated with the terminals and their settings are shown next to the drawings.
- Required switch settings for analog terminals A53 or A54 are also shown.

### NOTICE

When not using the optional STO feature, a jumper wire is required between terminal 12 (or 13) and terminal 37 for the drive to operate with factory default programming values.

7

<div><div>FC</div><div><div><div>+10V</div><div>A IN</div><div>A IN</div><div>COM</div><div>A OUT</div><div>COM</div></div><div><div>500</div><div>530</div><div>540</div><div>550</div><div>420</div><div>390</div></div></div><div><div>U - I</div><div><div></div><div></div></div></div><div>A53</div></div> <div><div>e30bb927.11</div><div><div><div>+</div><div>-</div></div><div>4 - 20mA</div></div></div>	Parameters	
	Function	Setting
	Parameter 6-12 Terminal 53 Low Current	4 mA*
	Parameter 6-13 Terminal 53 High Current	20 mA*
	Parameter 6-14 Terminal 53 Low Ref./Feedb. Value	0 Hz
	Parameter 6-15 Terminal 53 High Ref./Feedb. Value	50 Hz
* = Default value		
<b>Notes/comments:</b> Assumptions are 4 mA input = 0 Hz speed and 20 mA input = 50 Hz speed.		

Table 7.2 Analog Speed Reference (Current)

		Parameters	
<div><div>FC</div><div>+10 V 500 A IN 530 A IN 540 COM 550 A OUT 420 COM 390</div><div>U - I A53</div></div>	e30bb926.11	<b>Function</b>	<b>Setting</b>
		Parameter 6-10 Terminal 53 Low Voltage	0.07 V*
		Parameter 6-11 Terminal 53 High Voltage	10 V*
		Parameter 6-14 Terminal 53 Low Ref./Feedb. Value	0 Hz
		Parameter 6-15 Terminal 53 High Ref./Feedb. Value	50 Hz
		* = Default value	
<b>Notes/comments:</b> Assumptions are 0 V DC input = 0 Hz speed and 10 V DC input = 50 Hz speed.			

Table 7.1 Analog Speed Reference (Voltage)

<div><div>FC</div><div><div><div>+10 V A IN A IN COM A OUT COM</div><div>500 530 540 550 420 390</div></div><div><div>U - I</div><div><div></div></div></div></div><div>A53</div></div>		Parameters	
		Function	Setting
		Parameter 6-12 Terminal 53 Low Current	4 mA*
		Parameter 6-13 Terminal 53 High Current	20 mA*
		Parameter 6-14 Terminal 53 Low Ref./Feedb. Value	0 Hz
		Parameter 6-15 Terminal 53 High Ref./Feedb. Value	50 Hz
* = Default value			
Notes/comments:			
Assumptions are 0 V DC input = 0 RPM speed and 10 V DC input = 1500 RPM speed.			

Table 7.3 Speed Reference (Using a Manual Potentiometer)

		Parameters	
FC		Function	Setting
+24 V	12	Parameter 5-10 Terminal 18 Digital Input	[8] Start*
+24 V	13		
D IN	18	Parameter 5-12 Terminal 27 Digital Input	[19] Freeze Reference
D IN	19		
COM	20		
D IN	27	Parameter 5-13 Terminal 29 Digital Input	[21] Speed Up
D IN	29		
D IN	32	Parameter 5-14 Terminal 32 Digital Input	[22] Speed Down
D IN	33		
D IN	37		
		* = Default value	
		Notes/comments:	

Table 7.4 Speed Up/Speed Down

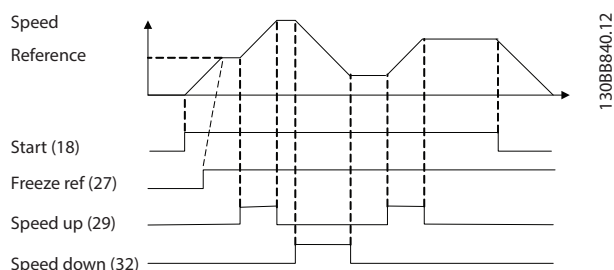


Illustration 7.1 Speed Up/Speed Down

## 7.2 Wiring for Start/Stop

		Parameters	
FC		Function	Setting
+24 V	12	Parameter 5-10 Terminal 18 Digital Input	[8] Start*
+24 V	13		
D IN	18	Parameter 5-12 Terminal 27 Digital Input	[0] No operation
D IN	19		
COM	20		
D IN	27	Parameter 5-19 Terminal 37 Safe Stop	[1] Safe Stop Alarm
D IN	29		
D IN	32		
D IN	33		
D IN	37		
		* = Default value	
		Notes/comments:	
		If parameter 5-12 Terminal 27 Digital Input is set to [0] No operation, a jumper wire to terminal 27 is not needed.	

Table 7.5 Start/Stop Command with Safe Torque Off Option

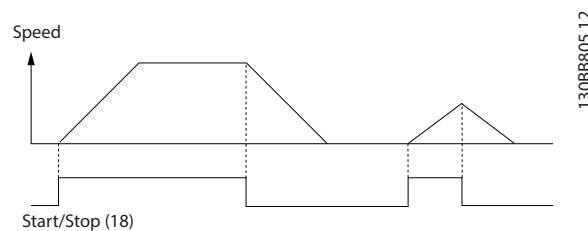


Illustration 7.2 Start/Stop Command with Safe Torque Off

7

Parameters	
Function	Setting
Parameter 5-1 0 Terminal 18 Digital Input	[9] Latched Start
Parameter 5-1 2 Terminal 27 Digital Input	[6] Stop Inverse
* = Default value	
Notes/comments:	

1308B803.10

Table 7.6 Pulse Start/Stop

Parameters	
Function	Setting
Parameter 5-10 Terminal 18 Digital Input	[8] Start
Parameter 5-11 Terminal 19 Digital Input	[10] Reversing*
Parameter 5-12 Terminal 27 Digital Input	[0] No operation
Parameter 5-14 Terminal 32 Digital Input	[16] Preset ref bit 0
Parameter 5-15 Terminal 33 Digital Input	[17] Preset ref bit 1
Parameter 3-10 Preset Reference	
Preset ref. 0	25%
Preset ref. 1	50%
Preset ref. 2	75%
Preset ref. 3	100%
* = Default value	
Notes/comments:	

1308B934.11

Table 7.7 Start/Stop with Reversing and 4 Preset Speeds

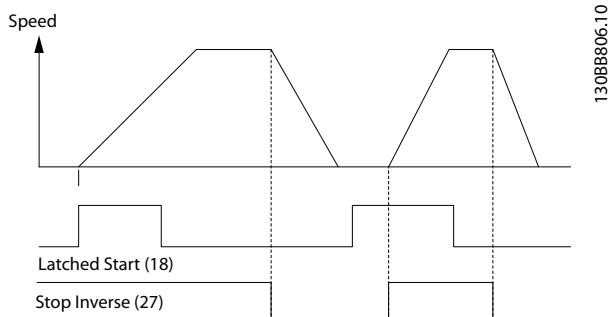


Illustration 7.3 Latched Start/Stop Inverse

### 7.3 Wiring for External Alarm Reset

Parameters	
Function	Setting
Parameter 5-11 T Terminal 19 Digital Input	[1] Reset
* = Default value	
Notes/comments:	

1308B928.11

Table 7.8 External Alarm Reset

## 7.4 Wiring for a Motor Thermistor

### ⚠ WARNING

#### THERMISTOR INSULATION

Risk of personal injury or equipment damage.

- To meet PELV insulation requirements, use only thermistors with reinforced or double insulation.

Parameters	
Function	Setting
Parameter 1-90 Motor Thermal Protection	[2] Thermistor trip
Parameter 1-93 Thermistor Resource	[1] Analog input 53
* = Default value	
<b>Notes/comments:</b> If only a warning is desired, set parameter 1-90 Motor Thermal Protection to [1] Thermistor warning.	

Table 7.9 Motor Thermistor

## 7.5 Wiring for Regeneration

Parameters	
Function	Setting
Parameter 1-90 Motor Thermal Protection	100%*
* = Default value	
<b>Notes/comments:</b> To disable regeneration, decrease parameter 1-90 Motor Thermal Protection to 0%. If the application uses motor brake power and regeneration is not enabled, the unit trips.	

Table 7.10 Regeneration

## 8 Maintenance, Diagnostics, and Troubleshooting

### 8.1 Maintenance and Service

This chapter includes:

- Maintenance and service guidelines.
- Status messages.
- Warnings and alarms.
- Basic troubleshooting.

Under normal operating conditions and load profiles, the drive is maintenance-free throughout its designed lifetime. To prevent breakdown, danger, and damage, examine the drive at regular intervals depending on the operating conditions. Replace worn or damaged parts with original spare parts or standard parts. For service and support, refer to [www.danfoss.com/en/service-and-support/](http://www.danfoss.com/en/service-and-support/).

#### **⚠ WARNING** UNINTENDED START

When the drive is connected to AC mains, DC supply, or load sharing, the motor can start at any time. Unintended start during programming, service, or repair work can result in death, serious injury, or property damage. The motor can start with an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up Software, or after a cleared fault condition.

To prevent unintended motor start:

- Press [Off/Reset] on the LCP before programming parameters.
- Disconnect the drive from the mains.
- Completely wire and assemble the drive, motor, and any driven equipment before connecting the drive to AC mains, DC supply, or load sharing.

### 8.2 Heat Sink Access Panel

The drive can be ordered with an optional access panel in the back of the unit. This access panel provides access to the heat sink and allows the heat sink to be cleaned of any dust buildup.

#### 8.2.1 Removing the Heat Sink Access Panel

#### **NOTICE**

##### DAMAGE TO HEAT SINK

Using fasteners that are longer than those originally supplied with the heat sink panel can damage the heat sink cooling fins.

1. Remove power from the drive and wait 40 minutes for the capacitors to discharge completely. Refer to *chapter 2 Safety*.
2. Position the drive so that the back of the drive is fully accessible.
3. Remove the 8 M5 fasteners securing the access panel to the back of the enclosure using a 3 mm hex bit.
4. Inspect the leading edge of the heat sink for damage or debris.
5. Remove material or debris with a vacuum.
6. Reinstall the panel and secure it to the back of the enclosure with the 8 fasteners. Tighten the fasteners according to *chapter 9.10.1 Fastener Torque Ratings*.


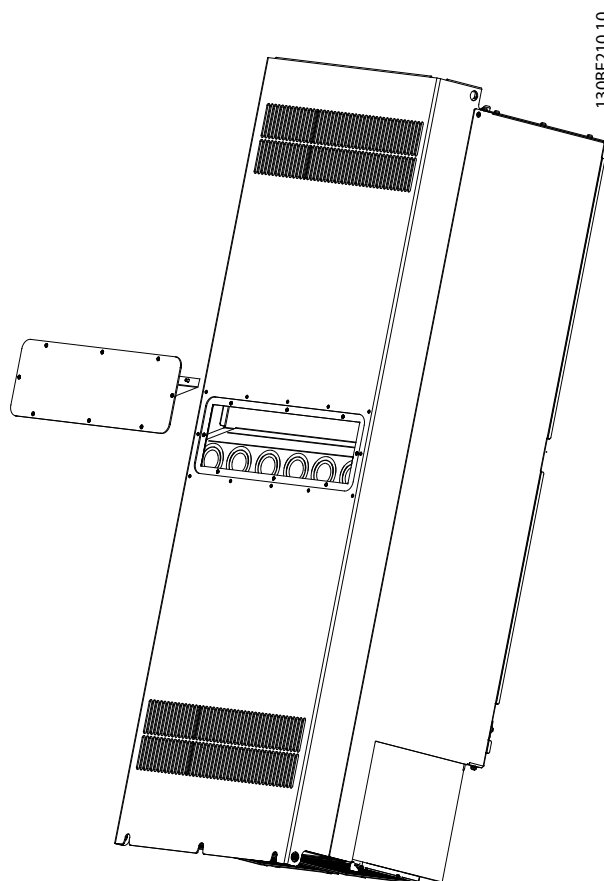


Illustration 8.1 Heat Sink Access Panel Removed from the Rear of the Drive



## 8.3 Status Messages

When the drive is in status mode, status messages automatically appear in the lowest line of the LCP display. Refer to *Illustration 8.2*. Status messages are defined in *Table 8.1 – Table 8.3*.

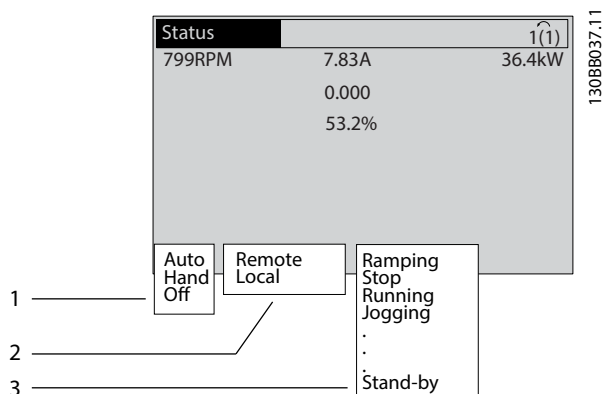

1	Where the stop/start command originates. Refer to <i>Table 8.1</i> .
2	Where the speed control originates. Refer to <i>Table 8.2</i> .
3	Provides the drive status. Refer to <i>Table 8.3</i> .

Illustration 8.2 Status Display

### NOTICE

In auto/remote mode, the drive requires external commands to execute functions.

*Table 8.1 to Table 8.3* define the meaning of the shown status messages.

Off	The drive does not react to any control signal until [Auto On] or [Hand On] is pressed.
Auto	The start/stop commands are sent via the control terminals and/or the serial communication.
Hand	The navigation keys on the LCP can be used to control the drive. Stop commands, reset, reversing, DC brake, and other signals applied to the control terminals override local control.

Table 8.1 Operating Mode

Remote	The speed reference is given from <ul style="list-style-type: none"> <li>External signals.</li> <li>Serial communication.</li> <li>Internal preset references.</li> </ul>
Local	The drive uses reference values from the LCP.

Table 8.2 Reference Site

AC brake	AC brake was selected in <i>parameter 2-10 Brake Function</i> . The AC brake overmagnetizes the motor to achieve a controlled slow down.
AMA finish OK	Automatic motor adaptation (AMA) was carried out successfully.
AMA ready	AMA is ready to start. To start, press [Hand On].
AMA running	AMA process is in progress.
Braking	The brake chopper is in operation. The brake resistor absorbs the generative energy.
Braking max.	The brake chopper is in operation. The power limit for the brake resistor defined in <i>parameter 2-12 Brake Power Limit (kW)</i> has been reached.
Coast	<ul style="list-style-type: none"> <li>[2] <i>Coast inverse</i> was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not connected.</li> <li>Coast activated by serial communication.</li> </ul>
Ctrl. ramp-down	<p>[1] <i>Ctrl. ramp-down</i> was selected in <i>parameter 14-10 Mains Failure</i>.</p> <ul style="list-style-type: none"> <li>The mains voltage is below the value set in <i>parameter 14-11 Mains Voltage at Mains Fault</i> at mains fault.</li> <li>The drive ramps down the motor using a controlled ramp down.</li> </ul>
Current high	The drive output current is above the limit set in <i>parameter 4-51 Warning Current High</i> .
Current low	The drive output current is below the limit set in <i>parameter 4-52 Warning Speed Low</i> .
DC hold	DC hold is selected in <i>parameter 1-80 Function at Stop</i> and a stop command is active. The motor is held by a DC current set in <i>parameter 2-00 DC Hold Current</i> .
DC stop	<p>The motor is held with a DC current (<i>parameter 2-01 DC Brake Current</i>) for a specified time (<i>parameter 2-02 DC Braking Time</i>).</p> <ul style="list-style-type: none"> <li>DC brake is activated in <i>parameter 2-03 DC Brake Cut In Speed [RPM]</i> and a stop command is active.</li> <li>DC brake (inverse) is selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not active.</li> <li>The DC brake is activated via serial communication.</li> </ul>
Feedback high	The sum of all active feedbacks is above the feedback limit set in <i>parameter 4-57 Warning Feedback High</i> .
Feedback low	The sum of all active feedbacks is below the feedback limit set in <i>parameter 4-56 Warning Feedback Low</i> .

Freeze output	The remote reference is active, which holds the present speed. <ul style="list-style-type: none"> <li>[20] Freeze Output was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is active. Speed control is only possible via the terminal functions speed up and speed down.</li> <li>Hold ramp is activated via serial communication.</li> </ul>
Freeze output request	A freeze output command has been given, but the motor remains stopped until a run permissive signal is received.
Freeze ref.	[19] Freeze Reference was selected as a function for a digital input ( <i>parameter group 5-1* Digital Inputs</i> ). The corresponding terminal is active. The drive saves the actual reference. Changing the reference is now only possible via terminal functions speed up and speed down.
Jog request	A jog command has been given, but the motor is stopped until a run permissive signal is received via a digital input.
Jogging	The motor is running as programmed in <i>parameter 3-19 Jog Speed [RPM]</i> . <ul style="list-style-type: none"> <li>[14] Jog was selected as function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal (for example, terminal 29) is active.</li> <li>The jog function is activated via the serial communication.</li> <li>The jog function was selected as a reaction for a monitoring function (for example, No signal). The monitoring function is active.</li> </ul>
Motor check	In <i>parameter 1-80 Function at Stop</i> , [2] Motor Check was selected. A stop command is active. To ensure that a motor is connected to the drive, a permanent test current is applied to the motor.
OVC control	Overvoltage control was activated in <i>parameter 2-17 Over-voltage Control</i> , [2] Enabled. The connected motor is supplying the drive with generative energy. The overvoltage control adjusts the V/Hz ratio to run the motor in controlled mode and to prevent the drive from tripping.
Power unit off	(For drives with a 24 V DC external supply installed only.) Mains supply to the drive is removed, but the control card is supplied by the 24 V DC external supply.

Protection md	Protection mode is active. The unit has detected a critical status (an overcurrent or overvoltage). <ul style="list-style-type: none"> <li>To avoid tripping, the switching frequency is reduced to 1500 kHz if <i>parameter 14-55 Output Filter</i> is set to [2] Sine-Wave Filter Fixed. Otherwise, the switching frequency is reduced to 1000 Hz.</li> <li>If possible, protection mode ends after approximately 10 s.</li> <li>Protection mode can be restricted in <i>parameter 14-26 Trip Delay at Inverter Fault</i>.</li> </ul>
QStop	The motor is decelerating using <i>parameter 3-81 Quick Stop Ramp Time</i> . <ul style="list-style-type: none"> <li>[4] Quick stop inverse was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not active.</li> <li>The quick stop function was activated via serial communication.</li> </ul>
Ramping	The motor is accelerating/decelerating using the active ramp up/down. The reference, a limit value, or a standstill is not yet reached.
Ref. high	The sum of all active references is above the reference limit set in <i>parameter 4-55 Warning Reference High</i> .
Ref. low	The sum of all active references is below the reference limit set in <i>parameter 4-54 Warning Reference Low</i> .
Run on ref.	The drive is running in the reference range. The feedback value matches the setpoint value.
Run request	A start command has been given, but the motor is stopped until a run permissive signal is received via digital input.
Running	The drive is driving the motor.
Sleep mode	The energy saving function is enabled. This function being enabled means that now the motor has stopped, but that it restarts automatically when required.
Speed high	The motor speed is above the value set in <i>parameter 4-53 Warning Speed High</i> .
Speed low	The motor speed is below the value set in <i>parameter 4-52 Warning Speed Low</i> .
Standby	In auto-on mode, the drive starts the motor with a start signal from a digital input or serial communication.
Start delay	In <i>parameter 1-71 Start Delay</i> , a delay starting time was set. A start command is activated and the motor starts after the start delay time expires.

Start fwd/rev	[12] Enable Start Forward and [13] Enable Start Reverse were selected as functions for 2 different digital inputs ( <i>parameter group 5-1* Digital Inputs</i> ). The motor starts in forward or reverse depending on which corresponding terminal is activated.
Stop	The drive has received a stop command from 1 of the following: <ul style="list-style-type: none"> <li>• LCP.</li> <li>• Digital input.</li> <li>• Serial communication.</li> </ul>
Trip	An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, reset the drive using 1 of the following: <ul style="list-style-type: none"> <li>• Pressing [Reset].</li> <li>• Remotely by control terminals.</li> <li>• Via serial communication.</li> </ul> Pressing [Reset] or remotely by control terminals or via serial communication.
Trip lock	An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, cycle power to the drive. Reset the drive manually by 1 of the following: <ul style="list-style-type: none"> <li>• Pressing [Reset].</li> <li>• Remotely by control terminals.</li> <li>• Via serial communication.</li> </ul>

Table 8.3 Operation Status

## 8.4 Warning and Alarm Types

The drive software issues warnings and alarms to assist in diagnosing issues. The warning or alarm number appears in the LCP.

### Warning

A warning indicates that the drive has encountered an abnormal operating condition that leads to an alarm. A warning stops when the abnormal condition is removed or resolved.

### Alarm

An alarm indicates a fault that requires immediate attention. The fault always triggers a trip or trip lock. Reset the drive after an alarm.

Reset the drive in any of 4 ways:

- Press [Reset]/[Off/Reset].
- Digital reset input command.
- Serial communication reset input command.
- Auto reset.

### Trip

When tripping, the drive suspends operation to prevent damage to the drive and other equipment. When a trip occurs, the motor coasts to a stop. The drive logic continues to operate and monitor the drive status. After the fault condition is remedied, the drive is ready for a reset.

### Trip lock

When trip locking, the drive suspends operation to prevent damage to the drive and other equipment. When a trip lock occurs, the motor coasts to a stop. The drive logic continues to operate and monitor the drive status. The drive starts a trip lock only when serious faults occur that can damage the drive or other equipment. After the faults are fixed, cycle the input power before resetting the drive.

### Warning and alarm displays

- A warning is shown in the LCP along with the warning number.
- An alarm flashes along with the alarm number.


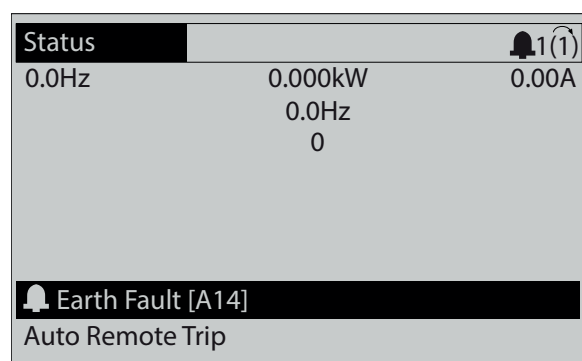


Illustration 8.3 Alarm Example

In addition to the text and alarm code in the LCP, there are 3 status indicator lights.

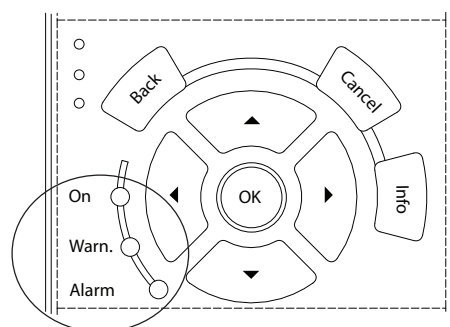

	Warning indicator light	Alarm indicator light
Warning	On	Off
Alarm	Off	On (flashing)
Trip lock	On	On (flashing)

Illustration 8.4 Status Indicator Lights

## 8.5 List of Warnings and Alarms

The following warning and alarm information defines each warning or alarm condition, provides the probable cause for the condition, and details a remedy or troubleshooting procedure.

### WARNING 1, 10 Volts low

The control card voltage is less than 10 V from terminal 50. Remove some of the load from terminal 50, as the 10 V supply is overloaded. Maximum 15 mA or minimum 590 Ω.

A short circuit in a connected potentiometer or incorrect wiring of the potentiometer can cause this condition.

#### Troubleshooting

- Remove the wiring from terminal 50. If the warning clears, the problem is with the wiring. If the warning does not clear, replace the control card.

### WARNING/ALARM 2, Live zero error

This warning or alarm only appears if programmed in *parameter 6-01 Live Zero Timeout Function*. The signal on 1 of the analog inputs is less than 50% of the minimum value programmed for that input. Broken wiring or a faulty device sending the signal can cause this condition.

#### Troubleshooting

- Check connections on all analog mains terminals.
  - Control card terminals 53 and 54 for signals, terminal 55 common.
  - VLT® General Purpose I/O MCB 101 terminals 11 and 12 for signals, terminal 10 common.
  - VLT® Analog I/O Option MCB 109 terminals 1, 3, and 5 for signals, terminals 2, 4, and 6 common.
- Check that the drive programming and switch settings match the analog signal type.
- Perform an input terminal signal test.

### WARNING/ALARM 3, No motor

No motor has been connected to the output of the drive.

### WARNING/ALARM 4, Mains phase loss

A phase is missing on the supply side, or the mains voltage imbalance is too high. This message also appears for a fault in the input rectifier. Options are programmed in *parameter 14-12 Function at Mains Imbalance*.

#### Troubleshooting

- Check the supply voltage and supply currents to the drive.

### WARNING 5, DC link voltage high

The DC-link voltage (DC) is higher than the high-voltage warning limit. The limit depends on the drive voltage rating. The unit is still active.

### WARNING 6, DC link voltage low

The DC-link voltage (DC) is lower than the low-voltage warning limit. The limit depends on the drive voltage rating. The unit is still active.

### WARNING/ALARM 7, DC overvoltage

If the DC-link voltage exceeds the limit, the drive trips after a time.

#### Troubleshooting

- Extend the ramp time.
- Change the ramp type.
- Increase *parameter 14-26 Trip Delay at Inverter Fault*.
- Check that the supply voltage matches the active front-end drive voltage.
- Perform input voltage test.

### WARNING/ALARM 8, DC under voltage

If the DC-link voltage drops below the undervoltage limit, the drive checks for 24 V DC back-up supply. If no 24 V DC back-up supply is connected, the drive trips after a fixed time delay. The time delay varies with unit size.

#### Troubleshooting

- Check that the supply voltage matches the drive voltage.
- Perform an input voltage test.
- Perform a soft-charge circuit test.

### WARNING/ALARM 9, Inverter overload

The drive has run with more than 100% overload for too long and is about to cut out. The counter for electronic thermal inverter protection issues a warning at 98% and trips at 100% with an alarm. The drive cannot be reset until the counter is below 90%.

#### Troubleshooting

- Compare the output current shown on the LCP with the drive rated current.
- Compare the output current shown on the LCP with the measured motor current.
- Show the thermal drive load on the LCP and monitor the value. When running above the drive continuous current rating, the counter increases. When running below the drive continuous current rating, the counter decreases.

### WARNING/ALARM 10, Motor overload temperature

According to the electronic thermal protection (ETR), the motor is too hot.

Select 1 of these options:

- The drive issues a warning or an alarm when the counter is >90% if *parameter 1-90 Motor Thermal Protection* is set to warning options.
- The drive trips when the counter reaches 100% if *parameter 1-90 Motor Thermal Protection* is set to trip options.

The fault occurs when the motor runs with more than 100% overload for too long.

#### Troubleshooting

- Check for motor overheating.
- Check if the motor is mechanically overloaded.
- Check that the motor current set in *parameter 1-24 Motor Current* is correct.
- Ensure that the motor data in *parameters 1-20 to 1-25* is set correctly.
- If an external fan is in use, check that it is selected in *parameter 1-91 Motor External Fan*.
- Running AMA in *parameter 1-29 Automatic Motor Adaptation (AMA)* tunes the drive to the motor more accurately and reduces thermal loading.

#### WARNING/ALARM 11, Motor thermistor overtemp

Check whether the thermistor is disconnected. Select whether the drive issues a warning or an alarm in *parameter 1-90 Motor Thermal Protection*.

#### Troubleshooting

- Check for motor overheating.
- Check if the motor is mechanically overloaded.
- When using terminal 53 or 54, check that the thermistor is connected correctly between either terminal 53 or 54 (analog voltage input) and terminal 50 (+10 V supply). Also check that the terminal switch for 53 or 54 is set for voltage. Check that *parameter 1-93 Thermistor Resource* selects terminal 53 or 54.
- When using terminal 18, 19, 31, 32, or 33 (digital inputs), check that the thermistor is connected correctly between the digital input terminal used (digital input PNP only) and terminal 50. Select the terminal to use in *parameter 1-93 Thermistor Resource*.

#### WARNING/ALARM 12, Torque limit

The torque has exceeded the value in *parameter 4-16 Torque Limit Motor Mode* or the value in *parameter 4-17 Torque Limit Generator Mode*. *Parameter 14-25 Trip Delay at Torque Limit* can change this warning from a warning-only condition to a warning followed by an alarm.

#### Troubleshooting

- If the motor torque limit is exceeded during ramp-up, extend the ramp-up time.
- If the generator torque limit is exceeded during ramp-down, extend the ramp-down time.
- If torque limit occurs while running, increase the torque limit. Make sure that the system can operate safely at a higher torque.
- Check the application for excessive current draw on the motor.

#### WARNING/ALARM 13, Over current

The inverter peak current limit (approximately 200% of the rated current) is exceeded. The warning lasts approximately 1.5 s, then the drive trips and issues an alarm. Shock loading or quick acceleration with high-inertia loads can cause this fault. If the acceleration during ramp-up is quick, the fault can also appear after kinetic back-up. If extended mechanical brake control is selected, a trip can be reset externally.

#### Troubleshooting

- Remove the power and check if the motor shaft can be turned.
- Check that the motor size matches the drive.
- Check that the motor data is correct in *parameters 1-20 to 1-25*.

#### ALARM 14, Earth (ground) fault

There is current from the output phase to ground, either in the cable between the drive and the motor, or in the motor itself. The current transducers detect the ground fault by measuring current going out from the drive and current going into the drive from the motor. Ground fault is issued if the deviation of the 2 currents is too large. The current going out of the drive must be the same as the current going into the drive.

#### Troubleshooting

- Remove power to the drive and repair the ground fault.
- Check for ground faults in the motor by measuring the resistance to ground of the motor cables and the motor with a megohmmeter.
- Reset any potential individual offset in the 3 current transducers in the drive. Perform the manual initialization or perform a complete AMA. This method is most relevant after changing the power card.

#### ALARM 15, Hardware mismatch

A fitted option is not operational with the present control card hardware or software.

Record the value of the following parameters and contact Danfoss.

- *Parameter 15-40 FC Type.*
- *Parameter 15-41 Power Section.*
- *Parameter 15-42 Voltage.*
- *Parameter 15-43 Software Version.*
- *Parameter 15-45 Actual Typecode String.*
- *Parameter 15-49 SW ID Control Card.*
- *Parameter 15-50 SW ID Power Card.*
- *Parameter 15-60 Option Mounted.*
- *Parameter 15-61 Option SW Version* (for each option slot).

#### ALARM 16, Short circuit

There is short-circuiting in the motor or motor wiring.

##### Troubleshooting

- Remove the power to the drive and repair the short circuit.



#### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Disconnect power before proceeding.

#### WARNING/ALARM 17, Control word timeout

There is no communication to the drive.

The warning is only active when *parameter 8-04 Control Word Timeout Function* is NOT set to [0] Off.

If *parameter 8-04 Control Word Timeout Function* is set to [5] Stop and trip, a warning appears, and the drive ramps down to a stop and shows an alarm.

##### Troubleshooting

- Check the connections on the serial communication cable.
- Increase *parameter 8-03 Control Word Timeout Time*.
- Check the operation of the communication equipment.
- Verify that proper EMC installation was performed.

#### WARNING/ALARM 20, Temp. input error

The temperature sensor is not connected.

#### WARNING/ALARM 21, Parameter error

The parameter is out of range. The parameter number is shown in the display.

##### Troubleshooting

- Set the affected parameter to a valid value.

#### WARNING 22, Hoist mechanical brake

0 = The torque reference was not reached before timeout.

1 = There was no brake feedback before the timeout.

#### WARNING 23, Internal fan fault

The fan warning function is a protective function that checks if the fan is running/mounted. The fan warning can be disabled in *parameter 14-53 Fan Monitor ([0] Disabled)*.

There is a feedback sensor mounted in the fan. If the fan is commanded to run and there is no feedback from the sensor, this alarm appears. This alarm also shows if there is a communication error between the fan power card and the control card.

Check the alarm log (see *chapter 3.6 Local Control Panel (LCP)*) for the report value associated with this warning.

If the report value is 2, there is a hardware problem with 1 of the fans. If the report value is 12, there is a communication problem between the fan power card and the control card.

##### Fan troubleshooting

- Cycle power to the drive and check that the fan operates briefly at start-up.
- Check for proper fan operation. Use *parameter group 43-\*\* Unit Readouts* to show the speed of each fan.

##### Fan power card troubleshooting

- Check the wiring between the fan power card and the control card.
- Fan power card may need to be replaced.
- Control card may need to be replaced.

#### WARNING 24, External fan fault

The fan warning function is a protective function that checks if the fan is running/mounted. The fan warning can be disabled in *parameter 14-53 Fan Monitor ([0] Disabled)*.

There is a feedback sensor mounted in the fan. If the fan is commanded to run and there is no feedback from the sensor, this alarm appears. This alarm also shows if there is a communication error between the power card and the control card.

Check the alarm log (see *chapter 3.6 Local Control Panel (LCP)*) for the report value associated with this warning.

If the report value is 1, there is a hardware problem with 1 of the fans. If the report value is 11, there is a communication problem between the power card and the control card.

##### Fan troubleshooting

- Cycle power to the drive and check that the fan operates briefly at start-up.
- Check for proper fan operation. Use *parameter group 43-\*\* Unit Readouts* to show the speed of each fan.

##### Power card troubleshooting

- Check the wiring between the power card and the control card.
- Power card may need to be replaced.
- Control card may need to be replaced.

#### WARNING 25, Brake resistor short circuit

The brake resistor is monitored during operation. If a short circuit occurs, the brake function is disabled and the warning appears. The drive is still operational, but without the brake function.

##### Troubleshooting

- Remove the power to the drive and replace the brake resistor (refer to *parameter 2-15 Brake Check*).

#### WARNING/ALARM 26, Brake resistor power limit

The power transmitted to the brake resistor is calculated as a mean value over the last 120 s of run-time. The calculation is based on the DC-link voltage and the brake resistor value set in *parameter 2-16 AC brake Max. Current*. The warning is active when the dissipated braking power is higher than 90% of the brake resistor power. If option [2] *Trip* is selected in *parameter 2-13 Brake Power Monitoring*, the drive trips when the dissipated braking power reaches 100%.

The brake transistor is monitored during operation, and if a short circuit occurs, the brake function is disabled, and a warning is issued. The drive is still operational, but since the brake transistor has short-circuited, substantial power is transmitted to the brake resistor, even if it is inactive.

### ⚠ WARNING

#### OVERHEATING RISK

A surge in power can cause the brake resistor to overheat and possibly catch fire. Failure to remove power to the drive and remove the brake resistor can cause equipment damage.

#### Troubleshooting

- Remove power to the drive and remove the brake resistor.

#### WARNING/ALARM 28, Brake check failed

The brake resistor is not connected or not working.

#### Troubleshooting

- Check *parameter 2-15 Brake Check*.

#### ALARM 29, Heat sink temp

The maximum temperature of the heat sink has been exceeded. This alarm is based on the temperature measured by the heat sink sensor mounted inside the IGBT modules. The temperature fault does not reset until the temperature drops below a defined heat sink temperature. The trip and reset points are different based on the drive power size.

#### Troubleshooting

- Check for the following conditions:
  - Ambient temperature too high.
  - Motor cable too long.
  - Incorrect airflow clearance above and below the drive.
  - Blocked airflow around the drive.
  - Damaged heat sink fan.
  - Dirty heat sink.
- Check fan resistance.
- Check soft charge fuses.
- Check IGBT thermal.

#### ALARM 30, Motor phase U missing

Motor phase U between the drive and the motor is missing.

### ⚠ WARNING

#### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that there is no remaining voltage on the drive.

#### Troubleshooting

- Remove the power from the drive and check motor phase U.

#### ALARM 31, Motor phase V missing

Motor phase V between the drive and the motor is missing.

### ⚠ WARNING

#### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that there is no remaining voltage on the drive.

#### Troubleshooting

- Remove the power from the drive and check motor phase V.

#### ALARM 32, Motor phase W missing

Motor phase W between the drive and the motor is missing.

## ⚠ WARNING

### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Only qualified personnel must perform installation, start-up, and maintenance.
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that there is no remaining voltage on the drive.

### Troubleshooting

- Remove the power from the drive and check motor phase W.

### ALARM 33, Inrush fault

Too many power-ups have occurred within a short time period.

### Troubleshooting

- Let the unit cool to operating temperature.
- Check potential DC-link fault to ground.

### WARNING/ALARM 34, Fieldbus communication fault

The fieldbus on the communication option card is not working.

### WARNING/ALARM 35, Option fault

An option alarm is received. The alarm is option-specific. The most likely cause is a power-up or a communication fault.

### WARNING/ALARM 36, Mains failure

This warning/alarm is only active if the supply voltage to the drive system is lost and *parameter 14-10 Mains Failure* is not set to option [0] *No Function*.

- Check the fuses to the drive system and the mains supply to the unit.
- Check that mains voltage conforms to product specifications.
- Check that the following conditions are not present:  
*Alarm 307, Excessive THD(V), alarm 321, Voltage imbalance, warning 417, Mains undervoltage, or warning 418, Mains overvoltage* is reported if any of the listed conditions are true:
  - The 3-phase voltage magnitude drops below 25% of the nominal mains voltage.
  - Any single-phase voltage exceeds 10% of the nominal mains voltage.
  - Percent of phase or magnitude imbalance exceeds 8%.

- Voltage THD exceeds 10%.

### ALARM 37, Phase imbalance

There is a current imbalance between the power units.

### ALARM 38, Internal fault

When an internal fault occurs, a code number defined in *Table 8.4* is shown.

### Troubleshooting

- Cycle power.
- Check that the option is properly installed.
- Check for loose or missing wiring.

It may be necessary to contact the Danfoss supplier or service department. Note the code number for further troubleshooting directions.

Number	Text
0	The serial port cannot be initialized. Contact the Danfoss supplier or Danfoss Service Department.
256–259, 266, 268	The power EEPROM data is defective or too old. Replace the power card.
512–519	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.
783	Parameter value outside of minimum/maximum limits.
1024–1284	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.
1299	The option SW in slot A is too old.
1300	The option SW in slot B is too old.
1301	The option SW in slot C0 is too old.
1302	The option SW in slot C1 is too old.
1315	The option SW in slot A is not supported (not allowed).
1316	The option SW in slot B is not supported (not allowed).
1317	The option SW in slot C0 is not supported (not allowed).
1318	The option SW in slot C1 is not supported (not allowed).
1360–2819	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.
2561	Replace control card.
2820	LCP stack overflow.
2821	Serial port overflow.
2822	USB port overflow.
3072–5122	Parameter value is outside its limits.
5123	Option in slot A: Hardware incompatible with control board hardware.
5124	Option in slot B: Hardware incompatible with control board hardware.
5125	Option in slot C0: Hardware incompatible with control board hardware.
5126	Option in slot C1: Hardware incompatible with control board hardware.



Number	Text
5127	Illegal option combination (2 options of the same kind mounted, or encoder in E0 and resolver in E1 or similar).
5168	Safe stop/safe torque off was detected on a control card that does not have safe stop/safe torque off.
5376–65535	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.

Table 8.4 Internal Fault Codes

#### ALARM 39, Heat sink sensor

No feedback from the heat sink temperature sensor.

The signal from the IGBT thermal sensor is not available on the power card. The problem could be on the power card, on the gatedrive card, or the ribbon cable between the power card and gatedrive card.

#### WARNING 40, Overload of digital output terminal 27

Check the load connected to terminal 27 or remove the short-circuit connection. Check *parameter 5-00 Digital I/O Mode* and *parameter 5-01 Terminal 27 Mode*.

#### WARNING 41, Overload of digital output terminal 29

Check the load connected to terminal 29 or remove the short-circuit connection. Also check *parameter 5-00 Digital I/O Mode* and *parameter 5-02 Terminal 29 Mode*.

#### WARNING 42, Overload of digital output on X30/6 or overload of digital output on X30/7

For terminal X30/6, check the load connected to terminal X30/6 or remove the short-circuit connection. Also check *parameter 5-32 Term X30/6 Digi Out (MCB 101)* (VLT® General Purpose I/O MCB 101).

For terminal X30/7, check the load connected to terminal X30/7 or remove the short-circuit connection. Check *parameter 5-33 Term X30/7 Digi Out (MCB 101)* (VLT® General Purpose I/O MCB 101).

#### ALARM 43, Ext. supply

VLT® Extended Relay Option MCB 113 is mounted without external 24 V DC. Either connect a 24 V DC external supply or specify that no external supply is used via *parameter 14-80 Option Supplied by External 24VDC, [0] No*. A change in *parameter 14-80 Option Supplied by External 24VDC* requires a power cycle.

#### ALARM 45, Earth fault 2

Ground fault.

##### Troubleshooting

- Check for proper grounding and loose connections.
- Check for proper wire size.
- Check the motor cables for short circuits or leakage currents.

#### ALARM 46, Power card supply

The supply on the power card is out of range. Another reason can be a defective heat sink fan.

There are 3 supplies generated by the switch mode supply (SMPS) on the power card:

- 24 V.
- 5 V.
- $\pm 18$  V.

When powered with VLT® 24 V DC Supply MCB 107, only the 24 V and 5 V supplies are monitored. When powered with 3-phase mains voltage, all 3 supplies are monitored.

##### Troubleshooting

- Check for a defective power card.
- Check for a defective control card.
- Check for a defective option card.
- If a 24 V DC supply is used, verify proper supply power.
- Check for a defective heat sink fan.

#### WARNING 47, 24 V supply low

The supply on the power card is out of range.

There are 3 supplies generated by the switch mode supply (SMPS) on the power card:

- 24 V.
- 5 V.
- $\pm 18$  V.

##### Troubleshooting

- Check for a defective power card.

#### WARNING 48, 1.8 V supply low

The 1.8 V DC supply used on the control card is outside of the allowable limits. The supply is measured on the control card.

##### Troubleshooting

- Check for a defective control card.
- If an option card is present, check for overvoltage.

#### WARNING 49, Speed limit

The warning is shown when the speed is outside of the specified range in *parameter 4-11 Motor Speed Low Limit [RPM]* and *parameter 4-13 Motor Speed High Limit [RPM]*. When the speed is below the specified limit in *parameter 1-86 Trip Speed Low [RPM]* (except when starting or stopping), the drive trips.

#### ALARM 50, AMA calibration failed

Contact the Danfoss supplier or Danfoss Service Department.

#### ALARM 51, AMA check $U_{nom}$ and $I_{nom}$

The settings for motor voltage, motor current, and motor power are wrong.

##### Troubleshooting

- Check the settings in *parameters 1-20 to 1-25*.

#### ALARM 52, AMA low $I_{nom}$

The motor current is too low.

##### Troubleshooting

- Check the settings in *parameter 1-24 Motor Current*.

#### ALARM 53, AMA motor too big

The motor is too large for the AMA to operate.

#### ALARM 54, AMA motor too small

The motor is too small for the AMA to operate.

#### ALARM 55, AMA parameter out of range

The AMA cannot run because the parameter values of the motor are outside of the acceptable range.

#### ALARM 56, AMA interrupted by user

The AMA is manually interrupted.

#### ALARM 57, AMA internal fault

Try to restart the AMA. Repeated restarts can overheat the motor.

#### ALARM 58, AMA Internal fault

Contact the Danfoss supplier.

#### WARNING 59, Current limit

The current is higher than the value in *parameter 4-18 Current Limit*. Ensure that the motor data in *parameters 1-20 to 1-25* is set correctly. Increase the current limit if necessary. Ensure that the system can operate safely at a higher limit.

#### WARNING 60, External interlock

A digital input signal indicates a fault condition external to the drive. An external interlock has commanded the drive to trip. Clear the external fault condition. To resume normal operation, apply 24 V DC to the terminal programmed for external interlock, and reset the drive.

#### WARNING 61, Tracking Error

An error has been detected between the calculated motor speed and the speed measurement from the feedback device. The function for Warning/Alarm/Disable is set in *parameter 4-30 Motor Feedback Loss Function*. Error setting is found in *parameter 4-31 Motor Feedback Speed Error*. Allowed error time is found in *parameter 4-32 Motor Feedback Loss Timeout*. During the commissioning process, this function can be useful.

#### WARNING 62, Output frequency at maximum limit

If the output frequency reaches the value set in *parameter 4-19 Max Output Frequency*, the drive issues a warning. The warning ceases when the output drops below the maximum limit. If the drive is unable to limit the frequency, it trips and issues an alarm. The latter may happen in the flux mode if the drive loses control of the motor.

##### Troubleshooting

- Check the application for possible causes.
- Increase the output frequency limit. Ensure that the system can operate safely at a higher output frequency.

#### ALARM 63, Mechanical brake low

The actual motor current has not exceeded the release brake current within the start delay time window.

#### WARNING 64, Voltage Limit

The load and speed combination demands a motor voltage higher than the actual DC-link voltage.

#### WARNING/ALARM 65, Control card over temperature

The cutout temperature of the control card is 85 °C (185 °F).

##### Troubleshooting

- Check that the ambient operating temperature is within the limits.
- Check for clogged filters.
- Check the fan operation.
- Check the control card.

#### WARNING 66, Heat sink temperature low

The drive is too cold to operate. This warning is based on the temperature sensor in the IGBT module. Increase the ambient temperature of the unit. Also, a trickle amount of current can be supplied to the drive whenever the motor is stopped by setting *parameter 2-00 DC Hold/Preheat Current* to 5% and *parameter 1-80 Function at Stop*.

#### ALARM 67, Option module configuration has changed

One or more options have either been added or removed since the last power-down. Check that the configuration change is intentional and reset the unit.

#### ALARM 68, Safe Stop activated

Safe Torque Off (STO) has been activated. To resume normal operation, apply 24 V DC to terminal 37, then send a reset signal (via bus, digital I/O, or by pressing [Reset]).

#### ALARM 69, Power card temperature

The temperature sensor on the power card is either too hot or too cold.

##### Troubleshooting

- Check that the ambient operating temperature is within limits.
- Check for clogged filters.
- Check fan operation.
- Check the power card.

#### ALARM 70, Illegal FC configuration

The control card and power card are incompatible. To check compatibility, contact the Danfoss supplier with the type code from the unit nameplate and the part numbers of the cards.

#### WARNING/ALARM 71, PTC 1 Safe Stop

Safe Torque Off (STO) has been activated from the VLT® PTC Thermistor Card MCB 112 because the motor is too warm. Once the motor cools and the digital input from the MCB 112 is deactivated, normal operation can resume when the MCB 112 applies 24 V DC to terminal 37 again. When the motor is ready for normal operation, a reset signal is sent (via serial communication, digital I/O, or by

pressing [Reset] on the LCP). If automatic restart is enabled, the motor can start when the fault is cleared.

#### ALARM 72, Dangerous failure

Safe Torque Off (STO) with trip lock. Unexpected signal levels on safe torque off and digital input from the VLT® PTC Thermistor Card MCB 112.

#### WARNING 73, Safe Stop auto restart

Safe Torque Off (STO) activated. With automatic restart enabled, the motor can start when the fault is cleared.

#### ALARM 74, PTC Thermistor

Alarm related to VLT® PTC Thermistor Card MCB 112. The PTC is not working.

#### ALARM 75, Illegal profile sel.

Do not write the parameter value while the motor is running. Stop the motor before writing the MCO profile to *parameter 8-10 Control Word Profile*.

#### WARNING 76, Power unit setup

The required number of power units does not match the detected number of active power units. When replacing an enclosure size F module, this warning occurs if the power-specific data in the module power card does not match the rest of the drive. If the power card connection is lost, the unit also triggers this warning.

#### Troubleshooting

- Confirm that the spare part and its power card are the correct part number.
- Ensure that the 44-pin cables between the MDCIC and power cards are mounted properly.

#### WARNING 77, Reduced power mode

This warning indicates that the drive is operating in reduced power mode (that is, less than the allowed number of inverter sections). This warning is generated on power cycle when the drive is set to run with fewer inverters and remains on.

#### ALARM 78, Tracking error

The difference between setpoint value and actual value exceeds the value in *parameter 4-35 Tracking Error*.

#### Troubleshooting

- Disable the function or select an alarm/warning in *parameter 4-34 Tracking Error Function*.
- Investigate the mechanics around the load and motor. Check feedback connections from motor encoder to drive.
- Select motor feedback function in *parameter 4-30 Motor Feedback Loss Function*.
- Adjust the tracking error band in *parameter 4-35 Tracking Error* and *parameter 4-37 Tracking Error Ramping*.

#### ALARM 79, Illegal power section configuration

The scaling card is the incorrect part number or not installed. Also, the MK102 connector on the power card could not be installed.

#### ALARM 80, Drive initialised to default value

Parameter settings are initialized to default settings after a manual reset. To clear the alarm, reset the unit.

#### ALARM 81, CSIV corrupt

CSIV file has syntax errors.

#### ALARM 82, CSIV parameter error

CSIV failed to initialize a parameter.

#### ALARM 83, Illegal option combination

The mounted options are incompatible.

#### ALARM 84, No safety option

The safety option was removed without applying a general reset. Reconnect the safety option.

#### ALARM 85, Dang fail PB

PROFIBUS/PROFIsafe error.

#### ALARM 88, Option detection

A change in the option layout is detected.

*Parameter 14-89 Option Detection* is set to [0] Frozen configuration and the option layout has been changed.

- To apply the change, enable option layout changes in *parameter 14-89 Option Detection*.
- Alternatively, restore the correct option configuration.

#### WARNING 89, Mechanical brake sliding

The hoist brake monitor detects a motor speed exceeding 10 RPM.

#### ALARM 90, Feedback monitor

Check the connection to encoder/resolver option and, if necessary, replace VLT® Encoder Input MCB 102 or VLT® Resolver Input MCB 103.

#### ALARM 91, Analog input 54 wrong settings

Set switch S202 in position OFF (voltage input) when a KTY sensor is connected to analog input terminal 54.

#### WARNING 98, Clock fault

Time is not set or the RTC clock has failed.

#### Troubleshooting

- Reset the clock in *parameter 0-70 Date and Time*.

#### ALARM 99, Locked rotor

The rotor is blocked.

#### WARNING/ALARM 104, Mixing fan fault

The fan is not operating. The fan monitor checks that the fan is spinning at power-up or whenever the mixing fan is turned on. The mixing-fan fault can be configured as a warning or an alarm trip in *parameter 14-53 Fan Monitor*.

#### Troubleshooting

- Cycle power to the drive to determine if the warning/alarm returns.

#### WARNING/ALARM 122, Mot. rotat. unexp.

The drive performs a function that requires the motor to be at standstill, for example DC hold for PM motors.

#### **WARNING 163, ATEX ETR cur.lim.warning**

The drive has run above the characteristic curve for more than 50 s. The warning is activated at 83% and deactivated at 65% of the allowed thermal overload.

#### **ALARM 164, ATEX ETR cur.lim.alarm**

Operating above the characteristic curve for more than 60 s within a period of 600 s activates the alarm, and the drive trips.

#### **WARNING 165, ATEX ETR freq.lim.warning**

The drive is running for more than 50 s below the allowed minimum frequency (*parameter 1-98 ATEX ETR interpol. points freq.*).

#### **ALARM 166, ATEX ETR freq.lim.alarm**

The drive has operated for more than 60 s (in a period of 600 s) below the allowed minimum frequency (*parameter 1-98 ATEX ETR interpol. points freq.*).

#### **ALARM 244, Heat sink temperature**

The maximum temperature of the heat sink has been exceeded. The temperature fault cannot reset until the temperature drops below a defined heat sink temperature. The trip and reset points are different based on the power size. This alarm is equivalent to *alarm 29, Heat Sink Temp.*

#### **Troubleshooting**

Check for the following conditions:

- Ambient temperature too high.
- Motor cables too long.
- Incorrect airflow clearance above or below the AC drive.
- Blocked airflow around the unit.
- Damaged heat sink fan.
- Dirty heat sink.

#### **WARNING 251, New typecode**

The power card or other components are replaced, and the type code has changed.

#### **ALARM 421, Temperature fault**

A fault caused by the on-board temperature sensor is detected on the fan power card.

#### **Troubleshooting**

- Check wiring.
- Check sensor.
- Replace fan power card.

#### **ALARM 423, FPC updating**

The alarm is generated when the fan power card reports it has an invalid PUD. The control card attempts to update the PUD. A subsequent alarm can result depending on the update. See A424 and A425.

#### **ALARM 424, FPC update successful**

This alarm is generated when the control card has successfully updated the fan power card PUD. The drive must be reset to stop the alarm.

#### **ALARM 425, FPC update failure**

This alarm is generated after the control card failed to update the fan power card PUD.

#### **Troubleshooting**

- Check the fan power card wiring.
- Replace fan power card.
- Contact supplier.

#### **ALARM 426, FPC config**

The number of found fan power cards does not match the number of configured fan power cards. See *parameter group 15-6\* Option Ident* for the number of configured fan power cards.

#### **Troubleshooting**

- Check fan power card wiring.
- Replace fan power card.

#### **ALARM 427, FPC supply**

Supply voltage fault (5 V, 24 V, or 48 V) on fan power card is detected.

#### **Troubleshooting**

- Check fan power card wiring.
- Replace fan power card.

## 8.6 Troubleshooting

Symptom	Possible cause	Test	Solution
Display dark/No function	Missing input power.	See <i>Table 5.5</i> .	Check the input power source.
	Missing or open fuses.	See <i>Open power fuses</i> in this table for possible causes.	Follow the recommendations provided.
	No power to the LCP.	Check the LCP cable for proper connection or damage.	Replace the faulty LCP or connection cable.
	Shortcut on control voltage (terminal 12 or 50) or at control terminals.	Check the 24 V control voltage supply for terminal 12/13 to 20–39, or 10 V supply for terminals 50–55.	Wire the terminals properly.
	Incompatible LCP (LCP from VLT® 2800 or 5000/6000/8000/ FCD or FCM).	–	Use only LCP 101 (P/N 130B1124) or LCP 102 (P/N 130B1107).
	Wrong contrast setting.	–	Press [Status] + [▲]/[▼] to adjust the contrast.
	Display (LCP) is defective.	Test using a different LCP.	Replace the faulty LCP or connection cable.
	Internal voltage supply fault or SMPS is defective.	–	Contact supplier.
Intermittent display	Overloaded supply (SMPS) due to improper control wiring or a fault within the AC drive.	To rule out a problem in the control wiring, disconnect all control wiring by removing the terminal blocks.	If the display stays lit, the problem is in the control wiring. Check the wiring for shorts or incorrect connections. If the display continues to cut out, follow the procedure for <i>Display dark/No function</i> .
Motor not running	Service switch open or missing motor connection.	Check if the motor is connected and the connection is not interrupted by a service switch or other device.	Connect the motor and check the service switch.
	No mains power with 24 V DC option card.	If the display is functioning, but there is no output, check that mains power is applied to the AC drive.	Apply mains power.
	LCP Stop.	Check if [Off] has been pressed.	Press [Auto On] or [Hand On] (depending on operating mode).
	Missing start signal (Standby).	Check <i>parameter 5-10 Terminal 18 Digital Input</i> for correct setting for terminal 18. Use default setting.	Apply a valid start signal.
	Motor coast signal active (Coasting).	Check <i>parameter 5-12 Terminal 27 Digital Input</i> for correct setting for terminal 27 (use default setting).	Apply 24 V on terminal 27 or program this terminal to [0] <i>No operation</i> .
	Wrong reference signal source.	Check reference signal: <ul style="list-style-type: none"> <li>• Local.</li> <li>• Remote or bus reference?</li> <li>• Preset reference active?</li> <li>• Terminal connection correct?</li> <li>• Scaling of terminals correct?</li> <li>• Reference signal available?</li> </ul>	Program correct settings. Check <i>parameter 3-13 Reference Site</i> . Set preset reference active in <i>parameter group 3-1* References</i> . Check for correct wiring. Check scaling of terminals. Check reference signal.
Motor running in wrong direction	Motor rotation limit.	Check that <i>parameter 4-10 Motor Speed Direction</i> is programmed correctly.	Program correct settings.
	Active reversing signal.	Check if a reversing command is programmed for the terminal in <i>parameter group 5-1* Digital inputs</i> .	Deactivate reversing signal.
	Wrong motor phase connection.	–	See <i>chapter 6.5.1 Warning - Motor Start</i> .

Symptom	Possible cause	Test	Solution
Motor is not reaching maximum speed	Frequency limits set wrong.	Check output limits in <i>parameter 4-13 Motor Speed High Limit [RPM]</i> , <i>parameter 4-14 Motor Speed High Limit [Hz]</i> , and <i>parameter 4-19 Max Output Frequency</i>	Program correct limits.
	Reference input signal not scaled correctly.	Check reference input signal scaling in <i>parameter group 6-0* Analog I/O mode</i> and <i>parameter group 3-1* References</i> .	Program correct settings.
Motor speed unstable	Possible incorrect parameter settings.	Check the settings of all motor parameters, including all motor compensation settings. For closed-loop operation, check PID settings.	Check settings in <i>parameter group 1-6* Load Depen. Setting</i> . For closed-loop operation, check settings in <i>parameter group 20-0* Feedback</i> .
Motor runs rough	Possible overmagnetization.	Check for incorrect motor settings in all motor parameters.	Check motor settings in <i>parameter groups 1-2* Motor data</i> , <i>1-3* Adv Motor Data</i> , and <i>1-5* Load Indep. Setting</i> .
Motor does not brake	Possible incorrect settings in the brake parameters. Ramp-down times may be too short.	Check brake parameters. Check ramp time settings.	Check <i>parameter groups 2-0* DC Brake</i> and <i>3-0* Reference Limits</i> .
Open power fuses	Phase-to-phase short.	Motor or panel has a short phase-to-phase. Check motor and panel phases for shorts.	Eliminate any shorts detected.
	Motor overload.	Motor is overloaded for the application.	Perform start-up test and verify that motor current is within specifications. If motor current is exceeding the nameplate full load current, the motor can run only with reduced load. Review the specifications for the application.
	Loose connections.	Perform pre-start-up check for loose connections.	Tighten loose connections.
Mains current imbalance greater than 3%	Problem with mains power (see <i>alarm 4, Mains phase loss</i> description).	Rotate input power leads into the 1 position: A to B, B to C, C to A.	If imbalanced leg follows the wire, it is a power problem. Check the mains supply.
	Problem with the AC drive.	Rotate input power leads into the AC drive 1 position: A to B, B to C, C to A.	If the imbalanced leg stays on same input terminal, it is a problem with the AC drive. Contact supplier.
Motor current imbalance greater than 3%	Problem with motor or motor wiring.	Rotate output motor cables 1 position: U to V, V to W, W to U.	If the imbalanced leg follows the wire, the problem is in the motor or motor wiring. Check motor and motor wiring.
	Problem with AC drive.	Rotate output motor cables 1 position: U to V, V to W, W to U.	If the imbalanced leg stays on same output terminal, it is a problem with the unit. Contact supplier.
AC drive acceleration problems	Motor data are entered incorrectly.	If warnings or alarms occur, see <i>chapter 8.5 List of Warnings and Alarms</i> . Check that motor data are entered correctly.	Increase the ramp-up time in <i>parameter 3-41 Ramp 1 Ramp Up Time</i> . Increase current limit in <i>parameter 4-18 Current Limit</i> . Increase torque limit in <i>parameter 4-16 Torque Limit Motor Mode</i> .
AC drive deceleration problems	Motor data are entered incorrectly.	If warnings or alarms occur, see <i>chapter 8.5 List of Warnings and Alarms</i> . Check that motor data are entered correctly.	Increase the ramp-down time in <i>parameter 3-42 Ramp 1 Ramp Down Time</i> . Enable overvoltage control in <i>parameter 2-17 Over-voltage Control</i> .

Table 8.5 Troubleshooting

## 9 Specifications

### 9.1 Electrical Data

#### 9.1.1 Mains Supply 3x380–480 V AC

FC 202	N355		N400		N450	
High/normal load (High overload=150% current during 60 s, normal overload=110% current during 60 s)	HO	NO	HO	NO	HO	NO
Typical shaft output at 400 V [kW]	315	355	355	400	400	450
Typical shaft output at 460 V [hp]	450	500	500	600	550	600
Typical shaft output at 480 V [kW]	355	400	400	500	500	530
Enclosure size	E1h/E3h		E1h/E3h		E1h/E3h	
Output current (3-phase)						
Continuous (at 400 V) [A]	600	658	658	745	695	800
Intermittent (60 s overload) (at 400 V) [A]	900	724	987	820	1043	880
Continuous (at 460/480 V) [A]	540	590	590	678	678	730
Intermittent (60 s overload) (at 460/480 V) [A]	810	649	885	746	1017	803
Continuous kVA (at 400 V) [kVA]	416	456	456	516	482	554
Continuous kVA (at 460 V) [kVA]	430	470	470	540	540	582
Maximum input current						
Continuous (at 400 V) [A]	578	634	634	718	670	771
Continuous (at 460/480 V) [A]	520	569	569	653	653	704
Maximum number and size of cables per phase (E1h)						
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)		5x240 (5x500 mcm)		5x240 (5x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x240 (4x500 mcm)		4x240 (4x500 mcm)		4x240 (4x500 mcm)	
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)		2x185 (2x350 mcm)	
Maximum number and size of cables per phase (E3h)						
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)		2x185 (2x350 mcm)	
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)		4x185 (4x350 mcm)		4x185 (4x350 mcm)	
Maximum external mains fuses [A] <sup>2)</sup>	800		800		800	
Estimated power loss at 400 V [W] <sup>3), 4)</sup>	6178	6928	6851	8036	7297	8783
Estimated power loss at 460 V [W] <sup>3), 4)</sup>	5322	5910	5846	6933	7240	7969
Efficiency <sup>4)</sup>	0.98		0.98		0.98	
Output frequency	0–590 Hz		0–590 Hz		0–590 Hz	
Heat sink overtemperature trip [°C (°F)]	110 (230)		110 (230)		110 (230)	
Control card overtemperature trip [°C (°F)]	80 (176)		80 (176)		80 (176)	
Power card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	
Fan power card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	
Active in-rush card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	

Table 9.1 Technical Specifications, Mains Supply 3x380–480 V AC

FC 202	N500		N560	
High/normal load (High overload=150% current during 60 s, normal overload=110% current during 60 s)	HO	NO	HO	NO
Typical shaft output at 400 V [kW]	450	500	500	560
Typical shaft output at 460 V [hp]	600	650	650	750
Typical shaft output at 480 V [kW]	530	560	560	630
Enclosure size	E2h/E4h		E2h/E4h	
Output current (3-phase)				
Continuous (at 400 V) [A]	800	880	880	990
Intermittent (60 s overload) (at 400 V) [A]	1200	968	1320	1089
Continuous (at 460/480 V) [A]	730	780	780	890
Intermittent (60 s overload) (at 460/480 V) [A]	1095	858	1170	979
Continuous kVA (at 400 V) [kVA]	554	610	610	686
Continuous kVA (at 460 V) [kVA]	582	621	621	709
Maximum input current				
Continuous (at 400 V) [A]	771	848	848	954
Continuous (at 460/480 V) [A]	704	752	752	858
Maximum number and size of cables per phase (E2h)				
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)		5x240 (5x500 mcm)	
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)	
Maximum number and size of cables per phase (E4h)				
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)	
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)		4x185 (4x350 mcm)	
Maximum external mains fuses [A] <sup>2)</sup>	1200		1200	
Estimated power loss at 400 V [W] <sup>3), 4)</sup>	8352	9473	9449	11102
Estimated power loss at 460 V [W] <sup>3), 4)</sup>	7182	7809	7771	9236
Efficiency <sup>4)</sup>	0.98		0.98	
Output frequency [Hz]	0–590		0–590	
Heat sink overtemperature trip [°C (°F)]	110 (230)		100 (212)	
Control card overtemperature trip [°C (°F)]	80 (176)		80 (176)	
Power card overtemperature trip [°C (°F)]	85 (185)		85 (185)	
Fan power card overtemperature trip [°C (°F)]	85 (185)		85 (185)	
Active in-rush card overtemperature trip [°C (°F)]	85 (185)		85 (185)	

**Table 9.2 Technical Specifications, Mains Supply 3x380–480 V AC**

1) American Wire Gauge.

2) For fuse ratings, see chapter 9.7 Fuses.

3) Typical power loss is at normal conditions and expected to be within  $\pm 15\%$  (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to [drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/](http://drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/). Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

4) Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see chapter 9.4 Ambient Conditions. For part load losses, see [drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/](http://drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/).



## 9.1.2 Mains Supply 3x525–690 V AC

FC 202	N450		N500	
High/normal load (High overload=150% current during 60 s, normal overload=110% current during 60 s)	HO	NO	HO	NO
Typical shaft output at 550 V [kW]	315	355	315	400
Typical shaft output at 575 V [hp]	400	450	400	500
Typical shaft output at 690 V [kW]	355	450	400	500
Enclosure size	E1h/E3h		E1h/E3h	
Output current (3-phase)				
Continuous (at 550 V) [A]	395	470	429	523
Intermittent (60 s overload) (at 550 V) [A]	593	517	644	575
Continuous (at 575/690 V) [A]	380	450	410	500
Intermittent (60 s overload) (at 575/690 V) [A]	570	495	615	550
Continuous kVA (at 550 V) [kVA]	376	448	409	498
Continuous kVA (at 575 V) [kVA]	378	448	408	498
Continuous kVA (at 690 V) [kVA]	454	538	490	598
Maximum input current				
Continuous (at 550 V) [A]	381	453	413	504
Continuous (at 575/690 V) [A]	366	434	395	482
Maximum number and size of cables per phase (E1h)				
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)		5x240 (5x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x240 (4x500 mcm)		4x240 (4x500 mcm)	
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)	
Maximum number and size of cables per phase (E3h)				
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)	
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)		4x185 (4x350 mcm)	
Maximum external mains fuses [A] <sup>2)</sup>	800		800	
Estimated power loss at 600 V [W] <sup>3), 4)</sup>	4989	6062	5419	6879
Estimated power loss at 690 V [W] <sup>3), 4)</sup>	4920	5939	5332	6715
Efficiency <sup>4)</sup>	0.98		0.98	
Output frequency [Hz]	0–500		0–500	
Heat sink overtemperature trip [°C (°F)]	110 (230)		110 (230)	
Control card overtemperature trip [°C (°F)]	80 (176)		80 (176)	
Power card overtemperature trip [°C (°F)]	85 (185)		85 (185)	
Fan power card overtemperature trip [°C (°F)]	85 (185)		85 (185)	
Active in-rush card overtemperature trip [°C (°F)]	85 (185)		85 (185)	

Table 9.3 Technical Specifications, Mains Supply 3x525–690 V AC

FC 202	N560		N630	
High/normal load (High overload=150% current during 60 s, normal overload=110% current during 60 s)	HO	NO	HO	NO
Typical shaft output at 550 V [kW]	400	450	450	500
Typical shaft output at 575 V [hp]	500	600	600	650
Typical shaft output at 690 V [kW]	500	560	560	630
Enclosure size	E1h/E3h		E1h/E3h	
Output current (3-phase)				
Continuous (at 550 V) [A]	523	596	596	630
Intermittent (60 s overload) (at 550 V) [A]	785	656	894	693
Continuous (at 575/690 V) [A]	500	570	570	630
Intermittent (60 s overload) (at 575/690 V) [A]	750	627	855	693
Continuous kVA (at 550 V) [kVA]	498	568	568	600
Continuous kVA (at 575 V) [kVA]	498	568	568	627
Continuous kVA (at 690 V) [kVA]	598	681	681	753
Maximum input current				
Continuous (at 550 V) [A]	504	574	574	607
Continuous (at 575/690 V) [A]	482	549	549	607
Maximum number and size of cables per phase (E1h)				
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)		5x240 (5x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x240 (4x500 mcm)		4x240 (4x500 mcm)	
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)	
Maximum number and size of cables per phase (E3h)				
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)	
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)		4x185 (4x350 mcm)	
Maximum external mains fuses [A] <sup>2)</sup>	800		800	
Estimated power loss at 600 V [W] <sup>3), 4)</sup>	6833	8076	8069	9208
Estimated power loss at 690 V [W] <sup>3), 4)</sup>	6678	7852	7848	8921
Efficiency <sup>4)</sup>	0.98		0.98	
Output frequency [Hz]	0–500		0–500	
Heat sink overtemperature trip [°C (°F)]	110 (230)		110 (230)	
Control card overtemperature trip [°C (°F)]	80 (176)		80 (176)	
Power card overtemperature trip [°C (°F)]	85 (185)		85 (185)	
Fan power card overtemperature trip [°C (°F)]	85 (185)		85 (185)	
Active in-rush card overtemperature trip [°C (°F)]	85 (185)		85 (185)	

**Table 9.4 Technical Specifications, Mains Supply 3x525–690 V AC**

FC 202	N710		N800	
High/normal load (High overload=150% current during 60 s, normal overload=110% current during 60 s)	HO	NO	HO	NO
Typical shaft output at 550 V [kW]	500	560	560	670
Typical shaft output at 575 V [hp]	650	750	750	950
Typical shaft output at 690 V [kW]	630	710	710	800
Enclosure size	E2h/E4h		E2h/E4h	
Output current (3-phase)				
Continuous (at 550 V) [A]	659	763	763	889
Intermittent (60 s overload) (at 550 V) [A]	989	839	1145	978
Continuous (at 575/690 V) [A]	630	730	730	850
Intermittent (60 s overload) (at 575/690 V) [A]	945	803	1095	935
Continuous kVA (at 550 V) [kVA]	628	727	727	847
Continuous kVA (at 575 V) [kVA]	627	727	727	847
Continuous kVA (at 690 V) [kVA]	753	872	872	1016
Maximum input current				
Continuous (at 550 V) [A]	635	735	735	857
Continuous (at 575/690 V) [A]	607	704	704	819
Maximum number and size of cables per phase (E2h)				
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)		5x240 (5x500 mcm)	
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)	
Maximum number and size of cables per phase (E4h)				
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)	
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)		4x185 (4x350 mcm)	
Maximum external mains fuses [A] <sup>2)</sup>	1200		1200	
Estimated power loss at 600 V [W] <sup>3), 4)</sup>	8543	10346	10319	12723
Estimated power loss at 690 V [W] <sup>3), 4)</sup>	8363	10066	10060	12321
Efficiency <sup>4)</sup>	0.98		0.98	
Output frequency [Hz]	0–500		0–500	
Heat sink overtemperature trip [°C (°F)]	110 (230)		110 (230)	
Control card overtemperature trip [°C (°F)]	80 (176)		80 (176)	
Power card overtemperature trip [°C (°F)]	85 (185)		85 (185)	
Fan power card overtemperature trip [°C (°F)]	85 (185)		85 (185)	
Active in-rush card overtemperature trip [°C (°F)]	85 (185)		85 (185)	

Table 9.5 Technical Specifications, Mains Supply 3x525–690 V AC

1) American Wire Gauge.

2) For fuse ratings, see chapter 9.7 Fuses.

3) Typical power loss is at normal conditions and expected to be within  $\pm 15\%$  (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to [drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/](https://drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/). Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

4) Measured using 5 m shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see chapter 9.4 Ambient Conditions. For part load losses, see [drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/](https://drives.danfoss.com/knowledge-center/energy-efficiency-directive/#/).

## 9.2 Mains Supply

Mains supply (L1, L2, L3)

Supply voltage	380–500 V $\pm 10\%$ , 525–690 V $\pm 10\%$
----------------	---

*Mains voltage low/mains voltage drop-out:*

*During low mains voltage or a mains drop-out, the drive continues until the DC-link voltage drops below the minimum stop level, which corresponds typically to 15% below the lowest rated supply voltage of the drive. Power-up and full torque cannot be expected at mains voltage lower than 10% below the lowest rated supply voltage of the drive.*

Supply frequency	50/60 Hz $\pm 5\%$
------------------	--------------------

Maximum imbalance temporary between mains phases	3.0% of rated supply voltage <sup>1)</sup>
--	--

True power factor ( $\lambda$ )	$\geq 0.9$ nominal at rated load
---------------------------------	----------------------------------

Displacement power factor ( $\cos \Phi$ ) near unity	(>0.98)
--	---------

Switching on input supply L1, L2, L3 (power-ups)	Maximum 1 time/2 minute
--	-------------------------

Environment according to EN60664-1	Overvoltage category III/pollution degree 2
------------------------------------	---

*The drive is suitable for use on a circuit capable of delivering up to 100 kA short circuit current rating (SCCR) at 480/600 V.*

*1) Calculations based on UL/IEC61800-3.*

## 9.3 Motor Output and Motor Data

Motor output (U, V, W)

Output voltage	0–100% of supply voltage
----------------	--------------------------

Output frequency	0–590 Hz <sup>1)</sup>
------------------	------------------------

Output frequency in flux mode	0–300 Hz
-------------------------------	----------

Switching on output	Unlimited
---------------------	-----------

Ramp times	0.01–3600 s
------------	-------------

*1) Dependent on voltage and power.*

Torque characteristics

Starting torque (constant torque)	Maximum 150% for 60 s <sup>1), 2)</sup>
-----------------------------------	---

Overload torque (constant torque)	Maximum 150% for 60 s <sup>1), 2)</sup>
-----------------------------------	---

*1) Percentage relates to the nominal current of the drive.*

*2) Once every 10 minutes.*

## 9.4 Ambient Conditions

Environment

E1h/E2h enclosure	IP21/Type 1, IP54/Type 12
-------------------	---------------------------

E3h/E4h enclosure	IP20/Chassis
-------------------	--------------

Vibration test (standard/ruggedized)	0.7 g/1.0 g
--------------------------------------	-------------

Relative humidity	5%–95% (IEC 721-3-3; Class 3K3 (non-condensing) during operation)
-------------------	---

Aggressive environment (IEC 60068-2-43) H <sub>2</sub> S test	Class Kd
---	----------

Aggressive gases (IEC 60721-3-3)	Class 3C3
----------------------------------	-----------

Test method according to IEC 60068-2-43	H2S (10 days)
---	---------------

Ambient temperature (at SFAVM switching mode)	
---	--

- with derating	Maximum 55 °C (maximum 131 °F) <sup>1)</sup>
-----------------	--

- with full output power of typical EFF2 motors (up to 90% output current)	Maximum 50 °C (maximum 122 °F) <sup>1)</sup>
--	--

- at full continuous FC output current	Maximum 45 °C (maximum 113 °F) <sup>1)</sup>
--	--

Minimum ambient temperature during full-scale operation	0 °C (32 °F)
---	--------------

Minimum ambient temperature at reduced performance	-10 °C (14 °F)
--	----------------

Temperature during storage/transport	-25 to +65/70 °C (13 to 149/158 °F)
--------------------------------------	-------------------------------------

Maximum altitude above sea level without derating	1000 m (3281 ft)
---	------------------

Maximum altitude above sea level with derating	3000 m (9842 ft)
--	------------------

*1) For more information on derating, refer to the product-specific design guide.*

EMC standards, Emission	EN 61800-3
EMC standards, Immunity	EN 61800-3
Energy efficiency class <sup>2)</sup>	IE2

2) Determined according to EN 50598-2 at:

- Rated load.
- 90% rated frequency.
- Switching frequency factory setting.
- Switching pattern factory setting.

## 9.5 Cable Specifications

Cable lengths and cross-sections for control cables<sup>1)</sup>

Maximum motor cable length, shielded/armored	150 m (492 ft)
Maximum motor cable length, unshielded/unarmored	300 m (984 ft)
Maximum cross-section to motor, mains, load sharing, and brake	See chapter 9.1 Electrical Data
Maximum cross-section to control terminals, rigid wire	1.5 mm <sup>2</sup> /16 AWG (2x0.75 mm <sup>2</sup> )
Maximum cross-section to control terminals, flexible cable	1 mm <sup>2</sup> /18 AWG
Maximum cross-section to control terminals, cable with enclosed core	0.5 mm <sup>2</sup> /20 AWG
Minimum cross-section to control terminals.	0.25 mm <sup>2</sup> /23 AWG

1) For power cables, see electrical tables in chapter 9.1 Electrical Data.

## 9.6 Control Input/Output and Control Data

Digital inputs

Programmable digital inputs	4 (6)
Terminal number	18, 19, 27 <sup>1)</sup> , 29 <sup>1)</sup> , 32, 33
Logic	PNP or NPN
Voltage level	0–24 V DC
Voltage level, logic 0 PNP	<5 V DC
Voltage level, logic 1 PNP	>10 V DC
Voltage level, logic 0 NPN	>19 V DC
Voltage level, logic 1 NPN	<14 V DC
Maximum voltage on input	28 V DC
Input resistance, R <sub>i</sub>	Approximately 4 kΩ

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

1) Terminals 27 and 29 can also be programmed as outputs.

Analog inputs

Number of analog inputs	2
Terminal number	53, 54
Modes	Voltage or current
Mode select	Switches A53 and A54
Voltage mode	Switch A53/A54=(U)
Voltage level	-10 V to +10 V (scaleable)
Input resistance, R <sub>i</sub>	Approximately 10 kΩ
Maximum voltage	±20 V
Current mode	Switch A53/A54=(I)
Current level	0/4 to 20 mA (scaleable)
Input resistance, R <sub>i</sub>	Approximately 200 Ω
Maximum current	30 mA
Resolution for analog inputs	10 bit (+ sign)
Accuracy of analog inputs	Maximum error 0.5% of full scale
Bandwidth	100 Hz

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

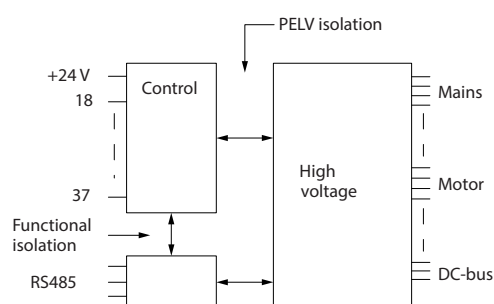


Illustration 9.1 PELV Isolation

#### Pulse inputs

Programmable pulse inputs	2
Terminal number pulse	29, 33
Maximum frequency at terminal 29, 33	110 kHz (push-pull driven)
Maximum frequency at terminal 29, 33	5 kHz (open collector)
Minimum frequency at terminal 29, 33	4 Hz
Voltage level	See <i>Digital Inputs</i> in chapter 9.6 Control Input/Output and Control Data
Maximum voltage on input	28 V DC
Input resistance, $R_i$	Approximately 4 k $\Omega$
Pulse input accuracy (0.1–1 kHz)	Maximum error: 0.1% of full scale

#### Analog output

Number of programmable analog outputs	1
Terminal number	42
Current range at analog output	0/4–20 mA
Maximum resistor load to common at analog output	500 $\Omega$
Accuracy on analog output	Maximum error: 0.8% of full scale
Resolution on analog output	8 bit

*The analog output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.*

#### Control card, RS485 serial communication

Terminal number	68 (P, TX+, RX+), 69 (N, TX-, RX-)
Terminal number 61	Common for terminals 68 and 69

*The RS485 serial communication circuit is functionally separated from other central circuits and galvanically isolated from the supply voltage (PELV).*

#### Digital output

Programmable digital/pulse outputs	2
Terminal number	27, 29 <sup>1)</sup>
Voltage level at digital/frequency output	0–24 V
Maximum output current (sink or source)	40 mA
Maximum load at frequency output	1 k $\Omega$
Maximum capacitive load at frequency output	10 nF
Minimum output frequency at frequency output	0 Hz
Maximum output frequency at frequency output	32 kHz
Accuracy of frequency output	Maximum error: 0.1% of full scale
Resolution of frequency outputs	12 bit

<sup>1)</sup> Terminals 27 and 29 can also be programmed as inputs.

*The digital output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.*

## Control card, 24 V DC output

Terminal number	12, 13
Maximum load	200 mA

The 24 V DC supply is galvanically isolated from the supply voltage (PELV), but has the same potential as the analog and digital inputs and outputs.

## Relay outputs

Programmable relay outputs	2
Maximum cross-section to relay terminals	2.5 mm <sup>2</sup> (12 AWG)
Minimum cross-section to relay terminals	0.2 mm <sup>2</sup> (30 AWG)
Length of stripped wire	8 mm (0.3 in)
<b>Relay 01 terminal number</b>	1–3 (break), 1–2 (make)
Maximum terminal load (AC-1) <sup>1)</sup> on 1–2 (NO) (Resistive load) <sup>2), 3)</sup>	400 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 1–2 (NO) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 1–2 (NO) (Resistive load)	80 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 1–2 (NO) (Inductive load)	24 V DC, 0.1 A
Maximum terminal load (AC-1) <sup>1)</sup> on 1–3 (NC) (Resistive load)	240 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 1–3 (NC) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 1–3 (NC) (Resistive load)	50 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 1–3 (NC) (Inductive load)	24 V DC, 0.1 A
Minimum terminal load on 1–3 (NC), 1–2 (NO)	24 V DC 10 mA, 24 V AC 2 mA
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2
<b>Relay 02 terminal number</b>	4–6 (break), 4–5 (make)
Maximum terminal load (AC-1) <sup>1)</sup> on 4–5 (NO) (Resistive load) <sup>2), 3)</sup>	400 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 4–5 (NO) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 4–5 (NO) (Resistive load)	80 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 4–5 (NO) (Inductive load)	24 V DC, 0.1 A
Maximum terminal load (AC-1) <sup>1)</sup> on 4–6 (NC) (Resistive load)	240 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 4–6 (NC) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 4–6 (NC) (Resistive load)	50 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 4–6 (NC) (Inductive load)	24 V DC, 0.1 A
Minimum terminal load on 4–6 (NC), 4–5 (NO)	24 V DC 10 mA, 24 V AC 2 mA
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2

1) IEC 60947 part 4 and 5.

The relay contacts are galvanically isolated from the rest of the circuit by reinforced isolation (PELV).

2) Overvoltage Category II.

3) UL applications 300 V AC 2 A.

## Control card, +10 V DC output

Terminal number	50
Output voltage	10.5 V ±0.5 V
Maximum load	25 mA

The 10 V DC supply is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

## Control characteristics

Resolution of output frequency at 0–1000 Hz	±0.003 Hz
System response time (terminals 18, 19, 27, 29, 32, 33)	≤2 m/s
Speed control range (open loop)	1:100 of synchronous speed
Speed accuracy (open loop)	30–4000 RPM: Maximum error of ±8 RPM

All control characteristics are based on a 4-pole asynchronous motor.

## Control card performance

Scan interval	5 M/S
---------------	-------

Control card, USB serial communication

USB standard	1.1 (full speed)
USB plug	USB type B device plug

### NOTICE

Connection to PC is carried out via a standard host/device USB cable.

The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

The USB connection is not galvanically isolated from ground. Use only isolated laptop/PC as connection to the USB connector on the drive or an isolated USB cable/converter.

## 9.7 Fuses

Fuses ensure that possible damage to the drive is limited to damages inside the unit. To ensure compliance with EN 50178, use identical Bussmann fuses as replacements. Refer to *Table 9.6*.

### NOTICE

Use of fuses on the supply side is mandatory for IEC 60364 (CE) and NEC 2009 (UL) compliant installations.

Input voltage (V)	Bussmann part number
380–500	170M7309
525–690	170M7342

Table 9.6 Fuse Options

9

The fuses listed in *Table 9.6* are suitable for use on a circuit capable of delivering 100000 A<sub>rms</sub> (symmetrical), depending on the drive voltage rating. With the proper fusing, the drive short-circuit current rating (SCCR) is 100000 A<sub>rms</sub>. E1h and E2h drives are supplied with internal drive fusing to meet the 100 kA SCCR. E3h and E4h drives must be fitted with Type aR fuses to meet the 100 kA SCCR.

### NOTICE

#### DISCONNECT SWITCH


All units ordered and supplied with a factory-installed disconnect switch require Class L branch circuit fusing to meet the 100 kA SCCR for the drive. If a circuit breaker is used, the SCCR rating is 42 kA. The specific Class L fuse is determined by the input voltage and power rating of the drive. The input voltage and power rating is found on the product nameplate. See *chapter 4.1 Items Supplied*.

Input voltage (V)	Power rating (kW)	Short circuit rating (A)	Required protection
380–480	355–450	42000	Circuit breaker
		100000	Class L fuse, 800 A
380–480	500–560	42000	Circuit breaker
		100000	Class L fuse, 1200 A
525–690	450–630	42000	Circuit breaker
		10000	Class L fuse, 800 A
525–690	710–800	42000	Circuit breaker
		100000	Class L fuse, 1200 A



## 9.8 Enclosure Dimensions


### 9.8.1 E1h Exterior Dimensions

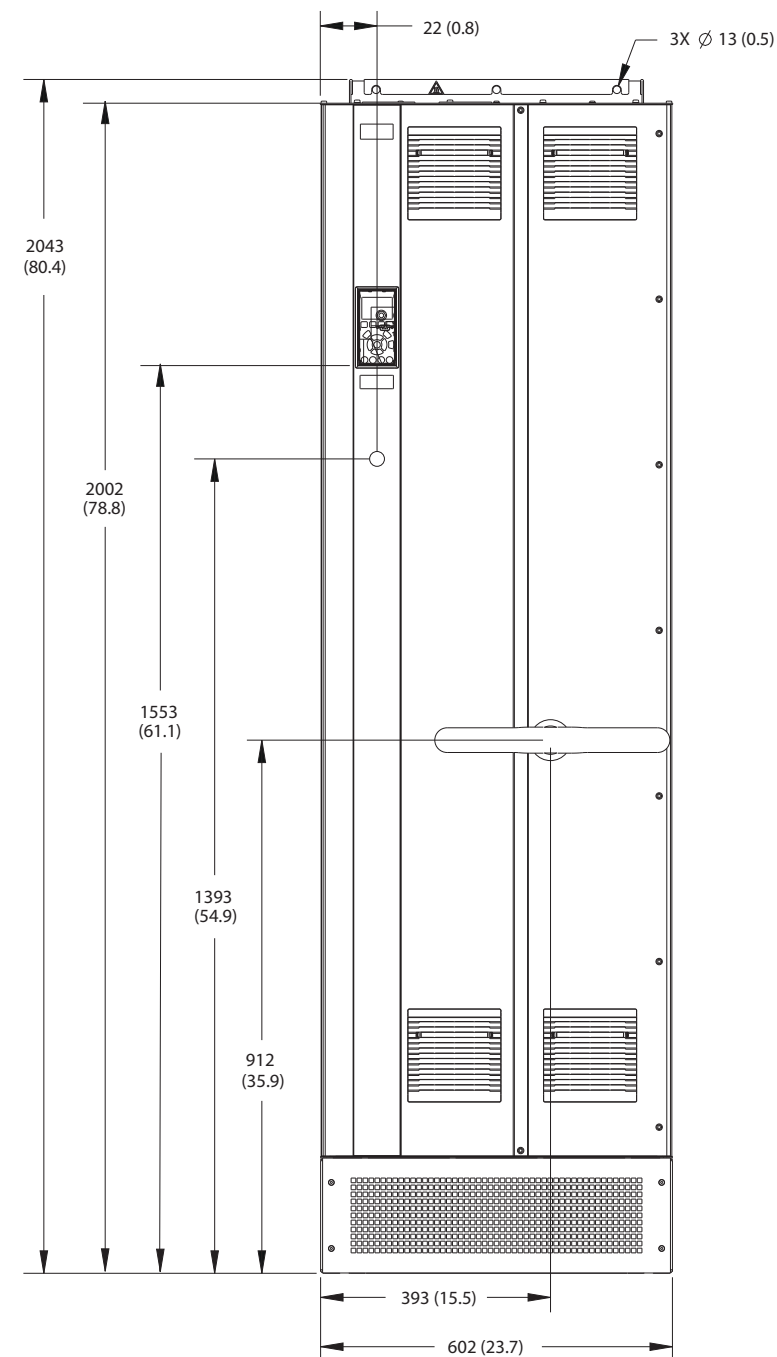

130BF648.10

Illustration 9.2 Front View of E1h

9

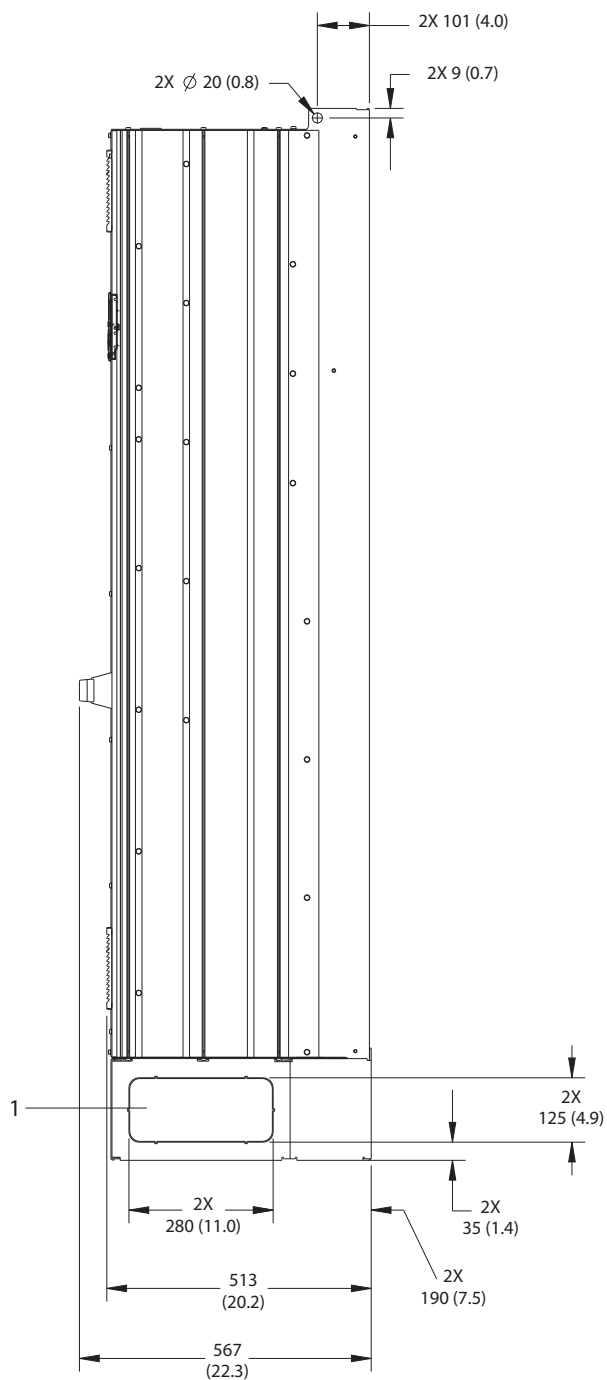



1	Knockout panel
---	----------------

Illustration 9.3 Side View of E1h



9


**Illustration 9.4 Back View of E1h**

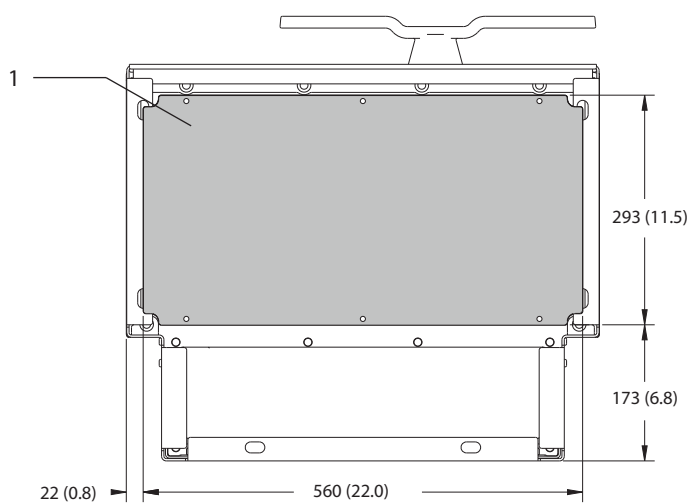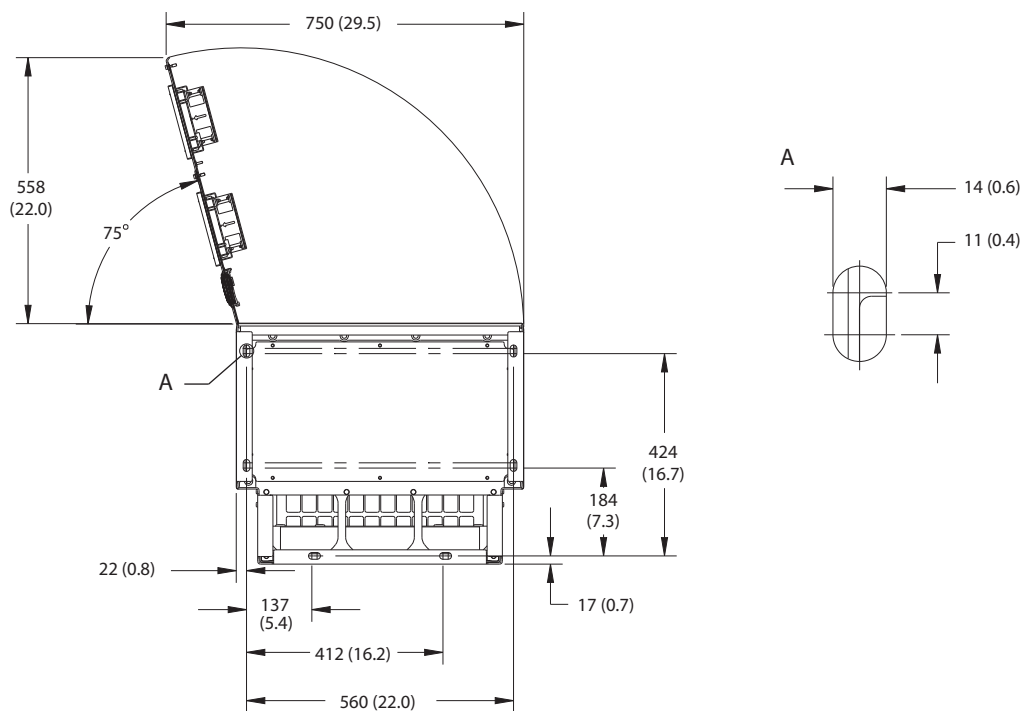

1	Gland plate
---	-------------

Illustration 9.5 Door Clearance and Gland Plate Dimensions for E1h


## 9.8.2 E2h Exterior Dimensions

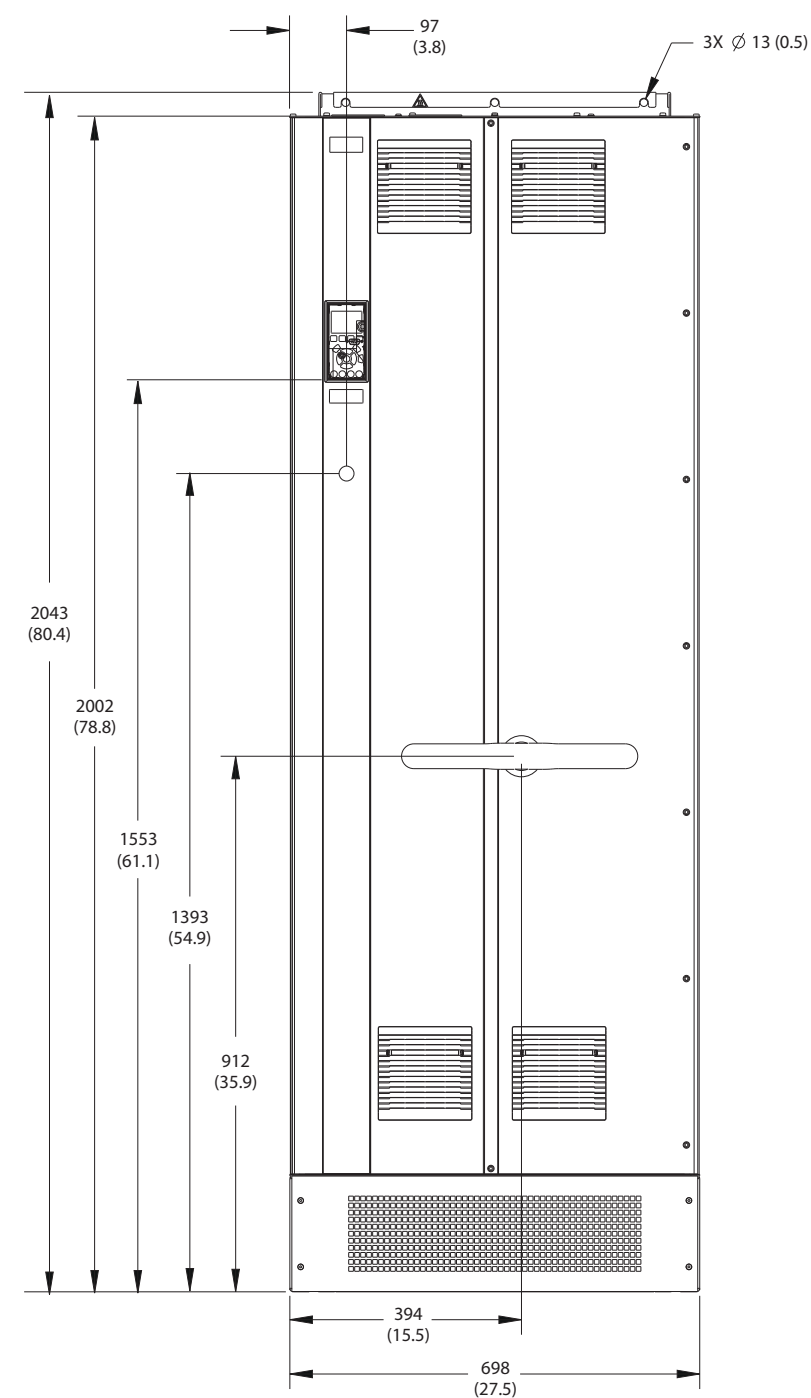

130BF654.10

Illustration 9.6 Front View of E2h

9

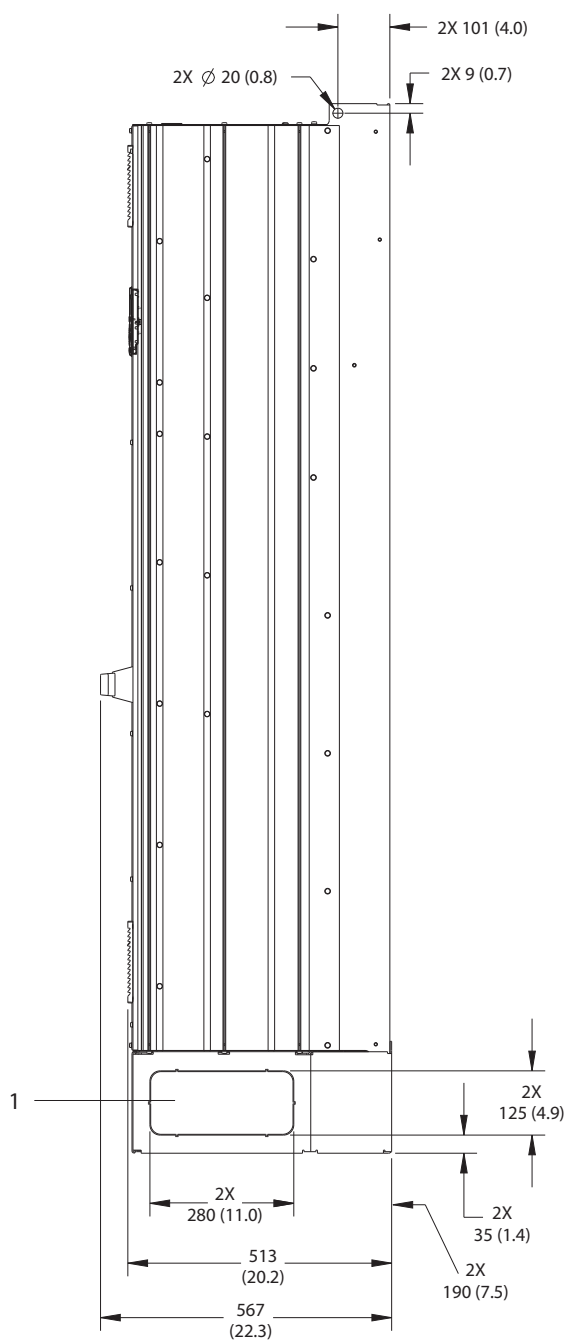


1	Knockout panel
---	----------------

Illustration 9.7 Side View of E2h




9

### Illustration 9.8 Back View of E2h

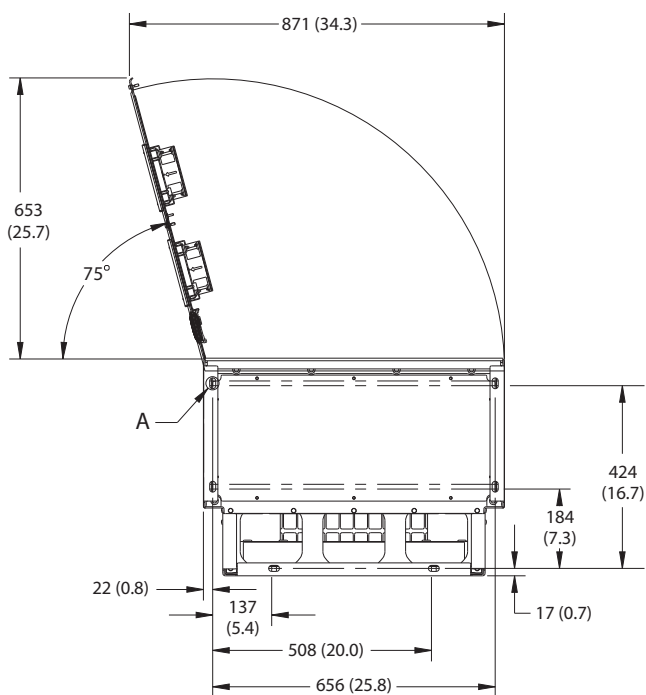

9

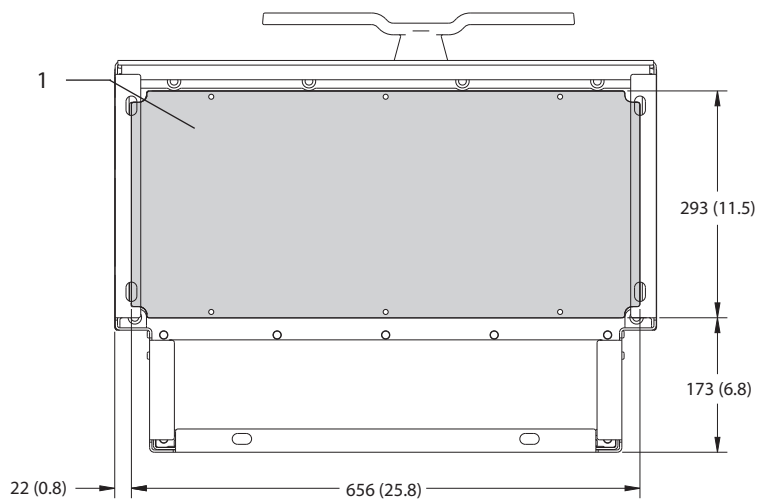

1	Gland plate
---	-------------

Illustration 9.9 Door Clearance and Gland Plate Dimensions for E2h



### 9.8.3 E3h Exterior Dimensions

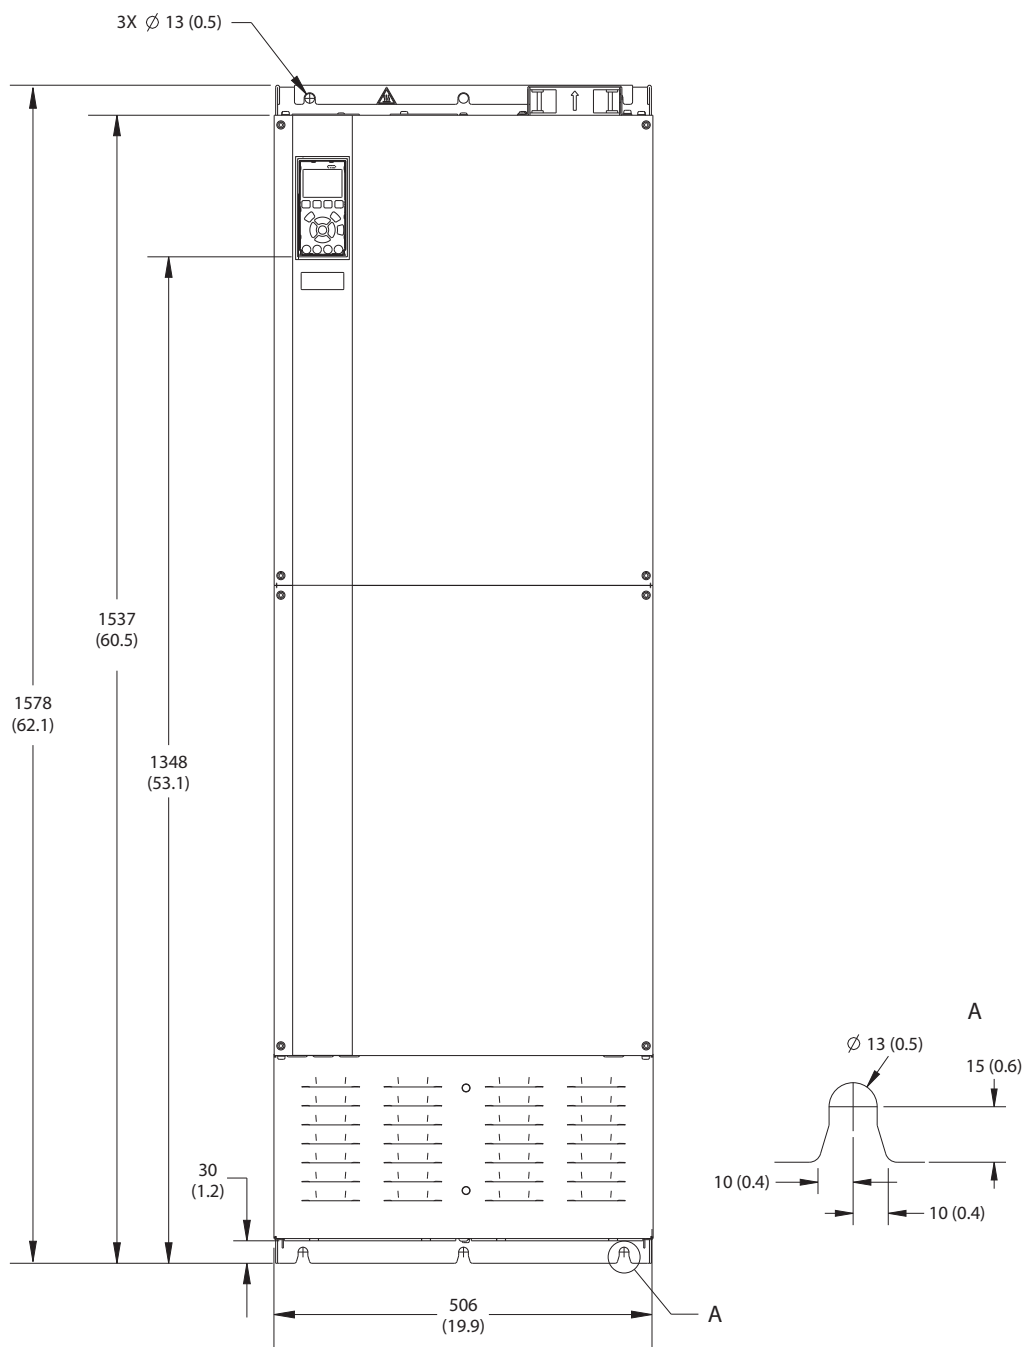


Illustration 9.10 Front View of E3h

130BF656.10

9



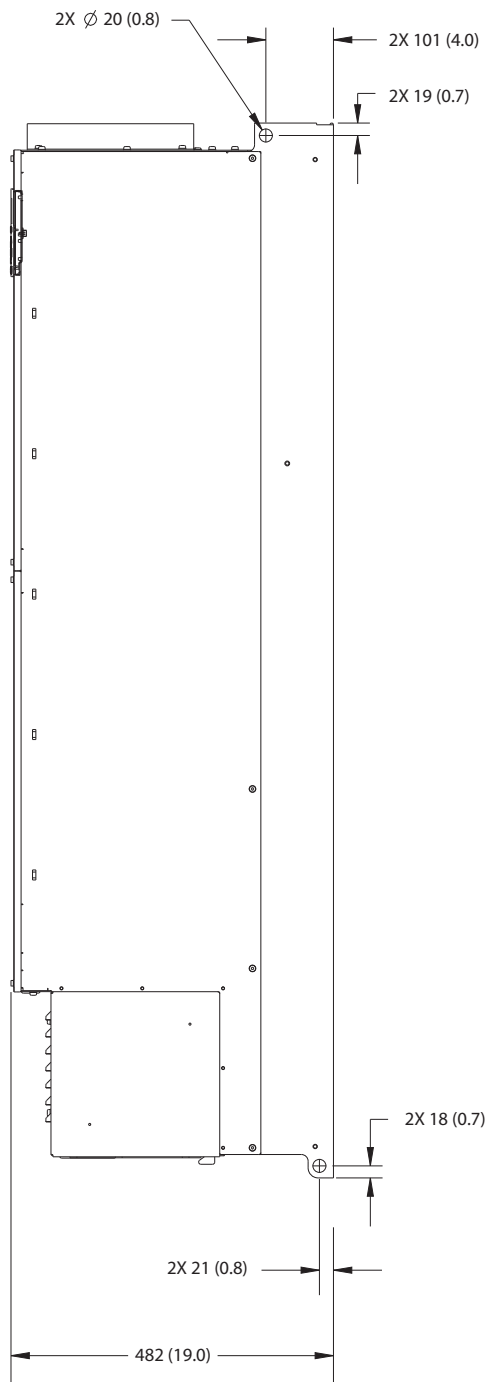


Illustration 9.11 Side View of E3h

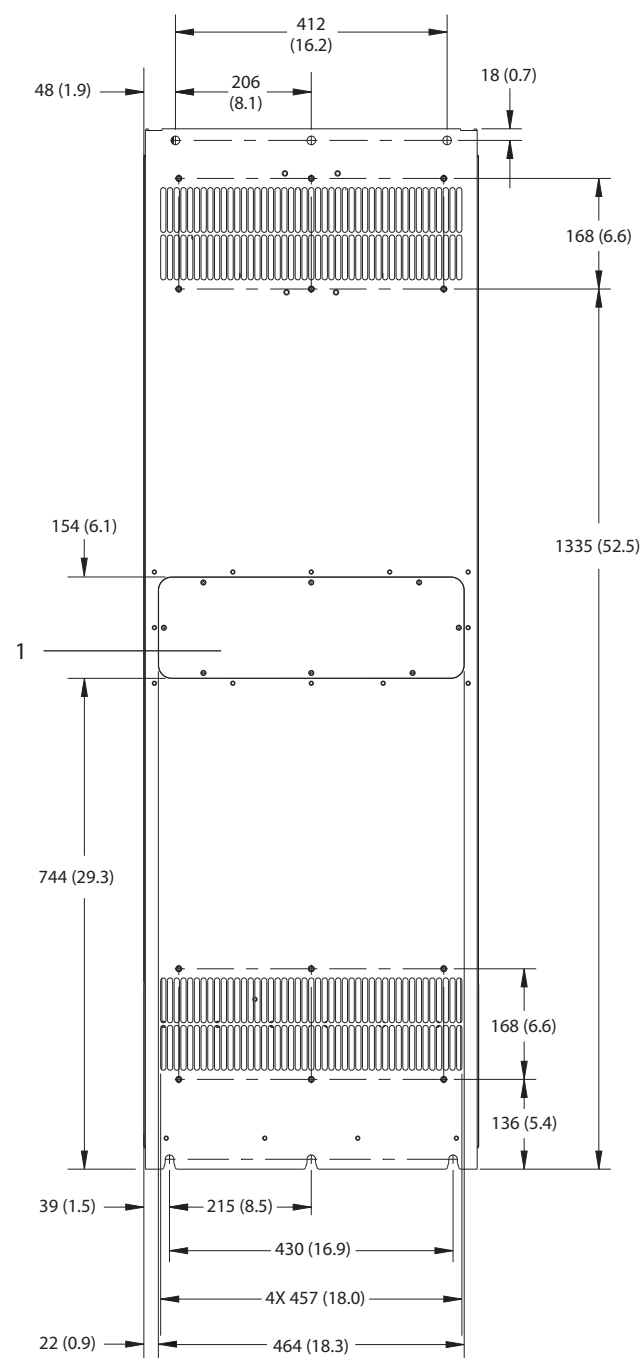


1	Heat sink access panel (optional)
---	-----------------------------------

Illustration 9.12 Back View of E3h

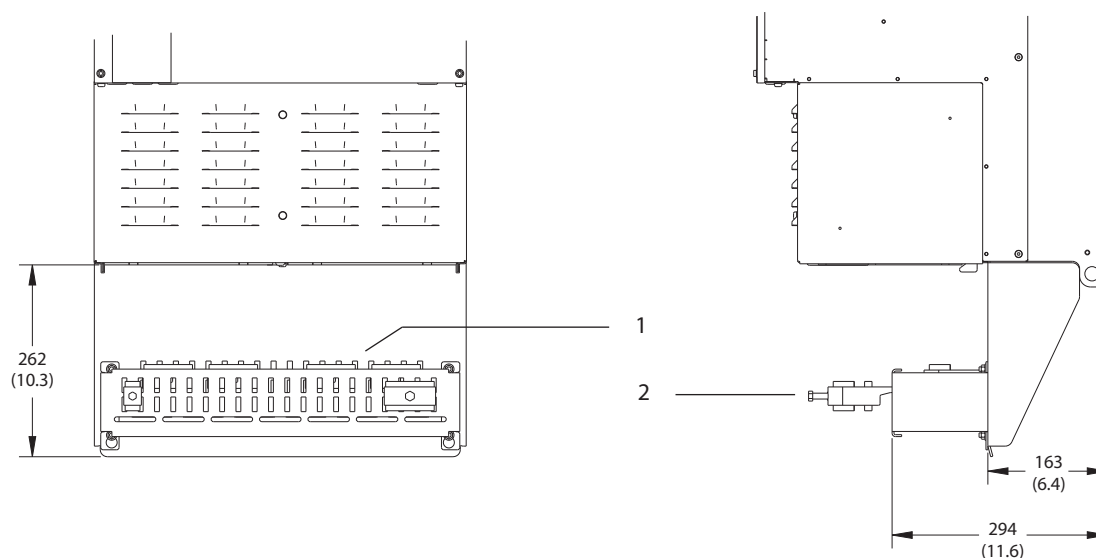


9

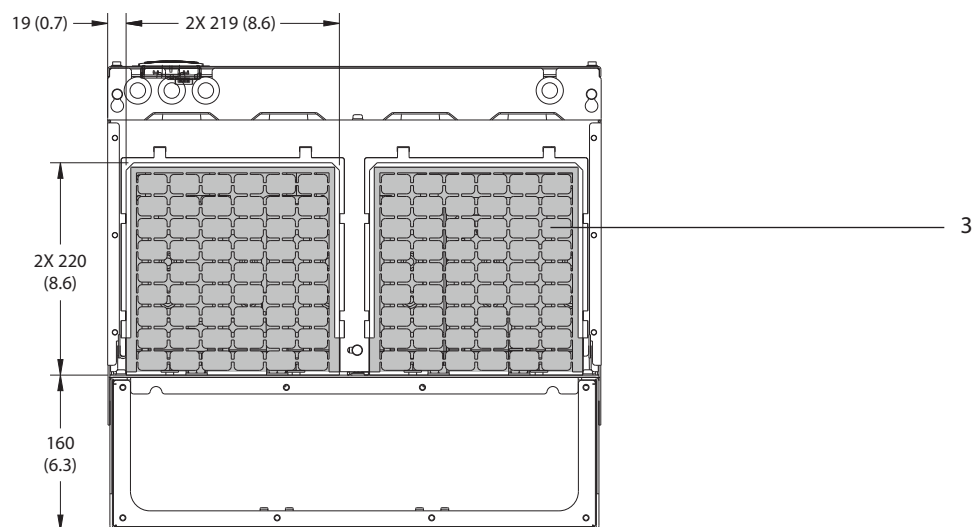

1	RFI shield termination (standard with RFI option)
2	Cable/EMC clamp
3	Gland plate

Illustration 9.13 RFI Shield Termination and Gland Plate Dimensions for E3h

## 9.8.4 E4h Exterior Dimensions

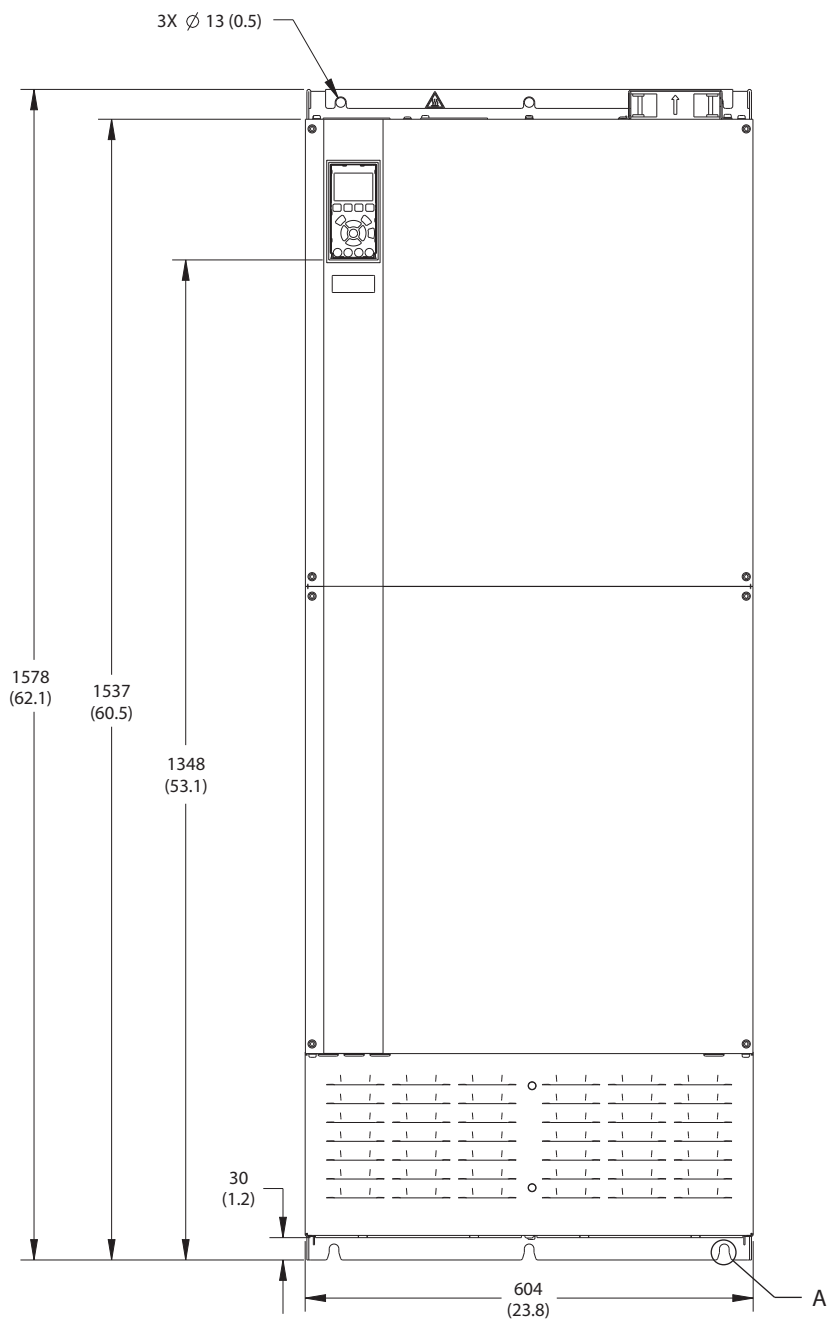

130BF664.10

9

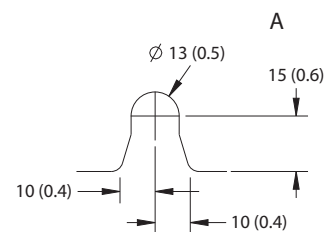


Illustration 9.14 Front View of E4h

9


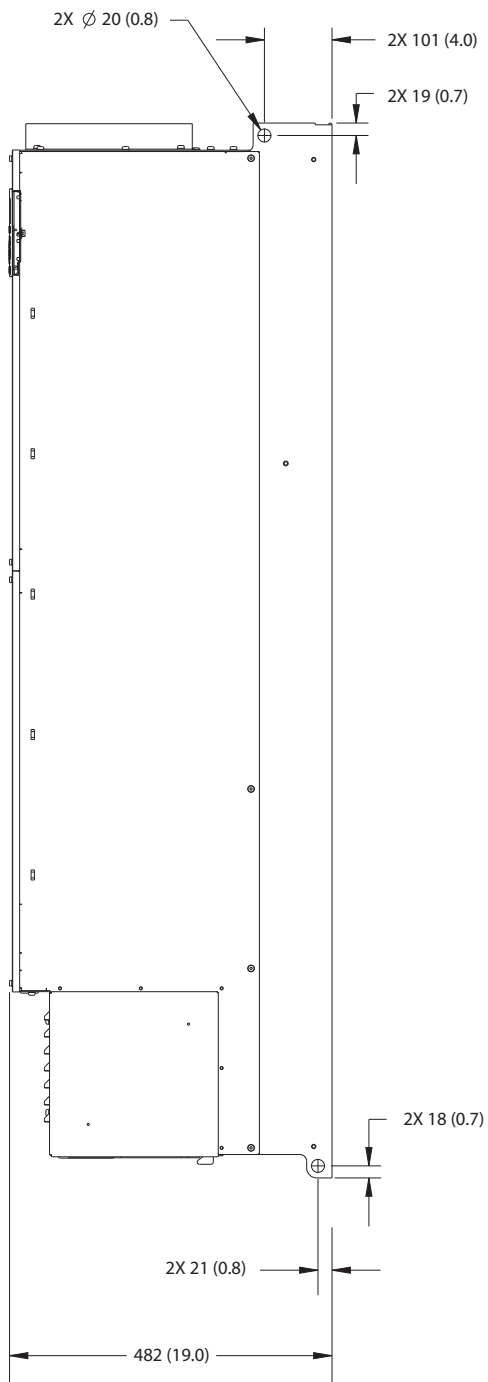


Illustration 9.15 Side View of E4h


130BF665.10

9

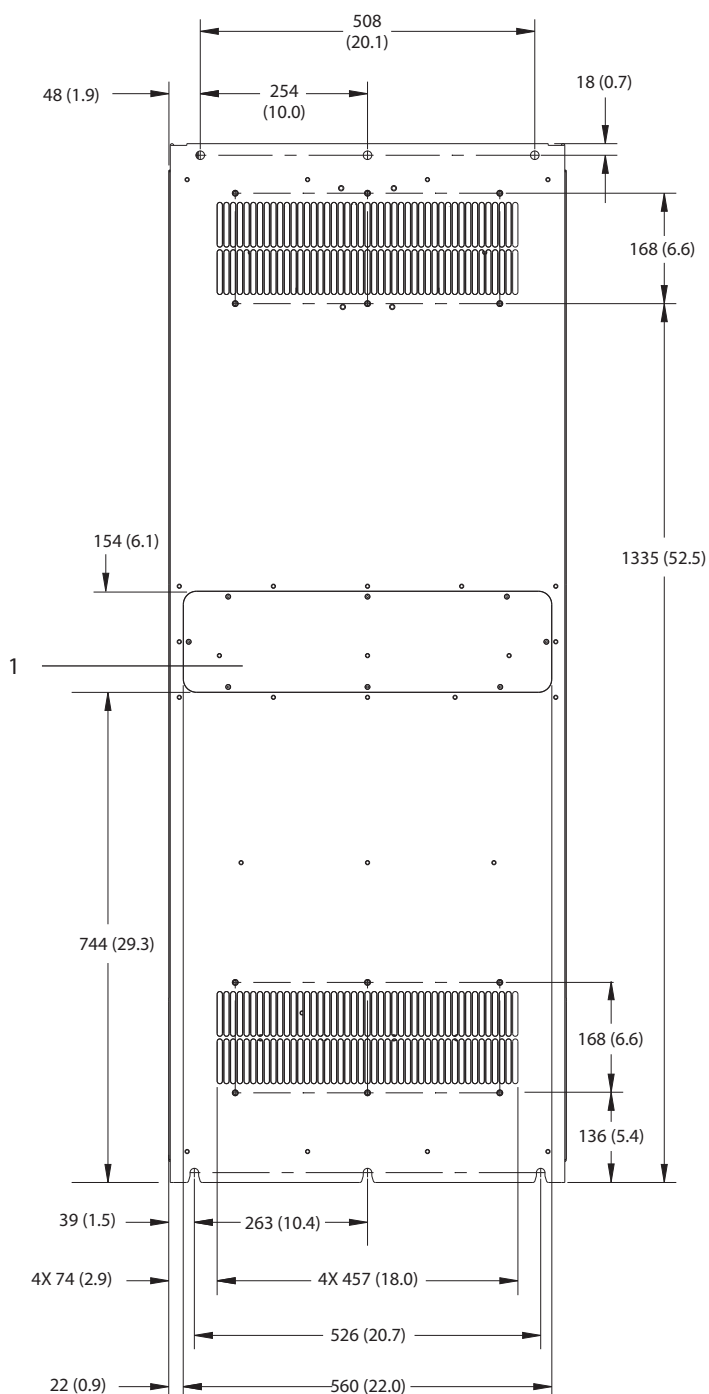


1	Heat sink access panel (optional)
---	-----------------------------------

Illustration 9.16 Back View of E4h

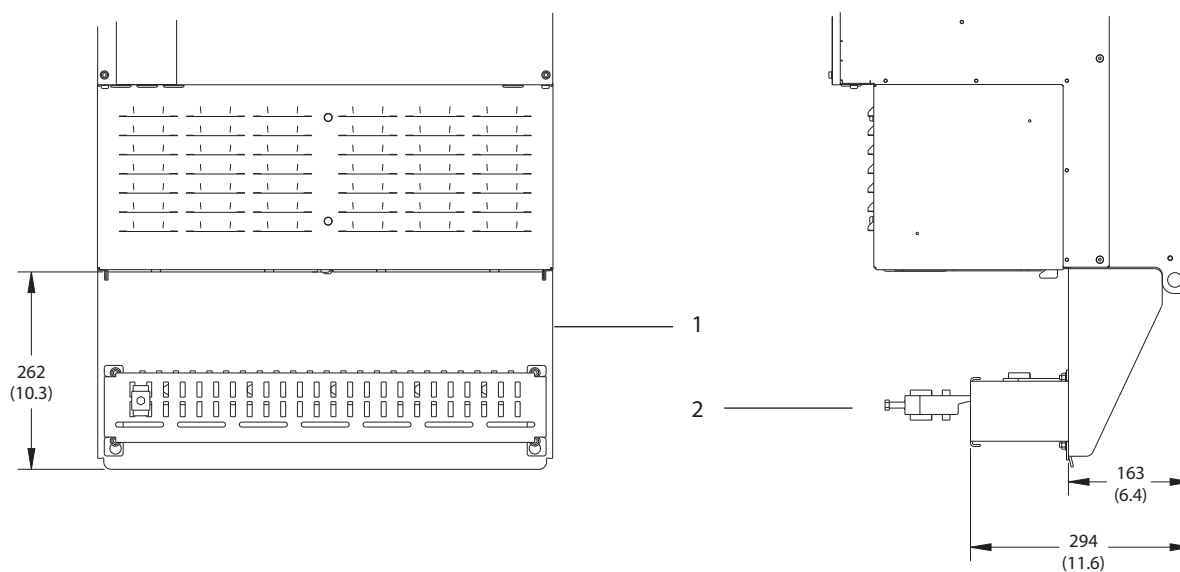

9

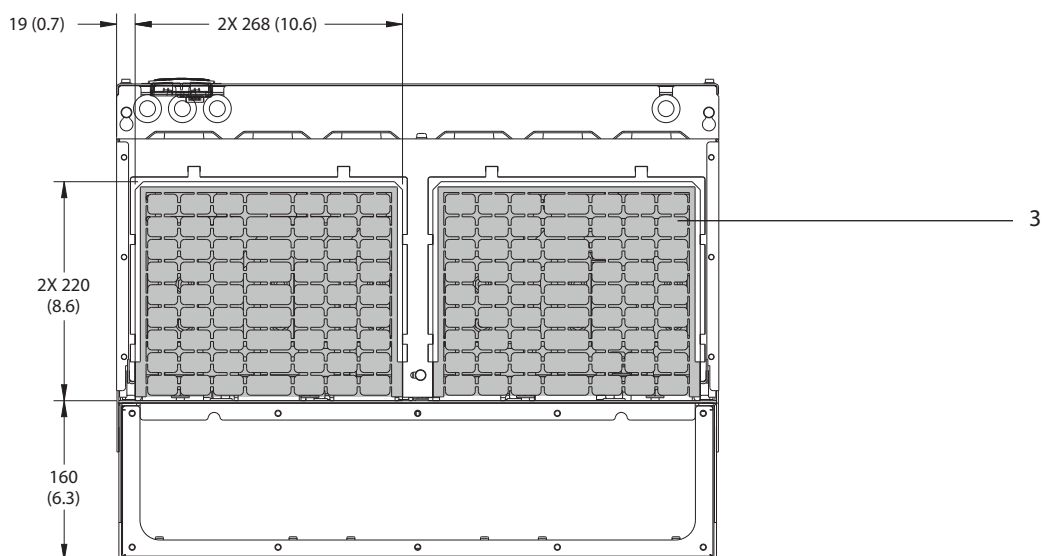


1	RFI shield termination (standard with RFI option)
2	Cable/EMC clamp
3	Gland plate

Illustration 9.17 RFI Shield Termination and Gland Plate Dimensions for E4h



## 9.9 Enclosure Airflow


### 9.9.1 Airflow for E1h–E4h Enclosures

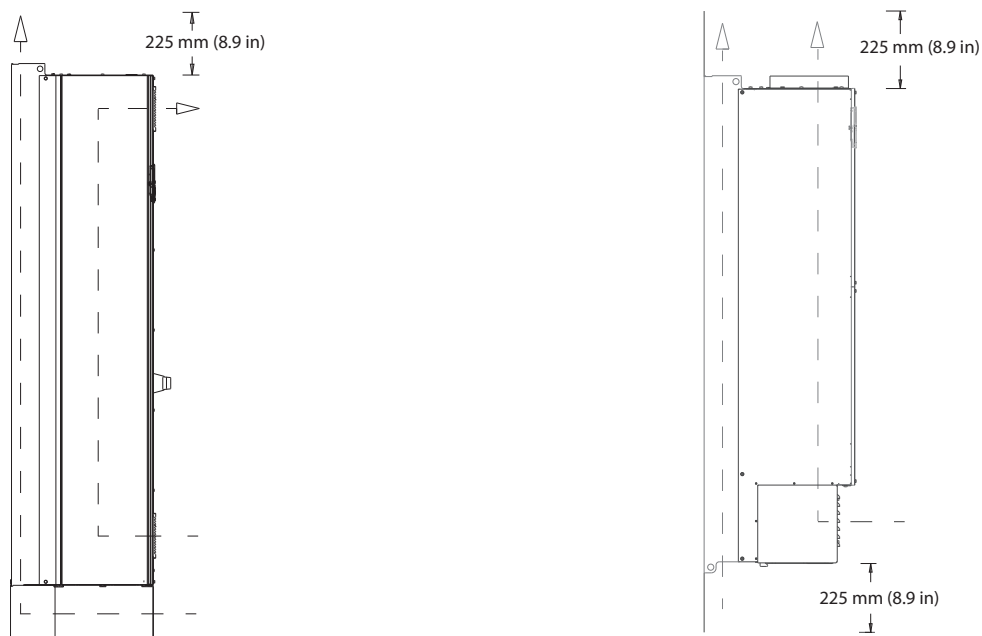

130BF699.10

9

Illustration 9.18 Standard Airflow Configuration for E1h/E2h (Left) and E3h/E4h (Right)

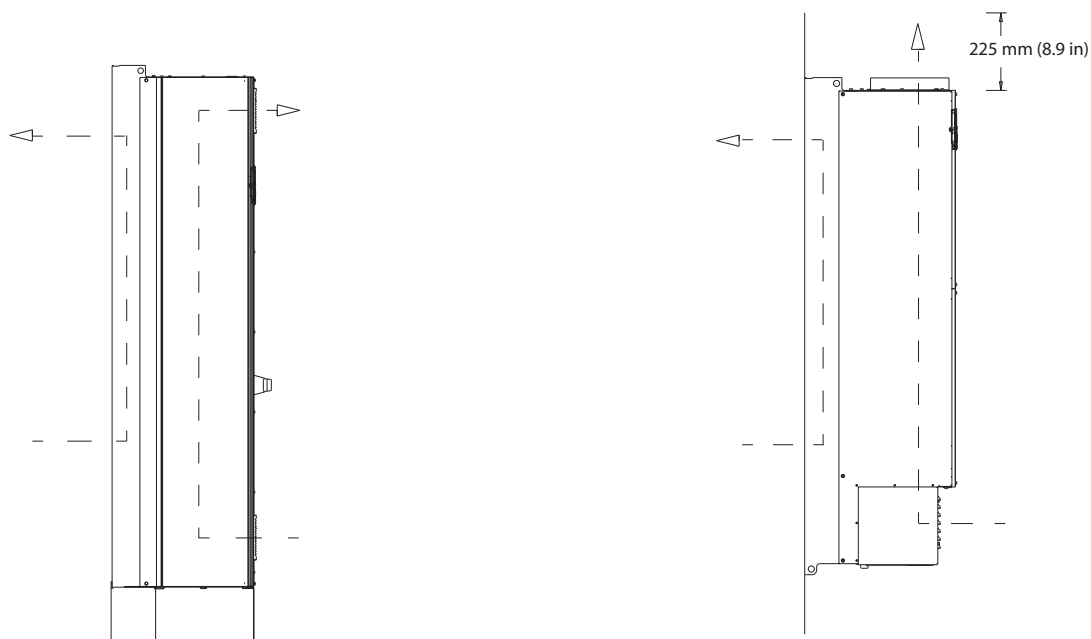

130BF700.10

Illustration 9.19 Optional Airflow Configuration Through the Back Wall for E1h/E2h (Left) and E3h/E4h (Right)

## 9.10 Fastener Torque Ratings

Apply the correct torque when tightening fasteners in the locations that are listed in *Table 9.7*. Too low or too high torque when fastening an electrical connection results in a bad electrical connection. To ensure correct torque, use a torque wrench.

Location	Bolt size	Torque [Nm (in-lb)]
Mains terminals	M10/M12	19 (168)/37 (335)
Motor terminals	M10/M12	19 (168)/37 (335)
Ground terminals	M8/M10	9.6 (84)/19.1 (169)
Brake terminals	M8	9.6 (84)
Load sharing terminals	M10/M12	19 (168)/37 (335)
Regeneration terminals (Enclosures E1h/E2h)	M8	9.6 (84)
Regeneration terminals (Enclosures E3h/E4h)	M10/M12	19 (168)/37 (335)
Relay terminals	–	0.5 (4)
Door/panel cover	M5	2.3 (20)
Gland plate	M5	2.3 (20)
Heat sink access panel	M5	3.9 (35)
Serial communication cover	M5	2.3 (20)

Table 9.7 Fastener Torque Ratings

## 10 Appendix

### 10.1 Abbreviations and Conventions

°C	Degrees Celsius
°F	Degrees Fahrenheit
Ω	Ohm
AC	Alternating current
AEO	Automatic energy optimization
ACP	Application control processor
AMA	Automatic motor adaptation
AWG	American wire gauge
CPU	Central processing unit
CSIV	Customer-specific initialization values
CT	Current transformer
DC	Direct current
DVM	Digital voltmeter
EEPROM	Electrically erasable programmable read-only memory
EMC	Electromagnetic compatibility
EMI	Electromagnetic interference
ESD	Electrostatic discharge
ETR	Electronic thermal relay
$f_{M,N}$	Nominal motor frequency
HF	High frequency
HVAC	Heating, ventilation, and air conditioning
Hz	Hertz
$I_{LIM}$	Current limit
$I_{INV}$	Rated inverter output current
$I_{M,N}$	Nominal motor current
$I_{VLT,MAX}$	Maximum output current
$I_{VLT,N}$	Rated output current supplied by the drive
IEC	International electrotechnical commission
IGBT	Insulated-gate bipolar transistor
I/O	Input/output
IP	Ingress protection
kHz	Kilohertz
kW	Kilowatt
$L_d$	Motor d-axis inductance
$L_q$	Motor q-axis inductance
LC	Inductor-capacitor
LCP	Local control panel
LED	Light-emitting diode
LOP	Local operation pad
mA	Milliamp
MCB	Miniature circuit breakers
MCO	Motion control option
MCP	Motor control processor
MCT	Motion control tool
MDCIC	Multi-drive control interface card

mV	Millivolts
NEMA	National Electrical Manufacturers Association
NTC	Negative temperature coefficient
$P_{M,N}$	Nominal motor power
PCB	Printed circuit board
PE	Protective earth
PELV	Protective extra low voltage
PID	Proportional integral derivative
PLC	Programmable logic controller
P/N	Part number
PROM	Programmable read-only memory
PS	Power section
PTC	Positive temperature coefficient
PWM	Pulse width modulation
$R_s$	Stator resistance
RAM	Random-access memory
RCD	Residual current device
Regen	Regenerative terminals
RFI	Radio frequency interference
RMS	Root means square (cyclically alternating electric current)
RPM	Revolutions per minute
SCR	Silicon controlled rectifier
SMPS	Switch mode power supply
S/N	Serial number
STO	Safe Torque Off
$T_{LIM}$	Torque limit
$U_{M,N}$	Nominal motor voltage
V	Volt
VVC	Voltage vector control
$X_h$	Motor main reactance

Table 10.1 Abbreviations, Acronyms, and Symbols

#### Conventions

- Numbered lists indicate procedures.
- Bullet lists indicate other information and description of illustrations.
- Italicized text indicates:
  - Cross reference
  - Link
  - Footnote
  - Parameter name
  - Parameter group name
  - Parameter option
- All dimensions are in mm (inch).

## 10.2 International/North American Default Parameter Settings

Setting *parameter 0-03 Regional Settings* to *[0] International* or *[1] North America* changes the default settings for some parameters. *Table 10.2* lists those parameters that are effected.

Changes made to default settings are stored and available for viewing in the quick menu along with any programming entered into parameters.

Parameter	International default parameter value	North American default parameter value
<i>Parameter 0-03 Regional Settings</i>	International	North America
<i>Parameter 0-71 Date Format</i>	DD-MM-YYYY	MM/DD/YYYY
<i>Parameter 0-72 Time Format</i>	24 h	12 h
<i>Parameter 1-20 Motor Power [kW]</i>	1)	1)
<i>Parameter 1-21 Motor Power [HP]</i>	2)	2)
<i>Parameter 1-22 Motor Voltage</i>	230 V/400 V/575 V	208 V/460 V/575 V
<i>Parameter 1-23 Motor Frequency</i>	50 Hz	60 Hz
<i>Parameter 3-03 Maximum Reference</i>	50 Hz	60 Hz
<i>Parameter 3-04 Reference Function</i>	Sum	External/Preset
<i>Parameter 4-13 Motor Speed High Limit [RPM]<sup>3)</sup></i>	1500 RPM	1800 RPM
<i>Parameter 4-14 Motor Speed High Limit [Hz]<sup>4)</sup></i>	50 Hz	60 Hz
<i>Parameter 4-19 Max Output Frequency</i>	100 Hz	120 Hz
<i>Parameter 4-53 Warning Speed High</i>	1500 RPM	1800 RPM
<i>Parameter 5-12 Terminal 27 Digital Input</i>	Coast inverse	External interlock
<i>Parameter 5-40 Function Relay</i>	Alarm	No alarm
<i>Parameter 6-15 Terminal 53 High Ref./Feedb. Value</i>	50	60
<i>Parameter 6-50 Terminal 42 Output</i>	Speed 0-HighLim	Speed 4-20 mA
<i>Parameter 14-20 Reset Mode</i>	Manual reset	Infinite auto reset
<i>Parameter 22-85 Speed at Design Point [RPM]<sup>3)</sup></i>	1500 RPM	1800 RPM
<i>Parameter 22-86 Speed at Design Point [Hz]</i>	50 Hz	60 Hz
<i>Parameter 24-04 Fire Mode Max Reference</i>	50 Hz	60 Hz

**Table 10.2 International/North American Default Parameter Settings**

1) *Parameter 1-20 Motor Power [kW]* is only visible when *parameter 0-03 Regional Settings* is set to *[0] International*.

2) *Parameter 1-21 Motor Power [HP]*, is only visible when *parameter 0-03 Regional Settings* is set to *[1] North America*.

3) This parameter is only visible when *parameter 0-02 Motor Speed Unit* is set to *[0] RPM*.

4) This parameter is only visible when *parameter 0-02 Motor Speed Unit* is set to *[1] Hz*.

## 10.3 Parameter Menu Structure

### 10.3.1 FC 202 Main menu

0-0* Operation / Display		1-0* General Settings		1-73 Flying Start		3-86 Check Valve Ramp End Speed [RPM]		5-26 Terminal X46/13 Digital Input	
0-0*	Basic Settings	1-00 Configuration Mode	1-77 Compressor Start Max Speed [RPM]	3-87 Final Ramp Time	5-30 Digital Outputs	5-30	Terminal 27 Digital Output	5-31	Terminal 29 Digital Output
0-01	Language	1-01 Motor Control Principle	1-78 Compressor Start Max Speed [Hz]	3-88 Digital Pot.Meter	5-32	5-32	Terminal 29 Digital Output	5-33	Terminal 29 Digital Output
0-02	Motor Speed Unit	1-03 Torque Characteristics	1-79 Pump Start Max Time to Trip	3-89 Step Size	5-33	5-33	Terminal 29 Digital Output	5-34	Terminal 29 Digital Output
0-03	Regional Settings	1-04 Overload Mode	1-80 Function at Stop	3-90 Ramp Time	5-34	5-34	Terminal 29 Digital Output	5-35	Terminal 29 Digital Output
0-04	Operating State at Power-up	1-06 Clockwise Direction	1-81 Min Speed for Function at Stop [RPM]	3-91 Power Restore	5-35	5-35	Terminal 29 Digital Output	5-36	Terminal 29 Digital Output
0-05	Local Mode Unit	1-07 Motor Selection	1-82 Min Speed for Function at Stop [Hz]	3-92 Maximum Limit	5-36	5-36	Terminal 29 Digital Output	5-37	Terminal 29 Digital Output
0-1*	Set-up Operations	1-08 VVC+ PM/SYN RM	1-86 Trip Speed Low [RPM]	3-93 Minimum Limit	5-38	5-38	Terminal 29 Digital Output	5-39	Terminal 29 Digital Output
0-10	Active Set-up	1-14 Damping Gain	1-87 Trip Speed Low [Hz]	3-94 Ramp Delay	5-39	5-39	Terminal 29 Digital Output	5-40	Terminal 29 Digital Output
0-11	Programming Set-up	1-15 Low Speed Filter Time Const.	1-90 Motor Thermal Protection	3-95 Limits / Warnings	5-40	5-40	Terminal 29 Digital Output	5-41	Terminal 29 Digital Output
0-12	This Set-up Linked to	1-16 High Speed Filter Time Const.	1-91 Motor External Fan	4-1* Motor Limits	5-41	5-41	Terminal 29 Digital Output	5-42	Terminal 29 Digital Output
0-13	Readout: Linked Set-ups	1-17 Voltage filter time const.	1-93 Thermistor Source	4-1* Motor Limits	5-42	5-42	Terminal 29 Digital Output	5-43	Terminal 29 Digital Output
0-14	Readout: Prog. Set-ups / Channel	1-20 Motor Power [kW]	1-94 ATEX ETR curlim. speed reduction	4-1* Motor Limits	5-43	5-43	Terminal 29 Digital Output	5-44	Terminal 29 Digital Output
0-2*	LCP Display	1-21 Motor Power [HP]	1-98 ATEX ETR interpol. points freq.	4-1* Motor Limits	5-44	5-44	Terminal 29 Digital Output	5-45	Terminal 29 Digital Output
0-20	Display Line 1.1 Small	1-22 Motor Voltage	1-99 ATEX ETR interpol. points current	4-1* Motor Limits	5-45	5-45	Terminal 29 Digital Output	5-46	Terminal 29 Digital Output
0-21	Display Line 1.2 Small	1-23 Motor Frequency	2-0* Brakes	4-1* Motor Limits	5-46	5-46	Terminal 29 Digital Output	5-47	Terminal 29 Digital Output
0-22	Display Line 1.3 Small	1-24 Motor Current	2-0* DC-Brake	4-1* Motor Limits	5-47	5-47	Terminal 29 Digital Output	5-48	Terminal 29 Digital Output
0-23	Display Line 2 Large	1-25 Motor Nominal Speed	2-00 DC Hold/Preheat Current	4-1* Motor Limits	5-48	5-48	Terminal 29 Digital Output	5-49	Terminal 29 Digital Output
0-24	Display Line 3 Large	1-26 Motor Cont. Rated Torque	2-01 DC Brake Current	4-1* Motor Limits	5-49	5-49	Terminal 29 Digital Output	5-50	Terminal 29 Digital Output
0-25	My Personal Menu	1-28 Motor Rotation Check	2-02 DC Braking Time	4-1* Motor Limits	5-50	5-50	Terminal 29 Digital Output	5-51	Terminal 29 Digital Output
0-3*	LCP Custom Readout	1-29 Automatic Motor Adaptation (AMA)	2-03 DC Brake Cut In Speed [RPM]	4-1* Motor Limits	5-51	5-51	Terminal 29 Digital Output	5-52	Terminal 29 Digital Output
0-30	Custom Readout Unit	1-3* Adv. Motor Data	2-04 DC Brake Cut In Speed [Hz]	4-1* Motor Limits	5-52	5-52	Terminal 29 Digital Output	5-53	Terminal 29 Digital Output
0-31	Custom Readout Min Value	1-30 Stator Resistance (Rs)	2-06 Parking Current	4-1* Motor Limits	5-53	5-53	Terminal 29 Digital Output	5-54	Terminal 29 Digital Output
0-32	Custom Readout Max Value	1-31 Rotor Resistance (Rr)	2-07 Parking Time	4-1* Motor Limits	5-54	5-54	Terminal 29 Digital Output	5-55	Terminal 29 Digital Output
0-37	Display Text 1	1-33 Stator Leakage Reactance (X1)	2-1* Brake Energy Funct.	4-1* Motor Limits	5-55	5-55	Terminal 29 Digital Output	5-56	Terminal 29 Digital Output
0-38	Display Text 2	1-34 Rotor Leakage Reactance (X2)	2-10 Brake Function	4-1* Motor Limits	5-56	5-56	Terminal 29 Digital Output	5-57	Terminal 29 Digital Output
0-39	Display Text 3	1-35 Main Reactance (Xh)	2-11 Brake Resistor (ohm)	4-1* Motor Limits	5-57	5-57	Terminal 29 Digital Output	5-58	Terminal 29 Digital Output
0-4*	LCP Keypad	1-36 Iron Loss Resistance (Rfe)	2-12 Brake Power Limit (kW)	4-1* Motor Limits	5-58	5-58	Terminal 29 Digital Output	5-59	Terminal 29 Digital Output
0-40	[Hand on] Key on LCP	1-37 d-axis Inductance (Ld)	2-13 Brake Power Monitoring	4-1* Motor Limits	5-59	5-59	Terminal 29 Digital Output	5-60	Terminal 29 Digital Output
0-41	[Off] Key on LCP	1-38 q-axis Inductance (Lq)	2-15 Brake Check	4-1* Motor Limits	5-60	5-60	Terminal 29 Digital Output	5-61	Terminal 29 Digital Output
0-42	[Auto on] Key on LCP	1-39 Motor Poles	2-16 AC brake Max. Current	4-1* Motor Limits	5-61	5-61	Terminal 29 Digital Output	5-62	Terminal 29 Digital Output
0-43	[Reset] Key on LCP	1-40 Back EMF at 1000 RPM	2-17 Over-voltage Control	4-1* Motor Limits	5-62	5-62	Terminal 29 Digital Output	5-63	Terminal 29 Digital Output
0-44	[Off/Reset] Key on LCP	1-44 q-axis Inductance Sat. (LdSat)	3-0* Reference Limits	4-1* Motor Limits	5-63	5-63	Terminal 29 Digital Output	5-64	Terminal 29 Digital Output
0-45	[Drive Bypass] Key on LCP	1-45 q-axis Inductance Sat. (LqSat)	3-01 Minimum Reference	4-1* Motor Limits	5-64	5-64	Terminal 29 Digital Output	5-65	Terminal 29 Digital Output
0-5*	Copy/Save	1-46 Position Detection Gain	3-02 Maximum Reference	4-1* Motor Limits	5-65	5-65	Terminal 29 Digital Output	5-66	Terminal 29 Digital Output
0-50	LCP Copy	1-47 Torque Calibration	3-03 Reference Function	4-1* Motor Limits	5-66	5-66	Terminal 29 Digital Output	5-67	Terminal 29 Digital Output
0-51	Set-up Copy	1-48 Inductance Sat. Point	3-04 Reference Function	4-1* Motor Limits	5-67	5-67	Terminal 29 Digital Output	5-68	Terminal 29 Digital Output
0-6*	Password	1-5* Load Indep. Setting	3-1* References	4-1* Motor Limits	5-68	5-68	Terminal 29 Digital Output	5-69	Terminal 29 Digital Output
0-60	Main Menu Password	1-50 Motor Magnetisation at Zero Speed	3-10 Preset Reference	4-1* Motor Limits	5-69	5-69	Terminal 29 Digital Output	5-70	Terminal 29 Digital Output
0-61	Access to Main Menu w/o Password	1-51 Min Speed Normal Magnetising [RPM]	3-11 Jog Speed [Hz]	4-1* Motor Limits	5-70	5-70	Terminal 29 Digital Output	5-71	Terminal 29 Digital Output
0-65	Personal Menu Password	1-52 Min Speed Normal Magnetising [Hz]	3-13 Reference Site	4-1* Motor Limits	5-71	5-71	Terminal 29 Digital Output	5-72	Terminal 29 Digital Output
0-66	Access to Personal Menu w/o Password	1-55 V/f Characteristic - V	3-14 Preset Relative Reference	4-1* Motor Limits	5-72	5-72	Terminal 29 Digital Output	5-73	Terminal 29 Digital Output
0-67	Bus Password Access	1-56 V/f Characteristic - f	3-15 Reference 1 Source	4-1* Motor Limits	5-73	5-73	Terminal 29 Digital Output	5-74	Terminal 29 Digital Output
0-7*	Clock Settings	1-58 Flying Start Test Pulses Current	3-16 Reference 2 Source	4-1* Motor Limits	5-74	5-74	Terminal 29 Digital Output	5-75	Terminal 29 Digital Output
0-70	Date and Time	1-59 Flying Start Test Pulses Frequency	3-17 Reference 3 Source	4-1* Motor Limits	5-75	5-75	Terminal 29 Digital Output	5-76	Terminal 29 Digital Output
0-71	Date Format	1-6* Load Depen. Setting	3-19 Jog Speed [RPM]	4-1* Motor Limits	5-76	5-76	Terminal 29 Digital Output	5-77	Terminal 29 Digital Output
0-72	Time Format	1-60 Low Speed Load Compensation	3-4* Ramp 1	4-1* Motor Limits	5-77	5-77	Terminal 29 Digital Output	5-78	Terminal 29 Digital Output
0-74	DST/Summertime	1-61 High Speed Load Compensation	3-41 Ramp 1 Ramp Up Time	4-1* Motor Limits	5-78	5-78	Terminal 29 Digital Output	5-79	Terminal 29 Digital Output
0-76	DST/Summertime Start	1-62 Slip Compensation	3-42 Ramp 1 Ramp Down Time	4-1* Motor Limits	5-79	5-79	Terminal 29 Digital Output	5-80	Terminal 29 Digital Output
0-77	DST/Summertime End	1-63 Slip Compensation Time Constant	3-5* Ramp 2	4-1* Motor Limits	5-80	5-80	Terminal 29 Digital Output	5-81	Terminal 29 Digital Output
0-79	Clock Fault	1-64 Resonance Damping Time Constant	3-51 Ramp 2 Ramp Up Time	4-1* Motor Limits	5-81	5-81	Terminal 29 Digital Output	5-82	Terminal 29 Digital Output
0-81	Working Days	1-65 Resonance Damping Time Constant	3-52 Ramp 2 Ramp Down Time	4-1* Motor Limits	5-82	5-82	Terminal 29 Digital Output	5-83	Terminal 29 Digital Output
0-82	Additional Working Days	1-66 Min. Current at Low Speed	3-8* Other Ramps	4-1* Motor Limits	5-83	5-83	Terminal 29 Digital Output	5-84	Terminal 29 Digital Output
0-83	Additional Non-Working Days	1-7* Start Adjustments	3-80 Jog Ramp Time	4-1* Motor Limits	5-84	5-84	Terminal 29 Digital Output	5-85	Terminal 29 Digital Output
0-89	Date and Time Readout	1-70 PM Start Mode	3-81 Quick Stop Ramp Time	4-1* Motor Limits	5-85	5-85	Terminal 29 Digital Output	5-86	Terminal 29 Digital Output
1-1*	Load and Motor	1-71 Start Delay	3-84 Initial Ramp Time	4-1* Motor Limits	5-86	5-86	Terminal 29 Digital Output	5-87	Terminal 29 Digital Output
		1-72 Start Function	3-85 Check Valve Ramp Time	4-1* Motor Limits	5-87	5-87	Terminal 29 Digital Output	5-88	Terminal 29 Digital Output

6-27	Terminal 54 Live Zero	8-33	Parity / Stop Bits	9-81	Defined Parameters (2)	12-20	Control Instance	13-5*	States
6-3*	Analog Input X30/11	8-35	Minimum Response Delay	9-82	Defined Parameters (3)	12-21	Process Data Config Write	13-51	SL Controller Event
6-30	Terminal X30/11 Low Voltage	8-36	Max Response Delay	9-83	Defined Parameters (4)	12-22	Process Data Config Read	13-52	SL Controller Action
6-31	Terminal X30/11 High Voltage	8-37	Maximum Inter-Char Delay	9-84	Defined Parameters (5)	12-27	Primary Master	13-9*	User Defined Alerts
6-34	Term. X30/11 Low Ref./Feedb. Value	8-4*	FC MC protocol set	9-85	Defined Parameters (6)	12-28	Store Data Values	13-90	Alert Trigger
6-35	Term. X30/11 High Ref./Feedb. Value	8-40	Telegram Selection	9-90	Changed Parameters (1)	12-29	Store Always	13-91	Alert Action
6-36	Term. X30/11 Filter Time Constant	8-42	PCD Write Configuration	9-91	Changed Parameters (2)	12-3*	EtherNet/IP	13-92	Alert Text
6-37	Term. X30/11 Live Zero	8-43	PCD Read Configuration	9-92	Changed Parameters (3)	12-30	Warning Parameter	13-9*	User Defined Readouts
6-4*	Analog Input X30/12	8-5*	Digital/Bus	9-93	Changed Parameters (4)	12-31	Net Reference	13-97	Alert Alarm Word
6-40	Terminal X30/12 Low Voltage	8-50	Coasting Select	9-94	Changed Parameters (5)	12-32	Net Control	13-98	Alert Warning Word
6-41	Terminal X30/12 High Voltage	8-51	Quick Stop Select	9-99	Profibus Revision Counter	12-33	CIP Revision	13-99	Alert Status Word
6-44	Term. X30/12 Low Ref./Feedb. Value	8-52	DC Brake Select	10-0*	Common Settings	12-34	CIP Product Code	14-4*	Special Functions
6-46	Term. X30/12 High Ref./Feedb. Value	8-53	Start Select	10-0*	CAN Protocol	12-35	EDS Parameter	14-0*	Inverter Switching
6-45	Term. X30/12 Filter Time Constant	8-54	Reversing Select	10-00	CAN Rate Select	12-37	COS Inhibit Timer	14-00	Switching Pattern
6-47	Term. X30/12 Live Zero	8-55	Set-up Select	10-01	Baud Rate Select	12-38	COS Filter	14-01	Switching Frequency
6-5*	Analog Output 42	8-56	Preset Reference Select	10-02	MAC ID	12-4*	Modbus TCP	14-03	Overmodulation
6-50	Terminal 42 Output	8-7*	BACnet	10-05	Readout Transmit Error Counter	12-40	Status Parameter	14-04	PWM Random
6-51	Terminal 42 Output Min Scale	8-70	BACnet Device Instance	10-06	Readout Receive Error Counter	12-41	Slave Message Count	14-1*	Mains On/Off
6-52	Terminal 42 Output Max Scale	8-72	MS/TP Max Masters	10-07	Readout Bus Off Counter	12-42	Slave Exception Message Count	14-10	Mains Failure
6-53	Terminal 42 Output Bus Control	8-73	MS/TP Max Info Frames	10-1*	DeviceNet	12-8*	Other Ethernet Services	14-11	Mains Voltage at Mains Fault
6-54	Terminal 42 Output Timeout Preset	8-74	"I-Am" Service	10-10	Process Data Type Selection	12-80	FTP Server	14-12	Function at Mains Imbalance
6-55	Terminal 42 Output Filter	8-75	Initialisation Password	10-11	Process Data Config Write	12-81	HTTP Server	14-16	Kin. Backup Gain
6-6*	Analog Output X30/8	8-8*	FC Port Diagnostics	10-12	Process Data Config Read	12-82	SMTP Service	14-2*	Reset Functions
6-60	Terminal X30/8 Output	8-80	Bus Message Count	10-13	Warning Parameter	12-83	SNMP Agent	14-20	Reset Mode
6-61	Terminal X30/8 Min. Scale	8-81	Bus Error Count	10-14	Net Reference	12-84	Address Conflict Detection	14-21	Automatic Restart Time
6-62	Terminal X30/8 Max. Scale	8-82	Slave Message Rcvd	10-15	Net Control	12-85	ACD Last Conflict	14-22	Operation Mode
6-63	Terminal X30/8 Output Bus Control	8-83	Slave Error Count	10-2*	COS Filters	12-89	Transparent Socket Channel Port	14-23	Typecode Setting
6-64	Terminal X30/8 Output Timeout Preset	8-9*	Bus Jog / Feedback	10-20	COS Filter 1	12-9*	Advanced Ethernet Services	14-25	Trip Delay at Torque Limit
6-7*	Analog Output X45/1	8-90	Bus Jog 1 Speed	10-21	COS Filter 2	12-90	Cable Diagnostic	14-26	Trip Delay at Inverter Fault
6-70	Terminal X45/1 Output	8-91	Bus Jog 2 Speed	10-22	COS Filter 3	12-91	MDI-X	14-28	Production Settings
6-71	Terminal X45/1 Min. Scale	8-94	Bus Feedback 1	10-23	COS Filter 4	12-92	IGMP Snooping	14-29	Service Code
6-72	Terminal X45/1 Max. Scale	8-95	Bus Feedback 2	10-3*	Parameter Access	12-93	Cable Error Length	14-3*	Current Limit Ctrl.
6-73	Terminal X45/1 Bus Control	8-96	Bus Feedback 3	10-30	Array Index	12-94	Broadcast Storm Protection	14-30	Current Lim Ctrl, Proportional Gain
6-74	Terminal X45/1 Output Timeout Preset	9-*	PRODrive	10-31	Store Data Values	12-95	Inactivity timeout	14-31	Current Lim Ctrl, Integration Time
6-8*	Analog Output X45/3	9-00	Setpoint	10-32	DeviceNet Revision	12-96	Port Config	14-32	Current Lim Ctrl, Filter Time
6-80	Terminal X45/3 Output	9-07	Actual Value	10-33	Store Always	12-97	QoS Priority	14-4*	Energy Optimising
6-81	Terminal X45/3 Min. Scale	9-15	PCD Write Configuration	10-34	DeviceNet Product Code	12-98	Interface Counters	14-40	VT Level
6-82	Terminal X45/3 Max. Scale	9-16	PCD Read Configuration	10-39	DeviceNet F Parameters	12-99	Media Counters	14-41	AO Minimum Magnetisation
6-83	Terminal X45/3 Bus Control	9-18	Node Address	12-0*	Ethernet	13-0*	Smart Logic	14-42	Minimum AEO Frequency
6-84	Terminal X45/3 Output Timeout Preset	9-22	Telegram Selection	12-00	IP Settings	13-0*	SLC Settings	14-43	Motor Cosphi
8-*	Comm. and Options	9-23	Parameters for Signals	12-01	IP Address Assignment	13-00	SL Controller Mode	14-5*	Environment
8-0*	General Settings	9-27	Parameter Edit	12-02	IP Address	13-01	Start Event	14-50	RFI Filter
8-01	Control Site	9-28	Process Control	12-03	Subnet Mask	13-02	Stop Event	14-51	DC Link Compensation
8-02	Control Source	9-31	Safe Address	12-04	Default Gateway	13-03	Reset SLC	14-52	Fan Control
8-03	Control Timeout Time	9-44	Fault Message Counter	12-05	DHCP Server	13-1*	Comparators	14-53	Fan Monitor
8-04	Control Timeout Function	9-45	Fault Code	12-06	Name Servers	13-10	Comparator Operand	14-55	Output Filter
8-05	End-of-Timeout Function	9-47	Fault Number	12-07	Lease Expires	13-11	Comparator Operator	14-56	Capacitance Output Filter
8-06	Reset Timeout Function	9-52	Fault Situation Counter	12-08	Domain Name	13-12	Comparator Value	14-57	Inductance Output Filter
8-07	Diagnosis Trigger	9-53	Profibus Warning Word	12-09	Host Name	13-1*	RS Flip Flops	14-58	Voltage Gain Filter
8-08	Readout Filtering	9-63	Actual Baud Rate	12-09	Physical Address	13-15	RS-FF Operand S	14-59	Actual Number of Inverter Units
8-1*	Control Settings	9-64	Device Identification	12-1*	Ethernet Link Parameters	13-16	RS-FF Operand R	14-6*	Auto Derate
8-10	Control Profile	9-65	Profile Number	12-10	Link Status	13-2*	Timers	14-60	Function at Over Temperature
8-13	Configurable Status Word STW	9-67	Control Word 1	12-11	Link Duration	13-20	SL Controller Timer	14-61	Function at Inverter Overload
8-14	Configurable Control Word CTW	9-68	Status Word 1	12-12	Auto Negotiation	13-4*	Logic Rules	14-62	Inv. Overload Derate Current
8-17	Configurable Alarm and Warningword	9-70	Programming Set-up	12-13	Link Speed	13-40	Logic Rule Boolean 1	14-8*	Options
8-3*	FC Port Settings	9-71	Profibus Save Data Values	12-14	Link Duplex	13-41	Logic Rule Operator 1	14-80	Option Supplied by External 24VDC
8-30	Protocol	9-72	ProfibusDrivereset	12-18	Supervisor MAC	13-42	Logic Rule Boolean 2	14-9*	Fault Settings
8-31	Address	9-75	DO Identification	12-19	Supervisor IP Addr.	13-43	Logic Rule Operator 2	14-90	Fault Level
8-32	Baud Rate	9-80	Defined Parameters (1)	12-2*	Process Data	13-44	Logic Rule Boolean 3		

<b>15-5* Drive Information</b>	15-76 Option in Slot C1/E1	16-62 Analog Input 53	<b>20-0* Feedback</b>	21-23 Ext. 1 Differentiation Time
<b>15-0* Operating Data</b>	15-77 Slot C1/E1 Option SW Version	16-63 Terminal 54 Switch Setting	20-00 Feedback 1 Source	21-24 Ext. 1 Dif. Gain Limit
15-00 Operating hours	<b>15-8* Operating Data II</b>	16-64 Analog Input 54	<b>21-3* Ext. CL 2 Ref/Fb.</b>	
15-01 Running Hours	15-80 Fan Running Hours	16-65 Analog Output 42 [mA]	21-30 Ext. 2 Ref/Feedback Unit	
15-02 kWh Counter	15-81 Preset Fan Running Hours	16-66 Digital Output [bin]	21-31 Ext. 2 Minimum Reference	
15-03 Power Up's	<b>15-9* Parameter Info</b>	16-67 Pulse Input #29 [Hz]	21-32 Ext. 2 Maximum Reference	
15-04 Over Temp's	15-92 Defined Parameters	16-68 Pulse Input #33 [Hz]	21-33 Ext. 2 Reference Source	
15-05 Over Volt's	15-93 Modified Parameters	16-69 Pulse Output #27 [Hz]	21-34 Ext. 2 Feedback Source	
15-06 Reset kWh Counter	15-98 Drive Identification	16-70 Pulse Output #29 [Hz]	21-35 Ext. 2 Setpoint	
15-07 Reset Running Hours Counter	15-99 Parameter Metadata	16-71 Relay Output [bin]	21-37 Ext. 2 Reference [Unit]	
15-08 Number of Starts	<b>16-5* Data Readouts</b>	16-72 Counter A	21-38 Ext. 2 Feedback [Unit]	
<b>15-1* Data Log Settings</b>	<b>16-0* General Status</b>	16-73 Counter B	<b>20-2* Feedback/Setpoint</b>	21-39 Ext. 2 Output [%]
15-10 Logging Source	16-00 Control Word	16-75 Analog in X30/11	20-20 Feedback Function	<b>21-4* Ext. CL 2 PID</b>
15-11 Logging Interval	16-01 Reference [Unit]	16-76 Analog in X30/12	20-21 Setpoint 1	21-40 Ext. 2 Normal/Inverse Control
15-12 Trigger Event	16-02 Reference [%]	16-77 Analog Out X30/8 [mA]	20-22 Setpoint 2	21-41 Ext. 2 Proportional Gain
15-13 Logging Mode	16-03 Status Word	16-78 Analog Out X45/1 [mA]	20-23 Setpoint 3	21-42 Ext. 2 Integral Time
15-14 Samples Before Trigger	16-05 Main Actual Value [%]	16-79 Analog Out X45/3 [mA]	<b>20-6* Sensorless</b>	21-43 Ext. 2 Differentiation Time
<b>15-2* Historic Log</b>	16-09 Custom Readout	<b>16-8* Fieldbus &amp; FC Port</b>	20-60 Sensorless Unit	21-44 Ext. 2 Dif. Gain Limit
15-20 Historic Log: Event	<b>16-1* Motor Status</b>	16-80 Fieldbus CTW 1	<b>21-5* Ext. CL 3 Ref/Fb.</b>	
15-21 Historic Log: Value	16-10 Power [kW]	16-82 Fieldbus REF 1	21-50 Ext. 3 Ref/Feedback Unit	
15-22 Historic Log: Time	16-11 Power [hp]	16-84 Comm. Option STW	21-51 Ext. 3 Minimum Reference	
15-23 Historic Log: Date and Time	16-12 Motor Voltage	16-85 FC Port CTW 1	21-52 Ext. 3 Maximum Reference	
<b>15-3* Alarm Log</b>	16-13 Frequency	16-86 FC Port REF 1	21-53 Ext. 3 Reference Source	
15-30 Alarm Log: Error Code	16-14 Motor current	16-89 Configurable Alarm/Warning Word	21-54 Ext. 3 Feedback Source	
15-31 Alarm Log: Value	16-15 Frequency [%]	<b>16-9* Diagnosis Readouts</b>	21-55 Ext. 3 Setpoint	
15-32 Alarm Log: Time	16-16 Torque [Nm]	16-90 Alarm Word	21-57 Ext. 3 Reference [Unit]	
15-33 Alarm Log: Date and Time	16-17 Speed [RPM]	16-91 Alarm Word 2	<b>20-8* PID Basic Settings</b>	21-58 Ext. 3 Feedback [Unit]
15-34 Alarm Log: Setpoint	16-18 Motor Thermal	16-92 Warning Word	20-81 PID Normal/ Inverse Control	21-59 Ext. 3 Output [%]
15-35 Alarm Log: Feedback	16-20 Motor Angle	16-93 Warning Word 2	20-82 PID Start Speed [RPM]	<b>21-6* Ext. CL 3 PID</b>
15-36 Alarm Log: Current Demand	16-22 Torque [%]	16-94 Ext. Status Word	20-83 PID Start Speed [Hz]	21-60 Ext. 3 Normal/Inverse Control
15-37 Alarm Log: Process Ctrl Unit	16-23 Motor Shaft Power [kW]	16-95 Ext. Status Word 2	20-84 On Reference Bandwidth	21-61 Ext. 3 Proportional Gain
<b>15-4* Drive Identification</b>	16-24 Calibrated Stator Resistance	16-96 Maintenance Word	<b>20-9* PID Controller</b>	21-62 Ext. 3 Integral Time
15-40 FC Type	16-26 Power Filtered [kW]	<b>18-5* Info &amp; Readouts</b>	20-91 PID Anti Windup	21-63 Ext. 3 Differentiation Time
15-41 Power Section	16-27 Power Filtered [hp]	<b>18-0* Maintenance Log</b>	20-93 PID Proportional Gain	21-64 Ext. 3 Dif. Gain Limit
15-42 Voltage	<b>16-3* Drive Status</b>	18-00 Maintenance Log: Item	20-94 PID Integral Time	<b>22-5* Appl. Functions</b>
15-43 Software Version	16-30 DC Link Voltage	18-01 Maintenance Log: Action	20-95 PID Differentiation Time	<b>22-0* Miscellaneous</b>
15-44 Ordered Typecode String	16-31 System Temp.	18-02 Maintenance Log: Time	20-96 PID Diff. Gain Limit	22-00 External Interlock Delay
15-45 Actual Typecode String	16-32 Brake Energy /s	18-03 Maintenance Log: Date and Time	<b>21-5* Ext. Closed Loop</b>	22-01 Power Filter Time
15-46 Frequency Converter Ordering No	16-33 Brake Energy Average	<b>18-3* Analog Readouts</b>	<b>21-0* Ext. CL Autotuning</b>	<b>22-2* No-Flow Detection</b>
15-47 Power Card Ordering No	16-34 Heatsink Temp.	18-30 Analog Input X42/1	21-00 Closed Loop Type	22-20 Low Power Auto Set-up
15-48 LCP Id No	16-35 Inverter Thermal	18-31 Analog Input X42/3	21-01 PID Performance	22-21 Low Power Detection
15-49 SW ID Control Card	16-36 Inv. Nom. Current	18-32 Analog Input X42/5	21-02 PID Output Change	22-22 Low Speed Detection
15-50 SW ID Power Card	16-37 Inv. Max. Current	18-33 Analog Out X42/7 [V]	21-03 Minimum Feedback Level	22-23 No-Flow Function
15-51 Frequency Converter Serial Number	16-38 SL Controller State	18-34 Analog Out X42/9 [V]	21-04 Maximum Feedback Level	22-24 No-Flow Delay
15-53 Power Card Serial Number	16-39 Control Card Temp.	18-35 Analog Out X42/11 [V]	21-09 PID Auto Tuning	22-26 Dry Pump Function
15-54 Config File Name	16-40 Logging Buffer Full	18-36 Analog Input X48/2 [mA]	<b>21-1* Ext. CL 1 Ref/Fb.</b>	22-27 Dry Pump Delay
15-58 SmartStart Filename	16-49 Current Fault Source	18-37 Temp. Input X48/4	21-10 Ext. 1 Ref/Feedback Unit	22-28 No-Flow Low Speed [RPM]
15-59 Filename	<b>16-5* Ref. &amp; Feeds.</b>	18-38 Temp. Input X48/7	21-11 Ext. 1 Minimum Reference	22-29 No-Flow Low Speed [Hz]
<b>15-6* Option Ident</b>	16-50 External Reference	18-39 Temp. Input X48/10	21-12 Ext. 1 Maximum Reference	<b>22-3* No-Flow Power Tuning</b>
15-60 Option Mounted	16-52 Feedback[Unit]	<b>18-5* Ref. &amp; Feeds.</b>	21-13 Ext. 1 Reference Source	22-30 No-Flow Power
15-61 Option SW Version	16-53 Digi Pot Reference	18-50 Sensorless Readout [unit]	21-14 Ext. 1 Feedback Source	22-31 Power Correction Factor
15-62 Option Ordering No	16-54 Feedback 1 [Unit]	<b>18-6* Inputs &amp; Outputs 2</b>	21-15 Ext. 1 Setpoint	22-32 Low Speed [RPM]
15-63 Option Serial No	16-55 Feedback 2 [Unit]	18-60 Digital Input 2	21-17 Ext. 1 Reference [Unit]	22-33 Low Speed [Hz]
15-70 Option in Slot A	16-56 Feedback 3 [Unit]	<b>18-7* Rectifier Status</b>	21-18 Ext. 1 Feedback [Unit]	22-34 Low Speed Power [kW]
15-71 Slot A Option SW Version	16-58 PID Output [%]	18-70 Mains Voltage	21-19 Ext. 1 Output [%]	22-35 Low Speed Power [HP]
15-72 Option in Slot B	16-59 Adjusted Setpoint	18-71 Mains Frequency	<b>21-2* Ext. CL 1 PID</b>	22-36 High Speed [RPM]
15-73 Slot B Option SW Version	<b>16-6* Inputs &amp; Outputs</b>	18-72 Mains Imbalance	21-20 Ext. 1 Normal/Inverse Control	22-37 High Speed [Hz]
15-74 Option in Slot C0/E0	16-60 Digital Input	18-75 Rectifier DC Volt.	21-21 Ext. 1 Proportional Gain	22-38 High Speed Power [kW]
15-75 Slot C0/E0 Option SW Version	16-61 Terminal 53 Switch Setting	<b>20-5* Drive Closed Loop</b>	21-22 Ext. 1 Integral Time	22-39 High Speed Power [HP]

22-4*	Sleep Mode	23-64	Timed Period Stop	25-85	Relay ON Time	27-14	Pump Capacity	29-01	Pipe Fill Speed [RPM]
22-40	Minimum Run Time	23-65	Minimum Bin Value	25-86	Reset Relay Counters	27-16	Runtime Balancing	29-02	Pipe Fill Speed [Hz]
22-41	Minimum Sleep Time	23-66	Reset Continuous Bin Data	25-9*	Service	27-17	Motor Starters	29-03	Pipe Fill Time
22-42	Wake-up Speed [RPM]	23-67	Reset Timed Bin Data	25-90	Pump Interlock	27-18	Spin Time for Unused Pumps	29-04	Pipe Fill Rate
22-43	Wake-up Speed [Hz]	23-68*	Payback Counter	25-91	Manual Alternation	27-19	Reset Current Runtime Hours	29-05	Filled Setpoint
22-44	Wake-up Ref/FB Difference	23-80	Power Reference Factor	26-6*	Analog I/O Option	27-2*	Bandwidth Settings	29-06	No-Flow Disable Timer
22-45	Setpoint Boost	23-81	Energy Cost	26-0*	Analog I/O Mode	27-20	Normal Operating Range	29-07	Filled setpoint function
22-46	Maximum Boost Time	23-82	Investment	26-00	Terminal X42/1 Mode	27-21	Override Limit	29-1*	Deragging Function
22-5*	End of Curve	23-83	Energy Savings	26-01	Terminal X42/3 Mode	27-22	Fixed Speed Only Operating Range	29-10	Derag Cycles
22-50	End of Curve Function	23-84	Cost Savings	26-02	Terminal X42/5 Mode	27-23	Staging Delay	29-11	Derag at Start/Stop
22-51	End of Curve Delay	24-2*	Appl. Functions 2	26-1*	Analog Input X42/1	27-24	Destaging Delay	29-12	Deragging Run Time
22-6*	Broken Belt Detection	24-1*	Drive Bypass	26-10	Terminal X42/1 Low Voltage	27-25	Override Hold Time	29-13	Derag Speed [RPM]
22-60	Broken Belt Function	24-10	Drive Bypass Function	26-11	Terminal X42/1 High Voltage	27-27	Min Speed Destage Delay	29-14	Derag Off Delay
22-61	Broken Belt Torque	24-11	Drive Bypass Delay Time	26-14	Term. X42/1 Low Ref./Feedb. Value	27-3*	Staging Speed	29-2*	Derag Power Tuning
22-62	Broken Belt Delay	25-0*	Cascade Controller	26-15	Term. X42/1 High Ref./Feedb. Value	27-30	Auto Tune Staging Speeds	29-20	Derag Power[kW]
22-7*	Short Cycle Protection	25-00	System Settings	26-16	Term. X42/1 Filter Time Constant	27-31	Stage On Speed [RPM]	29-20	Derag Power[HP]
22-75	Short Cycle Protection	25-02	Cascade Controller	26-17	Term. X42/1 Live Zero	27-32	Stage On Speed [Hz]	29-21	Derag Power[HP]
22-76	Interval between Starts	25-04	Motor Start	26-2*	Analog Input X42/3	27-33	Stage Off Speed [RPM]	29-22	Derag Power Factor
22-77	Minimum Run Time	25-05	Pump Cycling	26-20	Terminal X42/3 Low Voltage	27-34	Stage Off Speed [Hz]	29-23	Derag Power Delay
22-78	Minimum Run Time	25-06	Fixed Lead Pump	26-21	Terminal X42/3 High Voltage	27-4*	Staging Settings	29-24	Low Speed [RPM]
22-79	Minimum Run Time Override Value	25-20	Number of Pumps	26-24	Term. X42/3 Low Ref./Feedb. Value	27-40	Auto Tune Staging Settings	29-25	Low Speed [Hz]
22-80	Flow Compensation	25-20	Bandwidth Settings	26-25	Term. X42/3 High Ref./Feedb. Value	27-41	Ramp Down Delay	29-26	Low Speed Power [kW]
22-81	Square-linear Curve Approximation	25-21	Override Bandwidth	26-26	Term. X42/3 High Ref./Feedb. Value	27-42	Ramp Up Delay	29-27	Low Speed Power [HP]
22-82	Work Point Calculation	25-22	Fixed Speed Bandwidth	26-27	Term. X42/3 Live Zero	27-43	Staging Threshold	29-28	High Speed [RPM]
22-83	Speed at No-Flow [RPM]	25-23	SBW Staging Delay	26-3*	Analog Input X42/5	27-44	Destaging Threshold	29-29	High Speed [Hz]
22-84	Speed at No-Flow [Hz]	25-24	SBW Destaging Delay	26-31	Terminal X42/5 Low Voltage	27-45	Staging Speed [RPM]	29-30	High Speed Power [kW]
22-85	Speed at Design Point [RPM]	25-25	OBW Time	26-31	Terminal X42/5 High Voltage	27-46	Staging Speed [Hz]	29-31	High Speed Power [HP]
22-86	Speed at Design Point [Hz]	25-26	Destage At No-Flow	26-34	Term. X42/5 Low Ref./Feedb. Value	27-47	Destaging Speed [RPM]	29-32	Derag On Ref Bandwidth
22-87	Pressure at No-Flow Speed	25-27	Stage Function	26-36	Term. X42/5 High Ref./Feedb. Value	27-48	Destaging Speed [Hz]	29-33	Power Derag Limit
22-88	Pressure at Rated Speed	25-28	Stage Function Time	26-37	Term. X42/5 Filter Time Constant	27-49	Staging Principle	29-34	Consecutive Derag Interval
22-89	Flow at Design Point	25-29	Destage Function	26-4*	Analog Out X42/7	27-5*	Alternate Settings	29-35	Derag at Locked Rotor
22-90	Flow at Rated Speed	25-30	Destage Function Time	26-40	Terminal X42/7 Output	27-50	Automatic Alternation	29-4*	Pre/Post Lube
23-0*	Time-based Functions	25-4*	Staging Settings	26-41	Terminal X42/7 Min. Scale	27-51	Alternation Event	29-40	Pre/Post Lube Function
23-01	ON Time	25-40	Ramp Down Delay	26-42	Terminal X42/7 Max. Scale	27-52	Alternation Time Interval	29-41	Pre Lube Time
23-02	OFF Time	25-41	Ramp Up Delay	26-43	Terminal X42/7 Bus Control	27-53	Alternation Timer Value	29-42	Post Lube Time
23-03	OFF Action	25-42	Staging Threshold	26-44	Terminal X42/7 Timeout Preset	27-54	Alternation At Time of Day	29-5*	Flow Confirmation
23-04	Occurrence	25-43	Destaging Threshold	26-45*	Analog Out X42/9	27-55	Alternation Predefined Time	29-50	Validation Time
23-1*	Maintenance	25-44	Staging Speed [RPM]	26-50	Terminal X42/9 Output	27-56	Alternate Capacity is <	29-51	Verification Time
23-10	Maintenance Item	25-45	Staging Speed [Hz]	26-51	Terminal X42/9 Min. Scale	27-58	Run Next Pump Delay	29-52	Signal Lost Verification Time
23-11	Maintenance Action	25-46	Destaging Speed [RPM]	26-52	Terminal X42/9 Max. Scale	27-6*	Digital Inputs	29-53	Flow Confirmation Mode
23-12	Maintenance Time Base	25-47	Destaging Speed [Hz]	26-53	Terminal X42/9 Bus Control	27-60	Terminal X66/1 Digital Input	29-6*	Flow Meter
23-13	Maintenance Time Interval	25-49	Staging Principle	26-54	Terminal X42/9 Timeout Preset	27-61	Terminal X66/3 Digital Input	29-60	Flow Meter Monitor
23-14	Maintenance Date and Time	25-50	Alternation Settings	26-6*	Analog Out X42/11	27-62	Terminal X66/5 Digital Input	29-61	Flow Meter Source
23-15	Reset Maintenance Word	25-51	Alternation Event	26-60	Terminal X42/11 Output	27-63	Terminal X66/7 Digital Input	29-62	Flow Meter Unit
23-16	Maintenance Text	25-52	Alternation Time Interval	26-61	Terminal X42/11 Min. Scale	27-64	Terminal X66/9 Digital Input	29-63	Totalized Volume Unit
23-1*	Maintenance Reset	25-53	Alternation Timer Value	26-62	Terminal X42/11 Max. Scale	27-65	Terminal X66/11 Digital Input	29-64	Actual Volume Unit
23-5*	Energy Log	25-54	Alternation Predefined Time	26-63	Terminal X42/11 Bus Control	27-66	Terminal X66/13 Digital Input	29-65	Totalized Volume
23-50	Energy Log Resolution	25-55	Alternate if Load < 50%	26-64	Terminal X42/11 Timeout Preset	27-7*	Connections	29-66	Actual Volume
23-51	Period Start	25-56	Staging Mode at Alternation	27-7*	Cascade CIL Option	27-70	Relay	29-67	Reset Totalized Volume
23-53	Energy Log	25-58	Run Next Pump Delay	27-0*	Control & Status	27-9*	Readouts	29-68	Reset Actual Volume
23-54	Reset Energy Log	25-59	Run on Mains Delay	27-01	Pump Status	27-91	Cascade Reference	29-69	Flow
23-6*	Trending	25-80	Status	27-02	Manual Pump Control	27-92	% Of Total Capacity	30-2*	Special Features
23-60	Trend Variable	25-81	Cascade Status	27-03	Current Runtime Hours	27-93	Cascade Option Status	30-2*	Adv. Start Adjust
23-61	Continuous Bin Data	25-82	Pump Status	27-04	Pump Total Lifetime Hours	27-94	Cascade System Status	30-22	Locked Rotor Detection
23-62	Timed Bin Data	25-83	Relay Status	27-1*	Configuration	27-95	Advanced Cascade Relay Output [bin]	30-23	Locked Rotor Detection Time [s]
23-63	Timed Period Start	25-84	Pump ON Time	27-10	Cascade Controller	27-96	Extended Cascade Relay Output [bin]	30-5*	Unit Configuration
				27-11	Number Of Drives	29-0*	Pipe Fill	30-50	Heat Sink Fan Mode
				27-12	Number Of Pumps			30-8*	Compatibility (I)
								30-81	Brake Resistor (ohm)



<b>31-** Bypass Option</b>	
31-00	Bypass Mode
31-01	Bypass Start Time Delay
31-02	Bypass Trip Time Delay
31-03	Test Mode Activation
31-10	Bypass Status Word
31-11	Bypass Running Hours
31-19	Remote Bypass Activation
<b>35-** Sensor Input Option</b>	
<b>35-0* Temp. Input Mode</b>	
35-00	Term. X48/4 Temperature Unit
35-01	Term. X48/4 Input Type
35-02	Term. X48/7 Temperature Unit
35-03	Term. X48/7 Input Type
35-04	Term. X48/10 Temperature Unit
35-05	Term. X48/10 Input Type
35-06	Temperature Sensor Alarm Function
<b>35-1* Temp. Input X48/4</b>	
35-14	Term. X48/4 Filter Time Constant
35-15	Term. X48/4 Temp. Monitor
35-16	Term. X48/4 Low Temp. Limit
35-17	Term. X48/4 High Temp. Limit
<b>35-2* Temp. Input X48/7</b>	
35-24	Term. X48/7 Filter Time Constant
35-25	Term. X48/7 Temp. Monitor
35-26	Term. X48/7 Low Temp. Limit
35-27	Term. X48/7 High Temp. Limit
<b>35-3* Temp. Input X48/10</b>	
35-34	Term. X48/10 Filter Time Constant
35-35	Term. X48/10 Temp. Monitor
35-36	Term. X48/10 Low Temp. Limit
35-37	Term. X48/10 High Temp. Limit
<b>35-4* Analog Input X48/2</b>	
35-42	Term. X48/2 Low Current
35-43	Term. X48/2 High Current
35-44	Term. X48/2 Low Ref./Feedb. Value
35-45	Term. X48/2 High Ref./Feedb. Value
35-46	Term. X48/2 Filter Time Constant
35-47	Term. X48/2 Live Zero
<b>43-** Unit Readouts</b>	
<b>43-0* Component Status</b>	
43-00	Component Temp.
43-01	Auxiliary Temp.
<b>43-1* Power Card Status</b>	
43-10	HS Temp. ph.U
43-11	HS Temp. ph.V
43-12	HS Temp. ph.W
43-13	PC Fan A Speed
43-14	PC Fan B Speed
43-15	PC Fan C Speed
<b>43-2* Fan Pow.Card Status</b>	
43-20	FPC Fan A Speed
43-21	FPC Fan B Speed
43-22	FPC Fan C Speed
43-23	FPC Fan D Speed
43-24	FPC Fan E Speed
43-25	FPC Fan F Speed

## Index

### A

A53/A54 switches.....	9
Abbreviations.....	101
AC mains.....	26
see also <i>Mains</i>	
ADN compliance.....	3
Airflow	
Configurations.....	99
Heat sink.....	14
Alarms	
List of.....	11, 62
Log.....	11
Types of.....	61
Ambient conditions	
Overview.....	13
Specifications.....	78
Analog	
Input specifications.....	79
Analog input/output	
Descriptions and default settings.....	41
Terminal locations.....	9
Approvals and certifications.....	3
ATEX monitoring.....	13
Auto on.....	11, 59
Automatic energy optimization.....	50
Automatic motor adaptation (AMA)	
Configuring.....	51
Warning.....	67
Auxiliary contacts.....	43
<b>B</b>	
Back-wall cooling.....	14
Brake	
Location of terminals.....	7
Status message.....	59
Terminal torque rating.....	100
Brake resistor	
Terminal locations.....	9
Warning.....	65
Wiring.....	43
Wiring schematic.....	23
Burst transient.....	28
Bus termination switch.....	9, 43

### C

Cables	
Cable length and cross-section.....	79
Creating openings for.....	16, 17
Installation warning.....	20
Mains.....	26
Maximum number and size per phase.....	73
Motor.....	24
Routing.....	40, 45
Shielded.....	21
Specifications.....	79
Capacitor storage.....	12
Circuit breakers.....	45, 82
Compressor functions.....	47
Condensation.....	13
Control	
Characteristics.....	81
Control card	
Location.....	9
Overtemperature trip point.....	73
RS485 specifications.....	80
Specifications.....	81
Warning.....	68
Control input/output	
Descriptions and default settings.....	40
Control shelf.....	7, 8, 9
Control wiring.....	40, 42, 45
Cooling	
Check list.....	45
Dust warning.....	13
Requirements.....	14
Current	
Input.....	44
Leakage.....	28
Limit.....	72

### D

Definitions	
Status messages.....	59
Depth measurements.....	6
Design guide.....	3, 14, 78
Digital	
Input specifications.....	79
Output specifications.....	80
Digital input/output	
Descriptions and default settings.....	41
Terminal locations.....	9
Discharge time.....	4
Disconnect.....	7, 43, 46, 82
Disposal instruction.....	3

Door clearance	
E1h.....	86
E2h.....	90
E3h.....	94
E4h.....	98
Door/panel cover	
Torque rating.....	100
Drive	
Clearance requirements.....	14
Definition.....	6
Dimensions.....	6
Initialization.....	52
Status.....	59
Duct cooling.....	14
<b>E</b>	
Electrical specifications 380–480 V.....	73
Electrical specifications 525–690 V.....	75
Electronic thermal relay (ETR).....	20
EMC.....	20, 21, 22
Encoder.....	51
Energy efficiency class.....	78
Environment.....	13, 78
Explosive atmosphere.....	13
Exterior dimensions	
E1h.....	83
E2h.....	87
E3h.....	91
E4h.....	95
External alarm reset.....	56
<b>F</b>	
Factory default settings.....	52
Fan power card	
Location.....	7, 8
Warning.....	70
Fans	
Location.....	8
Required airflow.....	14
Servicing.....	13
Warning.....	64, 69
Fault log.....	11
Fieldbus.....	40
Filter.....	13
FPC.....	7
see also <i>Fan power card</i>	
Fuses	
Location.....	7, 8
Overcurrent protection.....	20
Pre-start check list.....	45
Specifications.....	82
Troubleshooting.....	72

## G

Gases.....	13
Gland plate	
Description.....	15
Dimensions for E1h.....	86
Dimensions for E2h.....	90
Dimensions for E3h.....	94
Dimensions for E4h.....	98
Torque rating.....	100
Ground	
Check list.....	45
Connecting.....	28
Floating delta.....	26
Grounded delta.....	26
Isolated main.....	26
Terminal torque rating.....	100
Terminals.....	7, 8
Warning.....	67

## H

Hand on.....	11, 59
Heat sink	
Access panel torque rating.....	100
Cleaning.....	13, 58
E1h access panel dimensions.....	85
E2h access panel dimensions.....	89
E3h access panel dimensions.....	93
E4h access panel dimensions.....	97
Overtemperature trip point.....	73
Required airflow.....	14
Warning.....	65, 67, 68, 70
Heater	
Location.....	7, 8
Usage.....	13
Wiring of.....	43
Wiring schematic.....	23

Height measurements.....	6
High voltage.....	46, 65, 66
High voltage warning.....	4
Humidity.....	13
HVAC fan functions.....	47

## I

Indicator lights.....	61
Initial set-up.....	46
Input specifications.....	79
Input voltage.....	46

Installation		MCT 10 Set-up Software.....	50
Check list.....	45	Measurements.....	6
Electrical.....	20	Menu	
EMC-compliant.....	22, 28	Descriptions of.....	47
Initialization.....	52	Keys.....	11
Load share/regeneration terminals.....	19	Motor	
Mechanical.....	15	Cables.....	20, 24
Qualified personnel.....	4	Class protection.....	13
Quick setup.....	50	Connecting.....	24
Requirements.....	14	Data.....	72
Start up.....	52	Output specifications.....	78
Tools needed.....	12	Overheating.....	63
Interference		Rotation.....	51
EMC.....	21	Terminal torque rating.....	100
Radio.....	6	Terminals.....	7
Interior views.....	7	Thermistor.....	57
Interlock device.....	42	Troubleshooting.....	71, 72
Internal fault.....	67	Warning.....	62, 63, 65
K		Wiring schematic.....	23
Knockout panel.....	84	Mounting configurations.....	14
L		N	
Label.....	12	Nameplate.....	12
LCP		Navigation keys.....	11, 48
Display.....	10	O	
Indicator lights.....	11	Open loop	
Location.....	7, 8	Programming example.....	48
Menu.....	47	Wiring for speed control.....	54
Troubleshooting.....	71	Optional equipment.....	42, 46
Leakage current.....	4, 28	Overcurrent protection.....	20
Lifting.....	12, 14	Overvoltage.....	72
Load share		P	
Location of terminals.....	8	Parameters.....	47, 52
Terminal torque rating.....	100	Pedestal.....	15
Terminals.....	8	Periodic forming.....	12
Warning.....	4	Phase loss.....	62
Wiring schematic.....	23	Pigtails.....	20
Load sharing.....	65, 66	Potential equalization.....	28
Local control panel (LCP).....	10	Potentiometer.....	41
M		Power card	
Main menu.....	47	Location.....	9
Mains		Warning.....	68
Cables.....	26	Power connection.....	20
Connecting.....	26	Power rating.....	6, 12, 73
Shield.....	5	Programming.....	11, 48, 102
Supply specifications.....	78	Programming guide.....	3
Terminal torque rating.....	100	Pumps	
Terminals.....	7, 8	Configuring.....	47
Warning.....	66	Functions.....	47
Maintenance.....	13, 58		
Manual			
Version number.....	3		
MCT 10.....	50		

## Q

Qualified personnel.....	4
Quick menu.....	11, 47, 102

## R

Ramp-down time.....	72
Ramp-up time.....	72
Recycling.....	3
Regeneration	
Location of terminals.....	7
Terminal torque rating.....	100
Terminals.....	8
Wiring configuration.....	57
Regional settings.....	52
Relays	
Location.....	9, 41
Output specifications.....	81
Reset.....	11, 61, 68
RFI.....	7, 8, 26, 94, 98
Rotor	
Warning.....	69
RS485	
Configuring.....	42
Terminal description.....	41
Wiring schematic.....	23

## S

Safe torque off	
Operating guide.....	3
Safe Torque Off	
Terminal location.....	41
Warning.....	68, 69
Wiring of.....	43
Wiring schematic.....	23
Safety instructions.....	4, 20, 46
Serial communication	
Cover torque rating.....	100
Descriptions and default settings.....	41
Location.....	9
Service.....	58
Set-up.....	11
Shielding	
Cables.....	40
Clamps.....	20
Mains.....	5
RFI.....	7, 8
RFI termination.....	94, 98
Twisted ends.....	20
Short circuit.....	64
Short circuit current rating (SCCR).....	82
Sleep mode.....	60
Software version number.....	3

Space heater.....	7
see also <i>Heater</i>	
Start/stop.....	55
Status message definitions.....	59
STO.....	3
see also <i>Safe torque off</i>	
Storage.....	12
Supply voltage.....	46, 80
Switches	
A53 and A54.....	79
A53/A54.....	44
Brake resistor temperature.....	43
Bus termination.....	43
Disconnect.....	46, 82

## T

Temperature.....	13
Terminals	
Analog input/output.....	41
Control locations.....	9, 40
Digital input/output.....	41
E1h dimensions (front and side views).....	30
E2h dimensions (front and side views).....	32
E3h dimensions (front and side views).....	34
E4h dimensions (front and side views).....	37
Relays.....	41
Serial communication.....	41
Terminal 37.....	41, 42
Thermal protection.....	3
Thermistor	
Cable routing.....	40
Terminal location.....	41
Warning.....	69
Wiring configurations.....	57
Tools.....	12
Torque	
Characteristic.....	78
Fastener rating.....	100
Limit.....	63, 72
Transducer.....	41
Troubleshooting	
Fuses.....	72
LCP.....	71
Mains.....	72
Motor.....	71, 72
Warnings and alarms.....	62

## U

UL certification.....	3
Unintended start.....	4
USB	
Port location.....	9
Specifications.....	82

## V

### Voltage

Imbalance.....	62
Input.....	44

## W

### Warnings

List of.....	11, 62
Types of.....	61

Weight.....	6
-------------	---

Width measurements.....	6
-------------------------	---

### Wiring configurations

External alarm reset.....	56
Open loop.....	54
Regeneration.....	57
Start/stop.....	55
Thermistor.....	57

Wiring control terminals.....	42
-------------------------------	----

### Wiring schematic

Drive.....	23
------------	----





.....  
Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.  
.....

Danfoss A/S  
Ulsnaes 1  
DK-6300 Graasten  
[vlt-drives.danfoss.com](http://vlt-drives.danfoss.com)

