

## Installation Instructions

# VLT<sup>®</sup> LCP Remote Mounting Kit

IP55 rated remote mounting kit for mounting of VLT<sup>®</sup> Control Panel of type LCP 11, LCP 12 and LCP 21.

### Items supplied

- Sealing gasket
- Mounting bracket
- Mounting screws
- Cable (3 m)

### Mounting

1. Fit the sealing gasket on the LCP.

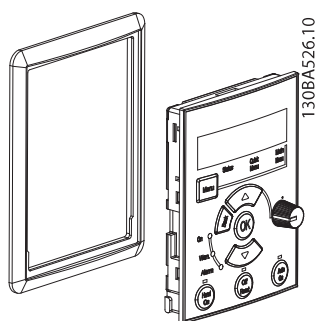


Illustration 1.1 Example: Gasket on LCP

2. Cut out section of panel and locate the LCP in the cut-out.

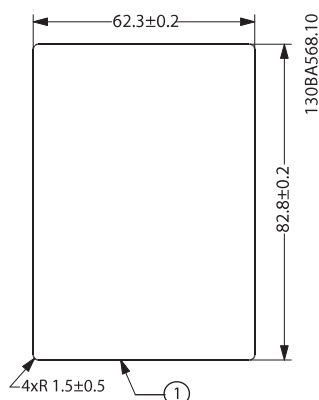


Illustration 1.2 Dimensions

1	Panel cut out Panel thickness: 1-3 mm
---	--

Table 1.1 Legend to *Illustration 1.2*

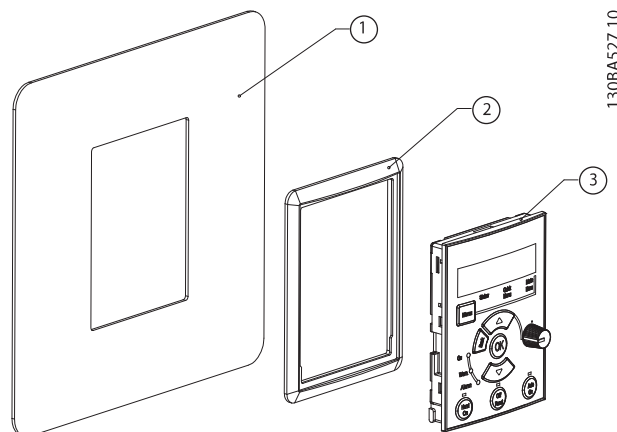


Illustration 1.3 Example: LCP on Mounting Plate

1	Mounting plate
2	Gasket
3	LCP

Table 1.2 Legend to *Illustration 1.3*

3. Slide the mounting bracket into place on the backside of the LCP and fasten it with screws.

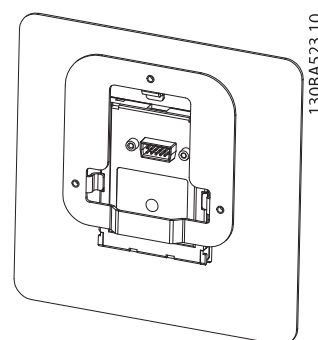


Illustration 1.4 Mounting Bracket on LCP

4. Connect the cable to LCP and fasten it with the provided thread cutting screws. Tightening torque 1.3 Nm.

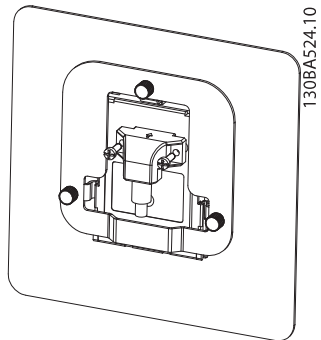


Illustration 1.5 Cable Fastening

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

