

Mounting of Backplate on B4, C3 and C4



130BB750.10

1. Unscrew the four screws indicated with arrows, and remove the plate.



130BB752.10

3. Mount the bottom plate again with the four screws and with a torque of 2,5 Nm.



130BB751.10

2. Slide in the backplate.



Spare Parts Instruction for FC 100, FC 200, FC 300

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

