 


Instructions

RTC module AK-OB 101A



REFRIGERATION AND
AIR CONDITIONING





080R9238



RI8JR253

Montage / Assembly / Einbau / Montage

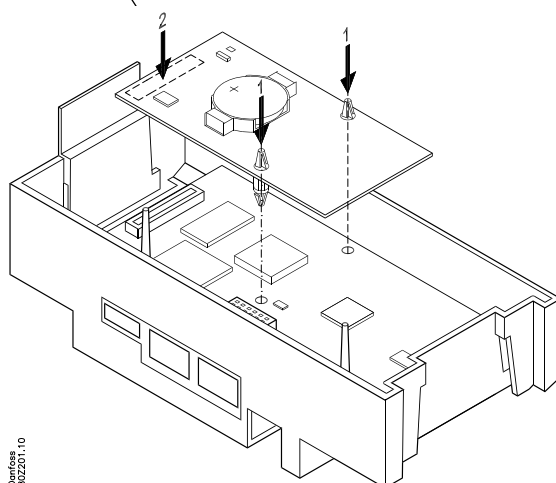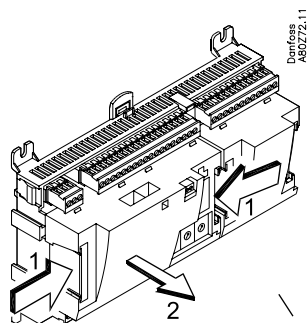

Danfoss
A80201.10

