

- D** Montageanweisung für Kolbenringe
- GB** Instructions for assembly of piston rings
- F** Instructions de montage pour des segments de piston

ENGINEERING
TOMORROW



D **GB** **F**

Alle Kolbenringe müssen mit dem Zeichen „TOP“ zum Kolbenboden hin eingebaut werden.


All piston rings must be mounted in a way that the mark „TOP“ shows towards the piston head.

Tous les segments de piston doivent être monté de façon que le signe „TOP“ montre vers la tête de piston.

Stoßfugen der Kolbenringe versetzt montieren.

Joints of the piston rings staggered.


Monter les joints des pistons en quinconce.

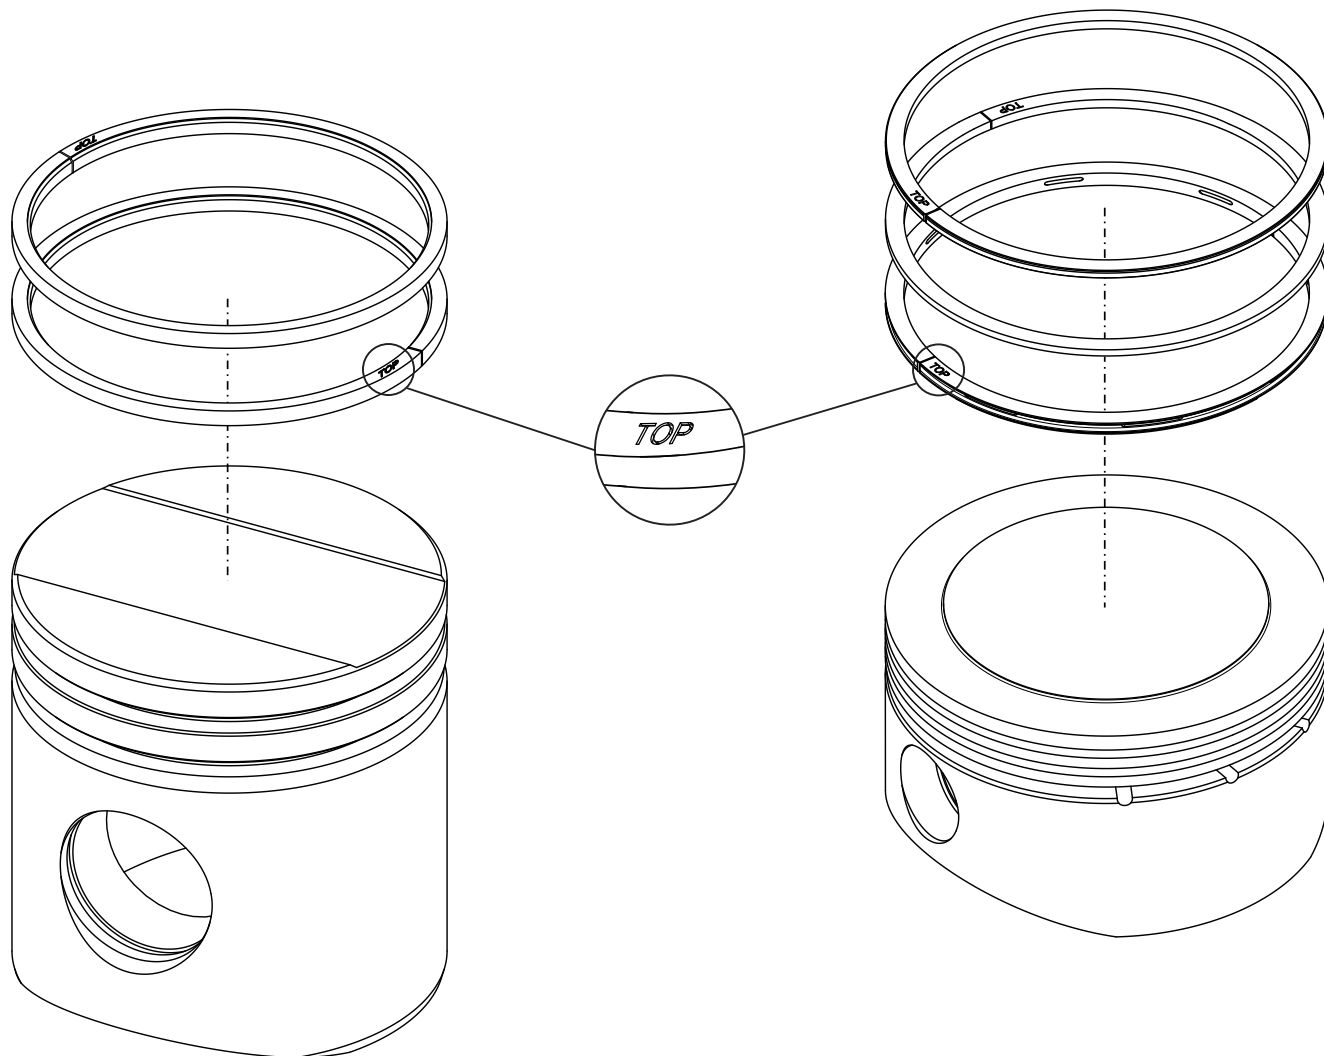

Alternative Kennzeichnung für TOP: farbige Markierung links von der Stoßfuge.

Alternative marking for TOP: coloured marking left of the joint.

Marquage alternatif pour TOP: marquage coloré à gauche du joint.

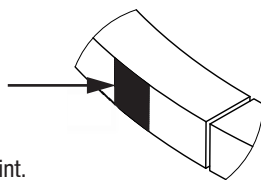

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.