



- Zur Funktion der Anlaufentlastung ist ein Rückschlagventil erforderlich! (Nicht im Lieferumfang enthalten)
- Einbau des Rückschlagventils in der Druckleitung unmittelbar nach dem Verdichter!
- Individuelle Auslegung des Rückschlagventils nach Einsatzbedingungen festlegen!
- For the operability of the start unloader a non-return valve is required! (Not being included in the extent of delivery)
- The non-return valve must be mounted in the pressure line directly after the compressor!
- Define individual dimensioning of the non-return valve according to given conditions of application!
- Pour le fonctionnement d'un délestage de démarrage il faut monter une soupape de retenue! (N'étant pas comprise dans l'étendue de livraison)
- Montage de la soupape de retenue dans la conduite de refoulement directement après le compresseur!
- Déterminer le dimensionnement individuel de la soupape de retenue suivant les données d'utilisation!

Danfoss A/S
Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

1 | AN44994965388001-000201

© Danfoss | Climate Solutions | 2023.06



- Zur Funktion der Anlaufentlastung ist ein Rückschlagventil erforderlich! (Nicht im Lieferumfang enthalten)
- Einbau des Rückschlagventils in der Druckleitung unmittelbar nach dem Verdichter!
- Individuelle Auslegung des Rückschlagventils nach Einsatzbedingungen festlegen!
- For the operability of the start unloader a non-return valve is required! (Not being included in the extent of delivery)
- The non-return valve must be mounted in the pressure line directly after the compressor!
- Define individual dimensioning of the non-return valve according to given conditions of application!
- Pour le fonctionnement d'un délestage de démarrage il faut monter une soupape de retenue! (N'étant pas comprise dans l'étendue de livraison)
- Montage de la soupape de retenue dans la conduite de refoulement directement après le compresseur!
- Déterminer le dimensionnement individuel de la soupape de retenue suivant les données d'utilisation!

Danfoss A/S
Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

1 | AN44994965388001-000201

© Danfoss | Climate Solutions | 2023.06



- Zur Funktion der Anlaufentlastung ist ein Rückschlagventil erforderlich! (Nicht im Lieferumfang enthalten)
- Einbau des Rückschlagventils in der Druckleitung unmittelbar nach dem Verdichter!
- Individuelle Auslegung des Rückschlagventils nach Einsatzbedingungen festlegen!
- For the operability of the start unloader a non-return valve is required! (Not being included in the extent of delivery)
- The non-return valve must be mounted in the pressure line directly after the compressor!
- Define individual dimensioning of the non-return valve according to given conditions of application!
- Pour le fonctionnement d'un délestage de démarrage il faut monter une soupape de retenue! (N'étant pas comprise dans l'étendue de livraison)
- Montage de la soupape de retenue dans la conduite de refoulement directement après le compresseur!
- Déterminer le dimensionnement individuel de la soupape de retenue suivant les données d'utilisation!

Danfoss A/S
Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

1 | AN44994965388001-000201

© Danfoss | Climate Solutions | 2023.06



- Zur Funktion der Anlaufentlastung ist ein Rückschlagventil erforderlich! (Nicht im Lieferumfang enthalten)
- Einbau des Rückschlagventils in der Druckleitung unmittelbar nach dem Verdichter!
- Individuelle Auslegung des Rückschlagventils nach Einsatzbedingungen festlegen!
- For the operability of the start unloader a non-return valve is required! (Not being included in the extent of delivery)
- The non-return valve must be mounted in the pressure line directly after the compressor!
- Define individual dimensioning of the non-return valve according to given conditions of application!
- Pour le fonctionnement d'un délestage de démarrage il faut monter une soupape de retenue! (N'étant pas comprise dans l'étendue de livraison)
- Montage de la soupape de retenue dans la conduite de refoulement directement après le compresseur!
- Déterminer le dimensionnement individuel de la soupape de retenue suivant les données d'utilisation!

Danfoss A/S
Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

1 | AN44994965388001-000201

© Danfoss | Climate Solutions | 2023.06