


**Danfoss**

Aflastningsventil/ Relief valve/  
Entlastungsventil

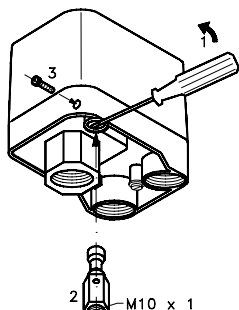

031E029866

ø6mm

DANFOSS  
A31E65.11


031R9004

Danfoss A/S (AC-BNN,mr) 09-2007

IC.PI.P10.D1.00/520B3063

**Danfoss**

Aflastningsventil/ Relief valve/  
Entlastungsventil

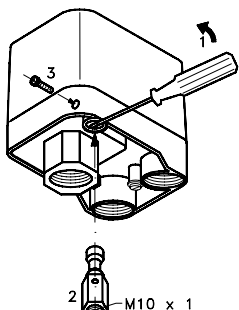

031E029866

ø6mm

DANFOSS  
A31E65.11


031R9004

Danfoss A/S (AC-BNN,mr) 09-2007

IC.PI.P10.D1.00/520B3063

**Danfoss**

Aflastningsventil/ Relief valve/  
Entlastungsventil

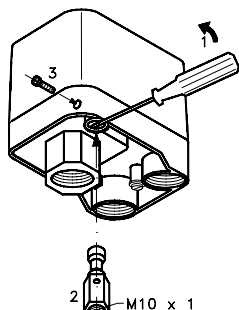

031E029866

ø6mm

DANFOSS  
A31E65.11


031R9004

Danfoss A/S (AC-BNN,mr) 09-2007

IC.PI.P10.D1.00/520B3063

**Danfoss**

Aflastningsventil/ Relief valve/  
Entlastungsventil

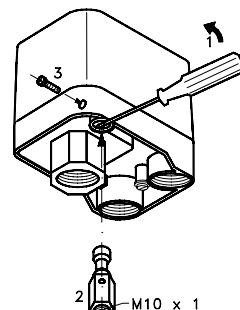

031E029866

ø6mm

DANFOSS  
A31E65.11


031R9004

Danfoss A/S (AC-BNN,mr) 09-2007

IC.PI.P10.D1.00/520B3063

**Danfoss**

Aflastningsventil/ Relief valve/  
Entlastungsventil

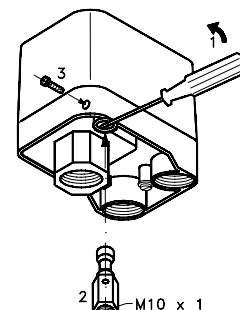

031E029866

ø6mm

DANFOSS  
A31E65.11


031R9004

Danfoss A/S (AC-BNN,mr) 09-2007

IC.PI.P10.D1.00/520B3063

**Danfoss**

Aflastningsventil/ Relief valve/  
Entlastungsventil

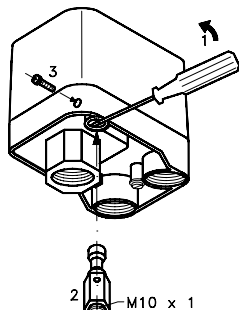

031E029866

ø6mm

DANFOSS  
A31E65.11


031R9004

Danfoss A/S (AC-BNN,mr) 09-2007

IC.PI.P10.D1.00/520B3063

**Danfoss**

Aflastningsventil/ Relief valve/  
Entlastungsventil

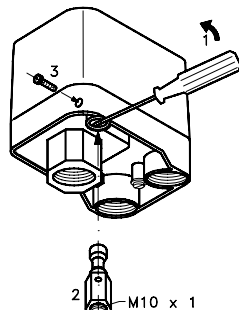

031E029866

ø6mm

DANFOSS  
A31E65.11


031R9004

Danfoss A/S (AC-BNN,mr) 09-2007

IC.PI.P10.D1.00/520B3063

**Danfoss**

Aflastningsventil/ Relief valve/  
Entlastungsventil

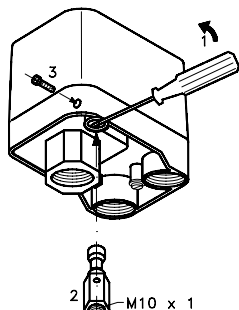

031E029866

ø6mm

DANFOSS  
A31E65.11


031R9004

Danfoss A/S (AC-BNN,mr) 09-2007

IC.PI.P10.D1.00/520B3063

**Danfoss**

Aflastningsventil/ Relief valve/  
Entlastungsventil

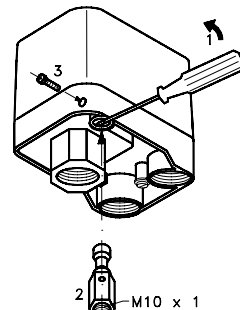

031E029866

ø6mm

DANFOSS  
A31E65.11


031R9004

Danfoss A/S (AC-BNN,mr) 09-2007

IC.PI.P10.D1.00/520B3063

**Danfoss**

Aflastningsventil/ Relief valve/  
Entlastungsventil

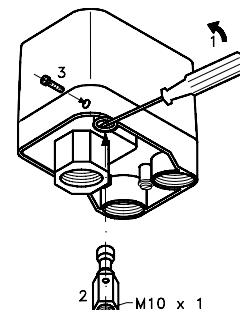

031E029866

ø6mm

DANFOSS  
A31E65.11

031R9004

Danfoss A/S (AC-BNN,mr) 09-2007

IC.PI.P10.D1.00/520B3063