

## Installation Guide

### Installation of BasicGrip

#### 1 Installation of BasicGrip



Fig. 1: Attach the perimeter insulation with tape on wall.<sup>1</sup>



Fig. 2: Cut off overlaps on both ends of the first BasicGrip panel.



Fig. 3: Lay this BasicGrip panel in the left hand corner of the room.



Fig. 4: Install the studded panels one over the other. Cut wall side overlapping edges off. Cut the last panel to fit.

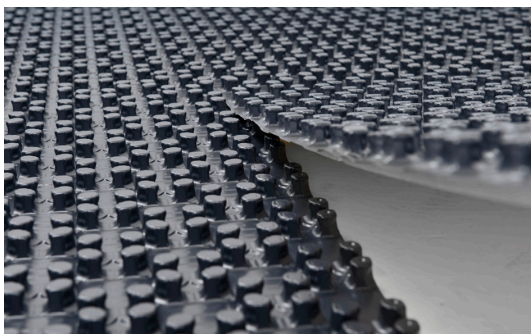


Fig. 5: It is possible to press studs home with feet.



Fig. 6: When using liquid screed, seal off the foil strips of the perimeter insulation with PE-string. On cement screed, the foil is loosely placed on the studded panel.



Fig. 7: The pipes can be laid by one person by using the pipe dispensing wheel.



Fig. 8: Lay pipes in snail form, at first with double spacing in order to maintain the calculated pipe distances.

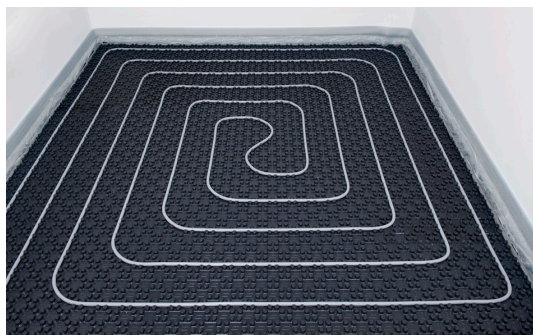


Fig. 9: Lay pipes in snail form throughout the room.

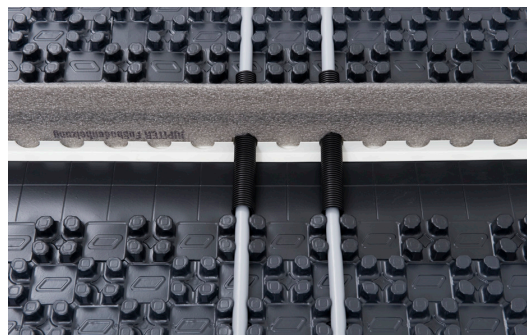


Fig. 10: Install expansion joint profile e.g. for door thresholds, as shown, using the Basic movement gap strip.

<sup>1</sup> If additional insulation is 5 cm thick or more, attach the perimeter insulation on the additional insulation.

Danfoss A/S  
Heating Solutions  
Haarupvaenget 11  
8600 Silkeborg  
Denmark  
Phone: +45 7488 8000  
Fax: +45 7488 8100  
Email: [heating.solutions@danfoss.com](mailto:heating.solutions@danfoss.com)  
[www.heating.danfoss.com](http://www.heating.danfoss.com)

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.