

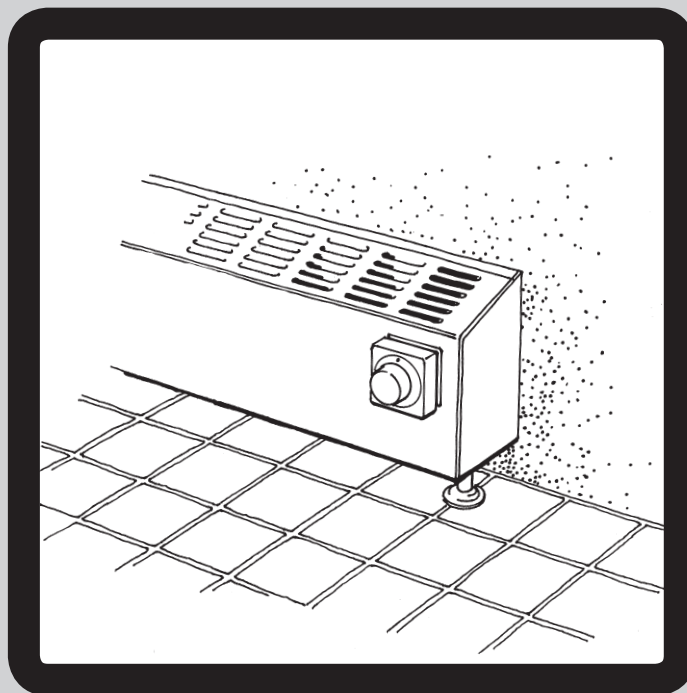


013R9223


013R9223

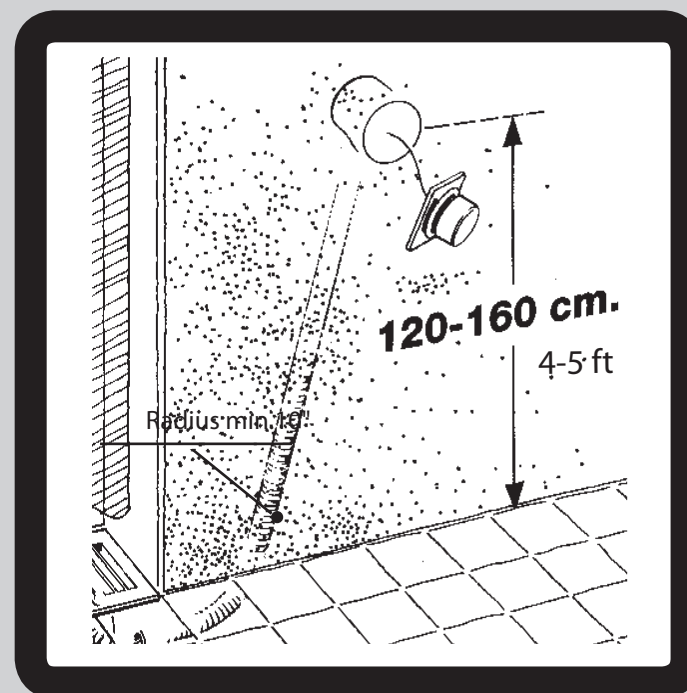

**Mounting on convector**  
with Danfoss RA 2000 valve




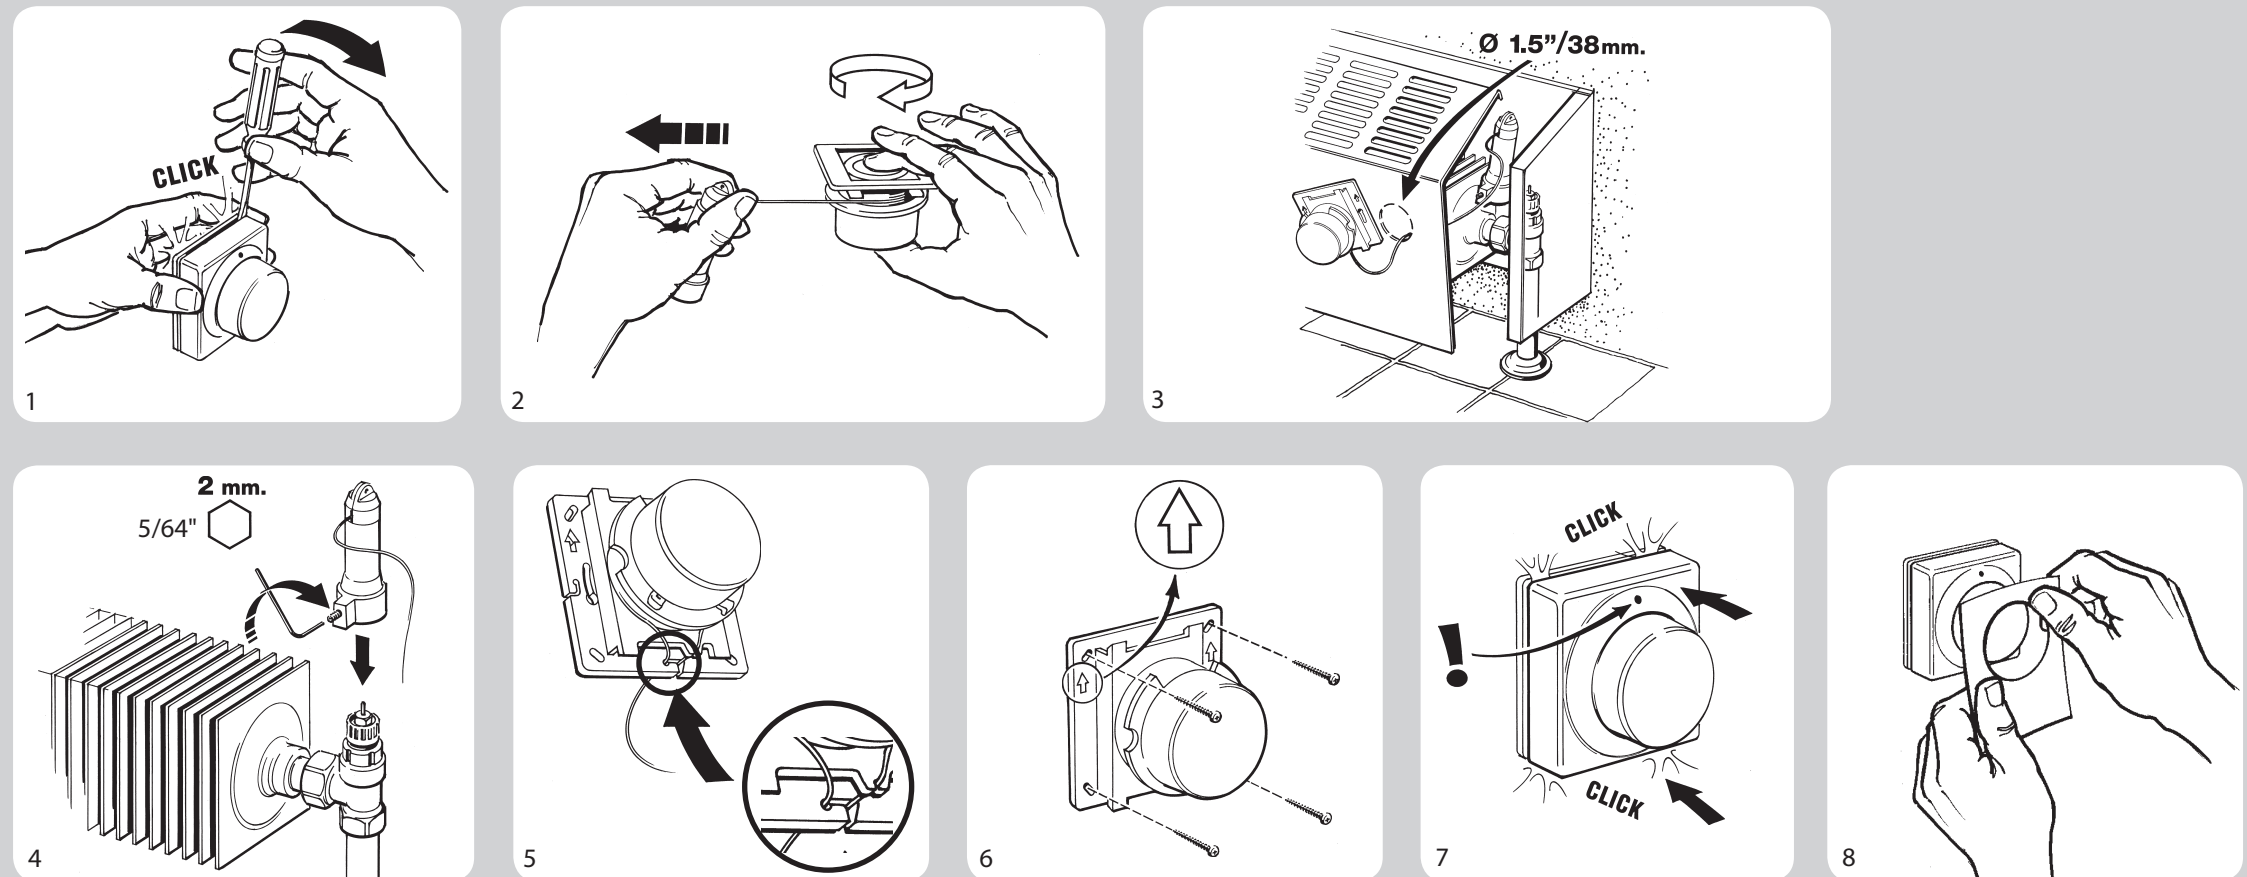


**Installing operator through conduit**  
with Danfoss RA 2000 valve





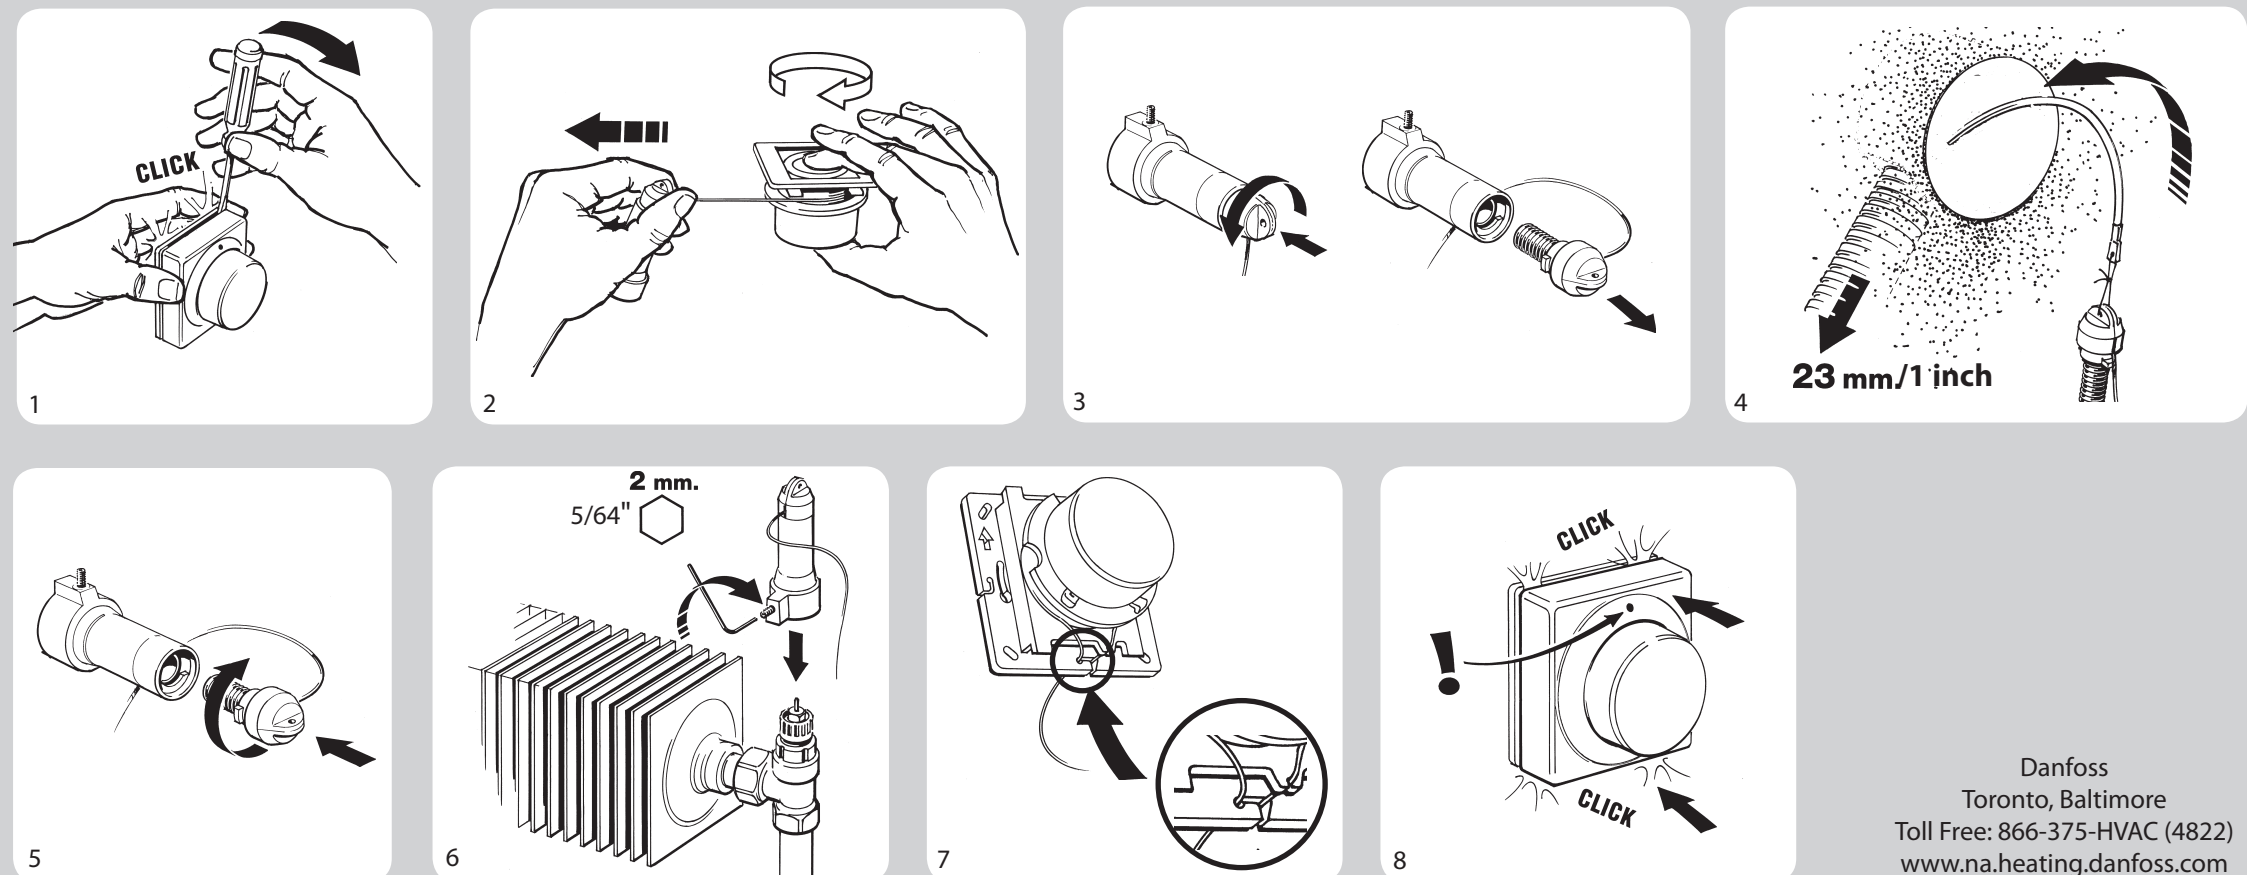


## INSTRUCTIONS

If this operator is being installed on a RAV, VMT or KOVM valve, it is necessary to replace the pre-attached small socket with the large socket included in product package.  
RAV/VMT/KOVM valves have a larger operator connection than RA 2000 valves.

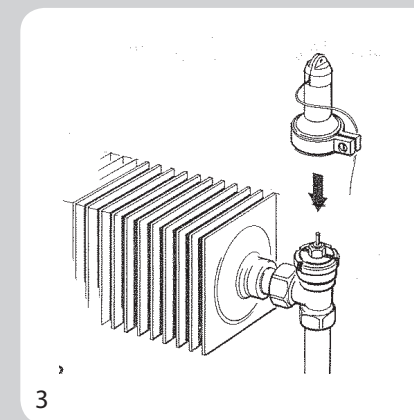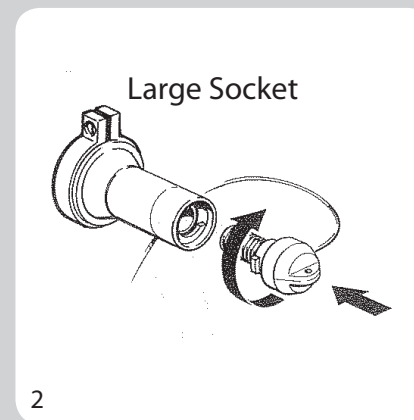
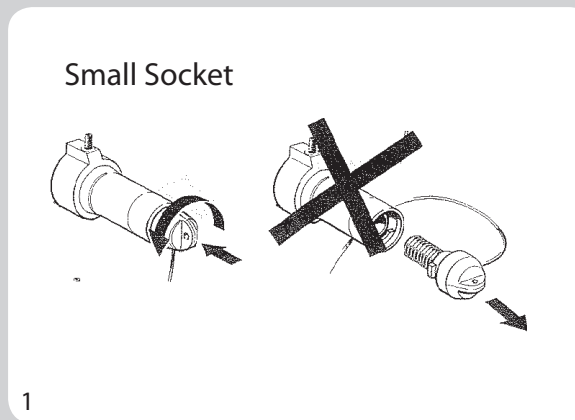
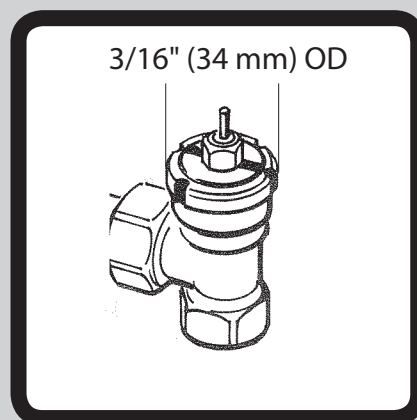


If this operator unit is being installed on a RA valve fitted with a RA to RA 2000 adapter (013G8070), the socket spring must be replaced with the gray spring from the large socket included in the product package.

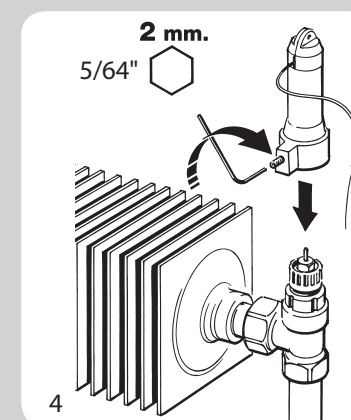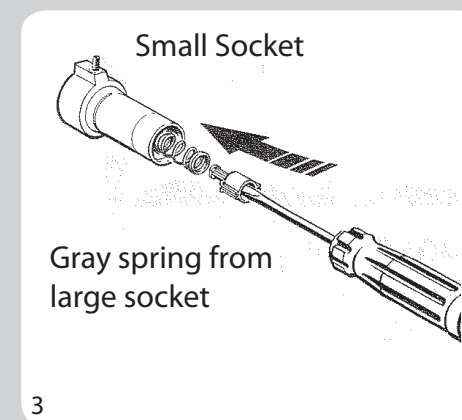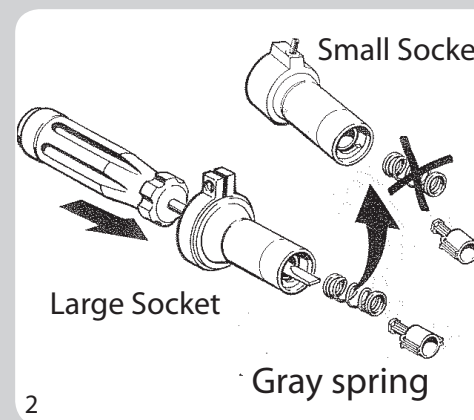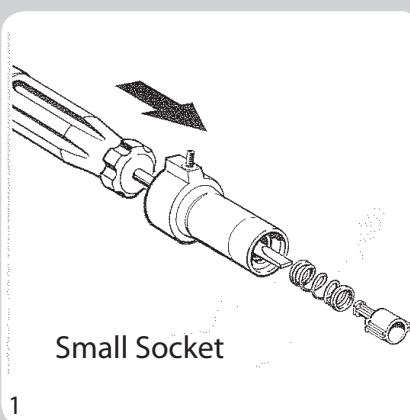
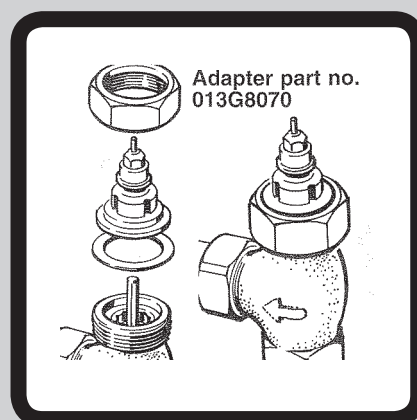


### Limiting and blocking the setting range

Upper limit setting (max. setting)

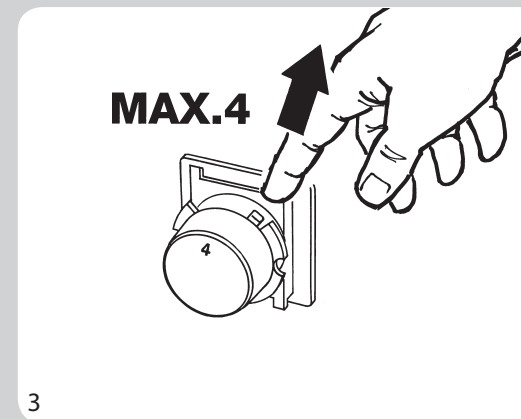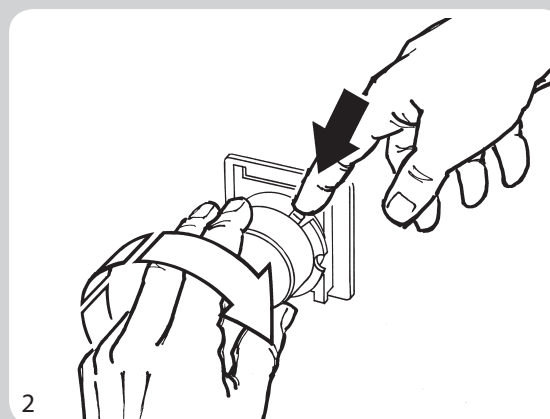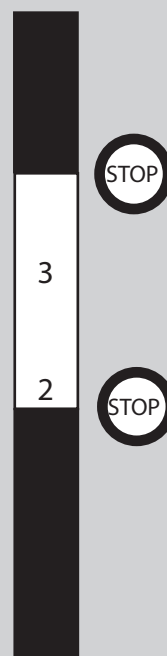

Lower limit setting (min. setting)

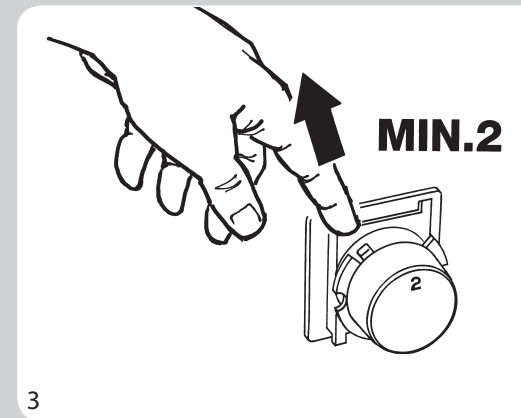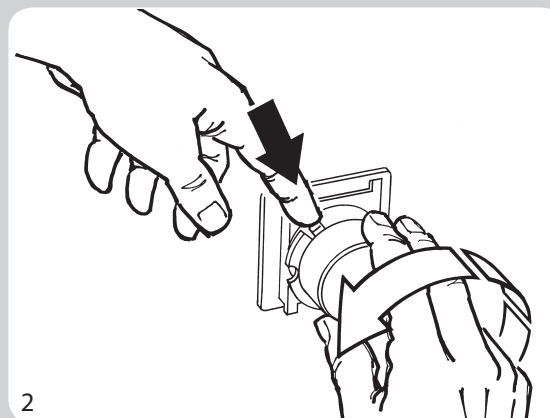

Locking setting is done by combining the upper & lower limiter settings

