


# Installation guide

## ECL Portal – 5-step instructions

1


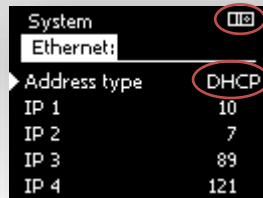


### Connect the ECL 296 / 310 to Internet

The ECL Comfort 296 / 310 must be connected to the Internet via an Ethernet cable to Internet gateway.

Go to <Common controller settings→System→ Ethernet> menu in the ECL Comfort 296 / 310. Configure its network settings to use DHCP IP address type instead of Static.

2

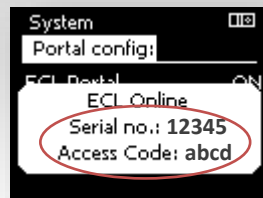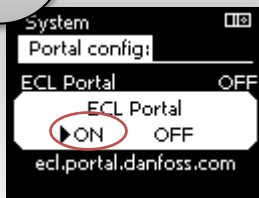


### Activate the ECL Portal in ECL 296 / 310

The ECL Portal feature is activated in the ECL Comfort 296 / 310 menu <System→Portal config.>.

You will need the serial number and access code to be able to register it to your user account. This information is found in the <System→Portal info> menu.

3

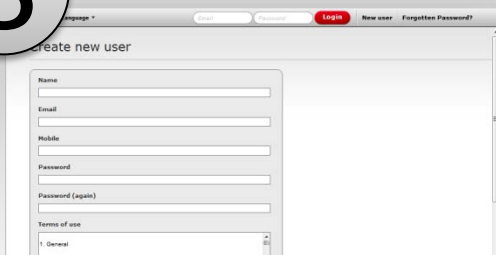


### Create your user account

Create your personal user account on the ECL Portal website:

<http://ecl.portal.danfoss.com>

Click the <New user> button and follow the instructions.

4

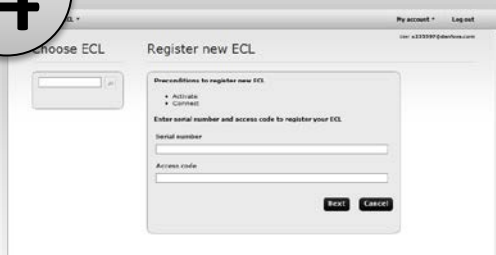


### Register the ECL 296 / 310

Register the ECL Comfort 296 / 310 to your user account via the <ECL→Register new ECL> menu.

The serial number and access code of the ECL Comfort 296 / 310 is needed. (See step 2).

5

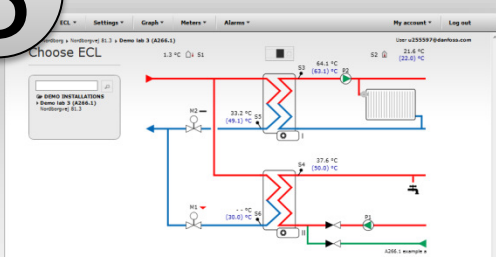

### Remote control and monitor it

You are now ready to remote control and monitor the heating installation.

Settings of the ECL Comfort 296 / 310 can be changed, temperatures and energy consumption can be monitored and you can be alarmed via e-mail.



**Danfoss A/S**

Heating Segment • [heating.danfoss.com](http://heating.danfoss.com) • +45 7488 2222 • E-Mail: [heating@danfoss.com](mailto:heating@danfoss.com)

---

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.

---