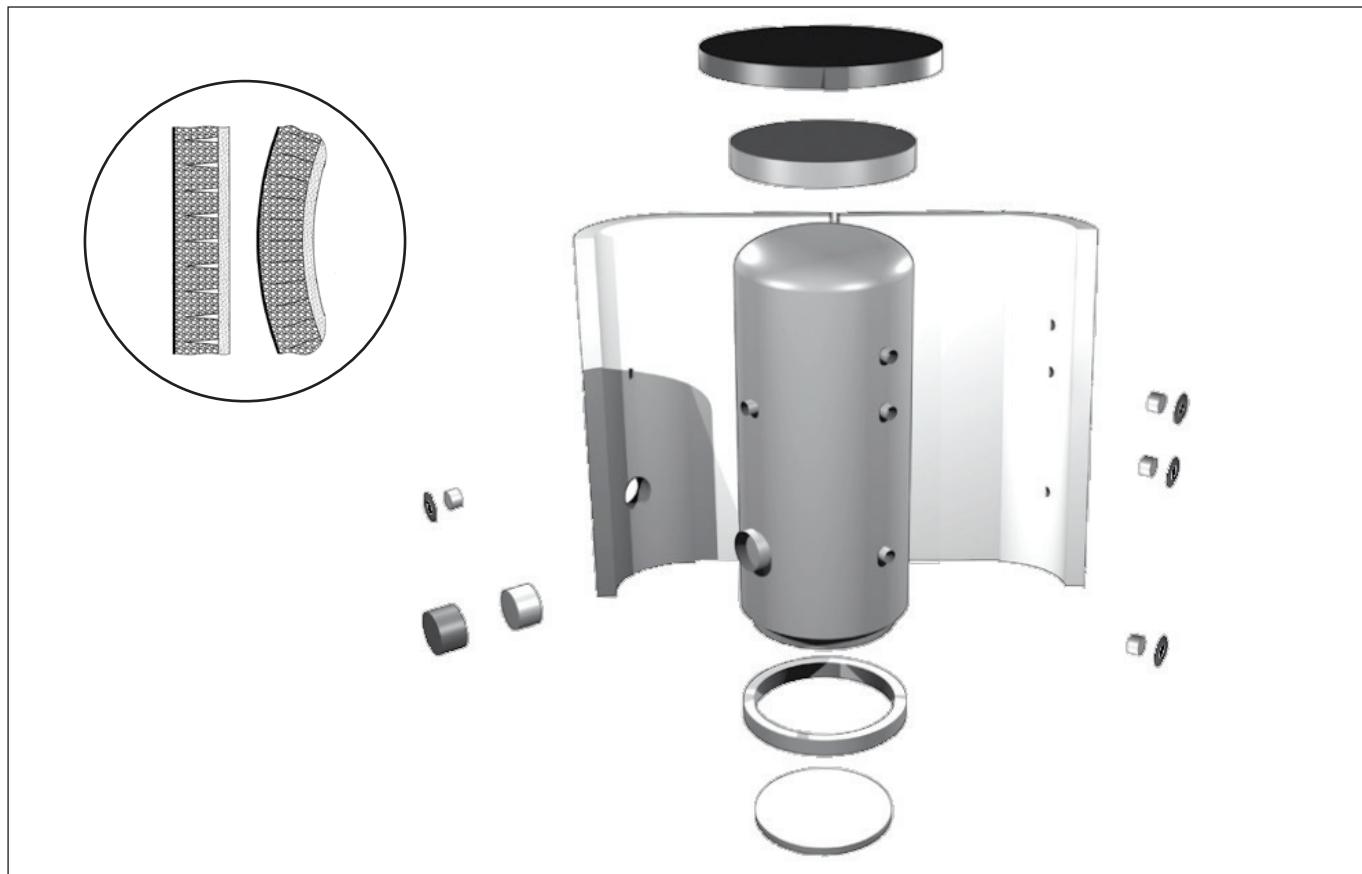
 
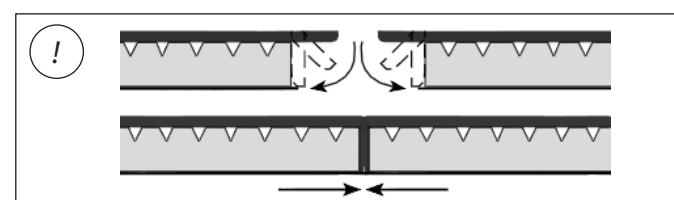


NEODUL® L**Thermal insulation for heating water storage tanks**



Series: PSS (up to 2000l volume)

**Assembly:**

NEODUL® L**Thermal insulation for heating water storage tanks**

Series:

PSS (up to 2000l volume)

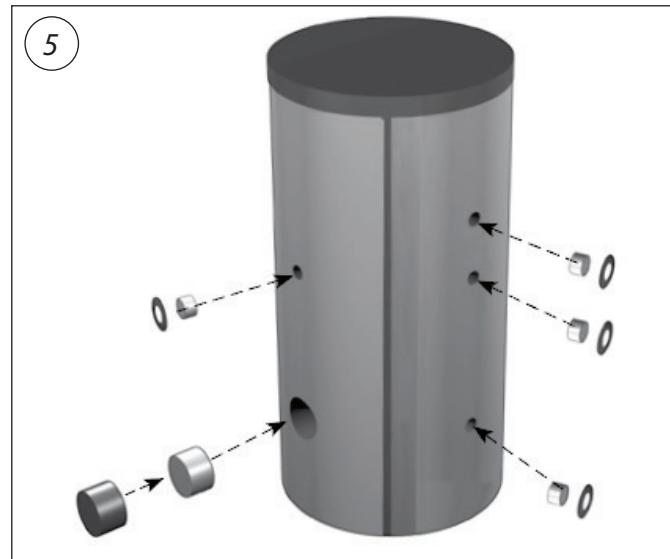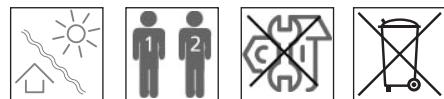

- Assembly stand-ring and lower ring insulation before placing the tank on site (1)
- Put the insulation [jacket part(s)] around the tank(2 ff.); in case of several parts connect these parts by the zipper strip. Put the fleece mat, which is longer than the EPS-Layer, overlapping at the open joints in order to reduce the heat loss.
- Close the zipper of jacket part(s) (3)
- Put cover insulation on top (4)
- Place enclosed rosettes from outside into the recesses of shell part(s) for connections (pipes) (5)

Danfoss A/SHeating Segment • heating.danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.