

Installation guide

Service thermostats

Type 077B7

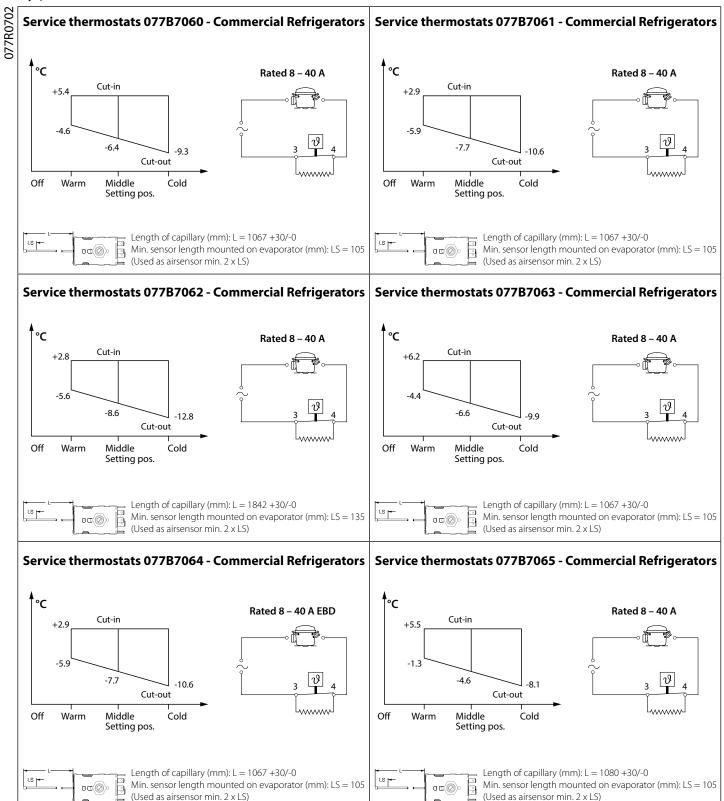

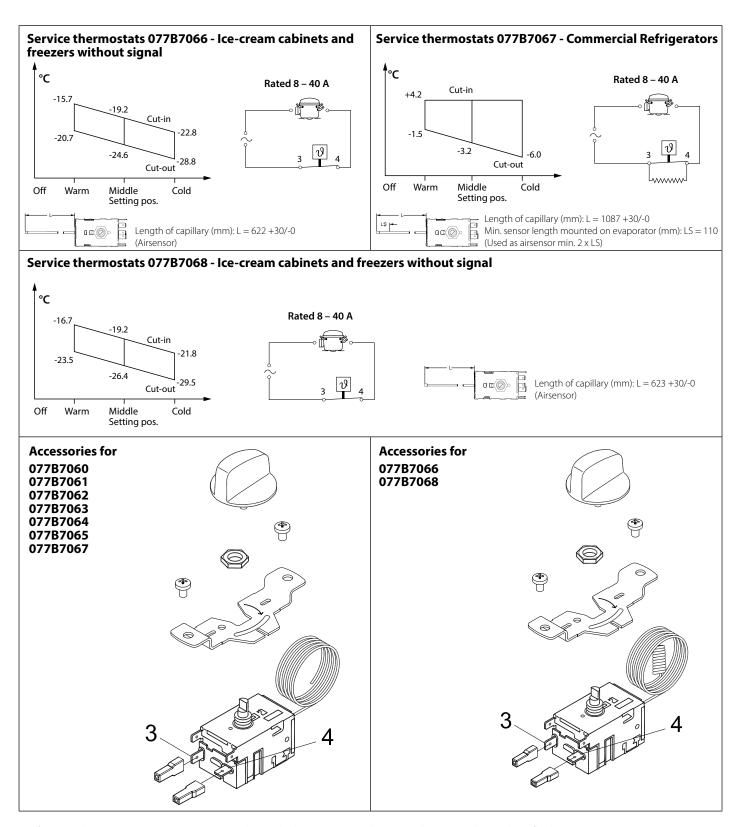





The 077B....EBD, 077B....L EBD can be applied on systems with R290 and R600a as the working fluid. For countries where safety standards are not an indispensable part of the safety system Danfoss recommend the installer to get a third party approval of the system containing flammable refrigerant.

Note: All temperatures at 760 mm Hg