

Installation Guide


Solenoid valve

EVRA/EVM

032R9527

032R9527

Only used with UL-GP coil

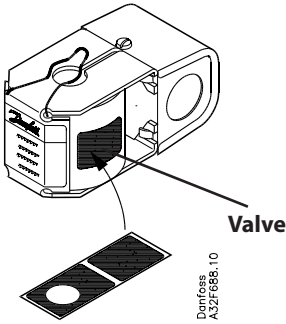

Conduite coil




Junction box

Caution

Wiring and fusing (when used) must comply with prevailing local and national wiring codes and ordinances

Mounting position

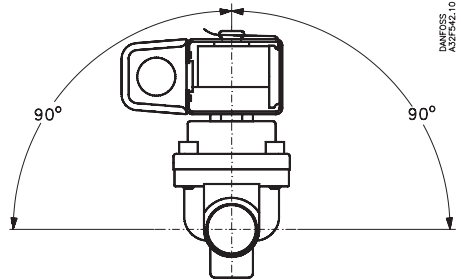

Transformer selection

Coil		Inrush V - Amp.	Holding	
			W	V - Amp.
208-240 V	50-60 Hz	76	17.5	40
110-120 V	50-60 Hz			
24 V	60 Hz			
120/208 V	50-60 Hz			

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.