

Installation guide

Solenoid coil with electronic coil controller

Type EEC

032R9552

032R9552



Nominal voltage:
208 V – 240 V AC 50/60 Hz (-10% – 10%)

Ambient temperature range:
-25 – 55 °C (-13 – 130 °F)

Power consumption (running): 4 W

Enclosure rating: IP67

! Note:
Coil must only be used together with electronic coil controller.

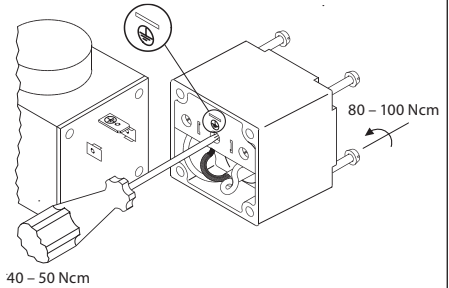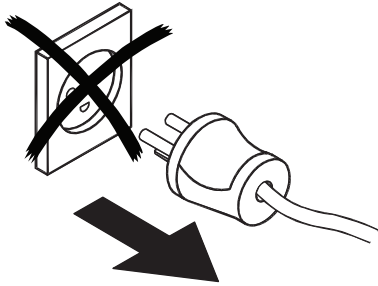

! WARNING:
Always disconnect power from the coil when dismounted from the valve. The coil may be damaged and there is risk of injuries and burns.

! Note:
Ensure tight cable/terminal connection as the electronic is moist sensitive.

