

Installation guide

Leanheat® Monitor – 5-step instructions

ECL Comfort 120 / 220 / 73691010



1




Connect the ECL Comfort 120 / 220 to Internet

The ECL Comfort 120 / 220 must be connected to the Internet via an Ethernet cable to Internet gateway.

Enable Bluetooth connection with pressing button for 3 seconds and start application ECL GO on mobile device.

Start scanning and connect to your ECL 120.

2

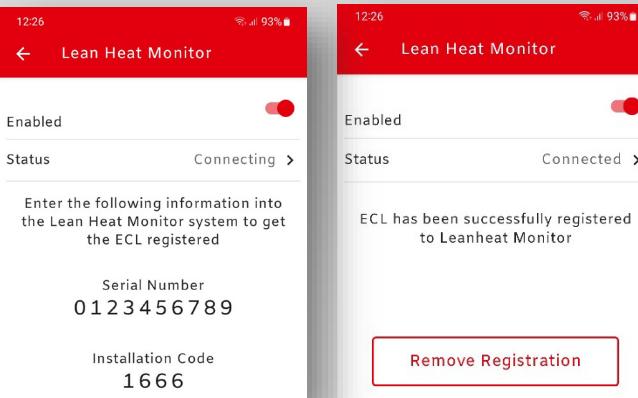

Activate the Leanheat® Monitor in ECL 120 / 220

The Leanheat® Monitor feature is activated in the installer app ECL GO under menu <... More->Settings->Lean Heat Monitor->Enable>.

You will need the serial number and access code to be able to register it to your user account. This information is visible in Lean Heat Monitor menu.

3

Sign up for a Danfoss Profile

[Log in](#) [Sign up](#)

Benefits of a Danfoss Profile

- Easy access to a variety of Danfoss applications
- Single username and password
- Maintain your information in one place
- Overview of your Danfoss applications

We are not done including all our applications. You will soon have access to more of your preferred applications using the Danfoss Profile.

Email *

Password *

Re-type Password *

First name *

Last name *

I agree to [Danfoss Profile terms of use](#)

I have read and understood the [Danfoss privacy policy](#)

[Submit](#)

Create your user account

<https://app.lhm.danfoss.com/>

If you do not have an account, please contact your local Danfoss sales representative.

4

Connect ECL

Device type
ECL-120/220

Serial number


Code

Close **Connect**

Register the ECL Comfort 120 / 220

Register the ECL Comfort 120 / 220 to your user account via the <Admin->+ Connect -> Connect ECL -> select Device type -> ECL 120/220> enter serial and installation code.

The serial number and access code of the ECL Comfort 120 / 220 is needed. (See step 2).

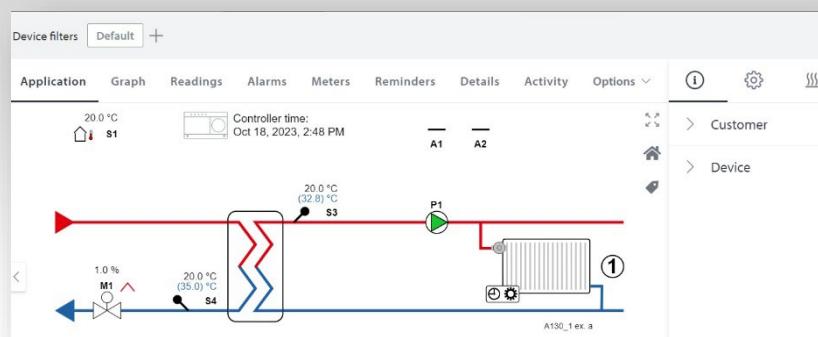5

Remote control and monitor it

You are now ready to remote control and monitor the heating installation.

Settings of the ECL Comfort 120 / 220 can be changed, temperatures and operation can be monitored, and you can be alarmed via e-mail.

?   ECL Comfort 120 / 220: www.danfoss.com

or <https://store.danfoss.com/en/>


Danfoss A/S

 Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.