

Cómo configurar ETS L como válvula definida por el usuario en los modelos EKE 1A, B, C, D para control SH y controladores paso a paso EKF 1A, 1B

Configurando EKE

PASO 1: Conecte el EKE a la herramienta para PC Koolprog o MMIGRS2 (instrucciones al final del documento)

PASO 2: Coloque el interruptor principal (parámetro SW R012) del EKE en OFF

PASO 3: Vaya a la pestaña de configuración de la válvula, cambie I067 como UserDef.

PASO 4: Utilice la configuración que se muestra a continuación según el tipo de válvula

PASO 5: Cambie el interruptor principal (parámetro SW R012) del EKE a ON.

Parámetros de configuración:

ETS 175L/250L/400L + EKE

I067	Valve configuration		no valve	<input type="radio"/>	UserDef
I027	Valve motor type		Unipolar	<input type="radio"/>	Bipolar
I028	Valve drive current	10	10 mA	<input type="radio"/>	* 283 mA
I029	Valve step positioning		Fullstep	<input type="radio"/>	Auto
I030	Valve total steps	1	1 stp	<input type="radio"/>	3810 stp
I031	Valve speed	10	10 PPS	<input type="radio"/>	200 PPS
I032	Valve start speed	1	20 %	<input type="radio"/>	100 %
I061	Valve emergency speed	50	100 %	<input type="text"/>	100 %
I062	Valve acceleration current	100	100 %	<input type="text"/>	100 %
I063	Valve acceleration time	10	10 ms	<input type="radio"/>	100 ms
I077	Valve holding current	0	0 %	<input type="radio"/>	20 %
I064	Valve step mode		1/8	<input type="radio"/>	.full
I065	Valve duty cycle	5	100 %	<input type="text"/>	100 %
I069	Valve OD during stop	0	0 %	<input type="text"/>	0 %
I070	Start backlash	0.0	0.0 %	<input type="text"/>	0.0 %
I071	Compensation backlash	0.0	0.0 %	<input type="text"/>	0.0 %
I072	Overdrive	0.0	4.0 %	<input type="radio"/>	5 %
I073	Overdrive enable OD	0	0 %	<input type="text"/>	0 %
I074	Overdrive block time	0	10 min	<input type="text"/>	10 min
I076	Valve excitation time after stop	0	10 ms	<input type="radio"/>	12 ms

*La corriente máxima de 283 mA es igual a la corriente de disparo de 200 mA; Esta nota se aplica a todas las configuraciones en las siguientes páginas.

ETS 500L + EKE

I067	Valve configuration		no valve	<input checked="" type="radio"/>	UserDef ▾
I027	Valve motor type		Unipolar	<input checked="" type="radio"/>	Bipolar ▾
I028	Valve drive current	10	10 mA	<input checked="" type="radio"/>	283 mA
I029	Valve step positioning		Fullstep	<input checked="" type="radio"/>	Auto ▾
I030	Valve total steps	1	1 stp	<input checked="" type="radio"/>	4999 stp
I031	Valve speed	10	10 PPS	<input checked="" type="radio"/>	200 PPS
I032	Valve start speed	1	20 %	<input checked="" type="radio"/>	100 %
I061	Valve emergency speed	50	100 %	<input type="radio"/>	100 %
I062	Valve acceleration current	100	100 %	<input type="radio"/>	100 %
I063	Valve acceleration time	10	10 ms	<input checked="" type="radio"/>	100 ms
I077	Valve holding current	0	0 %	<input checked="" type="radio"/>	0 %
I064	Valve step mode		1/8	<input checked="" type="radio"/>	Full ▾
I065	Valve duty cycle	5	100 %	<input checked="" type="radio"/>	50 %
I069	Valve OD during stop	0	0 %	<input type="radio"/>	0 %
I070	Start backlash	0.0	0.0 %	<input type="radio"/>	0.0 %
I071	Compensation backlash	0.0	0.0 %	<input type="radio"/>	0.0 %
I072	Overdrive	0.0	4.0 %	<input checked="" type="radio"/>	5 %
I073	Overdrive enable OD	0	0 %	<input type="radio"/>	0 %
I074	Overdrive block time	0	10 min	<input type="radio"/>	10 min
I076	Valve excitation time after stop	0	10 ms	<input checked="" type="radio"/>	12 ms

ETS para sistema sin aceite y de alta temperatura (175L/250L/400L) + EKE

I067	Valve configuration		no valve	<input checked="" type="radio"/>	UserDef ▾
I027	Valve motor type		Unipolar	<input checked="" type="radio"/>	Bipolar ▾
I028	Valve drive current	10	10 mA	<input checked="" type="radio"/>	283 mA
I029	Valve step positioning		Fullstep	<input checked="" type="radio"/>	Auto ▾
I030	Valve total steps	1	1 stp	<input checked="" type="radio"/>	3810 stp
I031	Valve speed	10	10 PPS	<input checked="" type="radio"/>	200 PPS
I032	Valve start speed	1	20 %	<input checked="" type="radio"/>	100 %
I061	Valve emergency speed	50	100 %	<input type="radio"/>	100 %
I062	Valve acceleration current	100	100 %	<input type="radio"/>	100 %
I063	Valve acceleration time	10	10 ms	<input checked="" type="radio"/>	100 ms
I077	Valve holding current	0	0 %	<input checked="" type="radio"/>	20 %
I064	Valve step mode		1/8	<input checked="" type="radio"/>	Full ▾
I065	Valve duty cycle	5	100 %	<input checked="" type="radio"/>	50 %
I069	Valve OD during stop	0	0 %	<input type="radio"/>	0 %
I070	Start backlash	0.0	0.0 %	<input type="radio"/>	0.0 %
I071	Compensation backlash	0.0	0.0 %	<input type="radio"/>	0.0 %
I072	Overdrive	0.0	4.0 %	<input checked="" type="radio"/>	5 %
I073	Overdrive enable OD	0	0 %	<input type="radio"/>	0 %
I074	Overdrive block time	0	10 min	<input type="radio"/>	10 min
I076	Valve excitation time after stop	0	10 ms	<input checked="" type="radio"/>	12 ms

ETS para aceite y sistema insensible a alta temperatura (500L) + EKE

I067	Valve configuration		no valve	<input checked="" type="radio"/>	UserDef ▾
I027	Valve motor type		Unipolar	<input checked="" type="radio"/>	Bipolar ▾
I028	Valve drive current	10	10 mA	<input checked="" type="radio"/>	283 mA
I029	Valve step positioning		Fullstep	<input checked="" type="radio"/>	Auto ▾
I030	Valve total steps	1	1 stp	<input checked="" type="radio"/>	4999 stp
I031	Valve speed	10	10 PPS	<input checked="" type="radio"/>	200 PPS
I032	Valve start speed	1	20 %	<input checked="" type="radio"/>	100 %
I061	Valve emergency speed	50	100 %	<input type="radio"/>	100 %
I062	Valve acceleration current	100	100 %	<input type="radio"/>	100 %
I063	Valve acceleration time	10	10 ms	<input checked="" type="radio"/>	100 ms
I077	Valve holding current	0	0 %	<input checked="" type="radio"/>	20 %
I064	Valve step mode		1/8	<input checked="" type="radio"/>	Full ▾
I065	Valve duty cycle	5	100 %	<input checked="" type="radio"/>	50 %
I069	Valve OD during stop	0	0 %	<input type="radio"/>	0 %
I070	Start backlash	0.0	0.0 %	<input type="radio"/>	0.0 %
I071	Compensation backlash	0.0	0.0 %	<input type="radio"/>	0.0 %
I072	Overdrive	0.0	4.0 %	<input checked="" type="radio"/>	5 %
I073	Overdrive enable OD	0	0 %	<input type="radio"/>	0 %
I074	Overdrive block time	0	10 min	<input type="radio"/>	10 min
I076	Valve excitation time after stop	0	10 ms	<input checked="" type="radio"/>	12 ms

Configurando EKF

PASO 1: Conecte EKF a la herramienta para PC Koolprog a través de EKA200

PASO 2: Coloque el interruptor principal (parámetro SW R012) en el EKF en APAGADO

PASO 3: Vaya a la sección de configuración básica del controlador y cambie la selección de válvula (B101/B201) a definida por el usuario

PASO 4: Vaya a la sección de configuración del controlador de válvula

PASO 5: Utilice la configuración que se muestra a continuación según el tipo de válvula

PASO 6: Cambie el interruptor principal (parámetro SW R012) en el EKF a ON.

Parámetros de configuración:

ETS 175L/250L/400L + EKF

V100	User defined Motor type		Unipolar	<input type="radio"/>	<input type="radio"/> Bipolar ▾
V101	User defined Decay mode		Fast		<input type="radio"/> Fast ▾
V102	User defined Step mode		Full	<input type="radio"/>	<input type="radio"/> 1/8 ▾
V103	User defined Step positioning		Auto		<input type="radio"/> Auto ▾
V104	User defined Total steps	0	0 stp	<input type="radio"/>	<input type="radio"/> 3810 stp
V105	User defined Speed	10	10 pps	<input type="radio"/>	<input type="radio"/> 200 pps
V106	User defined Start speed	1	100 %		<input type="radio"/> 100 %
V107	User defined Emergency speed	50	100 %		<input type="radio"/> 100 %
V108	User defined Drive current	10	10 mA	<input type="radio"/>	<input type="radio"/> 283 mA
V109	User defined Acceleration current	100	100 %		<input type="radio"/> 100 %
V110	User defined Acceleration time	10	10 ms	<input type="radio"/>	<input type="radio"/> 100 ms
V111	User defined Holding current	0	0 %	<input type="radio"/>	<input type="radio"/> 0 %
V112	User defined Valve excitation time after stop	0	10 ms	<input type="radio"/>	<input type="radio"/> 12 ms
V113	User defined Compensation backlash	0.0	0.0 %		<input type="radio"/> 0.0 %
V114	User defined Valve thermal protection	0	100 %		<input type="radio"/> 100 %
V115	User defined Overdrive	0	5 %		<input type="radio"/> 5 %

ETS 500L + EKF

▼ Valve driver settings-Valve 1						
☆	V100	User defined Motor type		Unipolar	<input type="radio"/>	<input type="text" value="Bipolar"/>
☆	V101	User defined Decay mode		Fast	<input type="text" value="Fast"/>	
☆	V102	User defined Step mode		Full	<input type="text" value="Full"/>	
☆	V103	User defined Step positioning		Auto	<input type="text" value="Auto"/>	
☆	V104	User defined Total steps	0	0 stp	<input type="radio"/>	<input type="text" value="4999"/> stp
☆	V105	User defined Speed	10	10 pps	<input type="radio"/>	<input type="text" value="200"/> pps
☆	V106	User defined Start speed	1	100 %	<input type="text" value="100"/>	%
☆	V107	User defined Emergency speed	50	100 %	<input type="text" value="100"/>	%
☆	V108	User defined Drive current	10	10 mA	<input type="radio"/>	<input type="text" value="283"/> mA
☆	V109	User defined Acceleration current	100	100 %	<input type="text" value="100"/>	%
☆	V110	User defined Acceleration time	10	10 ms	<input type="radio"/>	<input type="text" value="100"/> ms
☆	V111	User defined Holding current	0	0 %	<input type="radio"/>	<input type="text" value="0"/> %
☆	V112	User defined Valve excitation time after stop	0	10 ms	<input type="radio"/>	<input type="text" value="12"/> ms
☆	V113	User defined Compensation backlash	0.0	0.0 %	<input type="text" value="0.0"/>	%
☆	V114	User defined Valve thermal protection	0	100 %	<input type="text" value="100"/>	%
☆	V115	User defined Overdrive	0	5 %	<input type="text" value="5"/>	%

ETS para sistema sin aceite y de alta temperatura (175L/250L/400L) + EKF

V100	User defined Motor type		Unipolar	<input checked="" type="radio"/> Unipolar <input type="radio"/> Bipolar
V101	User defined Decay mode		Fast	<input type="text" value="Fast"/>
V102	User defined Step mode		Full	<input checked="" type="radio"/> Full <input type="radio"/> 1/8
V103	User defined Step positioning		Auto	<input type="text" value="Auto"/>
V104	User defined Total steps	0	0 stp	<input checked="" type="radio"/> 3810 <input type="radio"/> stp
V105	User defined Speed	10	10 pps	<input checked="" type="radio"/> 200 <input type="radio"/> pps
V106	User defined Start speed	1	100 %	<input type="text" value="100"/>
V107	User defined Emergency speed	50	100 %	<input type="text" value="100"/>
V108	User defined Drive current	10	10 mA	<input checked="" type="radio"/> 283 <input type="radio"/> mA
V109	User defined Acceleration current	100	100 %	<input type="text" value="100"/>
V110	User defined Acceleration time	10	10 ms	<input checked="" type="radio"/> 100 <input type="radio"/> ms
V111	User defined Holding current	0	0 %	<input checked="" type="radio"/> 12 <input type="radio"/> %
V112	User defined Valve excitation time after stop	0	10 ms	<input checked="" type="radio"/> 100 <input type="radio"/> ms
V113	User defined Compensation backlash	0.0	0.0 %	<input type="text" value="0.0"/>
V114	User defined Valve thermal protection	0	100 %	<input type="text" value="100"/>
V115	User defined Overdrive	0	5 %	<input checked="" type="radio"/> 5 <input type="radio"/> %

*Para uso de ETS en sistemas sin aceite y de alta temperatura (175L/250L/400L), se puede utilizar un ciclo de trabajo del 100%.

ETS en sistema de alta temperatura sin aceite (500L) + EKF

Valve driver settings-Valve 1				
☆	V100	User defined Motor type	Unipolar	<input checked="" type="radio"/> Unipolar <input type="radio"/> Bipolar
☆	V101	User defined Decay mode	Fast	<input type="text" value="Fast"/>
☆	V102	User defined Step mode	Full	<input checked="" type="radio"/> Full <input type="radio"/> 1/8
☆	V103	User defined Step positioning	Auto	<input type="text" value="Auto"/>
☆	V104	User defined Total steps	0 stp	<input checked="" type="radio"/> 4999 <input type="radio"/> stp
☆	V105	User defined Speed	10 pps	<input checked="" type="radio"/> 200 <input type="radio"/> pps
☆	V106	User defined Start speed	100 %	<input type="text" value="100"/>
☆	V107	User defined Emergency speed	100 %	<input type="text" value="100"/>
☆	V108	User defined Drive current	10 mA	<input checked="" type="radio"/> 283 <input type="radio"/> mA
☆	V109	User defined Acceleration current	100 %	<input type="text" value="100"/>
☆	V110	User defined Acceleration time	10 ms	<input checked="" type="radio"/> 100 <input type="radio"/> ms
☆	V111	User defined Holding current	0 %	<input checked="" type="radio"/> 0 <input type="radio"/> %
☆	V112	User defined Valve excitation time after stop	10 ms	<input checked="" type="radio"/> 12 <input type="radio"/> ms
☆	V113	User defined Compensation backlash	0.0 %	<input type="text" value="0.0"/>
☆	V114	User defined Valve thermal protection	100 %	<input type="text" value="100"/>
☆	V115	User defined Overdrive	5 %	<input type="text" value="5"/>


* Para el uso de ETS en sistemas sin aceite y de alta temperatura (500 L), se puede utilizar un ciclo de trabajo del 100 %.

Cuando se utiliza la herramienta para PC KoolProg para configurar productos EKE o EKF

- 1) Puede guardar el archivo en su PC usando el botón "Guardar" o "Guardar como" en la esquina superior izquierda. Esta opción también está disponible en la función de programación fuera de línea de KoolProg:



- 2) Haga clic en la función Copiar al dispositivo:

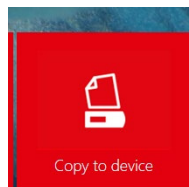

- 3) Haga clic en la función Copiar al dispositivo: 3) Busque el archivo guardado

Select file: **BROWSE**

- 4) El archivo del programa se copiará al controlador y se mostrará una notificación en KoolProg al finalizar.

Al configurar directamente usando MMIGRS2


Debes seguir las siguientes pantallas.

Presione el botón Enter durante unos segundos. Ingresando contraseña







Accede al menú "Referencia"

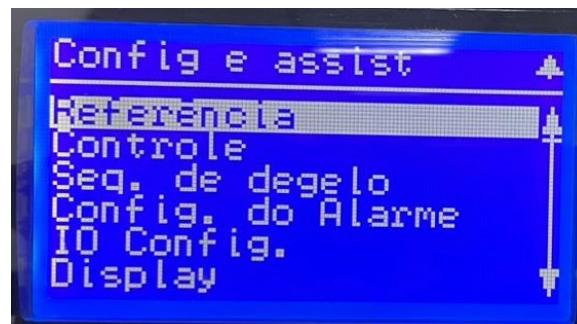


Deshabilitar el parámetro "Interruptor Principal" – R012

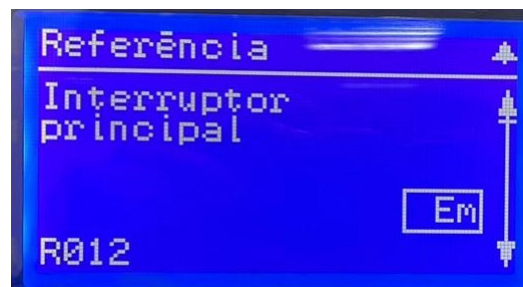

Después de desactivar R012, debe regresar al menú principal e ir a "IO Config".

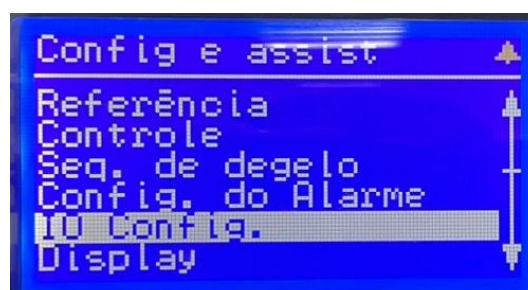

Tras ello accedemos al menú "Config. de la válvula"

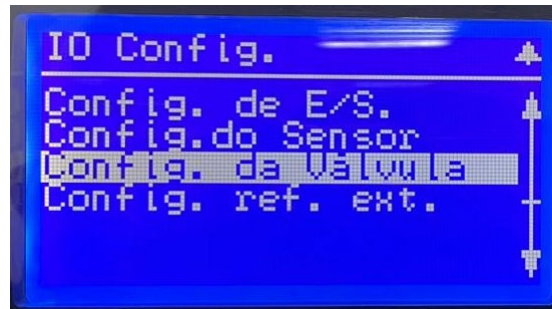

Dentro de los ajustes de válvulas accedemos al primer parámetro donde especificamos el tipo de válvula (I067), y lo cambiamos a "UserDef". Luego de validar esta modificación, los demás parámetros de configuración quedarán liberados, debiendo ajustar los valores según el modelo y listas presentadas anteriormente. Luego de completar la configuración, se debe regresar el parámetro R012 a la opción "On".

