


Installation Guide

# Warning Module for continuous monitoring of Field bus wiring state

148R9638


148R9638

## Warning Module

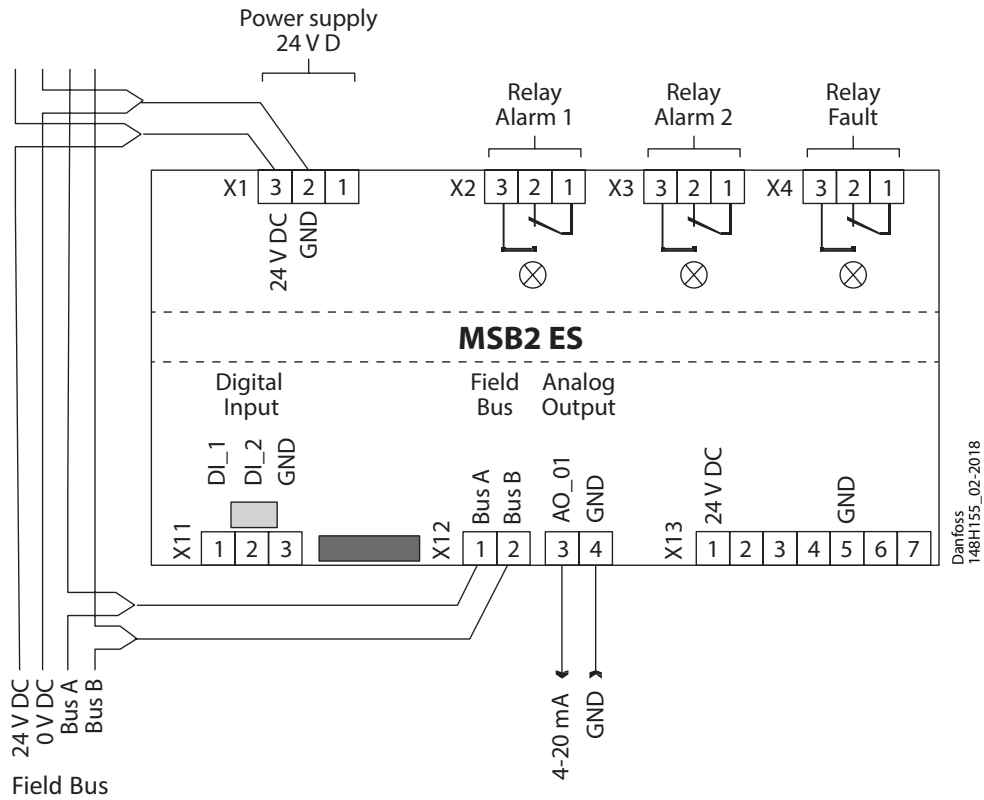

Danfoss  
148H155\_02-2018

## Field bus wiring example

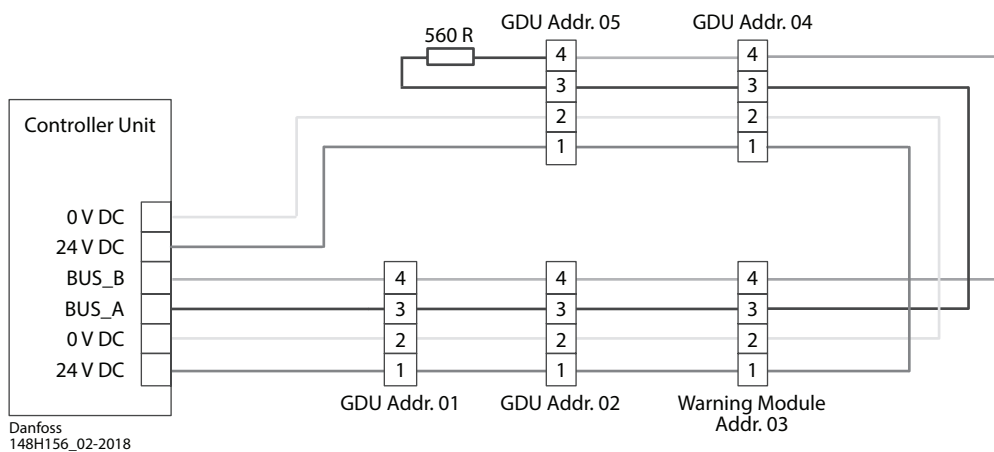

Danfoss  
148H156\_02-2018

Further documentation:

