

A.

B.

C.

D.

1.

2.

3.

4. THERMOSTAT

5.

6.

UK: Next room

DK: Næste rum

DE: Nächstes Raum

FR: Autre chambre

IT: Prossima stanza

NL: Volgende kamer

REPEAT STEP 2-5

E.

7.

RUN

INSTALL

UNINSTALL

TEST

TEST NET

TEST APP

TEST FLO

~ 30 min.

8.

9.

RUN

INSTALL

UNINSTALL

TEST

Option

088U1100

Cable/wiring

24V

2 x 2 x Ø 0,6 PDS cable (UTP or STP)	😊
H03VV-F 0,50 mm², flexible	😊
H03VV-F 0,75 mm², flexible	😊
3 x 1,0 mm², solid core	😊
3 x 1,5 mm², solid core	😊
5 x 1,5 mm²	😞
> 1,5 mm²	😞
< 24 AWG	😞

230V (3A fuse in Danfoss Icon™ Master, 24 V)

H03VV-F 0,50 mm², flexible	😊
H03VV-F 0,75 mm², flexible	😊
3 x 1,0 or 3 x 1,5 mm², solid core	😊
5 x 1,5 mm², solid core	😞
> 1,5 mm²	😞

Danfoss *Icon*™ Master Controller 24 V

1. Connect the power supply to the thermostat.

2. Press the 'OK' button on the thermostat.

3. Press the 'OK' button on the thermostat.

4. THERMOSTAT

5. Press the 'OK' button on the thermostat.

6. UK: Next room
DK: Næste rum
DE: Nächstes Raum
FR: Autre chambre
IT: Prossima stanza
NL: Volgende kamer

REPEAT STEP 2-5

7. RUN INSTALL UNINSTALL TEST
TEST NET
TEST APP
TEST FLO
~ 30 min.

8. TEST NET
OK

9. RUN INSTALL UNINSTALL TEST
OK

088U1100

Danfoss Icon™ Master Controller 24 V

H03VV-F 0,50 mm ² , flexible H03VV-F 0,75 mm ² , flexible	
3 x 1,0 or 3 x 1,5 mm ² , solid core	
5 x 1,5 mm ² , solid core > 1,5 mm ²	

