

MyDrive® Vault

Overview

MyDrive® Vault connects to Danfoss drives via Ethernet. The MyDrive® Vault is pre-installed with Automatic Device Recovery (ADR). It is the ideal solution for backing up and restoring Danfoss drives.

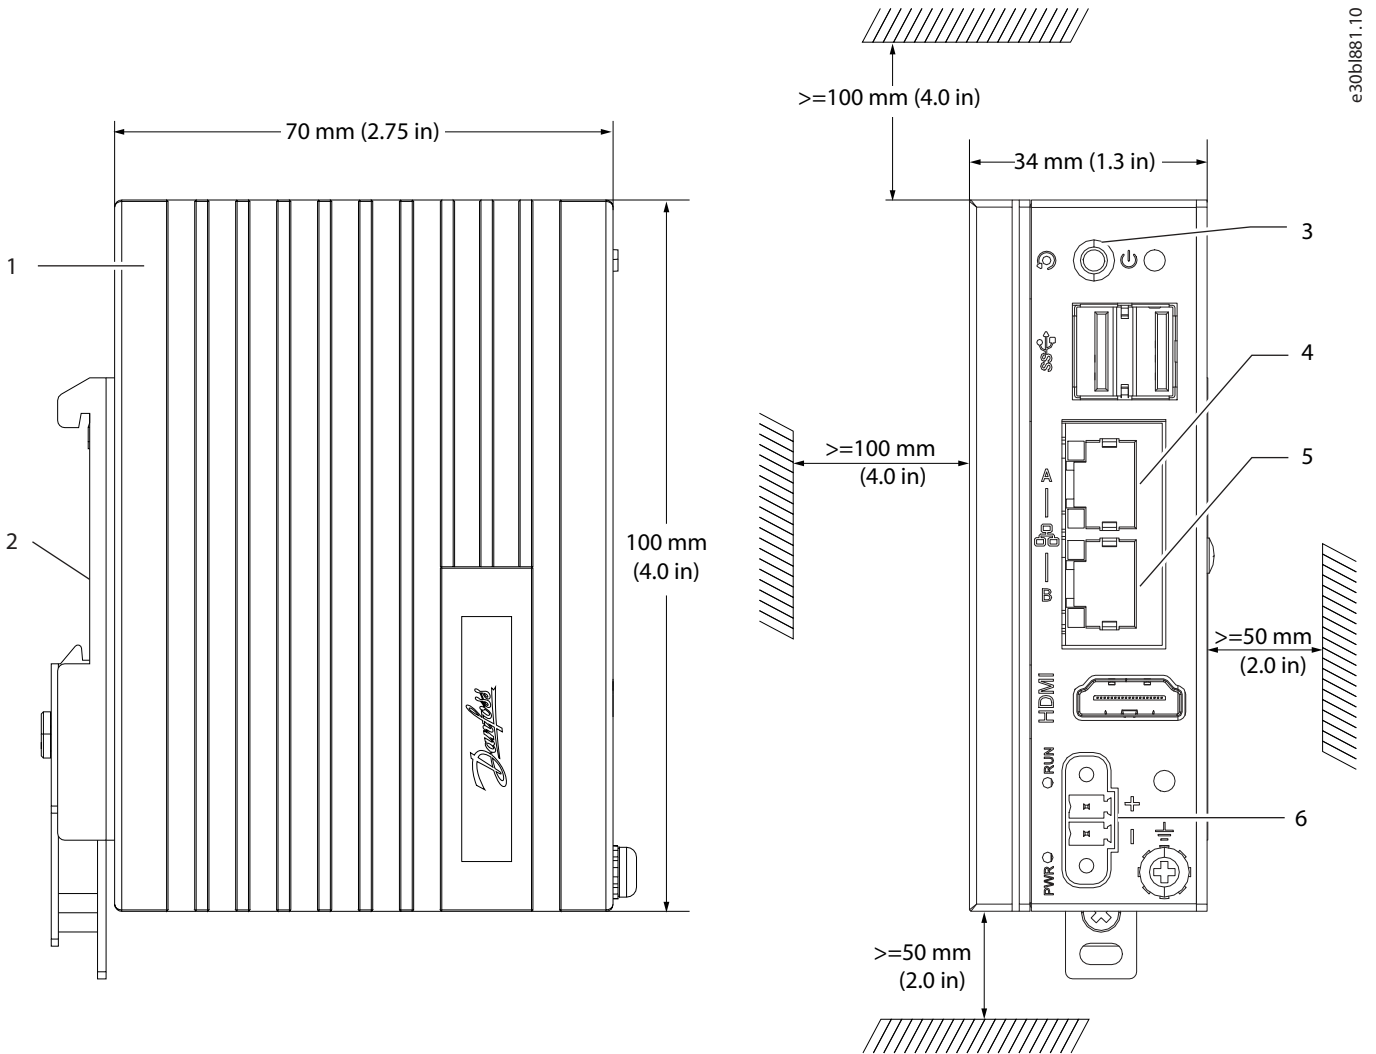


Figure 1: MyDrive® Vault Dimensions and Installation

1	MyDrive® Vault	2	DIN mount
3	Power button	4	Production/drives network
5	Optional WAN connection	6	Power connection (10–30 V)

Procedure

1. Mount MyDrive® Vault using the clearance requirements shown in [Figure 1](#).
2. Connect power to MyDrive® Vault. The device powers up automatically.
3. Connect a PC to the MyDrive® Vault through the production network, see [Figure 1](#) point 4.
4. Wait 5 minutes before connecting to the MyDrive® Vault.
5. Enter <https://adr.local:8443/> in a browser.

Danfoss A/S
Ulsnaes 1
DK-6300 Graasten
drives.danfoss.com

Scan for MyDrive® Suite
learning videos and more.



Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalog descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogs, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

M00455

