

Installation guide

**Pressure transmitters**

Type **DST P40I / DST P40M**


078R0003

078R0003

**Supply Voltage: 9-32 Vdc**  
**Output: 4 – 20 mA (2 wire)**


**EN 175301-803-A:**

Pin 1: + supply  
Pin 2: ÷ supply  
Pin 3: not used

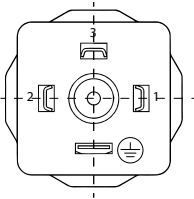

**Deutsch DT04-4P. (on wire):**

Pin 1: + supply  
Pin 2: ÷ supply  
Pin 3: not used  
Pin 4: Connected to enclosure

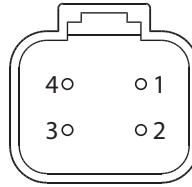

Danfoss  
A60G349.10

**EN 175301-803-A:**

**DST P40M:**

Forbundet til kapsling  
Connected to enclosure  
Mit Gehäuse verbunden  
Connecté au boîtier  
Conectado al recinto  
Collegato al recinto




**DST P40I:**

Ikke Forbundet til kapsling  
Not Connected to enclosure  
Nicht mit dem Gehäuse verbunden  
Non connecté au boîtier  
No conectado al recinto  
Non connesso al contenitore



**Bemærk | Note | Achtung | Attention | Atención: | Attenzione**

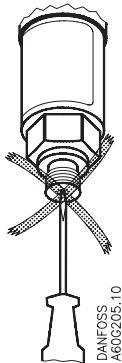

DANFOSS  
A60G205.10