



General Information



The replacement floor sensor is used with the programmable and non-programmable thermostat.

It comes with 9 feet of lead wire.

Instructions

1. The floor sensor should be 10" (25 cm) away from the wall.
2. The floor sensor should be installed in the conduit tube.
3. The floor sensor must be centered in the cable loop (between two RED heating wires).
4. Use the duct tape to hold the floor sensor into the groove to prevent it from floating up when the thin set is poured.

Ordering Information

Part No.	Description
088L3008	Replacement Floor Sensor for LX Thermostat

Accessories

Part No.	Description
19809099	Sensor Conduit (8 feet)

Application

Product in this data sheet is for use with these Danfoss heating mats and cables.

LX Electric Floor Heating Mats
LX Electric Floor Heating Cables
TX-FH Floor Heating Cables
TX-SH Storage Heating Cables

Warranty

Genuine two year warranty against defects in material, design, and workmanship.

Technical Services

For technical questions, please contact Danfoss Heating Division North America at **1-888-DANFOSS (326-3677)**. More information on Danfoss Electric Heating products is available at www.LX.Danfoss.com.

Danfoss can accept no responsibility for possible errors in catalogs, brochures, other printed materials, and website information. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alteration can be made without subsequent changes being necessary in specifications already agreed upon. All trademarks in this material are property of the respective companies. Danfoss and Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.



Danfoss
Toronto
 Tel: 1-888-DANFOSS (326-3677)
 Tel.: 905-285-2050
 Fax: 905-285-2055
www.LX.Danfoss.com

Danfoss LX
 BRINGING WARMTH TO LIFE