
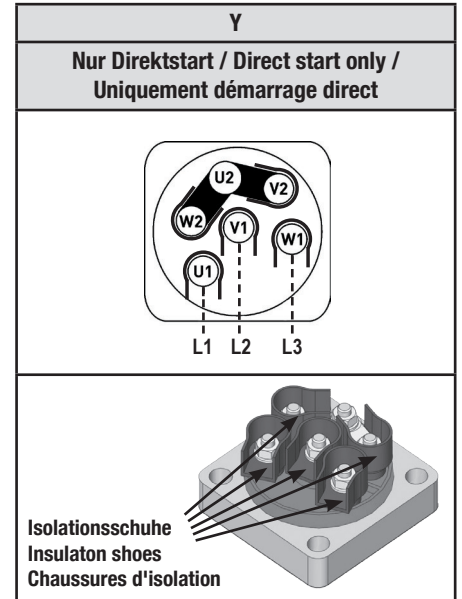


Nur bei Nennspannung > 480 V. Beispiele:




Only nominal voltage > 480 V. Examples:

Seulement la tension nominale > 480 V. Exemples :

UL-HGX12-34 C02 (L)T

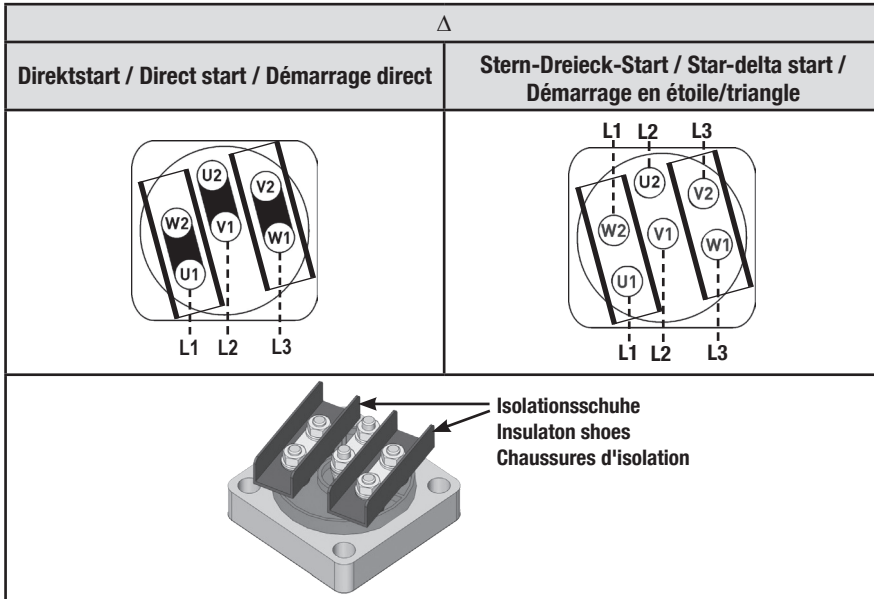

UL-HGX56 C02 (L)T

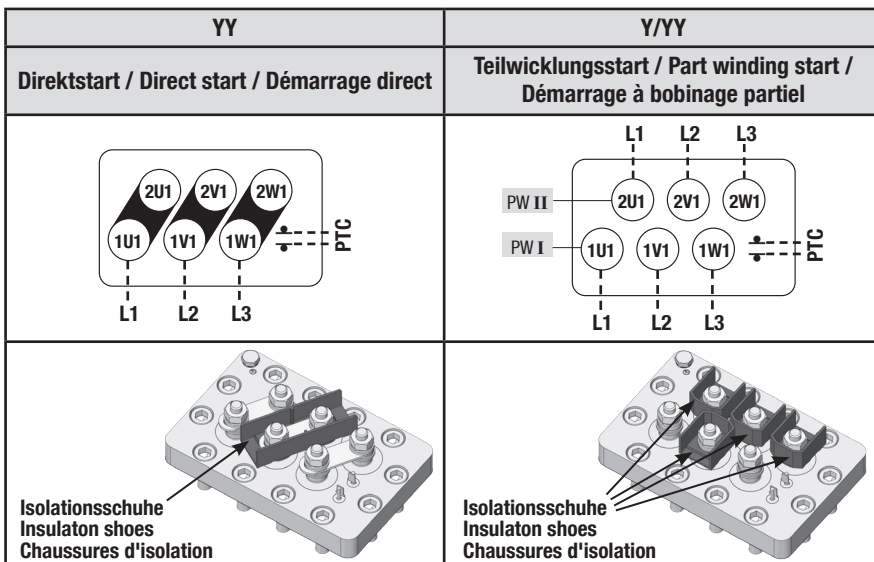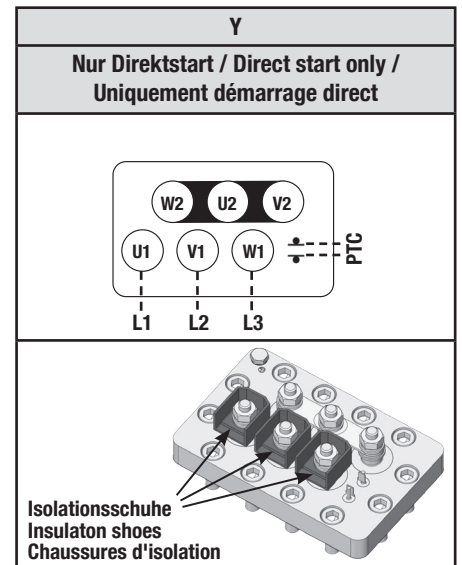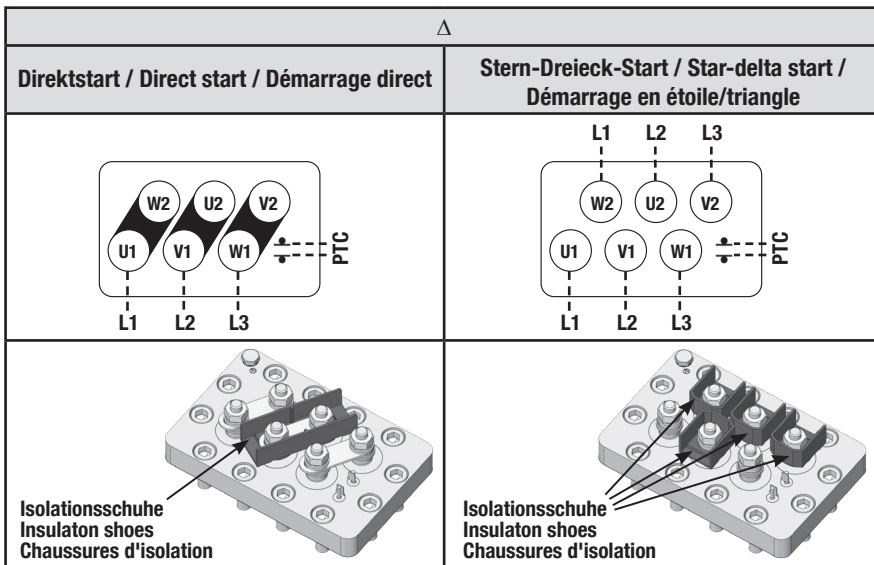

i Die gezeigten Anschlussbeispiele beziehen sich auf die Standardversion. Bei Sonderspannungen gelten die im Klemmkasten angebrachten Anweisungen.

i The connection examples shown refer to the standard version. In the case of special voltages, the instructions affixed to the terminal box apply.

i Les exemples de raccordement donnés se rapportent à la version standard. En cas de tensions spéciales, appliquer les instructions figurant dans la boîte à bornes.



Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.
