


Typical Electrical Wiring Diagram for Danfoss Thermostat

Max. Load 16 Amps

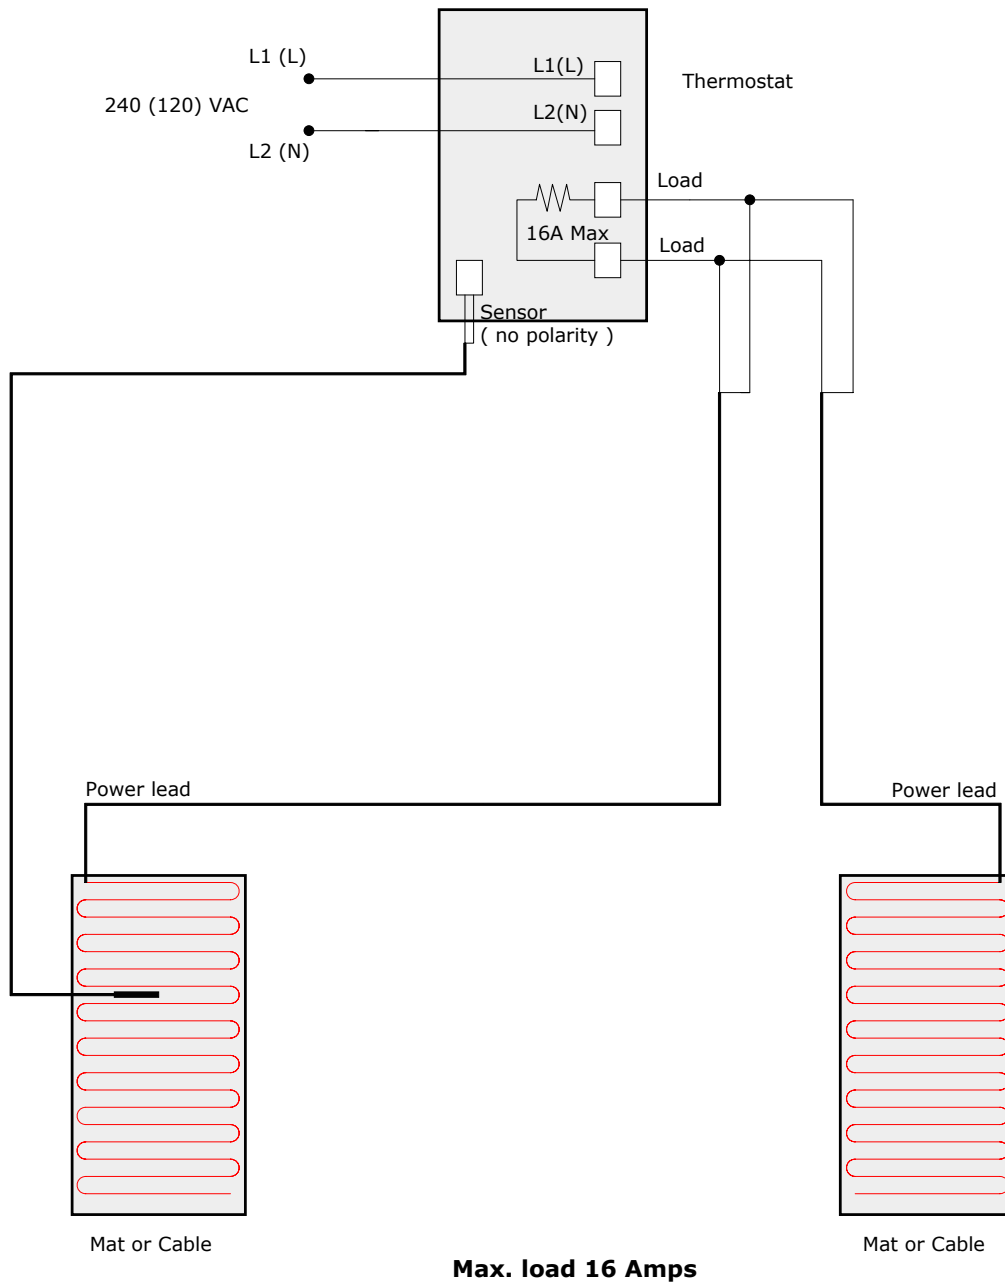

Technical Services

For technical questions, please contact Danfoss Heating Division North America at **1-866-676-8062**, or via the web at **www.DanfossLX.com**

Danfoss can accept no responsibility for possible errors in catalogues, brochures, other printed materials, and website information. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alteration can be made without subsequent changes being necessary in specifications already agreed upon. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are registered trademarks of Danfoss A/S. All rights reserved.



Danfoss Inc.
 6711 Mississauga Road
 Suite 410
 Toronto, ON
 L5N 2W3
 Phone: 905-285-2050
 Fax: 905-285-2055
 www.DanfossLX.com

Danfoss LX
 BRINGING WARMTH TO LIFE