


Typical Electrical Wiring Diagram for Danfoss Thermostat Load Greater Than 16 Amps

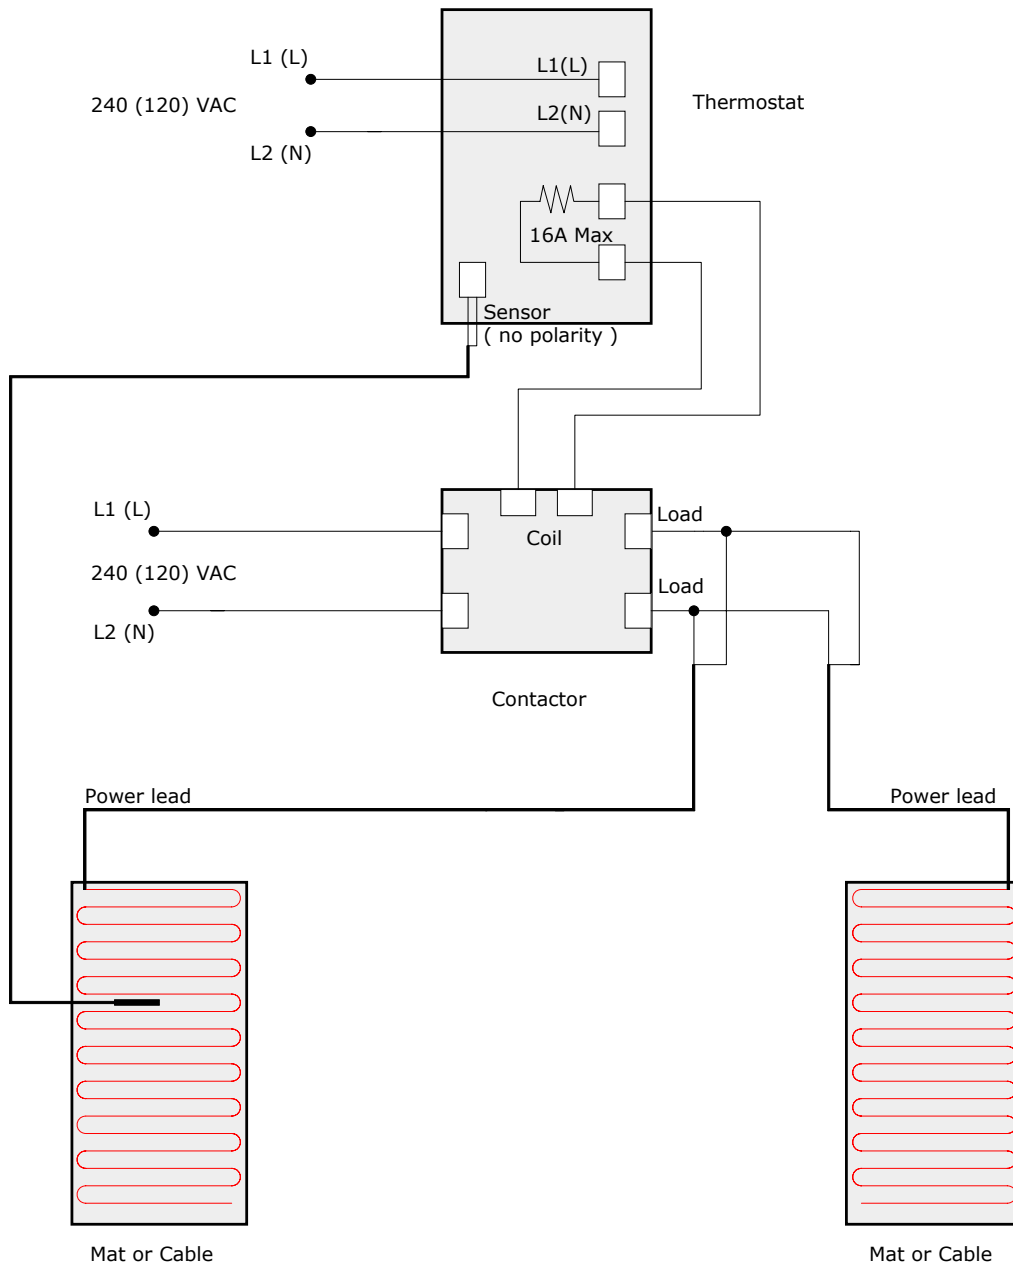

**Load greater than 16 Amps
(GFCI protection not provided in this wiring diagram)**

Technical Services

For technical questions, please contact Danfoss Heating Division North America at **1-866-676-8062**, or via the web at www.DanfossLX.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures, other printed materials, and website information. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alteration can be made without subsequent changes being necessary in specifications already agreed upon. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are registered trademarks of Danfoss A/S. All rights reserved.



Danfoss Inc.
6711 Mississauga Road
Suite 410
Toronto, ON
L5N 2W3
Phone: 905-285-2050
Fax: 905-285-2055
www.DanfossLX.com

Danfoss LX
BRINGING WARMTH TO LIFE