


Installation Guide


ECL Comfort 120 / 73691000

# ECL Comfort 120 (code no. 100B1200, 230 V a.c.)

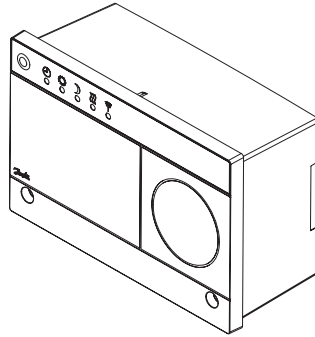


Danfoss  
87H1952.10

### A130.1 ex. a

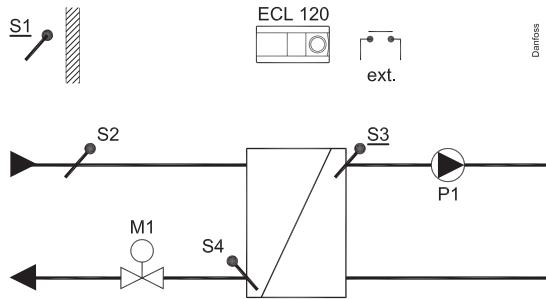

Danfoss  
87H4235.10


### A130.1 ex. b

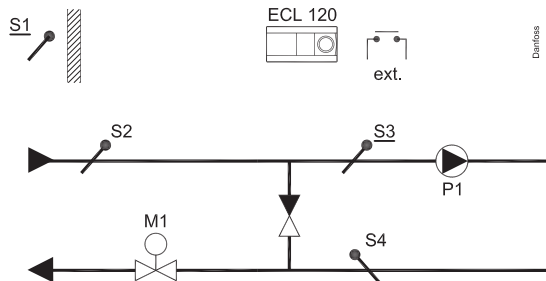


Danfoss  
87H4235.10

# Installation Guide, ECL 120

## A130.1 ex. c

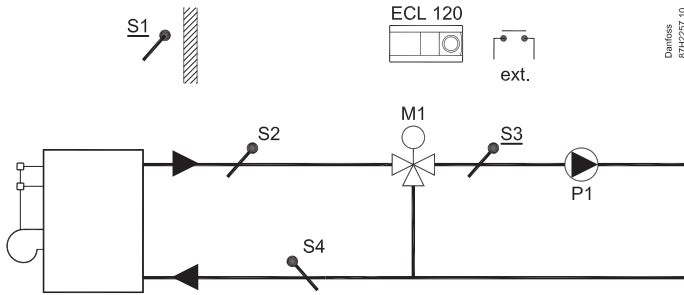


## A130.2


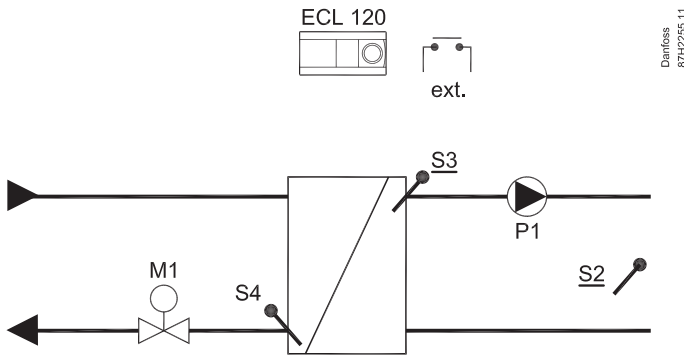


# Installation Guide, ECL Comfort 120




## A130.3

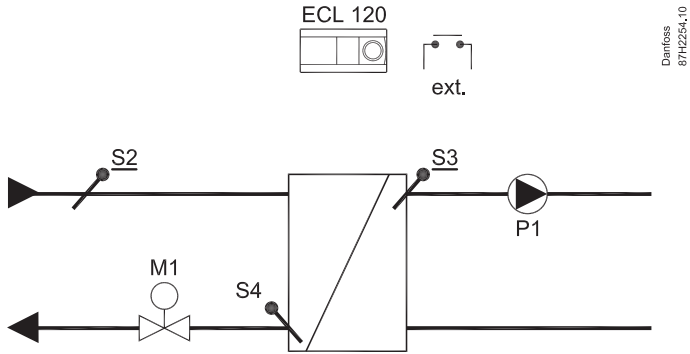





## A130.4

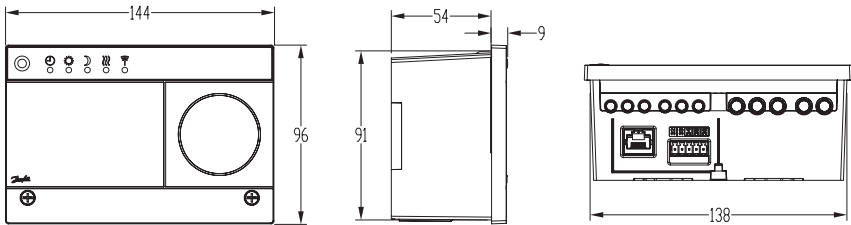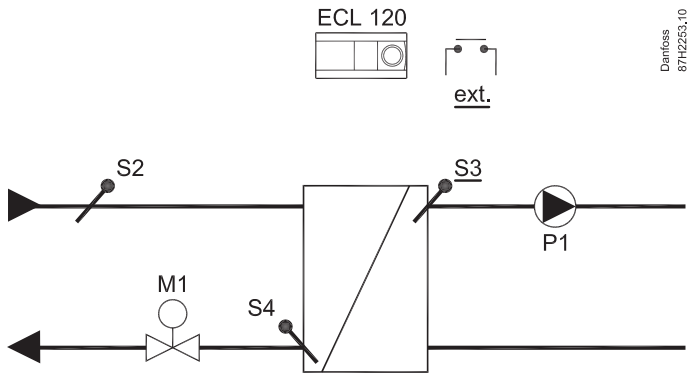




# Installation Guide, ECL Comfort 120

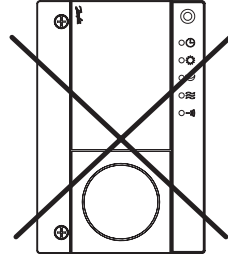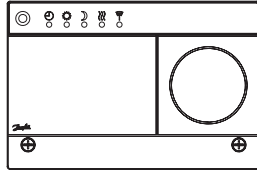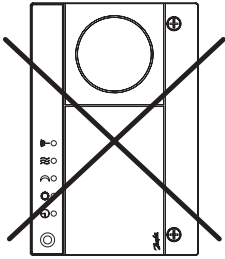

Danfoss  
87FH1973.10

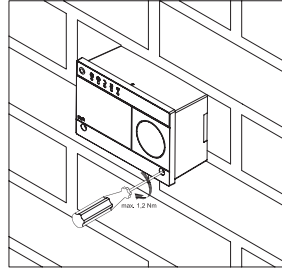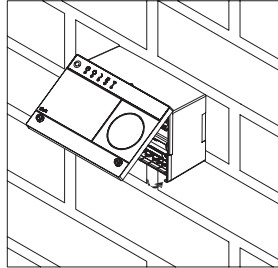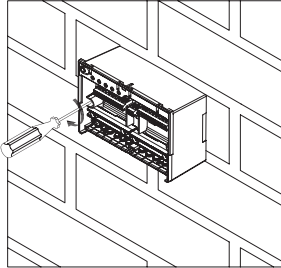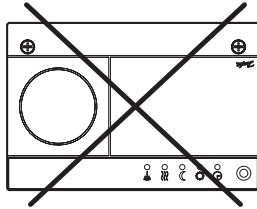


Danfoss  
87FH1973.10

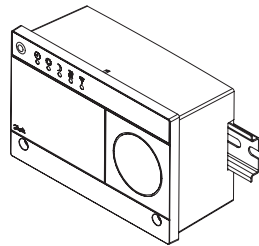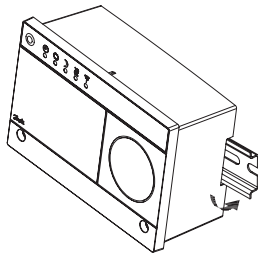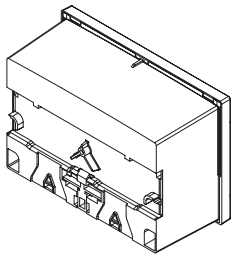



Danfoss  
87FH1975.11

# Installation Guide, ECL Comfort 120

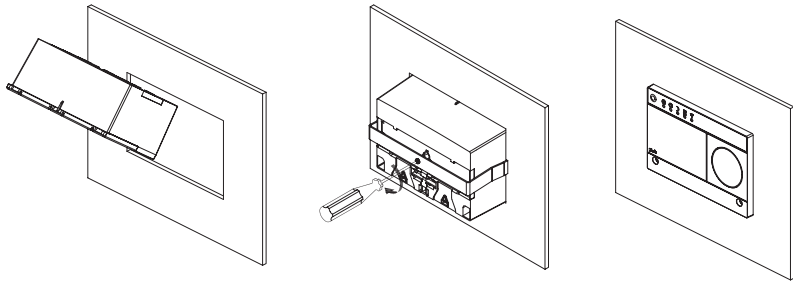


Danfoss  
87H11981,10


**138 x 92 mm**  
**IEC 6155**

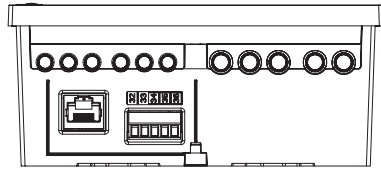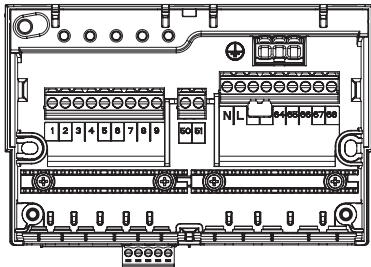



Danfoss  
87H11981,10

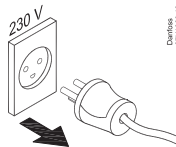

Danfoss  
87H11981,10

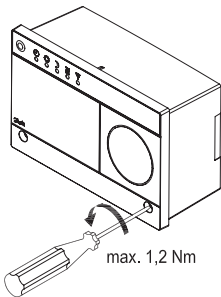


max. 1,2 Nm

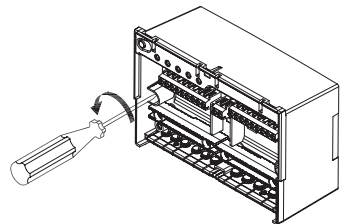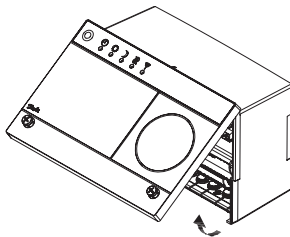


Danfoss  
87H11974,10


# Installation Guide, ECL Comfort 120

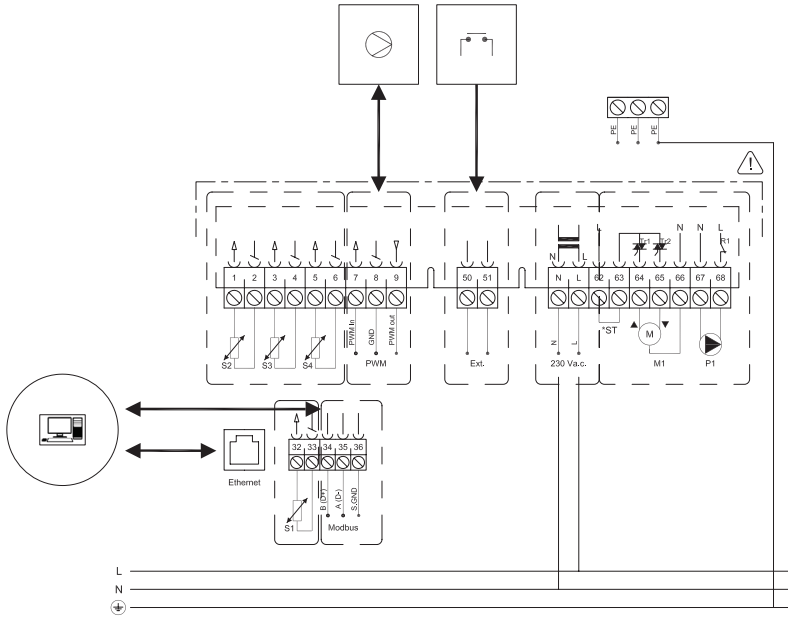

Danfoss  
87H1988.10

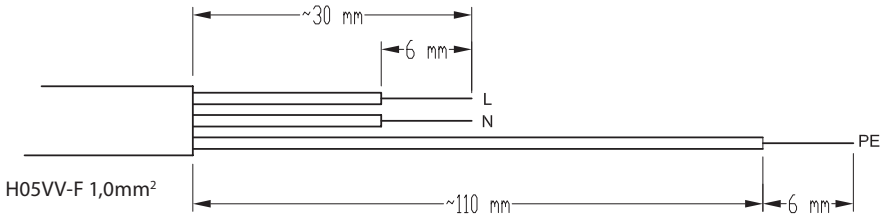


Danfoss  
87H1988.10

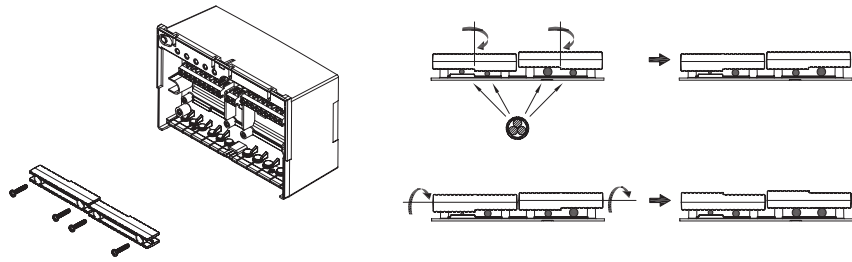


Danfoss  
87H1987.10


# Installation Guide, ECL Comfort 120

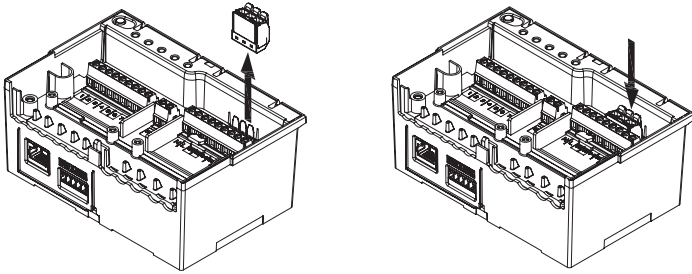

Danfoss  
87H1975.10

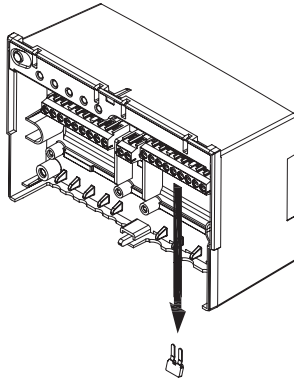


Danfoss  
87H1980.10

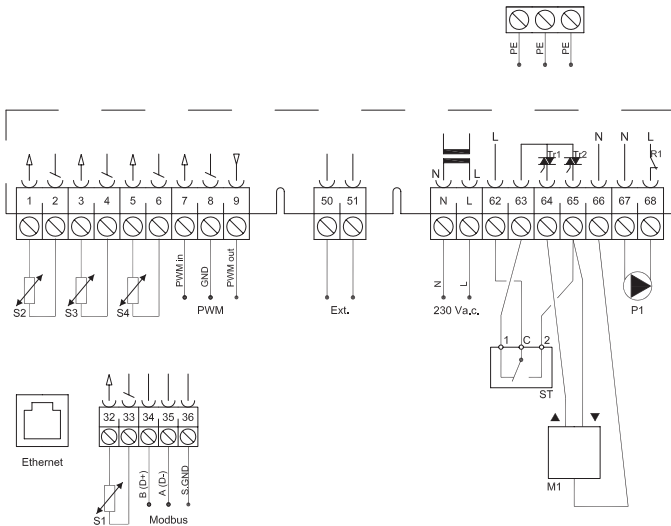


Danfoss  
87H1985.10


# Installation Guide, ECL Comfort 120

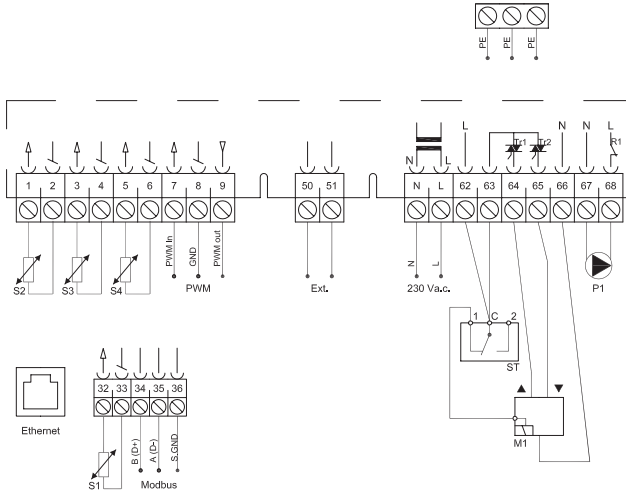

Danfoss  
87H1986.10

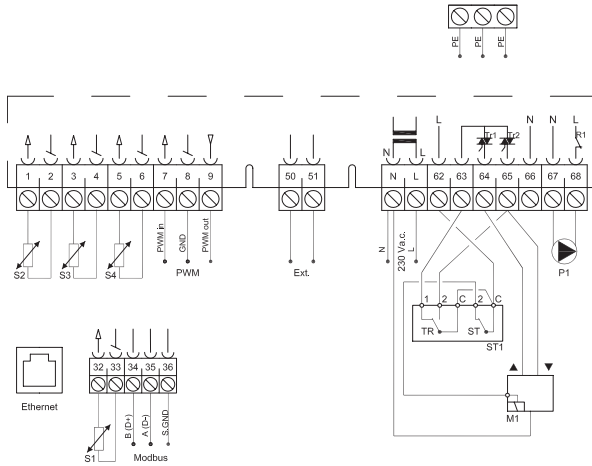



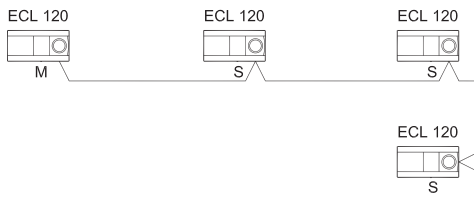



Danfoss  
87H1987.10




Danfoss  
87H1986.10

# Installation Guide, ECL Comfort 120

R 	3 (1,5) / 230 V a.c.
R 	
Tr 	15 VA / 230 V a.c.
	PWM out: 100-1000 Hz PWM in: 30-100 Hz

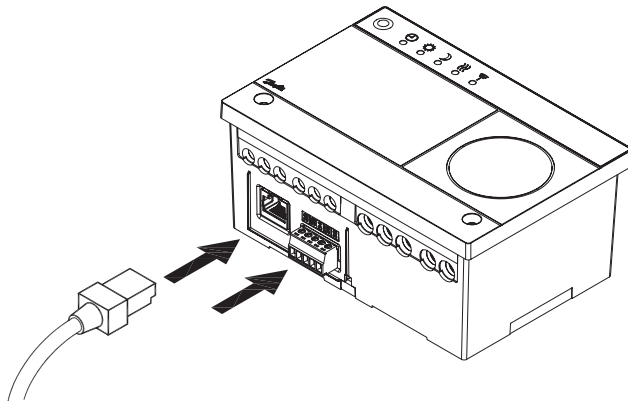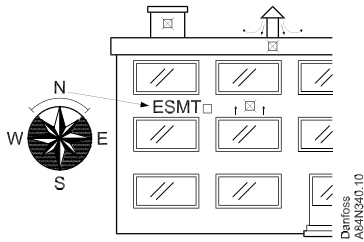



Danfoss  
87H1978.10

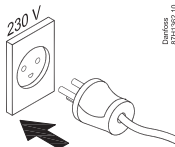

Danfoss  
87H1982.10

## Installation Guide, ECL Comfort 120

### Commissioning:

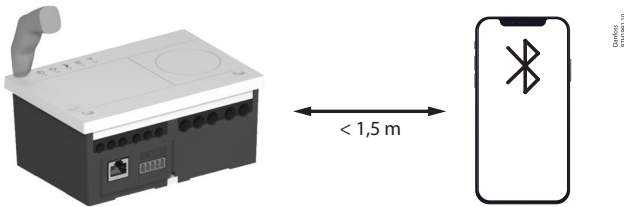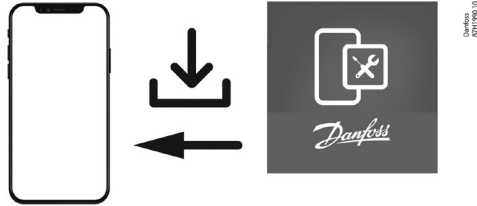

### SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Danfoss A/S declares that the radio equipment type Danfoss ECL Comfort 120 are in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: Please see address below.

### UK PSTI Statement of Compliance

The documents can be found here:

<https://store.danfoss.com/en/Climate-Solutions-for-heating/Electronic-controllers-and-monitoring-solutions/ECL-comfort-controllers/ECL-Comfort-120/ECL-Comfort-120%2C-Supply-voltage-%5BV%5D-AC%3A-207---244%2C-Time-switch-type%3A-Week/p/100B1200>

? **ECL Comfort 120: [www.danfoss.com](http://www.danfoss.com)**  
**Leanheat® Monitor: [Leanheat® Monitor](#) website**  
**Leanheat® Monitor - [5-step instructions](#)**  
**Leanheat® Monitor - [100B1200 \(5-step instructions\)](#)**





## Installation Guide, ECL Comfort 120

---

**Danfoss A/S**  
Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.  
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.