





Operating Guide

X-Gate: How to upload ED3/ED4 files

1. Ensure that the X-Gate firmware is version 5.26 or latest. If not, update it using this link: <u>Danfoss X- Gate Software</u>

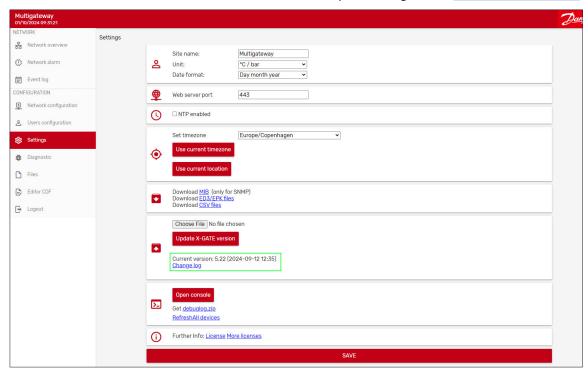


2. Go to 'Files' and press the 'Upload' button.

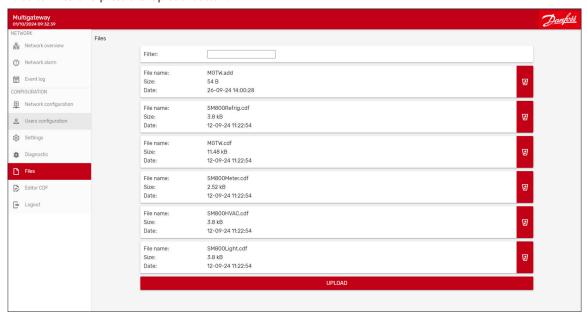


Operating Guide | X-Gate: How to upload ED3/ED4 files

3. Select the ED3/ED4 file*.

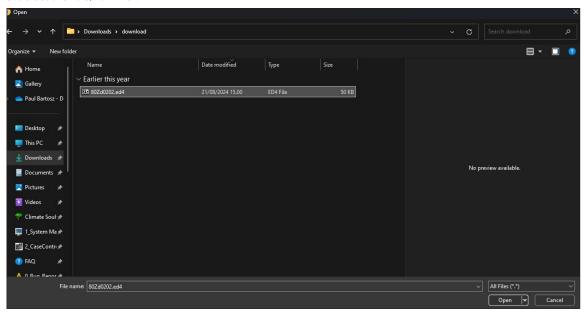


4. The 'Upload' button should change to 'Upload in progress. Please wait'. This process can take 2-3 minutes.

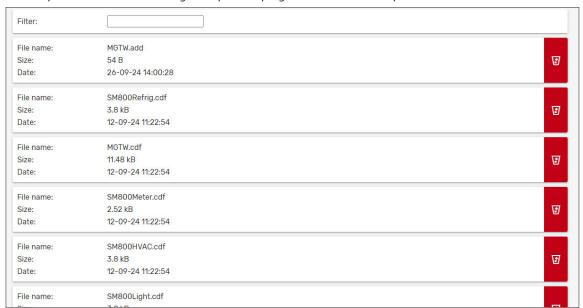




Operating Guide | X-Gate: How to upload ED3/ED4 files

5. When the upload is finished, the new file should appear in the list.

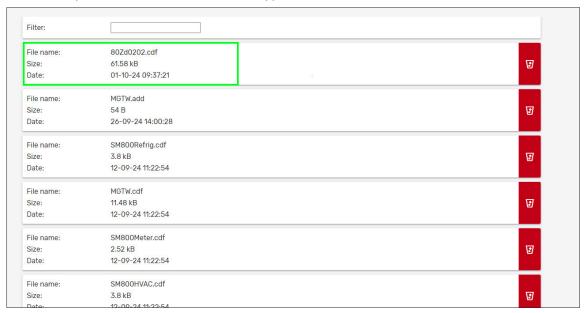

6. In 'Network Configuration', add a new node. The new file should be visible in the application list.

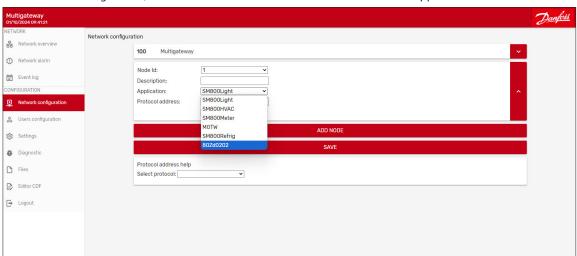

* Note: If you want a different name than the file name, you need to change it before uploading it to the X-Gate.

ENGINEERING TOMORROW



Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.