

User Guide

# **Media temperature controller EKC 361** CVE replacement for CVQ



If existing temperature control set-up includes EKC 366 interface controller your PLC needs adaptation to send the proper analog signal directly to ICAD motor. Otherwise it can be replaced with EKC 361 controller and temperature sensor for stand-alone control





## **CVQ to CVE**

027B1139	<b>027B1139</b> CVQ (-1 – 5 bar) (-14.5 – 72.5 psi)									
027B1140	CVQ (0 – 6 bar) (0 – 87 psi)	is replaced by	027B0980	CVE (-0.66 – 8 bar) (-9.5 – 116 psi)						
027B1141	CVQ (1.7 – 8 bar) (24.5 – 116 psi)									

Note: To operate the CVE pilot an ICAD 1200 motor is needed (ordered separately) and will need powered with 24 V DC, 2 amp.

## **EKC 361 controller configuration**

Parameter <u>n03</u> Actuator type:

- 1: CVQ -1 5 bar
- 2: CVQ 0 6 bar
- 3: CVQ 1.7 8 bar
- 4: CVMQ
- 5: KVQ
- 6: ICM/CVE

Choose 6 (ICM/CVE) instead of 1, 2 or 3:

# Parameter n32 Opening degree Max. limitation – ICM/CVE with ICAD

(When ICM/CVE has been selected (n03 = 6) the maximum opening degree % can be entered. The ICAD motor opening degree will never go above this value). For full working pressure range of the CVE pilot set n32 = 90% OD. To limit the regulating pressure range so the evaporator will not go below a certain pressure/temperature use the below table to determine what the ICAD opening degree % is for the min. evaporator pressure you want and enter that opening degree value in parameter n32.

#### Parameter **n33** Opening degree Min. limitation – ICM/CVE with ICAD

(When ICM/CVE has been selected (n03 = 6) the minimum opening degree % can be entered. The ICAD motor opening degree will never go below this value). For full working pressure range of the CVE pilot set n33 = 23% OD. To limit the regulating pressure range so the evaporator will not go above a certain pressure/temperature use the below table to determine what the ICAD opening degree % is for the max. evaporator pressure you want and enter that opening degree value in parameter n33.

barg	-0.66	0	1	2	3	4	5	6	7	8
psig	19.5 in. Hg	0	14.5	29.0	43.5	58.0	72.5	87.0	101.5	116.0
mA	18.3	17.1	15.9	14.7	13.5	12.3	11.1	9.9	8.7	7.5
ICAD reading %	90%	83%	75%	67%	60%	53%	45%	37%	30%	23%

#### Parameter <u>n07</u> Temperature transient phenomenon: The EKC 361 controller includes 3 predefined transient phenomenon's for best adaptation to the actual plant

- Fastest possible cooling Setting = 1
- Cooling with less underswing
- Setting = 0Cooling underswing **unwanted** Setting = 2(default value = 2)



# **ICAD** configuration

Parameter :26 Valve type:

Choose 10, CVE pilot with ICAD 1200A (see Quick start guide ICAD)

Note: Parameter ;26 is password protected so a password of 11 will need entered into parameter ;10 to be able to view and make changes to it.

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.