



Installation guide
Electric Expansion Valve

Type ETS 175L, ETS 250L, ETS 400L, ETS 500L

<p>Compatible refrigerants / Kältemittel Kompatibilität / Fluides compatibles / Compatibilidad de refrigerantes / 适用的冷媒:</p> <p>R134a, R404A, R407A, R407C, R407F, R407H, R410A, R417A, R422A, R422B, R422D, R438A, R442A, R448A, R449A, R449B, R450A, R452A, R463A, R507A, R513A, R513B, R515A, R515B, R1234ze(E), R1234yf*, R516A*</p> <p>NOTE: For more details check datasheet. * only for oil free valves ETS 175L and 250L</p>	<p>Inlet fluid temperature / Eingangstemperaturbereich / entrée température du fluide / entrada temperatura líquida / 入口流体温度:</p> <p>Min. -40 °C / -40 °F Max. 70 °C / 158 °F Max. 95 °C / 203 °F for ETS 500L and oil free valves</p>	<p>Max. working pressure / Max. zul. Betriebsüberdruck / Pression de service max. / Presión de trabajo máx. / 最大工作压力 (gauge):</p> <p>MWP = 37 bar / 536 psig</p>
<p>Stepper motor type / Schrittmotortype / Type de moteur pas à pas / Tipo de motor a pasos / 步进电机形式:</p> <p>Bipolar</p>	<p>Allowable ambient temperature / Zulässige Umgebungtemperatur / Température ambiante admissible / Temperatura ambiente permisible / 允许的环境温度:</p> <p>Min. -40 °C / -40 °F Max. 70 °C / 158 °F</p>	<p>Total number of steps: / Max. Schritte: / Nombre de pas total: / Número de pasos total: / 总步数:</p> <p>ETS 175L, ETS 250L, ETS 400L 3810 full steps ETS 500L 4999 full steps</p>
<p>Nominal voltage / Nennspannung / Tension nominale / Voltaje nominal / 名义电压:</p> <p>12 V DC</p>	<p>Resistance / Widerstand / résistance électrique / Resistencia / 电阻:</p> <p>52.4 Ohm ±10% @ 25 °C</p>	<p>Phase current / Phasenstrom / Phase électrique / Corriente de fase / 相电流:</p> <p>Recommended: 200 mA at 200 pps</p>

034R9828


034R9828

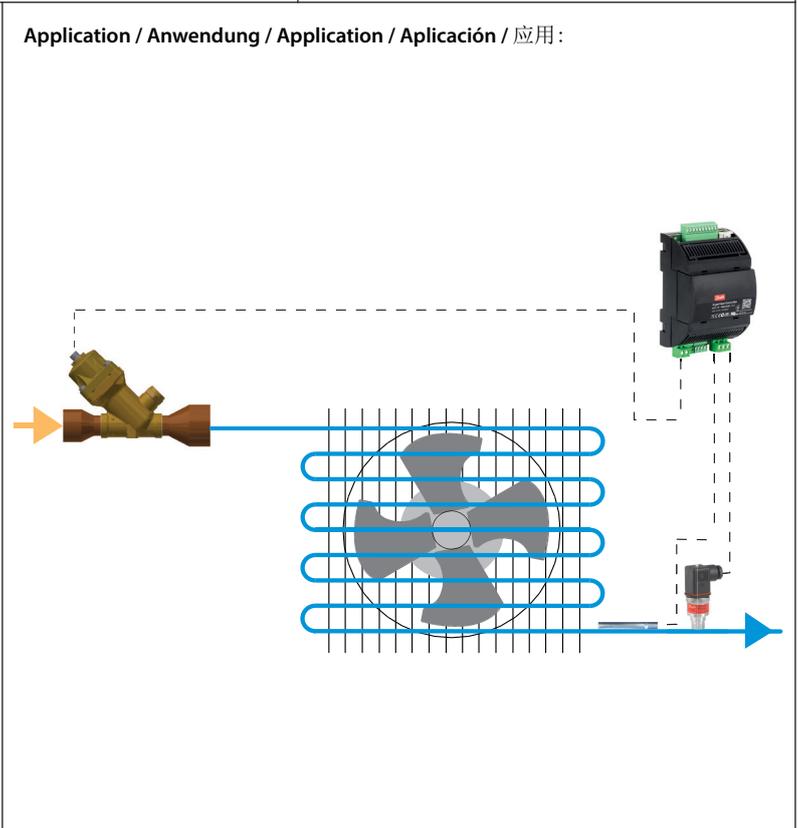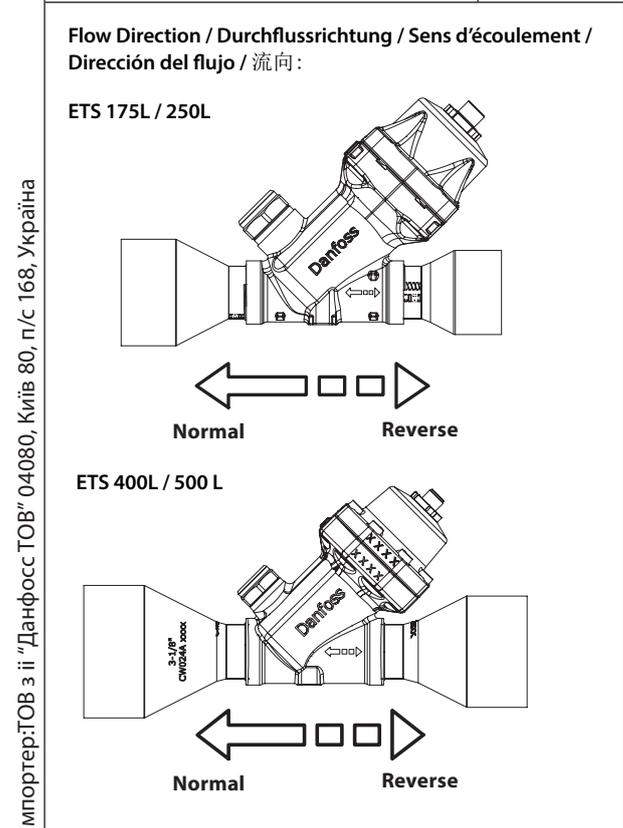


Імпортёр:ТОВ з іі "Данфосс ТОВ" 04080, Київ 80, п/с 168, Україна

Info for UK customers only: Danfoss Ltd., 22 Wycombe End, HP9 1NB, GB

Mounting / Einbau / Montage / Instalación / 安装:

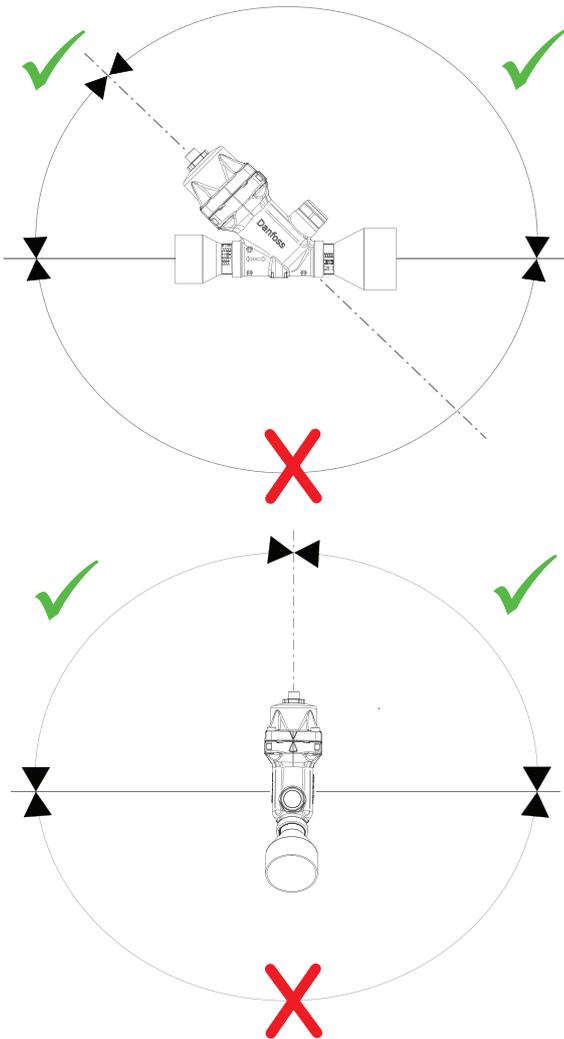



Brazing / Einbau / Montage / Instalación / 安装:

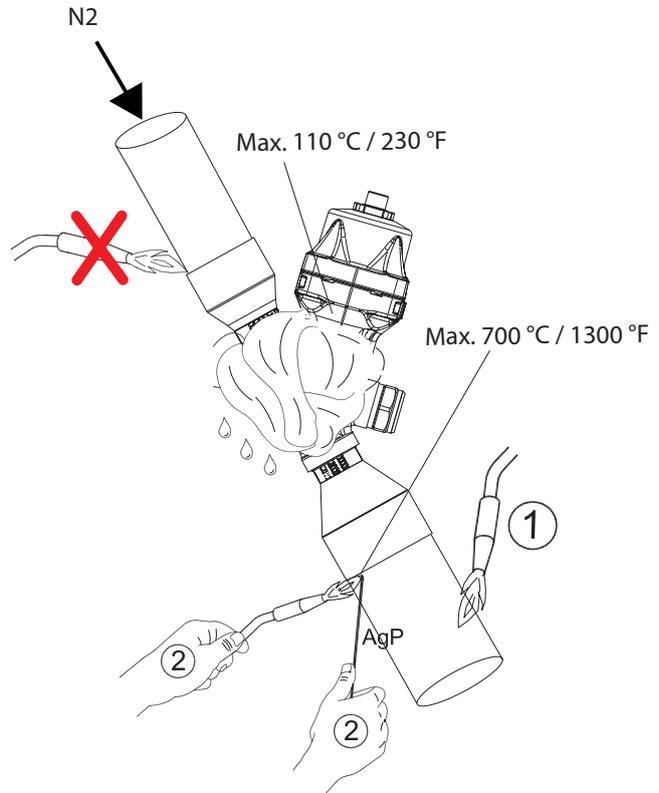

N2 gas from opposite side of soldering point.
 Schutzgas gegenüber der Lötstelle einströmen lassen.
 Refroidissement gaz ci-contre site de point de soudure.
 Corriente de N2 desde el lado opuesto a la soldadura.
 氮气保护从阀门焊接口的另一侧通入。



Electrical connections / Elektrische Anschlüsse / Connexions électriques / Conexiones eléctricas/ 电气连接:

ETS 400L / 500L

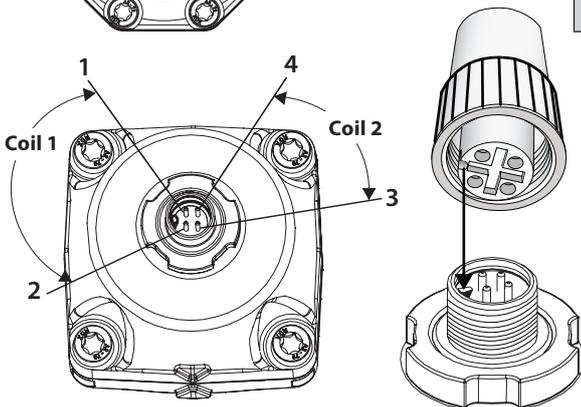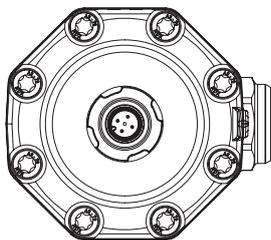

ETS 175L / 250L

	STEP	Coil I		Coil II		
		Red	Green	White	Black	
CLOSING ↑	1	+	-	+	-	OPENING ↓
	2	+	-	-	+	
	3	-	+	-	+	
	4	-	+	+	-	
	1	+	-	+	-	

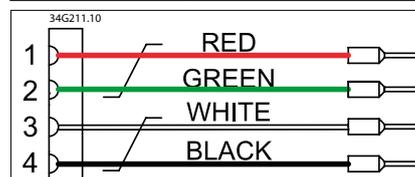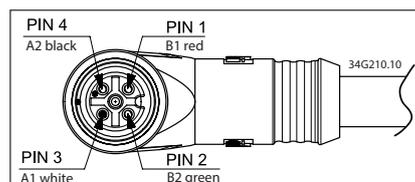

Disassembling / Zerlegung / Désassemblage / Desmontaj / 拆卸:

<p>1</p> <p>ETS 400L / 500L</p> <p>Screw x8 Screw T30</p> <p>Screw x4 Screw T30</p> <p>A</p> <p>ETS 175L / 250L</p>	<p>2</p> <p>ETS 175L / 250L</p> <p>ETS 400L / 500L</p>	<p>3</p>
--	---	-----------------

Assembling / Zusammenbau / Assemblage / Montaje / 安装:

<p>1</p> <p>New</p>	<p>2</p>
<p>3</p>	<p>4</p> <p>6 ±0.5 Nm (for ETS 175L/250L) 5.3 ±0.5 Nm (for ETS 400L / 500L)</p> <p>ETS 400L / 500L</p> <p>Screw x8 Screw T30</p> <p>Screw x4 Screw T30</p> <p>ETS 175L / 250L</p>




Warning! / Achtung! / Attention! / Advertencia! / 警告!

- . Do not connect directly to AC/DC power source. Connect valve to appropriate controller/driver only. Do not operate valve while assembling or disassembling
- . Bitte den ETS nicht direkt mit einer Spannungsquelle (Gleich- oder Wechselstrom) verbinden. Schließen Sie das Ventil nur an geeignete Regler/Steuergeräte an. Ventil bitte nicht in zerlegtem Zustand ansteuern.
- . Ne pas raccorder directement le moteur à une alimentation AC / DC. Raccorder la vanne au régulateur approprié. Ne pas actionner la vanne pendant le montage ou le démontage.
- . No aplicar tensión directamente a la válvula. Conectar la válvula a un controlador/driver adecuado. No haga funcionar la válvula durante el montaje o desmontaje.
- . 请仅将阀门连接于合适的控制器/驱动器，勿直接与交流或直流电源连接。在安装和拆卸阀门时请勿操作电子膨胀阀。

Special note for R1234ze(E), R1234yf and R516A:

Ignition risk is evaluated in accordance to ISO5149/EN378 and IEC60335-2-40.

- Do not use valve outside of the stated temperature limits.
- Do not unplug when energized
- Must be installed in a suitable end use enclosure to protect the valve electrical plug against moisture, dust, dirt and impact.
- For countries where safety standards are not an indispensable part of the safety system Danfoss recommend the installer to get a third party approval of the system containing flammable refrigerant.

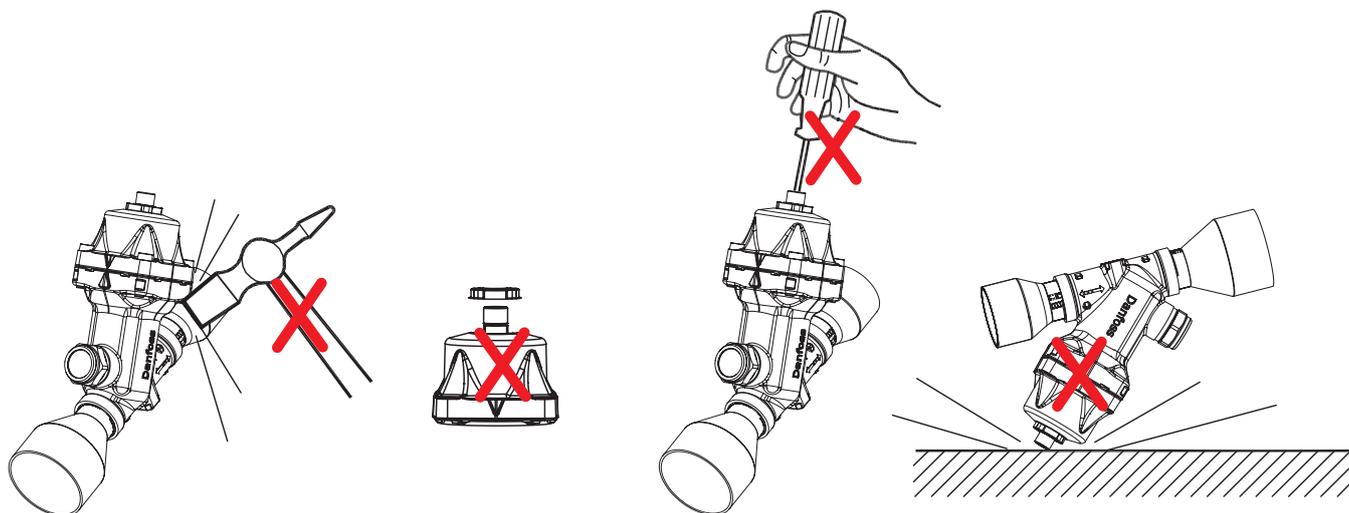

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.