

BDU Series

Hydrostatic Transmissions



Revision history

Table of revisions

Date	Changed	Rev
September 2026	Removed contents of the BDU-6S and replaced the image on the cover page	0210
December 2024	Fixed typo on BDU-10S/10L : Ports and Dimensions	0209
November 2022	Added caution for packing and transportation	0208
November 2021	Removed contents of BDP, and aligned revision number along with DAM Hub.	0207
November 2020	Minor update in Hydraulic Fluid, and changed document number from 'BC00000025' and '520L0935' to 'BC152886484098'	0104
December 2018	Fixed Model Code "H"	0103
May 2017	Fixed typo	0102
June 2016	Converted to DITA-CMS	0101
Mar 2010	Correction - Drawing	AC
Jan 2009	Correction - Text	AB
Jan 2006	First edition	AA

General Description

BDU Series Family.....	5
Features and Benefits.....	5
Design.....	6
BDU-10S.....	8
Pictorial Diagram.....	8
System Schematic.....	8
BDU-10L/21L/21H.....	9
Pictorial Diagram.....	9
System Schematic: BDU-21L.....	9
System Schematic: BDU-21H.....	10

Technical Specifications

Features and Options.....	11
Operating Parameters.....	12
Fluid Specifications.....	12
Efficiency.....	13
BDU-10S.....	13
BDU-10L.....	13
BDU-21L/21H.....	13

Operating Parameters

Overview.....	14
Input / Output Speed.....	14
System Pressure.....	14
Charge Pressure.....	14
Charge Inlet Pressure.....	14
Case Pressure.....	15
Hydraulic Fluids.....	15
Temperature and Viscosity.....	15

System Design Parameters

Fluid and Filtration.....	16
Reservoir.....	16
Control Shaft Force.....	16
Independent Braking System.....	16

Features and Options

Shaft Load.....	17
Shaft Options.....	17
Shaft Options : BDU-10S/10L.....	18
Shaft Options : BDU-21L/21H.....	19
Bypass Valve.....	20
High Pressure Relief Valve (hprv) and Charge Check (Overpressure Protection).....	20
Charge Check Valve with Orifice.....	22
Charge Check with Orifice.....	23
Optional Integrated Reservoir.....	24
Filter.....	24
Fan.....	25

Component Selection

Maximum System Pressure.....	26
Input Power.....	27
Unit Life.....	28

Model Code

BDU : Model Code (A - B - C - D - E).....	29
BDU : Model Code (F - G).....	30
BDU : Model Code (H - J - K).....	31

Recommended Installation and Maintenance

Housing Installation.....	32
Shaft Installation.....	32
Start Up Procedure.....	32
Operation.....	32
Maintenance.....	32

	Packing and Transportation.....	33
Installation Drawings		
	BDU-10S/10L : Ports and Dimensions.....	34
	BDU-10S/10L : Control Arm Location.....	35
	BDU-10S/10L : Motor Shaft.....	36
	BDU-10S : Shaft Configuration.....	37
	BDU-10L : Shaft Configuration and Charge Pumps Displacement.....	38
	BDU-21L/21H : Ports and Dimensions.....	39
	BDU-21L/21H : Control Arm Location.....	40
	BDU-21L/21H : Motor Shaft.....	41
	BDU-21L/21H : Shaft Configuration and Charge Pump Displacement.....	42
	Optional Fan.....	43

General Description

BDU Series Family

The BDU transmission is a “Z” style transmission with a variable displacement pump and a fixed displacement motor. The **variable displacement pump** features a cradle swashplate with a direct proportional displacement control. Reversing the direction of tilt of the swashplate reverses the flow of oil from the pump and thus reverses the direction of the motor output rotation. The **fixed displacement motor** uses a fixed swashplate. The pump and motor are of the axial piston design and utilize spherical nosed pistons which are held against a thrust bearing by internal compression springs. The fluid supply for **the BDU-10L/21L/21H transmission** is contained in an external reservoir and passes through an external filter prior to entering the transmission and feeding the fixed displacement gerotor charge pump. Excess fluid in the charge circuit is discharged over the charge relief valve back to the charge pump inlet. Constant flow across a small fixed orifice connecting the charge circuit to the transmission housing supplements the cooling flow.


The BDU-10S transmission has a self-contained fluid supply and an integral filter. The fluid is forced through the filter by positive “head” on the fluid in the housing reservoir with an assist by the negative pressure created in the pump pistons as they create a vacuum. Charge check valves in the center section are used to control the makeup flow of fluid to the low pressure side of the loop. A spool type bypass valve is utilized in the transmission to permit moving the vehicle over short distances at low speeds without starting the engine.

Features and Benefits

- A complete transmission family to meet the needs of small vehicle application.
- 2 Transmission Frame Sizes: 10, 21
- PTO Capability on “Z” Style Transmission
- Cost Effective, Compact, Lightweight Design
- Low Noise
- High Efficiency
- Worldwide Sales and Service


Design

Cross-Section (BDU-10S)

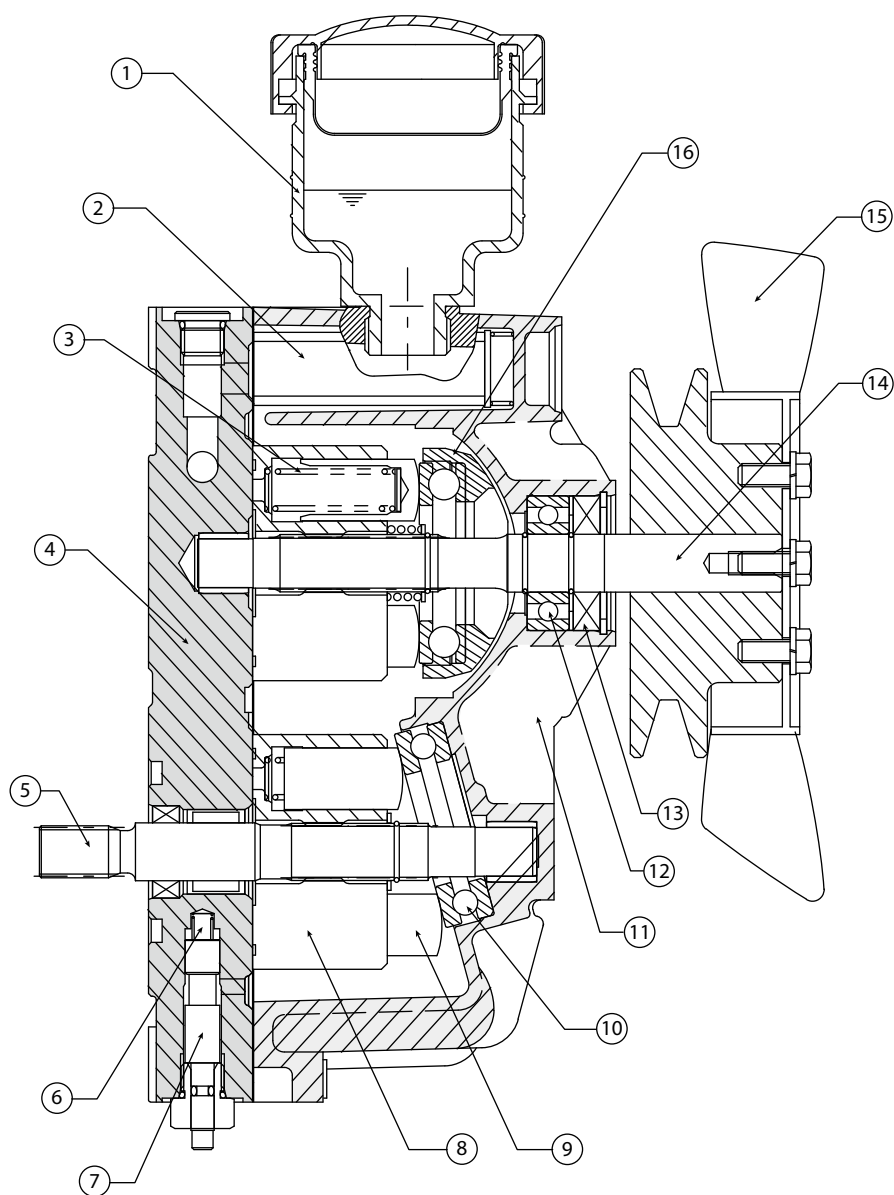

P400202

- | | | |
|--------------------|----------------------------|------------------------|
| 1. Tank | 7. Spool type bypass valve | 13. Shaft seal |
| 2. Built-in filter | 8. Cylinder block | 14. Input shaft |
| 3. Spring | 9. Piston | 15. Cooling fan |
| 4. Center section | 10. Thrust bearing | 16. Cradle swash plate |
| 5. Output shaft | 11. Housing | |
| 6. Spring | 12. Ball bearing | |

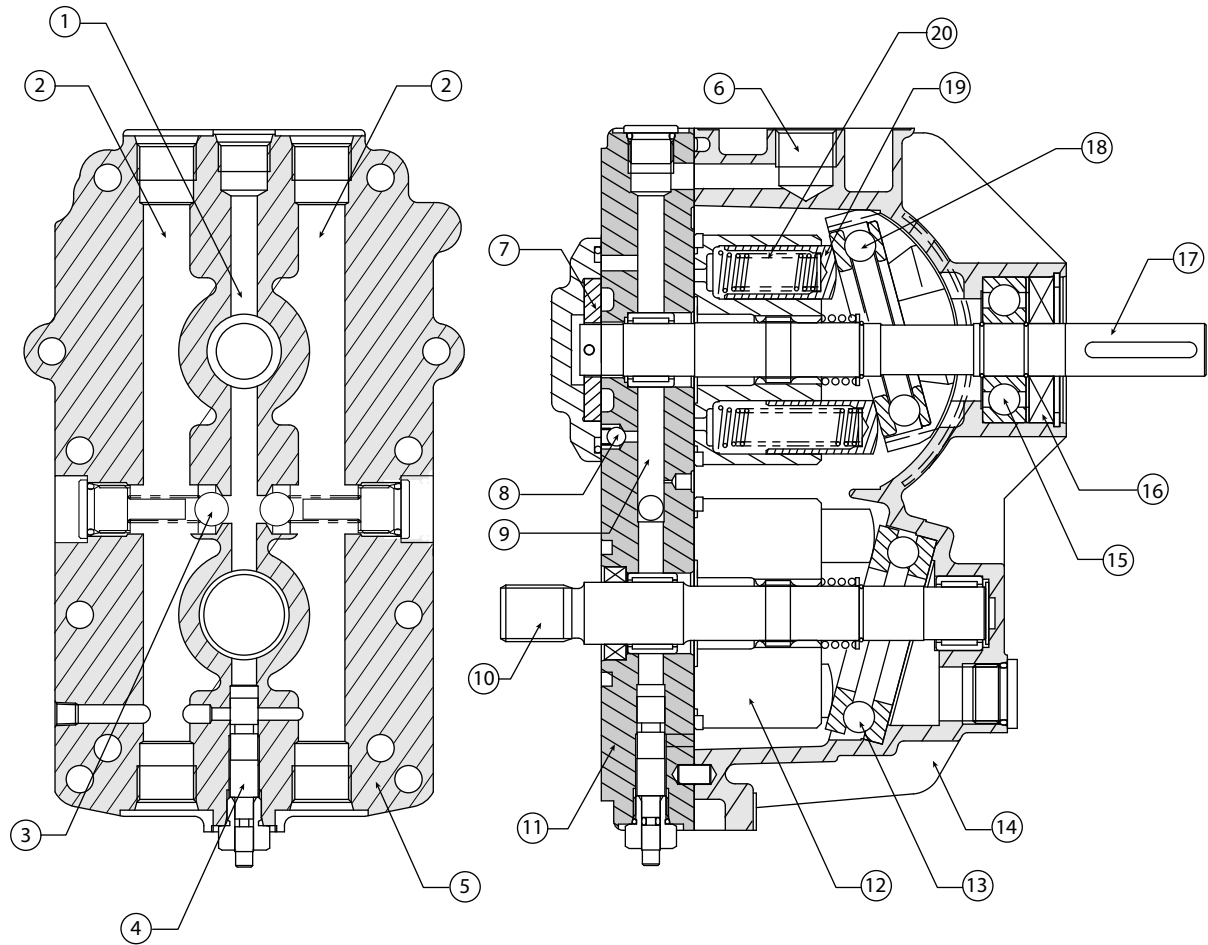

P400203

- 1. Suction Circuit
- 2. Working Loop
- 3. Charge Check Valve
- 4. Spool Type Bypass Valve
- 5. Center Section
- 6. Suction Port
- 7. Charge Pump


- 8. Charge Relief
- 9. Charge Circuit
- 10. Output Shaft
- 11. Center Section
- 12. Cylinder Block
- 13. Thrust Bearing
- 14. Housing

- 15. Ball Bearing
- 16. Shaft Seal
- 17. Input Shaft
- 18. Cradle Swash Plate
- 19. Piston
- 20. Spring


BDU-10S

Pictorial Diagram

BDU-10S

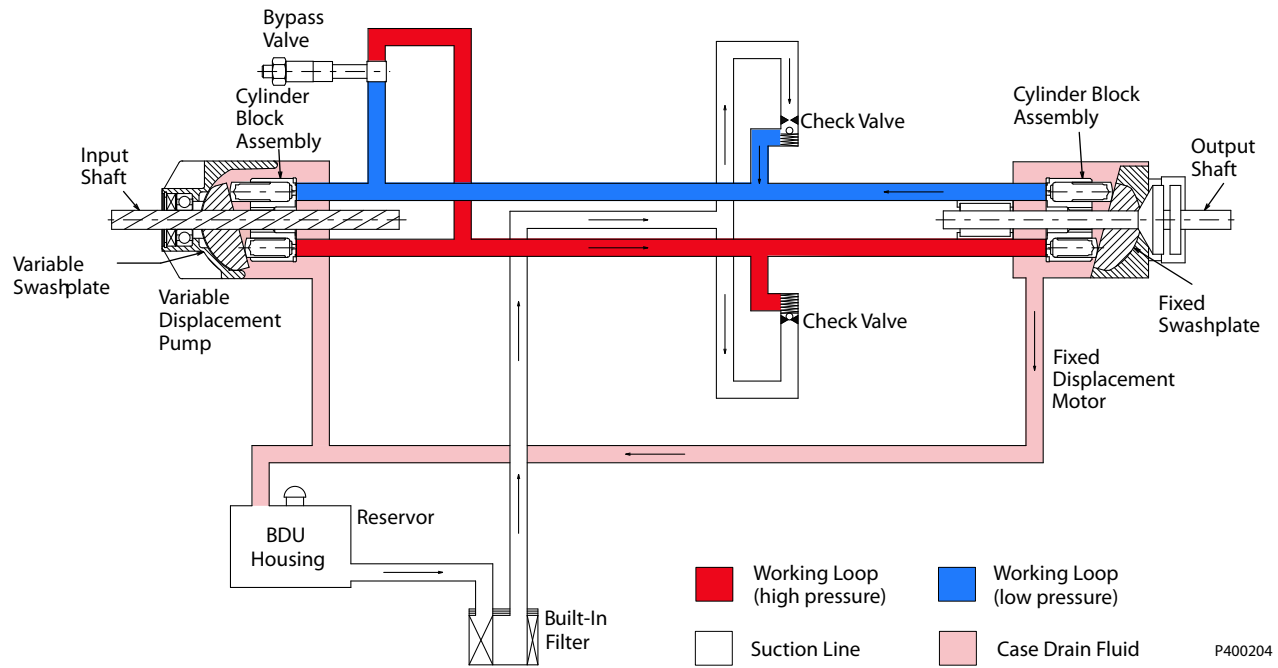

System Schematic

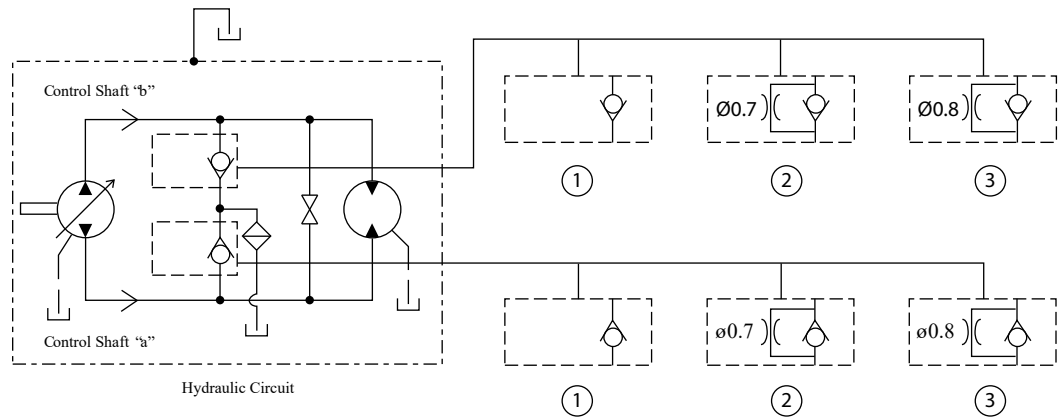


1. Ball Check Valve, Option Code : BB
2. Check Valve with Ø0.7 Orifice, Option Code : 07
3. Check Valve with Ø0.8 Orifice, Option Code : 08

BDU-10L/21L/21H


Pictorial Diagram

BDU-10L, BDU-21L, BDU-21H (part of pump)

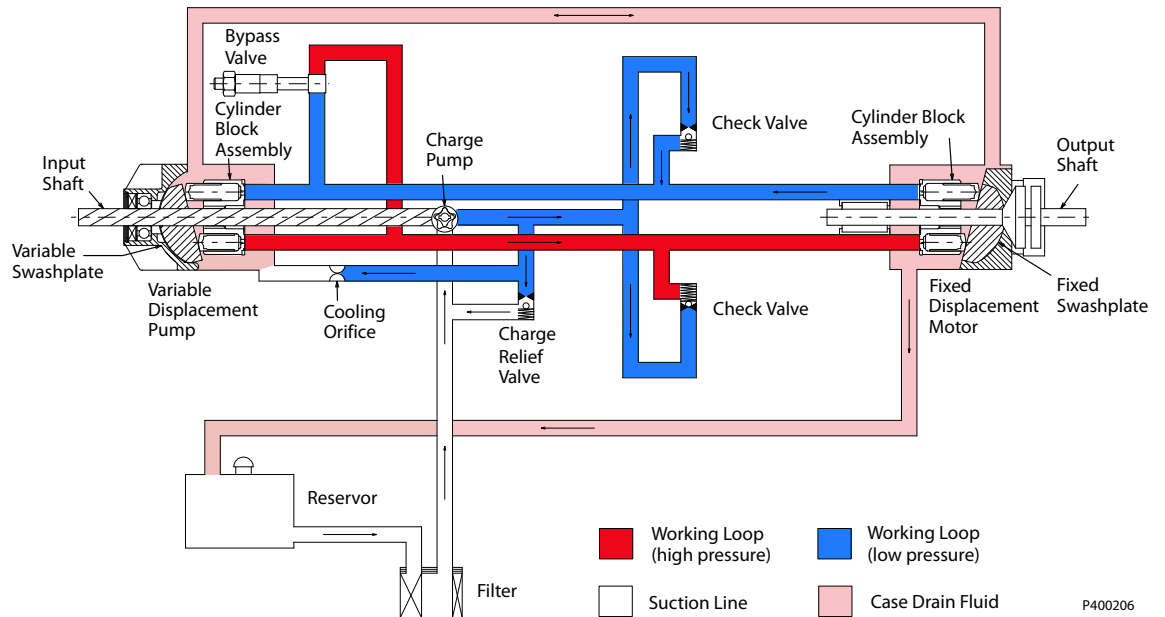

System Schematic: BDU-21L


BDU-21L

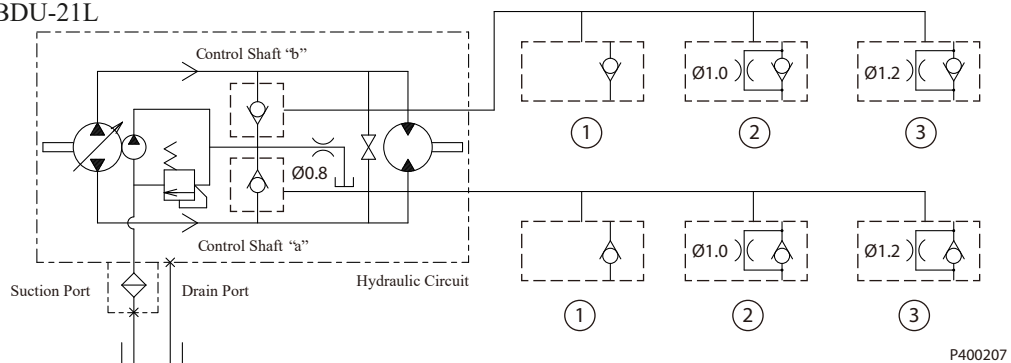

1. Ball Check Valve, Option Code: BB
2. Check Valve with Ø1.0 Orifice, Option Code: 10
3. Check Valve with Ø1.2 Orifice, Option Code: 12

System Schematic: BDU-21H

BDU-21H

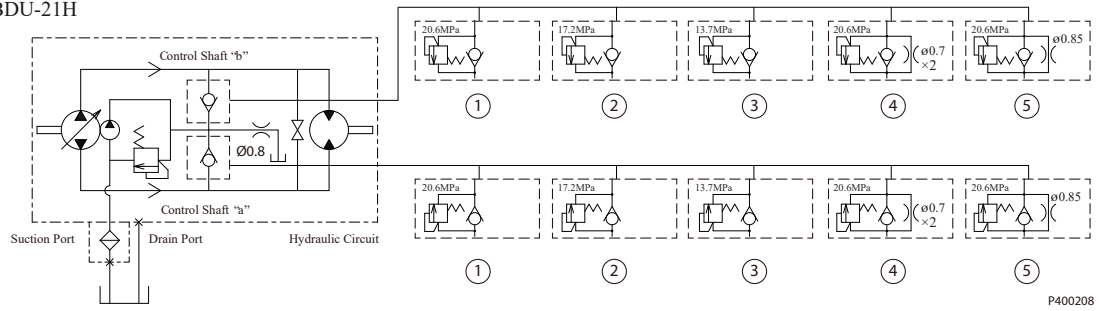

1. Check Valve with Relief Valve, Option Code. : R0
2. Check Valve with Relief Valve, Option Code. : R1
3. Check Valve with Relief Valve, Option Code. : R2
4. Check Valve with Relief Valve and $\varnothing 0.7$ Twin Orifice, Option Code. : RA
5. Check Valve with Relief Valve and $\varnothing 0.85$ Orifice, Option Code. : RB

Technical Specifications

Features and Options

Features		Unit	Product Type & Frame			
			BDU-10S	BDU-10L	BDU-21L	BDU-21H
Pump	Displacement	cm³ [in³]	10 [0.61]	10 [0.61]	21 [1.28]	21 [1.28]
	Swashplate Angle	degree	15	15	15	15
	Control Shaft	degree	21	21	22	22
Motor	Displacement	cm³ [in³]	10 [0.61]	10 [0.61]	21 [1.28]	21 [1.28]
	Swashplate Angle	degree	15	15	15	15
Charge Pump Displacement		cm³ [in³]	NA	1.9 [0.12]	2.1 [0.13]	3.0 [0.18]
Output Speed	Rated	min ⁻¹	3000	3600	3600	3600
	Maximum (intermittent)		3200	3800	3800	3800
Maximum Output Torque (Theoretical)		Nm [lbf·in]	23.4 [208]	23.4 [208]	49.2 [436]	72.1 [639]
Input Power (Maximum)		kW [ps]	2.2 [3.0]	3.7 [5.0]	7.4 [10.0]	11.0 [15.0]
Weight		kgf [lbs]	6.3 [14]	6.5 [14]	10 [22]	10 [22]
Control Torque Required to Stroke Pump (Maximum)		Nm [lbf·in]	19.6 [174]	19.6 [174]	22.5 [200]	24.5 [217]
Mounting			See <i>Installation Drawings</i>			
Rotation			Clockwise or Counterclockwise			
Suction/Oil Tank Port (SAE O-ring Boss)			7/8-14 UNF	7/16-20 UNF	9/16-18 UNF	
Other ports			See <i>Installation Drawings</i>			
Shaft			See <i>Installation Drawings</i>			
Bypass Valve			STD	STD	STD	STD
Neutral Valve/Orifice			NA/OP	NA/OP	OP/OP	OP/OP
High Pressure Relief Valve			NA	NA	NA	STD
Filtration			built-in	External	External (Option, Integrated)	
Reservoir			Integrated	External	External	
Space for the oil in the housing		cm³	550	550	700	700



Note

SAE J1926-1 / ISO 11926-1

Operating Parameters

Parameter	Unit	Product Type & Frame			
		BDU-10S	BDU-10L	BDU-21L	BDU-21H
Input Speed					
Minimum	min ⁻¹	600			
Rated		3000	3600		
Maximum		3200	3800		
System Pressure					
Maximum Working	bar [psi]	150 [2185]			210 [3059]
Maximum		175 [2549]	210 [3059]	245 [3569]	
Charge Pressure	bar [psi]	NA	3 [44] - 5 [73]		
Charge Inlet Pressure	bar [psi]	NA	0.8 [12] abs		
Case Pressure					
Rated	bar [psi]	0.3 [4]			
Maximum (Cold Start)		0.7 [10]			

Fluid Specifications



Features		Units	BD Series
Viscosity	Minimum	mm ² /sec. [SUS]	7 [49]
	Continuous		12-60 [66-280]
	Maximum		1600 [7500]
Temperature	Minimum	°C [°F]	-10 [14]
	Maximum Continuous		82 [180]
	Maximum		104 [219]

Efficiency

Input speed: 3000 min^{-1} , Oil temperature: 50°C , Full Displacement



BDU-10S

Efficiency (η_v :Volumetric, η_m :Mechanical, η_t :Overall)

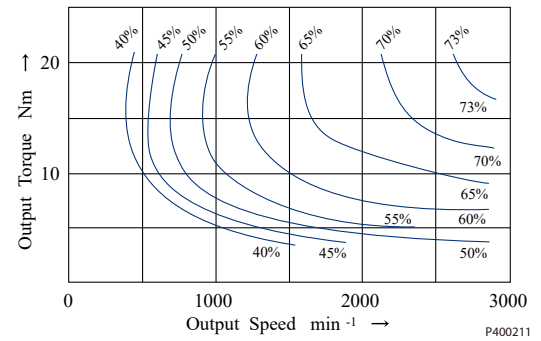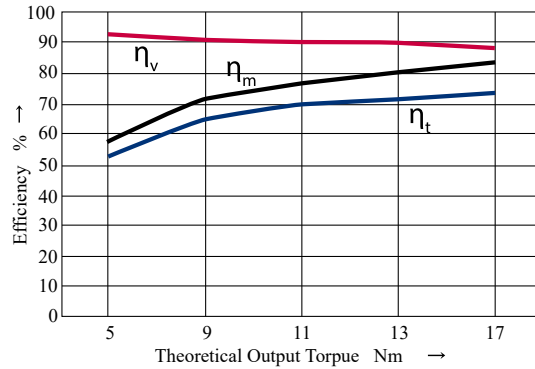



BDU-10L

Efficiency (η_v :Volumetric, η_m :Mechanical, η_t :Overall)

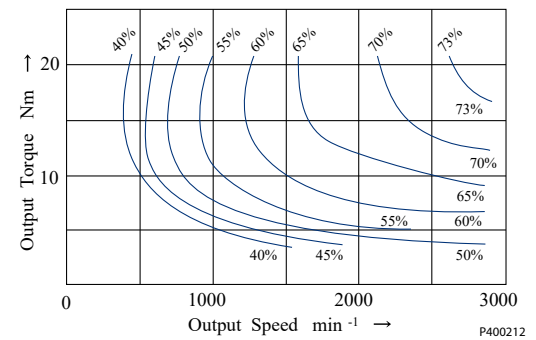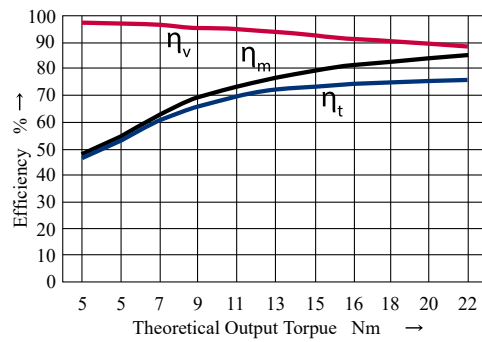

BDU-21L/21H

Efficiency (η_v :Volumetric, η_m :Mechanical, η_t :Overall)

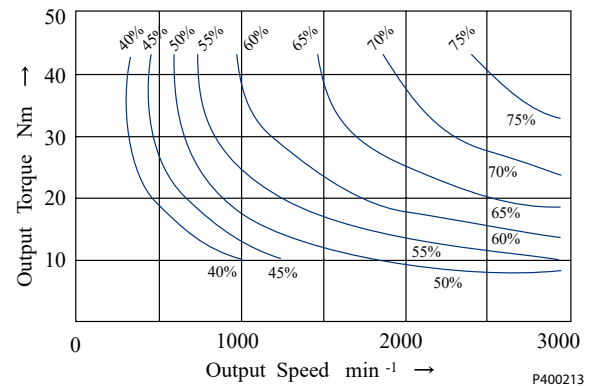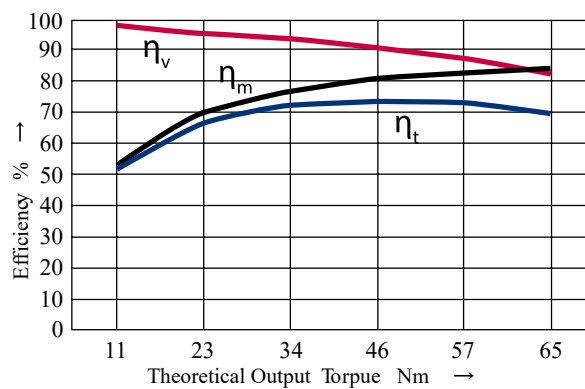

Operating Parameters

Overview

Maintain operating parameters within prescribed limits during all operating conditions. This section defines operating limits given in the table *Operating Parameters*.

Input / Output Speed

Minimum speed is the lowest input speed recommended during engine idle condition. Operating below minimum speed limits pump's ability to maintain adequate flow for lubrication and power transmission.

Rated speed is the highest input speed recommended at full power condition. Operating at or below this speed should yield satisfactory product life.

Maximum speed is the highest operating speed permitted. Exceeding maximum speed reduces product life and can cause loss of hydrostatic power and braking capacity. Never exceed the maximum speed limit under any operating conditions.

Operating conditions between rated speed and maximum speed should be restricted to less than full power and to limited periods of time. For most drive systems, maximum unit speed occurs during downhill braking or negative power conditions.

Warning

Unintended vehicle or machine movement hazard.

Exceeding maximum speed may cause a loss of hydrostatic drive line power and braking capacity. An independent braking system is required, redundant to the hydrostatic transmission, which is sufficient to stop and hold the vehicle or machine under all conditions of operation in the event of hydrostatic drive power loss.

System Pressure

System pressure is the differential pressure measured between the gage ports Ma and Mb. It is the dominant operating variable affecting hydraulic unit life. High system pressure, which results from high load, reduces expected life. Hydraulic unit fatigue life depends on speed and normal operating—or weighted average—pressure that you can only determine from a duty cycle analysis.

Maximum Working Pressure is the highest recommended application pressure. Maximum working pressure is not intended to be a continuous pressure. Propel systems with application pressures at, or below, this pressure should yield satisfactory unit life given proper component sizing.

Maximum pressure (peak) is the highest intermittent pressure allowed under any circumstances. Applications with applied pressures between maximum working and maximum intermittent require factory approval with complete application, duty cycle, and life expectancy analysis.

All pressure limits are differential pressures referenced to low loop (charge) pressure. Subtract low loop pressure from gauge readings to compute the differential.

Charge Pressure

The charge pressure setting listed in the technical specifications is based on the charge flow across the charge pressure relief valve at fluid temperature at 50°C [120°F].

Charge Inlet Pressure

Charge pump inlet conditions must be controlled in order to achieve expected life and performance. A continuous inlet vacuum of no less than 0.8 abs bar is recommended. Normal vacuums less than 0.7 abs bar would indicate inadequate inlet design or restricted filter.

Case Pressure

Under normal operating conditions, the maximum continuous case pressure must not exceed 0.3 bar (4PSI). Maximum allowable intermittent case pressure during cold start must not exceed 0.7 bar (10PSI).



Caution

Possible component damage or leakage

Operation with case pressure in excess of stated limits may damage seals, gaskets, and/or housings, causing external leakage. This condition may also affect performance since charge and system pressure are referenced to case pressure.

Hydraulic Fluids

Ratings and data are based on operating with hydraulic fluids containing inhibitors to prevent oxidation, rust, and foam. These fluids must possess good thermal and hydrolytic stability to prevent wear, erosion, and corrosion of the internal components.



Caution

Never mix hydraulic fluids of different types.

Temperature and Viscosity

Temperature and viscosity requirements must be concurrently satisfied. The data shown in the table *Fluid Specifications* on page 12, assume petroleum-based fluids are used.

The high temperature limits apply at the hottest point in the transmission, which is normally the motor case drain. The system should generally be run at or below the **rated temperature**. The **maximum temperature** is based on material properties and should never be exceeded.

Cold oil will generally not affect the durability of the transmission components, but it may affect the ability of oil to flow and transmit power; therefore temperatures should remain 16 °C [30 °F] above the pour point of the hydraulic fluid. The **minimum temperature** relates to the physical properties of component materials.

For maximum unit efficiency and bearing life the fluid viscosity should remain in the **recommended operating range**. The **minimum viscosity** should be encountered only during brief occasions of maximum ambient temperature and severe duty cycle operation. The maximum viscosity should be encountered only at cold start.

Heat exchangers should be sized to keep the fluid within these limits. Testing to verify that these temperature limits are not exceeded is recommended.

System Design Parameters

Fluid and Filtration

To prevent premature wear, it is imperative that only clean fluid enters the hydrostatic transmission circuit. Therefore an inlet filter better than $\beta_{20}=1.4$ is required in the charge pump inlet line. This filter should not have a bypass and should be changed regularly to ensure system reliability. The BD series hydrostatic transmission requires system filtration capable of maintaining fluid cleanliness at ISO 4406-1999 class 22/18/15 or better.

Reservoir

The BDU-10S is designed with optional integrated reservoir. A reservoir for BDU-10L larger than the 2 liter tank size is recommended. A reservoir for BDU-21L/H larger than the 5 liter tank size is recommended. The hoses or piping size is recommended to be larger than 3/8 inch normal tube OD.

Control Shaft Force

The BDU transmission is designed with direct displacement control (DDC). DDC can be located at either side of the housing. It provides a simple, positive method of control. Movement of the control shaft causes a proportional swashplate movement, thus varying the pump's displacement from full displacement in one direction to full displacement in the opposite direction.

The approximate maximum control torque necessary to rotate the control shaft is shown in the table of technical specifications. A stopper to prevent over-stroke is required at the end of maximum angle of control shaft. The control shaft force should be kept at or below the force in the table below.

Features	Unit	Product type & Frame	
		BDU-10S	BDU-21L
Allowable maximum force for control shaft	Nm	20	25

Independent Braking System

Vehicle propel applications may require a provision for non-linear control input to reduce control sensitivity near neutral. Damping or frictional forces may be necessary to produce the desired control feeling.

These units do not include any neutral centering device for the swashplate. It is necessary to provide a force in the machine's control system that will hold the swashplate at the desired angle. A "fail safe" which will return the swashplate to the neutral in the event of linkage failure is recommended.

 Warning


Unintended vehicle or machine movement hazard.

The loss of hydrostatic drive line power, in any mode of operation (forward, neutral, or reverse) may cause the system to lose hydrostatic braking capacity. You must provide a braking system, redundant to the hydrostatic transmission, sufficient to stop and hold the vehicle or machine in the event of hydrostatic drive power loss.

Features and Options


Shaft Load

The maximum allowable radial road of input shaft (R_e) is based on the maximum external moment and the distance from the housing surface to the input shaft. The limit of radial load of input shaft is shown the figure below:

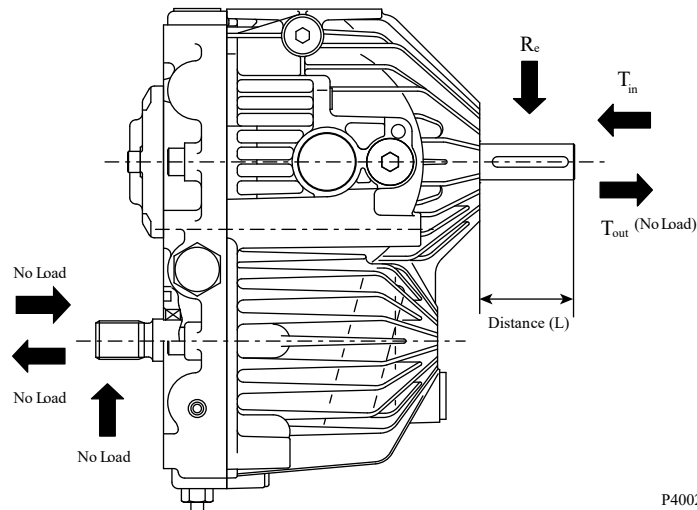

P400215

The maximum shaft thrust in (T_{in}) of input shaft is 18% of allowable radial road (R_e) of the input shaft. The shaft thrust out (T_{out}) of the input shaft should be no load. The radial and thrust load of the output shaft should be no load.

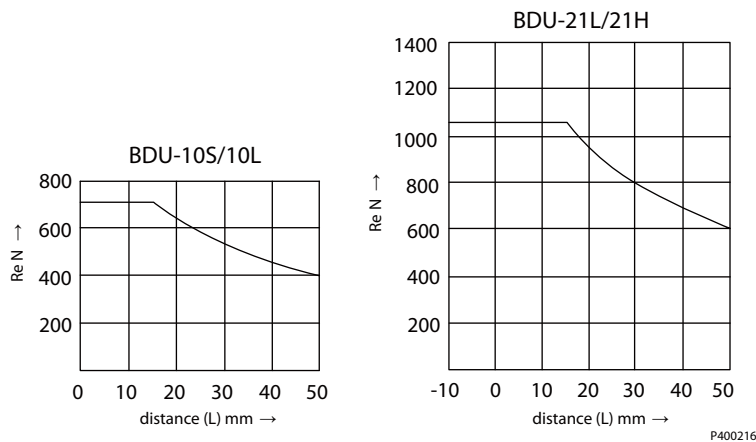


P400216

Shaft Options




The BDU transmissions are available with a variety of straight key, JIS Spline, JIS Serration, SAE Spline shaft for input shaft, PTO shaft and output shaft. Details are shown in the *Installation Drawings* on page 34.

Shaft Options : BDU-10S/10L


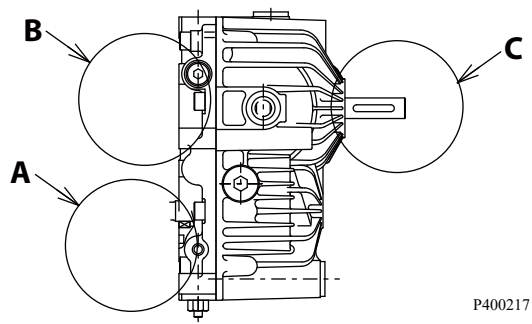


Shafts:
A = Output Shaft
B = PTO Shaft
C = Input Shaft


Output Shaft Options

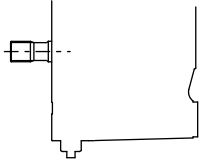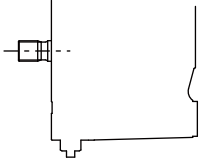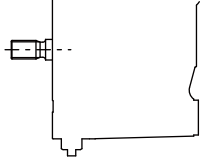	Output Shaft		Code	BDU-10S	BDU-10L
	JIS Spline	15 x 13 x 1.0	J13	●	●
		20 x 18 x 1.0	K18	●	●
	SAE Spline	32/64-16T	S16	●	●

PTO Shaft / Input Shaft Options

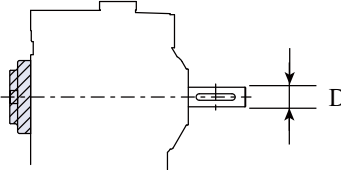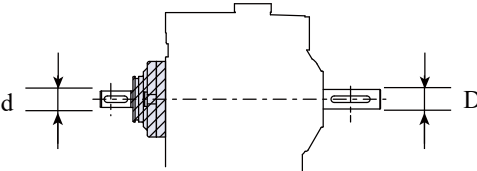
PTO Shaft		Input Shaft	Code	BDU-10S	BDU-10L
None		Straight-Keyed D = 15 mm	KB0	●	
			KB1		●
Straight d = 12.7 mm		Straight-Keyed D = 15 mm	PB1	●	
			PB3		●

PTO Shaft / Input Shaft Options (continued)

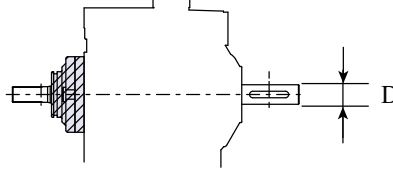PTO Shaft		Input Shaft	Code	BDU-10S	BDU-10L
JIS Serration 12 x 23 x 0.5		Straight-Keyed D = 15 mm	PB2	●	
			PB4		●




 This charge pump housing is applied only for BDU-10L.

Shaft Options : BDU-21L/21H



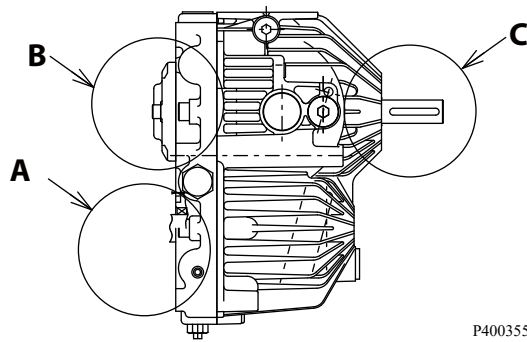
Shafts:

- A** = Output Shaft
B = PTO Shaft
C = Input Shaft

Output Shaft Options

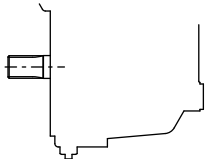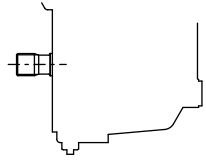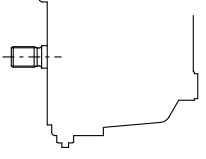	Output Shaft		Code	BDU-21L	BDU-21H
	JIS Spline	20 x 14 x 1.25	J14	●	●
		20 x 18 x 1.0	J18	●	●
	SAE Spline	32/64-22T	S22	●	●

PTO Shaft / Input Shaft Options

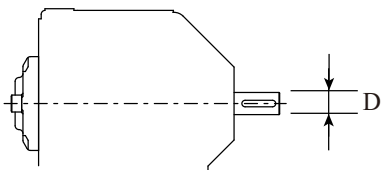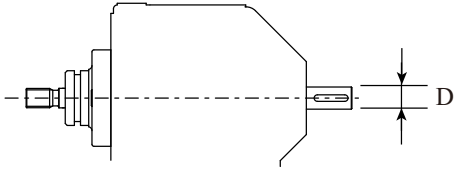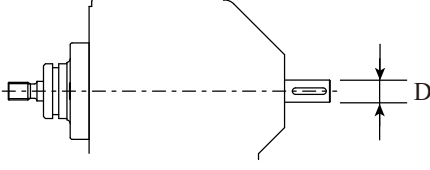PTO Shaft		Input Shaft	Code	BDU-21L	BDU-21H
None		Straight-Keyed D = 17 mm	KC1	●	
			KC2		●
JIS Spline 15 x 13 x 1.0		Straight-Keyed D = 17 mm	PC1	●	
			PC2		●
SAE Spline 32/64-16T		Straight-Keyed D = 17 mm	PC3	●	
			PC5		●


Bypass Valve

In some applications, it is desirable to move the vehicle over short distances at low speed without starting the engine. A bypass valve allows oil to be routed from one side of the pump/motor circuit to the other, thus allowing the motor to turn. The bypass valve must be fully closed during normal vehicle operation. BDU series transmissions utilize a spool-type bypass valve. The bypass valve plunger must be depressed manually to open the valve. This connects both sides of the main hydraulic circuit to the housing case and allows fluid to circulate without rotating the pump, prime mover and motor. A spring closes this valve on the 10L and 10S transmissions, while charge pressure closes the valve on the 21L and 21H transmissions.

High Pressure Relief Valve (hprv) and Charge Check (Overpressure Protection)

The BDU-21H transmission is available with a combination charge check and high pressure relief valve assembly. High pressure relief valves are available in a range of settings as shown in the *Model Code* on page 29. Individual port pressure settings may be specified. The high pressure relief valve settings are a differential pressure (referenced to charge pressure).


Check and Relief Valve for BDU-21H		
Option Code	Pressure setting	Orifice
	bar [psi]	
R0	210	-
R1	175	-
R2	140	-
RA	210	0.7 Twin
RB	210	0.85

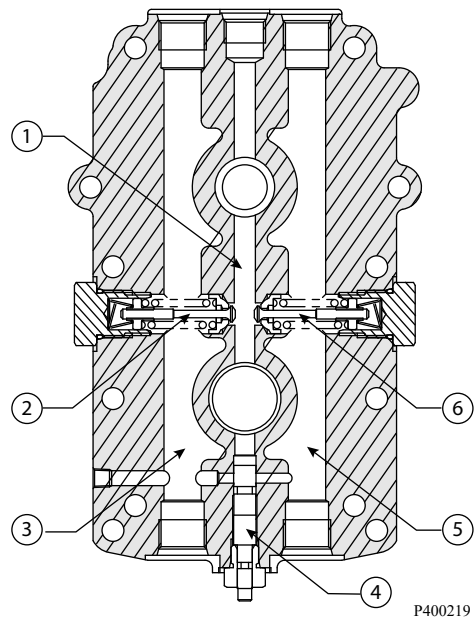

- 1. Charge circuit
- 2. Check and relief valve
- 3. Working loop (Main hydraulic circuit)
- 4. Bypass valve
- 5. Working loop (Main hydraulic circuit)
- 6. Check and relief valve

Charge Check Valve with Orifice

The BDU transmissions are equipped with charge check valves. In some applications, it is desirable to use charge check valve with orifice for expanding null dead band, giving both the safety measure to prevent the vehicle movement in the neutral position of the control shaft and easy adjustment of neutral position when connected to vehicle linkage. The orifice connects the working loop, which is a main hydraulic circuit, to a charge circuit. It always allows some internal leakage to ensure the expanding null dead band around neutral position of control shaft. However, it decreases the volumetric efficiency, particularly at high system pressure in the working loop. It is recommended to install the orifice in a specific working loop, which is pressurized when the vehicle moves in reverse. The orifice diameter improves the null dead band but decreases the volumetric efficiency. A cross section and characteristics are shown below. The charge check valves with orifice are available in a range of orifice diameters as shown in the *Model Code* on page 29.

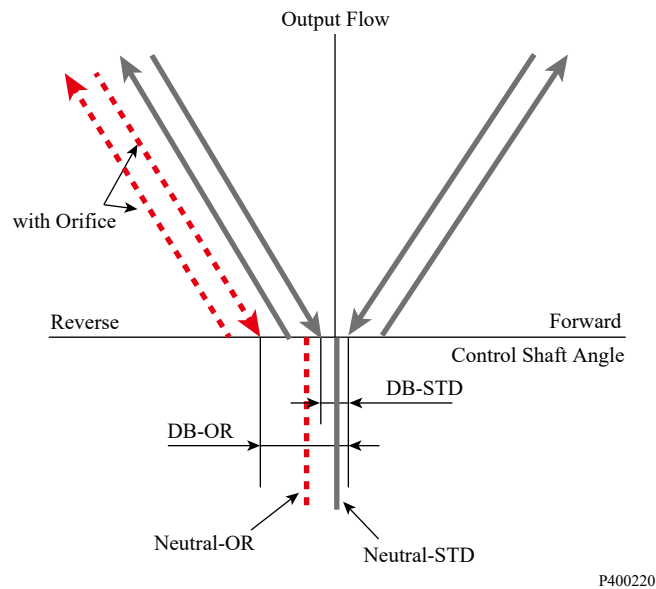











P400220

Input Speed: 3000min⁻¹, Oil Temp: 50 °C, No Load

Features	Unit	BDU-10S/10L/21L/21H					
		Without Orifice					
Deadband of Control Shaft Angle (DB-STD)	[degree]	Approx. 0.1					


Features	Unit	BDU-10S/10L		BDU-21L		BDU-21H	
		Orifice diameter [mm]					
		Ø 0.7	Ø 0.8	Ø 1.0	Ø 1.2	Ø 0.85	Ø 0.7 twin
Deadband of Control Shaft Angle (DB-OR)	[degree]	Approx. 0.5	Approx. 0.7	Approx. 0.5	Approx. 0.7	Approx. 0.35	Approx. 0.5

      Charge Check with Orifice

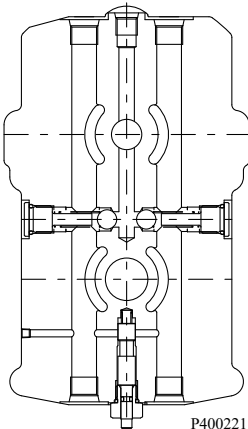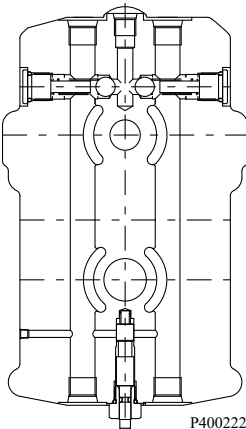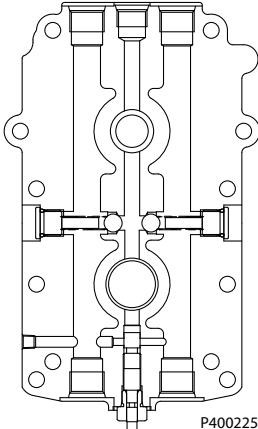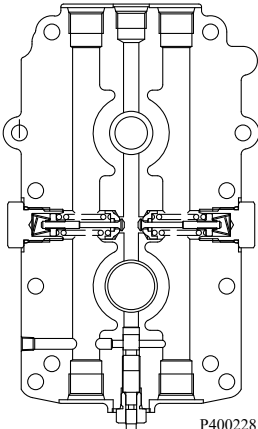BDU-10S BDU-10L	BDU-10L Check Valve  P400221	BDU-10S Check Valve  P400222	Check Valve (Ball) without Orifice  P400223 Check Valve with Orifice  Orifice P400224
	BDU-21L	 P400225	Check Valve (Ball) without Orifice  P400226 Check Valve with Orifice  Orifice P400227
BDU-21H		 P400228	Check & Relief without Orifice  P400229 Check & Relief with Orifice  Orifice P400230


Optional Integrated Reservoir

The BDU-10S is designed with optional integrated reservoir. The optional Integrated reservoir is shown in the figure on the right.

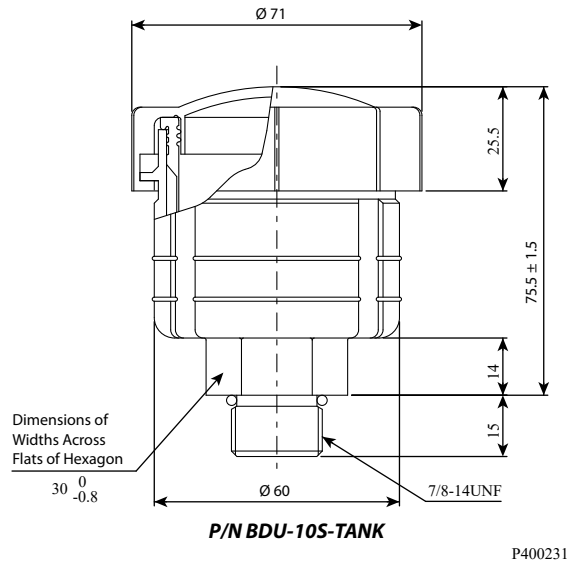

Filter

The BDU-10S is designed with Built-in filter. BDU-21L/H is designed with optional Integrated filter, which is shown in the figure on the right. The filter connection is designed with consideration given to the screwed type steel pipe fitting that is an option. An external filter is required in the charge pump inlet line for BDU- 10L. This filter should not have a bypass and should be changed regularly to ensure system reliability.

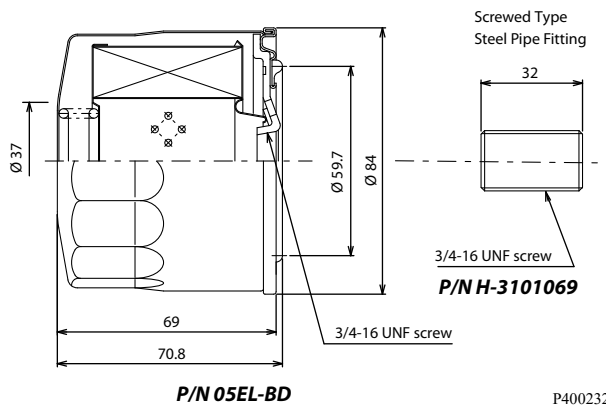


Fan

The operating temperature of the BDU transmission becomes hot when operated at a heavy load for long, continuous time. To avoid a reduction in the life of the BDU transmission or risking immediate failure, a cooling fan may be installed on the input shaft or external reservoir to be effective as heat exchanger may be installed. The BDU transmission is available with optional fan integrated with the belt drive device for the input shaft. The detailed outlines are shown in the *Installation Drawings* on page 34.

Optional Fan for Cooling

P/N	Rotation
H-1030826	CW
H-1030827E	CCW

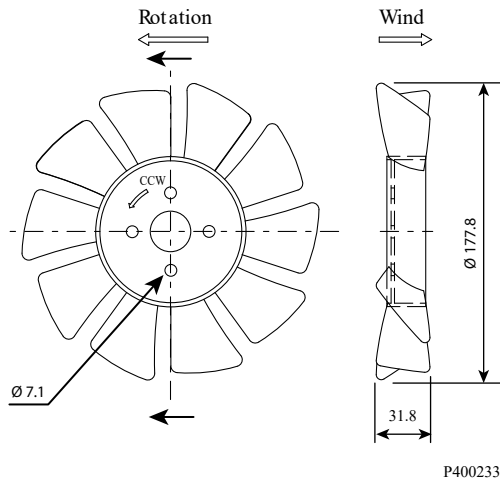

Optional Fan for Cooling

P/N	Rotation
H-1030826	CW
H-1030827E	CCW

Component Selection

Selecting the proper transmission for a vehicle begins with determining the maximum system pressure by using tractive effort of the vehicle and the maximum vehicle speed required. The transmission selected must meet both requirements.

Maximum System Pressure

Maximum operating system pressure should be calculated at maximum tractive effort condition. Maximum tractive effort condition is assumed at vehicle with maximum weight transfer from pushing or pulling implements at maximum grade of slope. First, calculate BDU motor torque by using the following equation:

Equation-1

$$MTQ_ME = \frac{PR_ME \times VW_ML \times LR \times 9.8}{FDR \times EFF_FD}$$

- MTQ_ME = Output torque of BDU motor at maximum tractive effort condition in Nm
- PR_ME = Pull Ratio at maximum tractive effort (See below)
- VW_ML = Gross vehicle weight with maximum loaded weight in kgf
- LR = Tire Radius in meters
- FDR = Transaxle Final Drive Ratio
- EFF_FD = Transaxle Final Drive Efficiency

The hydrostatic transmissions in many applications are used in conjunction with readily available transaxles. In order to meet both requirements of high output torque at operating mode and high speed at traveling mode, the transaxles with two kinds of shifts, Hi and Lo are used in some applications. In such transaxles, use Lo shift ratio as FDR in equation-1 and -4 to calculate maximum system pressure.

A useful parameter for determining tractive effort is "**Pull Ratio**". Pull Ratio is a dimensionless term that is the ratio of tractive effort to gross vehicle weight. It is generally constant for each class of vehicle. These values may be used when actual vehicle tractive efforts are not known. In a typical agriculture application for BDU application, Pull Ratio for the highest load mode can be calculated from the primary components of pull ratio: rolling resistance, grade motion resistance by a function of slope, machine function motion resistance and drive configuration motion resistance. In such cases, pull ratio is determined by using the following equation:

Equation-2

$$PR_ME = RR + GR + MF + DC$$

- RR = Rolling resistance. See SD Application manual
- GR = Motion resistance of Grade. See SD Application manual
- MF = Machine function motion resistance, See SD Application manual
- DC = Drive configuration motion resistance, See SD Application manual

Then, **maximum system pressure** can be calculated by using MTQ_ME and the following equation:

Equation-3

$$SPR_ME = \frac{MTQ_ME \times 62.87}{DP \times MEF_MO}$$

- SPR_ME = Maximum BDU system pressure operated at Maximum tractive effort mode in bar
- DP = Motor Displacement of selected BDU transmissions in cm³
- MEF_MO = Motor Mechanical Efficiency of BDU transmission in this mode

Select **appropriate BDU** size which will give SPR_ME, not to exceed the value of maximum system pressure allowed in the technical specification, because BDU is generally applied without system pressure relief valves.

If appropriate BDU size satisfies maximum system pressure, determine the BDU output speed at maximum tractive effort mode by using the following equation:

Equation-4

$$MSP_ME = \frac{VSP_ME \times FDR \times 9.55}{LR}$$

- MSP_ME = The BDU output speed at maximum tractive effort condition in min⁻¹ (rpm)
- VSP_ME = The vehicle speed requested for maximum tractive effort mode in m/s

Confirm the BDU output speed calculated to satisfy the maximum output speed (intermittent) in the technical specification.

Input Power

Calculate required input power of BDU by using the following equation:

Equation-5

$$PW_ME = MTQ_ME \times MSP_ME \times 0.000105 / OEF_BDU$$

- PW_ME = BDU Input power required for maximum tractive effort mode in kW
- OEF_BDU = BDU unit overall efficiency for this mode

If PW_ME is larger than Input power (Maximum) of selected BDU, VSP_ME should be limited to satisfy maximum BDU input power. If the calculated speed exceeds the technical specification, the transaxle final drive ratio or tire size may need to be changed.

Maximum vehicle speed is generally recommended in traveling mode. Calculate maximum BDU speed by using the following equation:

Equation-6

$$MSP_TR = \frac{VSP_TR \times FDR \times 9.55}{LR}$$

- MSP_TR = The BDU output speed for traveling mode in min⁻¹ (rpm)
- VSP_TR = The vehicle speed requested for traveling mode in m/s



Note

Use Hi shift ratio as FDR in Equation-6 if the Transaxle Final Drive has two shifts.

Confirm MSP_TR to satisfy the maximum output speed (intermittent) in the technical specification. If MSP_TR is not satisfied, FDR (Hi shift) may need to be changed. It is also necessary to determine the system pressure for traveling mode (SPR_TR) to satisfy maximum system pressure (intermittent) allowed in the technical specification. SPR_TR is calculated by using equation -1, -2 and -3 with parameters of traveling mode.

Calculate the required BDU input shaft speed to satisfy maximum BDU output shaft speed by using the following equation:

Equation-7

$$PSP_RIN = MSP_TR / VEF_BDU$$

- PSP_RIN = required BDU input shaft speed in min⁻¹ (rpm)
- VEF_BDU = BDU volumetric efficiency for this mode

Confirm BDU input shaft speed is larger than PSP_RIN.

Unit Life

The **unit life** of selected BDU transmissions should be determined by using average system pressure under overall operating modes, because vehicles generally operate in their maximum tractive effort mode for a small percentage of their life. If a duty cycle for a transmission is known, weighted average system pressure can be calculated and can estimate the life expectancy of the transmission selected. The duty cycle can be assumed for instances including several modes. Calculate weighted average system pressure by using the following equation:

Equation-8

$$SPR_{AV} = \sqrt[3]{\frac{((SPR_{ME})^3 \times T_{ME} + (SPR_{NE})^3 \times T_{NE} + (SPR_{TR})^3 \times T_{TR} + \dots)}{(T_{ME} + T_{NE} + T_{TR} + \dots)}}$$

- SPR_AV = weighted average system pressure. This is the mean pressure of the duty cycle in bar
- SPR_ME = the system pressure for maximum tractive effort mode and T_ME is its time in the duty cycle
- SPR_NE = the system pressure at the normal tractive effort which means with normal weight and at 0% Grade and T_NE is its time in the duty cycle
- SPR_TR = the system pressure for traveling mode and T_TR is its time in the duty cycle

If needed, define other system pressures at other operating conditions and add them to the equation.

The BDU Unit Life hours at weighted average pressure is determined by using the following equation:

Equation-9

$$LH = RH \times \left(\frac{SPR_{RH}}{SPR_{AV}} \right)^3 \times \left(\frac{3000}{PSP_{IN}} \right)$$

- LH = Unit Life hours of selected BDU at the duty cycle estimated
- SPR_RH = The system pressure at Rated Unit Life (See table A)
- PSP_IN = The input shaft speed of BDU unit. Normally, input shaft speed of BDU is constant

Confirm LH of selected BDU to satisfy the Life requirement. If LH is shorter than the requested specification, the next larger size transmission may be needed and the repeat the calculation for Component Selection on other BDU using Equation -1 through -9. Contact Danfoss for assistance in correct transmission selection.

Table A

Parameter	Unit	Frame			
		BDU-10S	BDU-10L	BDU-21L	BDU-21H
RH	hour	300	1000	1600	2500
SPR_RH	bar	70	70	70	70
BSP_OP	min ⁻¹	3000	3000	3000	3000

Model Code

BDU : Model Code (A - B - C - D - E)

BDU - **A** **B** **C** **D** **E** **F** **G** **H** **J** **K**

A - Displacement

Code	Description	10S	10L	21L	21H
10	10 cm ³	●	●		
21	21 cm ³			●	●

B - Design

Code	Description	10S	10L	21L	21H
S	Standard	●			
L	Long Life		●	●	
H	High Pressure				●

C - Rotation

Code	Description	10S	10L	21L	21H
W	Bi-directional rotation	●			
R	Clockwise rotation		●	●	●
L	Counter-Clockwise rotation		●	●	●

D - Contrl Arm Location

Code	Description	10S	10L	21L	21H
R	Right-hand side viewing from input shaft (pump located upside)	●	●	●	●
L	Left-hand side viewing from input shaft (pump located upside)	●	●	●	●

E - Output Shaft

Code	Description	10S	10L	21L	21H
J13	JIS Spline 15×13×1.0	●	●		
J14	JIS Spline 20×14×1.25			●	●
J18	JIS Spline 20×18×1.0			●	●
K18	JIS Spline 15×18×0.75	●	●		
S16	SAE Spline 32/64 - 16T	●	●		
S22	SAE Spline 32/64 - 22T			●	●

BDU : Model Code (F - G)

BDU - **A** **B** **C** **D** **E** **F** **G** **H** **J** **K**

F - Check & Relief Valve (Left-hand side viewing from Housing)

Code	Description	10S	10L	21L	21H
BB	Ball Check Valve	●	●	●	
00	Poppet-type Check Valve	●	●	●	
07	Check Valve w/dia = 0.7 orifice	●	●		
08	Check Valve w/dia = 0.8 orifice	●	●		
10	Check Valve w/dia = 1.0 orifice			●	
12	Check Valve w/dia = 1.2 orifice			●	
R0	Check and High Pressure Relief Valve 210 bar				●
R1	Check and High Pressure Relief Valve 175 bar				●
R2	Check and High Pressure Relief Valve 140 bar				●
RA	Check and High Pressure Relief Valve 210 bar w/dia=0.7 twin orifice				●
RB	Check and High Pressure Relief Valve 210 bar w/dia=0.85 orifice				●

G - Check & Relief Valve (Right-hand side viewing from Housing)

Code	Description	10S	10L	21L	21H
BB	Ball Check Valve	●	●	●	
00	Poppet-type Check Valve	●	●	●	
07	Check Valve w/dia = 0.7 orifice	●	●		
08	Check Valve w/dia = 0.8 orifice	●	●		
10	Check Valve w/dia = 1.0 orifice			●	
12	Check Valve w/dia = 1.2 orifice			●	
R0	Check and High Pressure Relief Valve 210 bar				●
R1	Check and High Pressure Relief Valve 175 bar				●
R2	Check and High Pressure Relief Valve 140 bar				●
RA	Check and High Pressure Relief Valve 210 bar w/dia=0.7 twin orifice				●
RB	Check and High Pressure Relief Valve 210 bar w/dia=0.85 orifice				●

BDU : Model Code (H - J - K)

BDU - **A** **B** **C** **D** **E** **F** **G** **H** **J** **K**

H - Input shaft / PTO shaft Configuration & Charge Pump Displacement

Code	Description	10S	10L	21L	21H
KBO	Straight-keyed D=15mm shaft / None & w/o Charge Pump	●			
KB1	Straight-keyed D=15mm shaft / None & w/1.9cm ³ Charge Pump		●		
KC1	Straight-keyed D=17mm shaft / None & w/2.1cm ³ Charge Pump			●	
KC2	Straight-keyed D=17mm shaft / None & w/3.1cm ³ Charge Pump				●
PB1	Straight-keyed D=15mm shaft /Straight 12.7 mm shaft & w/o Charge Pump	●			
PB2	Straight-keyed D=15mm shaft /JIS Serration 12 x 23 x 0.5 shaft & w/o Charge Pump	●			
PB3	Straight-keyed D=15mm shaft /Straight 12.6 mm shaft & w/2.4cm ³ Charge Pump		●		
PB4	Straight-keyed D=15mm shaft /JIS Serration 12 x 23 x 0.5 shaft & w/2.4cm ³ Charge Pump		●		
PC1	Straight-keyed D=17mm shaft /JIS Spline 15 x 13 x 1.0 shaft & w/2.1cm ³ Charge Pump			●	
PC2	Straight-keyed D=17mm shaft /JIS Spline 15 x 13 x 1.0 shaft & w/3.1cm ³ Charge Pump				●
PC5	Straight-Keyed D=17mm shaft /SAE Spline 32/64 -16T & w/2.1cm ³ Charge Pump			●	
PC6	Straight-Keyed D=17mm shaft /SAE Spline 32/64 -16T & w/3.1cm ³ Charge Pump				●

J - Bypass & Neutral Valve

Code	Description	10S	10L	21L	21H
A	w/Neutral Valve Pressure 35 bar w/dia=1.0 orifice			●	●
B	w/Bypass Valve	●	●	●	●

K - Special Hardware

Code	Description	10S	10L	21L	21H
NNN	None	●	●	●	●
WOL	Oil-filled in case	●			

Recommended Installation and Maintenance

Housing Installation

The center section of BDU transmission has 4 holes for fixing screws. The screws should be inserted in the holes and tightened to specifications. *Fitting Torque 1569 ~ 2058 N·cm

Shaft Installation

The input shaft of the BDU transmission should be connected to the prime mover by a belt drive device, sheave or coupling. When using a belt drive device, the radial load on the input shaft should not exceed the maximum allowable load shown in *Shaft Load* on page 17.

When installing the BDU motor shaft to the gearbox or to other devices directly, utilize the groove on the center section of the BDU transmission, which is located concentric to the motor shaft, to ensure the accuracy of concentricity. When using the coupling for connection of the shaft, ensure the accuracy of concentricity is kept in the region of ± 0.025 mm. Do not beat the coupling strongly into the shaft with a hammer. It is recommended the shaft to be lubricated when using a spline shaft.

Start Up Procedure

After installing the BDU transmission and corresponding pipeline connection, remove the case drain port plug from the housing. Fill the BDU transmission case with the recommended oil through the drain port.



Note

BDU-10S is filled with oil at the plant shipment.

Make sure the control shaft of the BDU transmission is set to the neutral position. The BDU transmission pump must be at zero position. Depress the bypass valve plunger manually to connect both side of the main hydraulic circuit to housing case. Allow the prime mover to turn at idling speed. Turn the control shaft and oil fills into main circuits. Stop depressing the bypass valve plunger. Then, the output shaft will start to turn. Check the oil tank or reservoir level and refill the oil to the proper level if necessary. Repeat the control shaft movement from full displacement in one direction to full displacement in the opposite direction. Oil should not contain air trapped in the oil during the initial operation.

Operation

Check all joints and connections for leaks, and check that the oil tank or reservoir level is proper at the time of first operation and every day. Start the prime mover turning in the neutral position of the control shaft of the BDU transmission.

Maintenance


If some water, dust or grease are mixed in, with the transmission oil, change to new recommended oil. Always keep at less than 0.1 % water in the transmission oil. It is recommended to change oil and filter every year or at the every 500 operating hours.

Packing and Transportation



Caution


When shipping or transporting the BDU, be sure to pack the unit so that the input shaft faces downward as shown right to avoid internal parts fall out. This is also recommended for long-term storage.

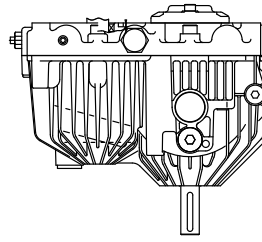

P400784

Installation Drawings

BDU-10S/10L : Ports and Dimensions

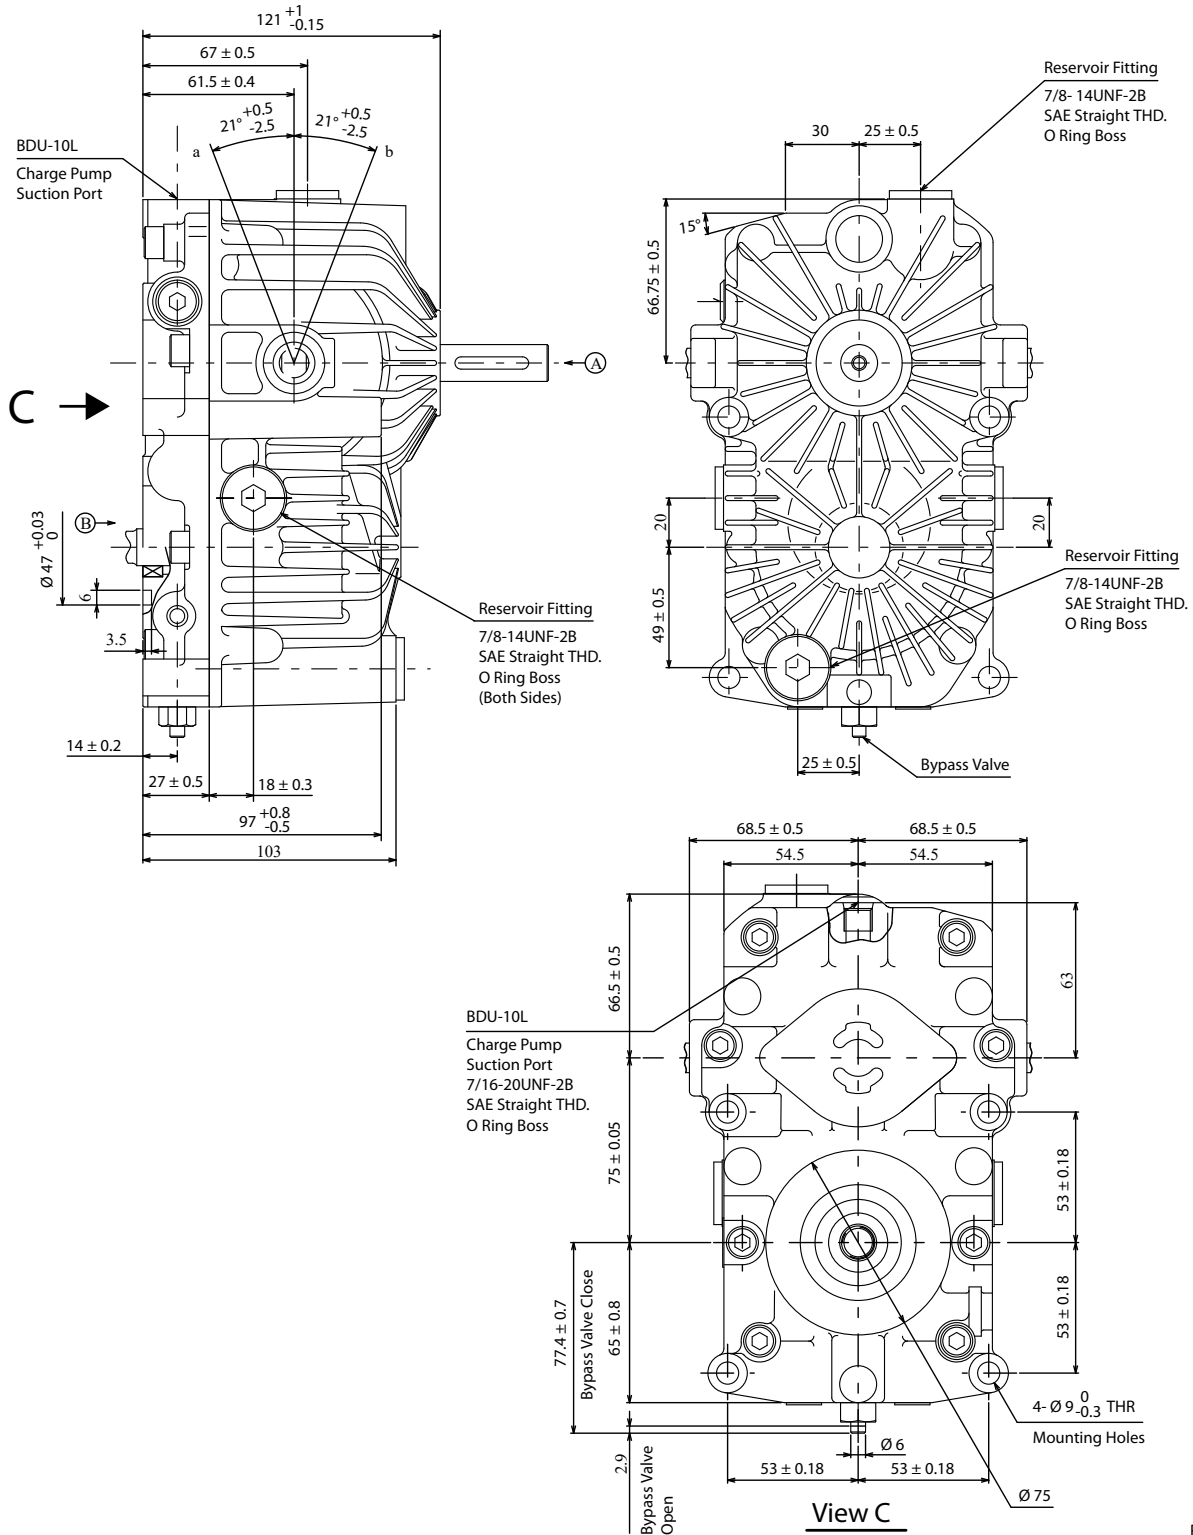


P400237


Option Code	R		L	
Input Rotation as Seen From A Direction	CW		CCW	
Control Shaft Rotation	a	b	a	b
Output Rotation as Seen From B Direction	CW	CCW	CCW	CW

The tightening torque to install HST is 1569 to 2058 N·cm.


BDU-10S/10L : Control Arm Location

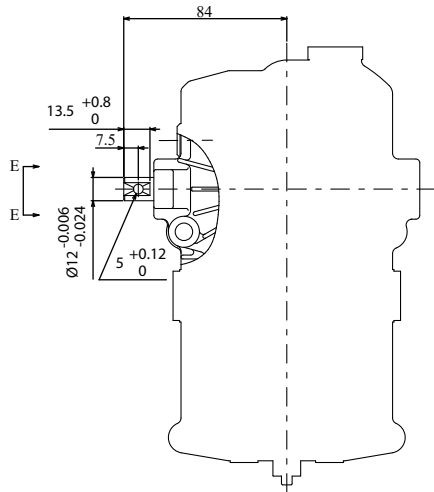

Left-hand side viewing from input shaft
(when pump located upside)
Option Code : L

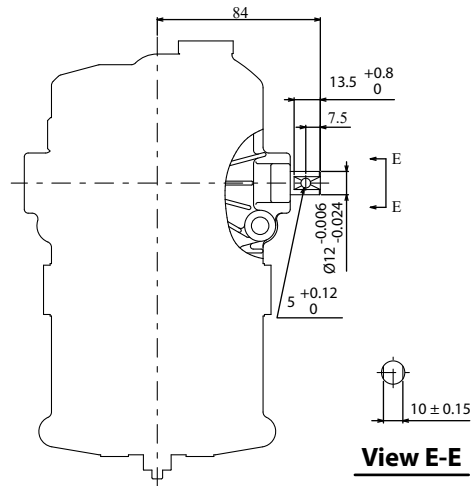

 
Right-hand side viewing from input shaft
(when pump located upside)
Option Code : R




View E-E

P400238


BDU-10S/10L : Motor Shaft

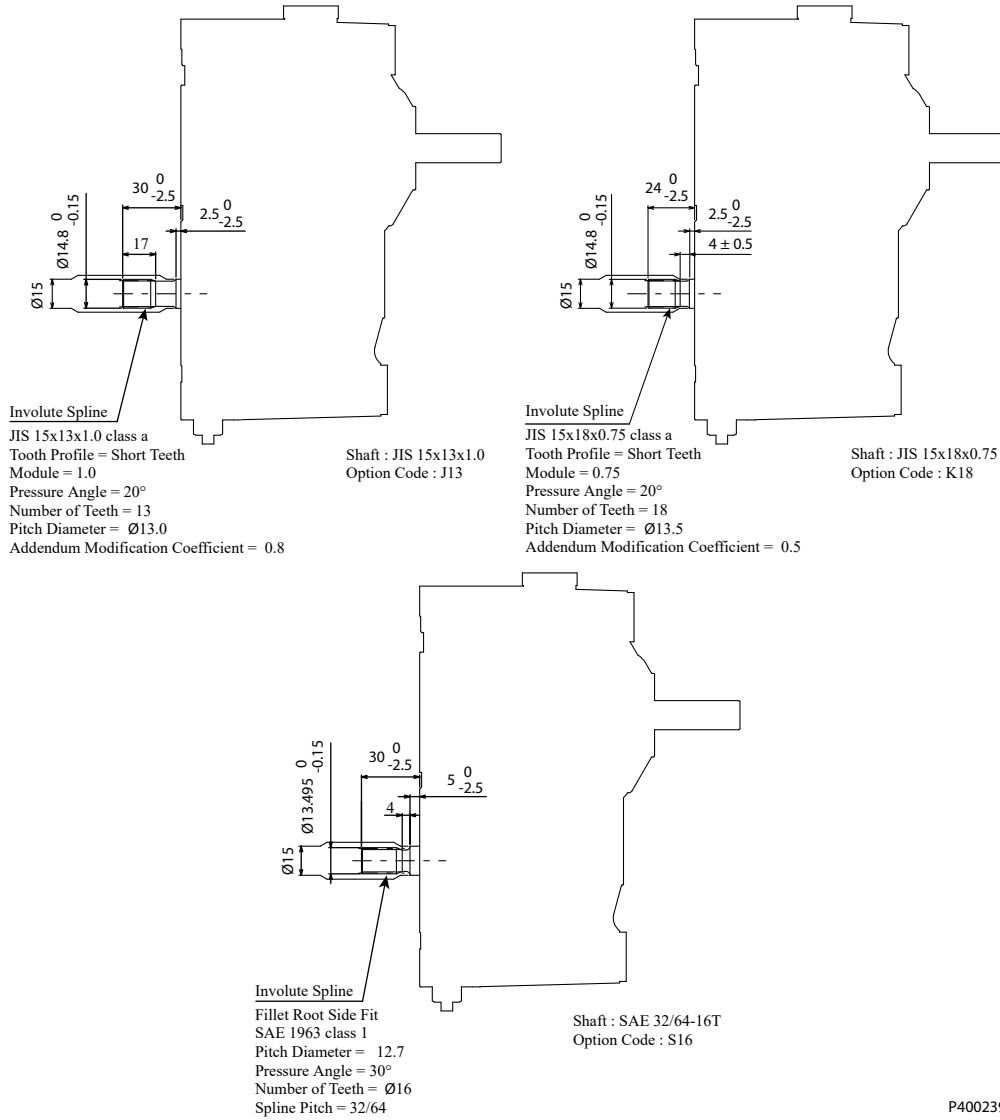


BDU-10S : Shaft Configuration

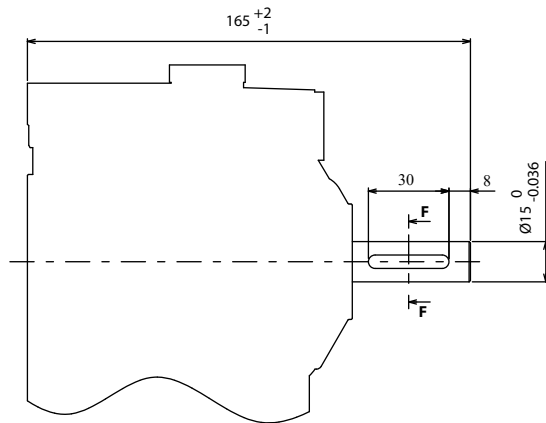



Pump Shaft : 15mm Straight Keyed
 PTO Shaft : None
 Charge Pump : None
 Option Code : KB

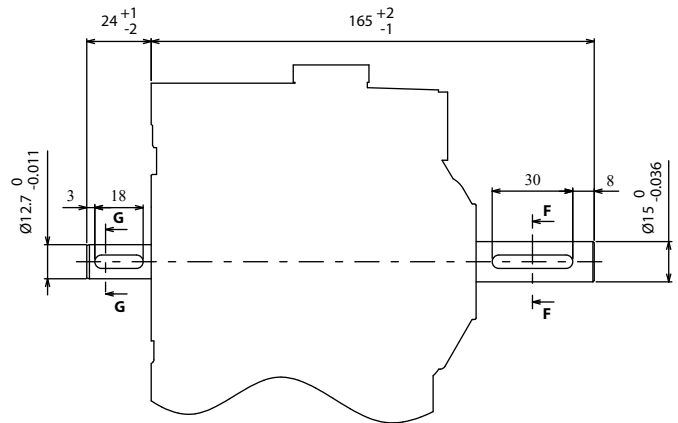

Pump Shaft : 15mm Straight Keyed
 PTO Shaft : 12.7mm Straight Keyed
 Charge Pump : None
 Option Code : PB1

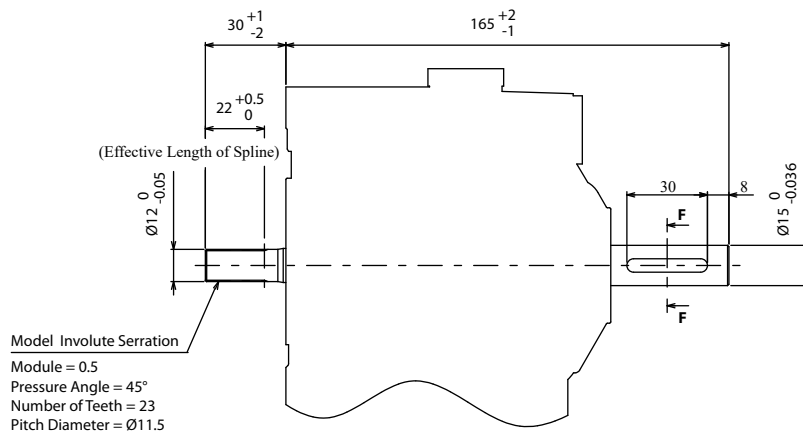


Pump Shaft : 15mm Straight Keyed
 PTO Shaft : Serration 12x23x0.5
 Charge Pump : None
 Option Code : PB2

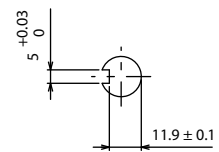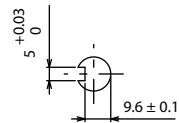
**Section F-F****Section G-G**

P400241



BDU-10L : Shaft Configuration and Charge Pumps Displacement

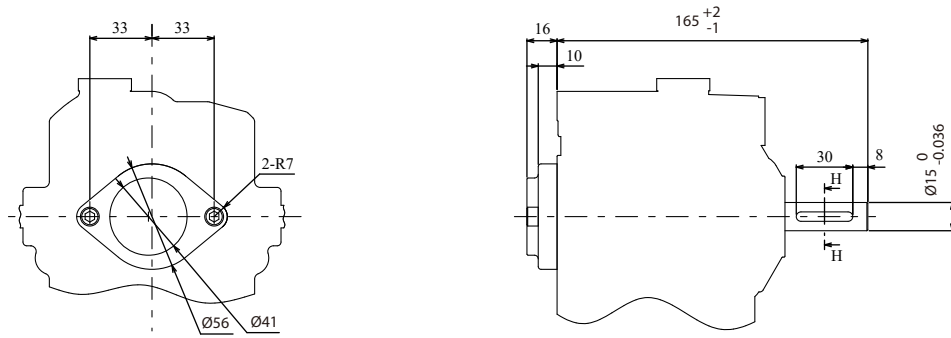


Pump Shaft : 15mm Straight Keyed
 PTO Shaft : None
 Charge Pump : 1.9 cc/rev
 Option Code : KB1

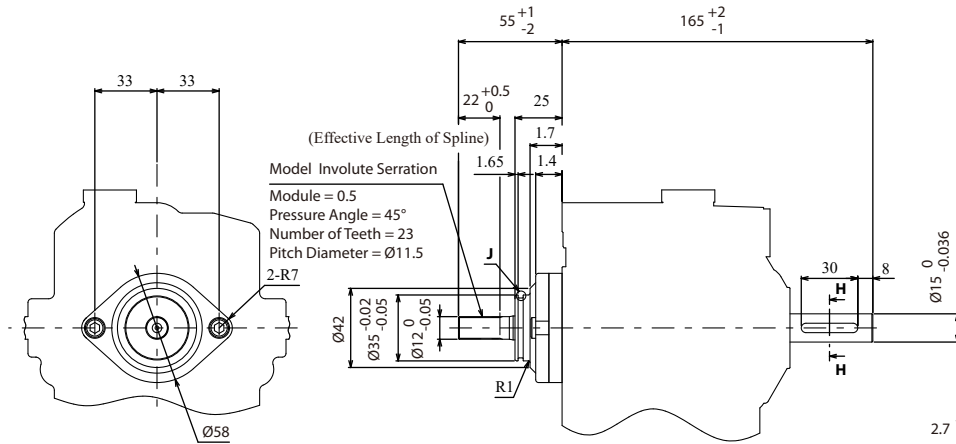


Pump Shaft : 15mm Straight Keyed
 PTO Shaft : Serration 12x23x0.5
 Charge Pump : 2.4 cc/rev
 Option Code : PB4

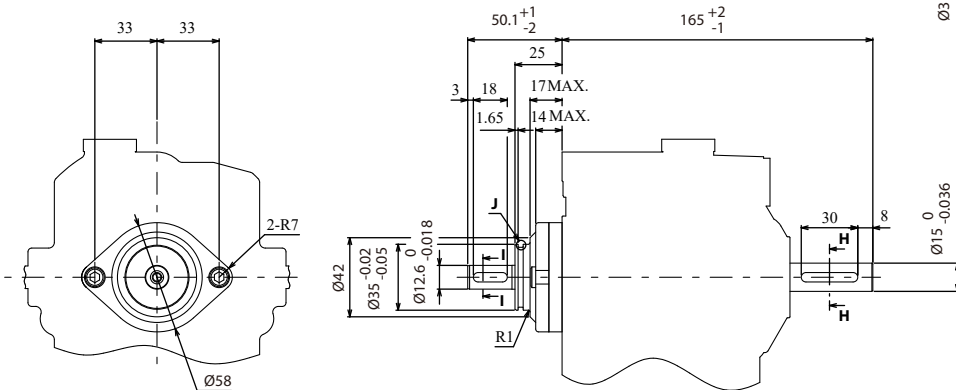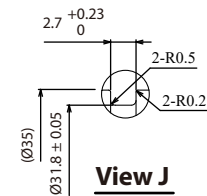

 Pump Shaft : 15mm Straight Keyed
 PTO Shaft : 12.7mm Straight Keyed
 Charge Pump : 2.4 cc/rev
 Option Code : PB3




Section I-I

 

Section H-H

P400240

BDU-21L/21H : Ports and Dimensions

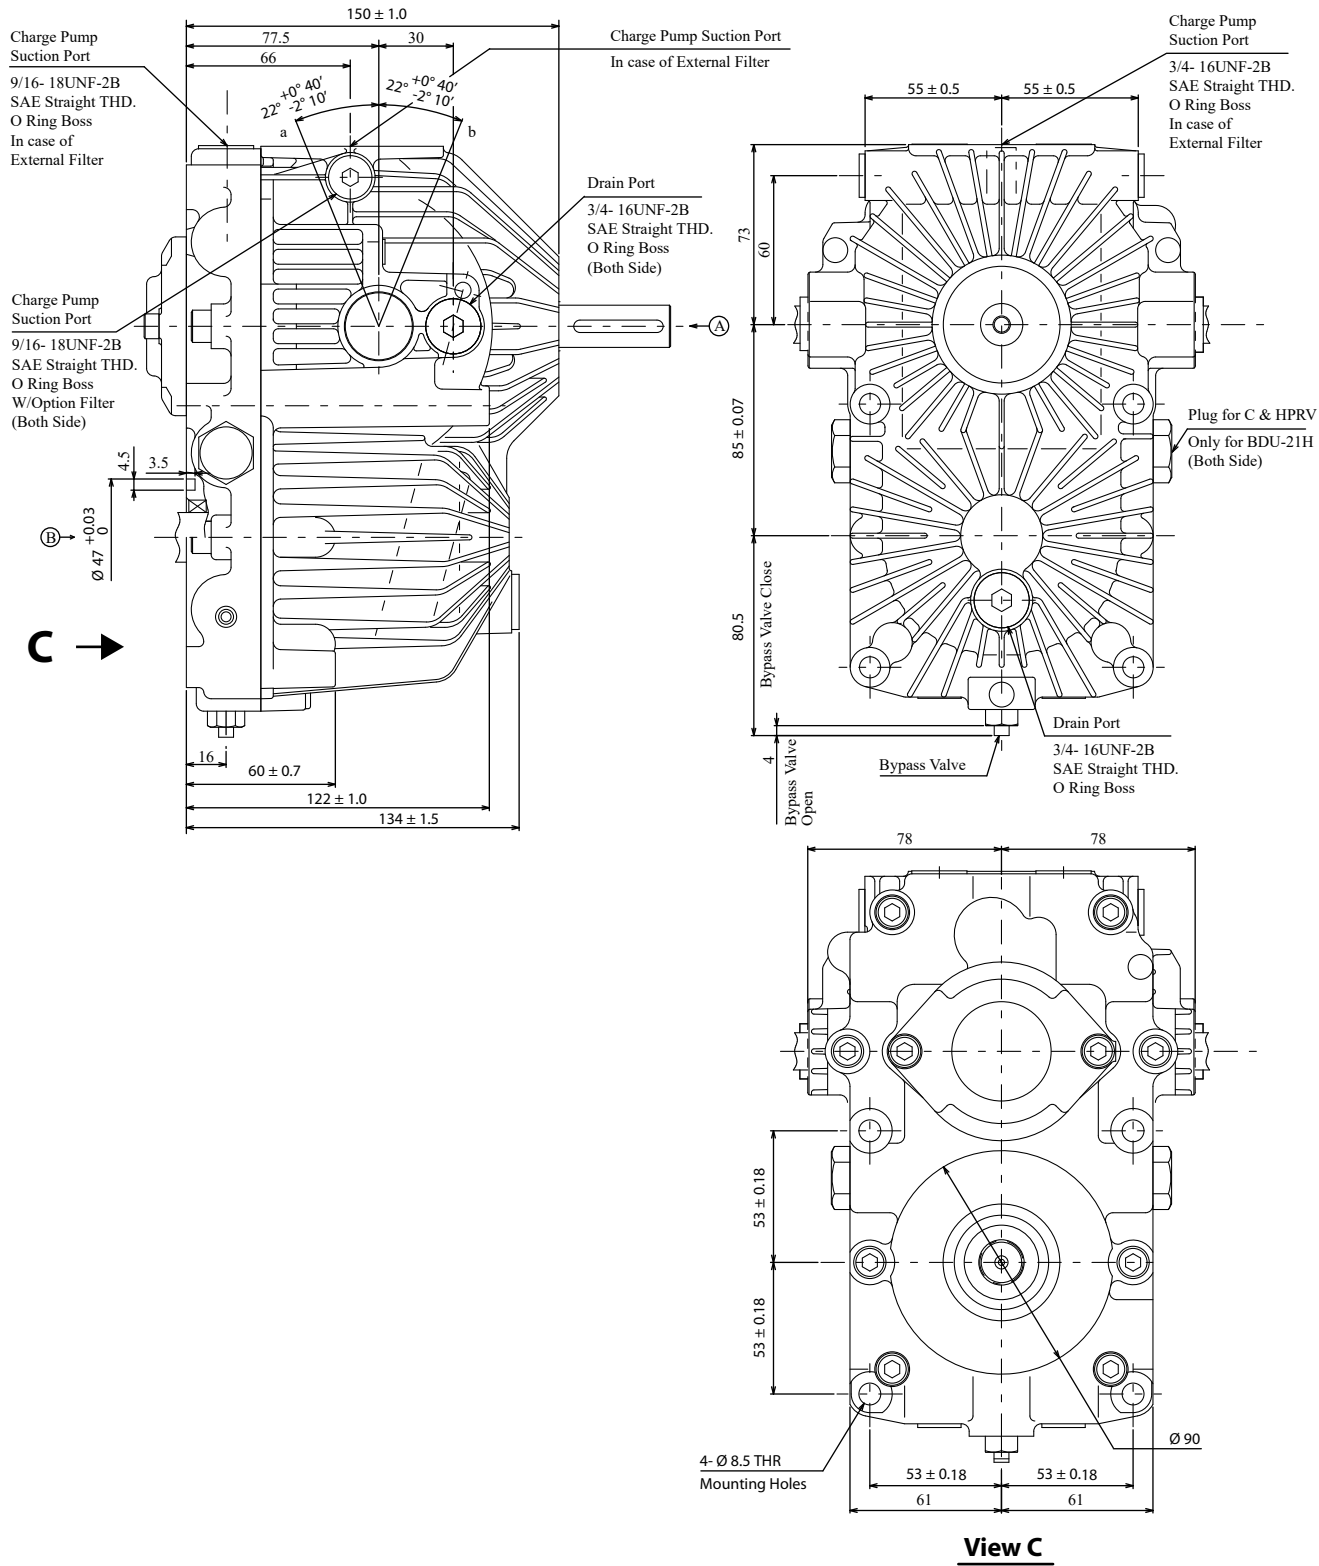


P400243


Option Code	R		L	
Input Rotation as Seen From A Direction	CW		CCW	
Control Shaft Rotation	a	b	a	b
Output Rotation as Seen From B Direction	CCW	CW	CW	CCW

The tightening torque to install HST is 1569 to 2058 N·cm.

BDU-21L/21H : Control Arm Location

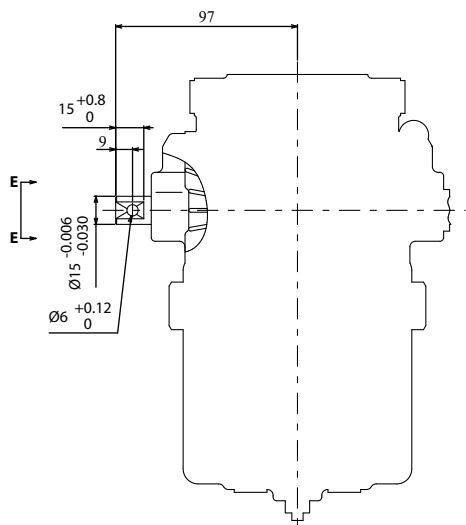



Left-hand side viewing from input shaft
(when pump located upside)
Option Code : L

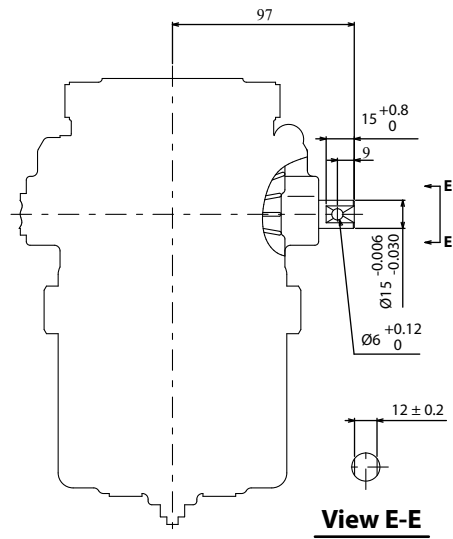

Right-hand side viewing from input shaft
(when pump located upside)
Option Code : R



P400242

BDU-21L/21H : Motor Shaft

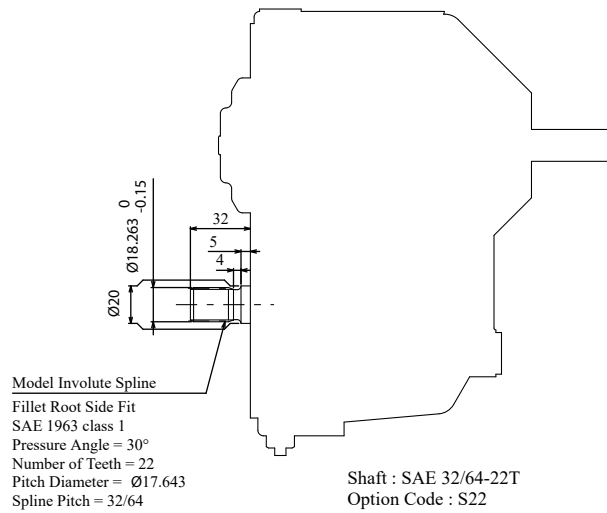
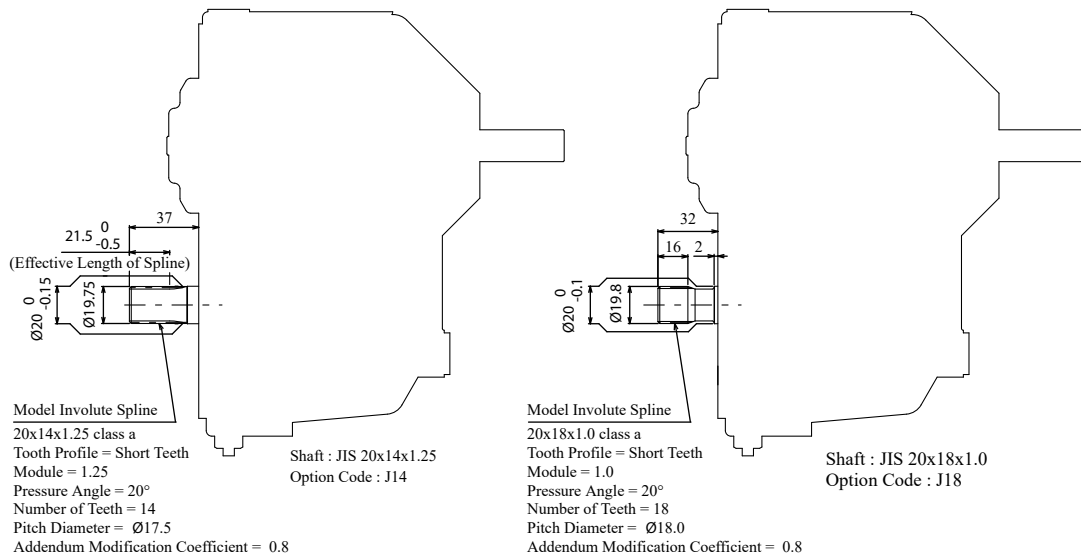


P400244



BDU-21L/21H : Shaft Configuration and Charge Pump Displacement

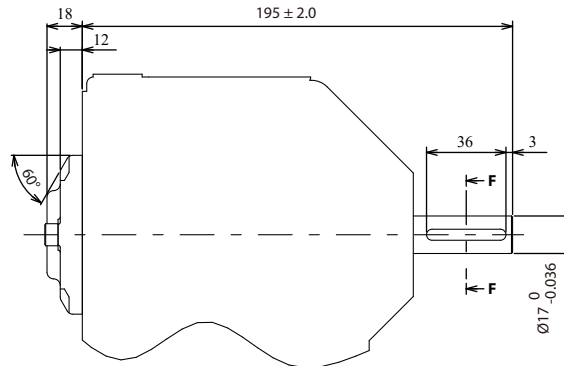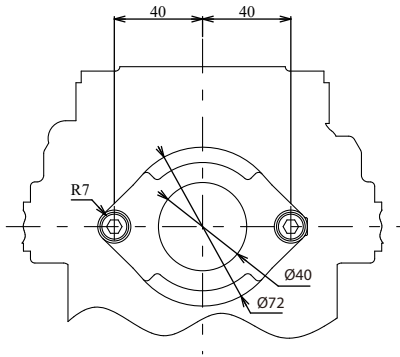

Pump Shaft : 17mm Straight Keyed (Key Length 36mm)
 PTO Shaft : None
 Charge Pump : 3.1cc/rev (for 21H)
 Option Code : KC2

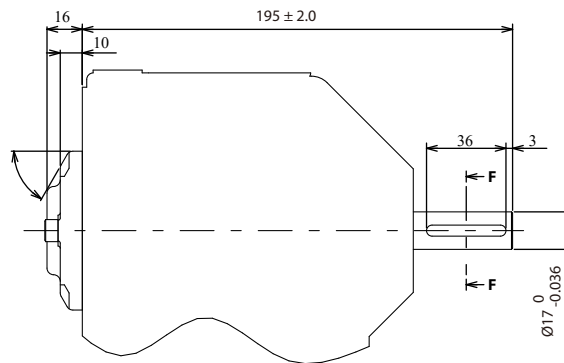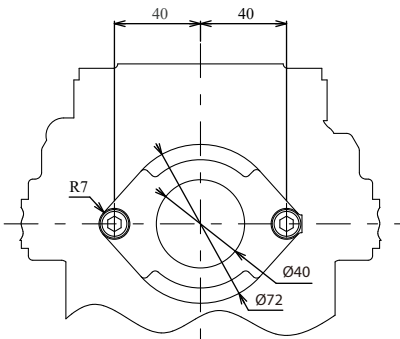


Pump Shaft : 17mm Straight Keyed (Key Length 36mm)
 PTO Shaft : None
 Charge Pump : 2.1cc/rev (for 21L)
 Option Code : KC1

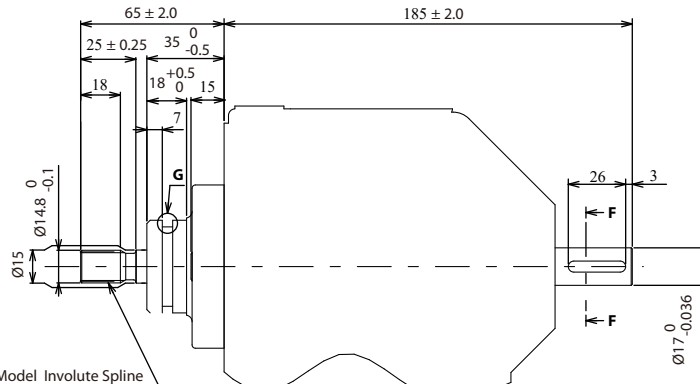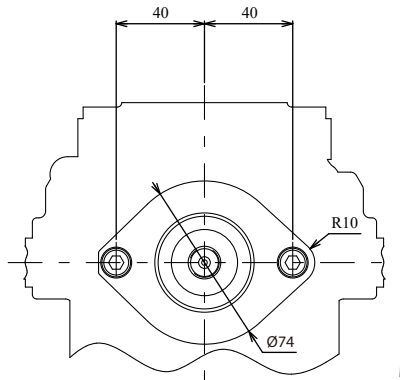


Model Involute Spline
 JIS 15x13x1.0 Class a
 Tooth Profile = Short Teeth
 Module = 1.0
 Pressure Angle = 20°
 Number of Teeth = 13
 Pitch Diameter = Ø13.0
 Addendum Modification
 Coefficient = 0.8

 Pump Shaft : 17mm Straight Keyed (Key Length 26mm)
 PTO Shaft : Involute Spline JIS 15x13x1.0
 Charge Pump : 2.1cc/rev (for 21L), 3.1 cc/rev (for 21H)
 Option Code : PC1 (2.1cc/rev), PC2(3.1 cc/rev)




Section F-F

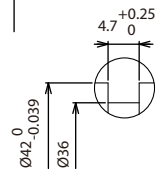


View G-G

P400245

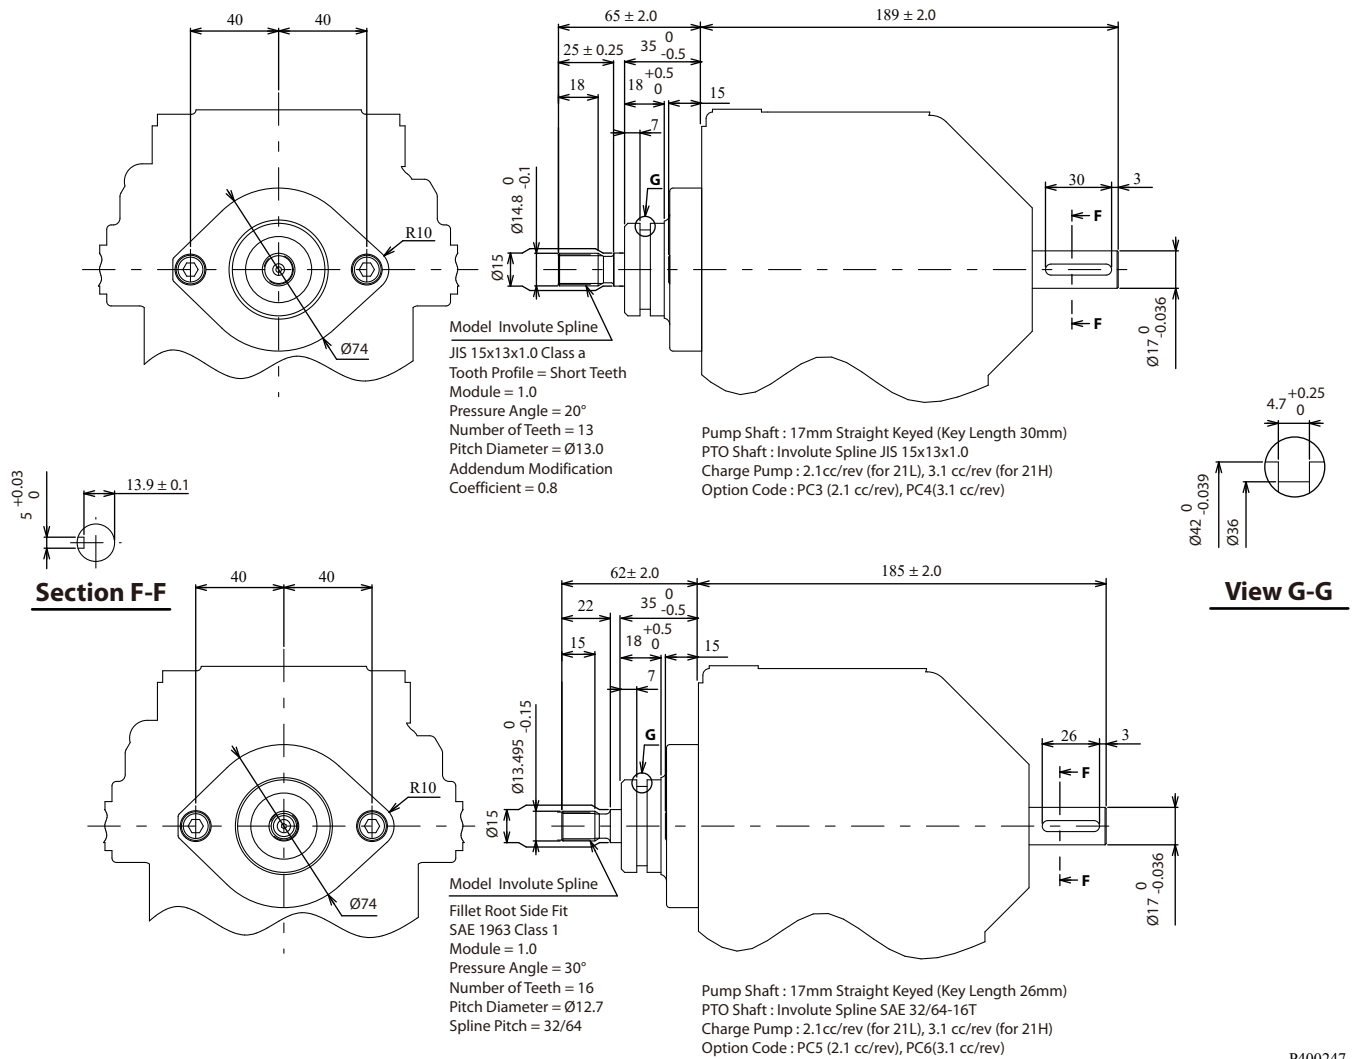

P400247

Optional Fan

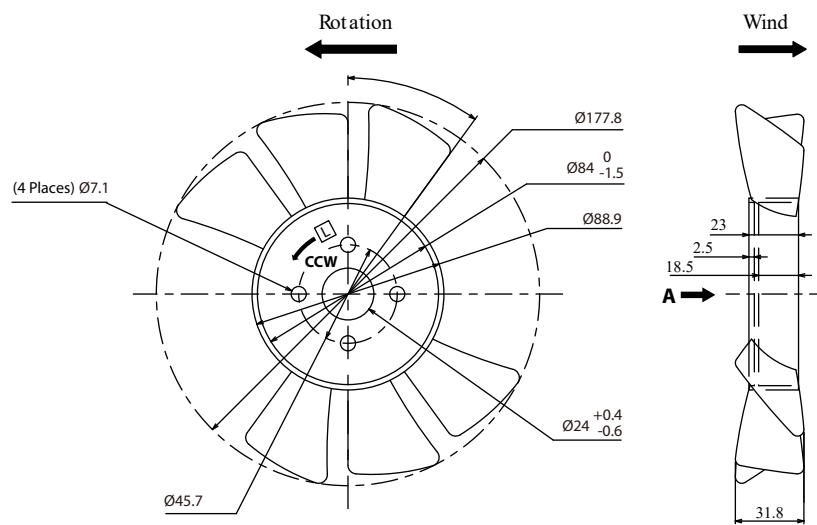

P400248



Hydro-Gear

www.hydro-gear.com

Daikin-Sauer-Danfoss

www.daikin-sauer-danfoss.com

Explore our solutions at danfoss.com.

Additional product literature is available at powersource.danfoss.com.

Danfoss
Power Solutions (US) Company
2800 East 13th Street
Ames, IA 50010, USA
Phone: +1 515 239 6000

Danfoss
Power Solutions GmbH & Co. OHG
Krokamp 35
D-24539 Neumünster, Germany
Phone: +49 4321 871 0

Danfoss
Power Solutions ApS
Nordborgvej 81
DK-6430 Nordborg, Denmark
Phone: +45 7488 2222

Danfoss
Power Solutions Trading
(Shanghai) Co., Ltd.
Building #22, No. 1000 Jin Hai Rd
Jin Qiao, Pudong New District
Shanghai, China 201206
Phone: +86 21 2080 6201

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed.
All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.