

Installation Guide

ECL Comfort 210 / 310, application A217 / A317



1.0 Table of Contents

| | | | |
|---|-----------|--|-----------|
| 1.0 Table of Contents | 1 | 6.0 Common controller settings..... | 75 |
| 1.1 Important safety and product information..... | 2 | 6.1 Introduction to 'Common controller settings' | 75 |
| 2.0 Installation | 4 | 6.2 Time & Date..... | 76 |
| 2.1 Before you start | 4 | 6.3 Holiday | 77 |
| 2.2 Identifying the system type..... | 8 | 6.4 Input overview | 79 |
| 2.3 Mounting | 13 | 6.5 Log | 80 |
| 2.4 Placing the temperature sensors..... | 16 | 6.6 Output override..... | 81 |
| 2.5 Electrical connections..... | 18 | 6.7 Key functions | 82 |
| 2.6 Inserting the ECL Application Key | 37 | 6.8 System | 83 |
| 2.7 Check list | 42 | 7.0 Miscellaneous..... | 85 |
| 2.8 Navigation, ECL Application Key A217 / A317 | 43 | 7.1 Frequently asked questions..... | 85 |
| 3.0 Daily use | 47 | 7.2 Definitions | 87 |
| 3.1 How to navigate | 47 | | |
| 3.2 Understanding the controller display | 48 | | |
| 3.3 What do the symbols mean?..... | 50 | | |
| 3.4 Monitoring temperatures and system components | 51 | | |
| 3.5 Influence overview | 52 | | |
| 3.6 Manual control | 53 | | |
| 3.7 Schedule | 54 | | |
| 4.0 Settings overview | 55 | | |
| 5.0 Settings, circuit 1 | 57 | | |
| 5.1 Tank temperature..... | 57 | | |
| 5.2 Return limit | 60 | | |
| 5.3 Flow / power limit | 62 | | |
| 5.4 Control parameters..... | 65 | | |
| 5.5 Application | 67 | | |
| 5.6 Anti-bacteria..... | 71 | | |
| 5.7 Alarm | 73 | | |

Installation Guide ECL Comfort 210 / 310, application A217 / A317

1.1 Important safety and product information

1.1.1 Important safety and product information

This Installation Guide is associated with ECL Application Key A217 (order code no. 087H3807).

The A217 Key contains two sets of applications: one set (A217.1 / A217.2) and another set (A317.1 / A317.2).

The functions can be realized in:
ECL Comfort 210 (A217) for simple solutions or
ECL Comfort 310 (A217 / A317) for advanced solutions, e.g. M-bus, Modbus and Ethernet (Internet) communication.

The applications A217 / A317 comply with ECL Comfort controllers 210 / 310 as of software version 1.11 (visible at start-up of the controller and in 'Common controller settings' in 'System').

Additional documentation for ECL Comfort 210 and 310, modules and accessories is available on <http://den.danfoss.com/>.



Safety Note

To avoid injury of persons and damages to the device, it is absolutely necessary to read and observe these instructions carefully.


Necessary assembly, start-up, and maintenance work must be performed by qualified and authorized personnel only.

The warning sign is used to emphasize special conditions that should be taken into consideration.



Automatic update of controller software:

The software of the controller is updated automatically when the key is inserted (as of controller version 1.11). The following animation will be shown when the software is being updated:

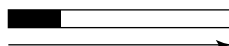

Progress bar



This symbol indicates that this particular piece of information should be read with special attention.



As this Installation Guide covers several system types, special system settings will be marked with a system type. All system types are shown in the chapter: 'Identifying your system type'.



°C (degrees Celsius) is a measured temperature value whereas K (Kelvin) is a number of degrees.



The ID no. is unique for the selected parameter.

| Example | First digit | Second digit | Last three digits |
|---------|-------------|--------------|-------------------|
| 11174 | 1 | 1 | 174 |
| | - | Circuit 1 | Parameter no. |
| 12174 | 1 | 2 | 174 |
| | - | Circuit 2 | Parameter no. |

If an ID description is mentioned more than once, it means that there are special settings for one or more system types. It will be marked with the system type in question (e.g. 12174 - A266.9).



Disposal Note

This product should be dismantled and its components sorted, if possible, in various groups before recycling or disposal.

Always follow the local disposal regulations.

2.0 Installation

2.1 Before you start

The two applications, **A217.1 / A317.1** are almost identical. However, A317.1 has some extra functions which are described separately.

The applications A217.1 / A317.1 are very flexible. These are the basic principles:

Domestic Hot Water (DHW):

By means of a week schedule (up to 3 'Comfort' periods / day), the DHW circuit can be in 'Comfort' or 'Saving' mode (two different temperature values for the desired DHW temperature at S6).

The heating / charging temperature sensor S3 is the most important sensor.

If the measured DHW temperature (S6) gets lower than the desired DHW temperature, the DHW heating / charging pump (P1) is switched ON.

The motorized control valve (M1) is controlled in order to maintain the heating / charging temperature at S3. This temperature is typically 5–10 degrees higher than the desired DHW temperature. A max. value can be set.

DHW tank with 1 temperature sensor (S6):
If the measured DHW temperature (S6) gets higher than the desired DHW temperature, the DHW heating / charging pump (P1) is switched OFF. The post-run time can be set.

DHW tank with 2 temperature sensors (S6 and S8):
If the measured DHW temperature (S6) gets higher than the desired DHW temperature and the lower temperature (at S8) gets higher than the cut-out temperature, the DHW heating / charging pump (P1) is switched OFF. The post-run time can be set.

In charging applications the DHW circulation can be through the DHW tank (connection A) or through the heat-exchanger (connection B).

The solution with connection A results in closing of the motorized control valve after the DHW tank charging procedure.
The solution with connection B is used to compensate for the heat loss in the DHW circulation pipe. Furthermore, after DHW tank charging, the circulation temperature (at S3) is controlled according to the desired DHW temperature.

The return temperature (S5) to the district heating supply should not be too high. If so, the desired charging temperature can be adjusted (typically to a lower value), thus resulting in a gradual closing of the motorized control valve.

In boiler-based heating supply the return temperature should not be too low (same adjustment procedure as above).


The supply temperature, S2, is used for adjusting the proportional band (Xp) in order to give a stable temperature control.

An anti-bacteria function is available for activation on selected days of the week.

The outdoor temperature sensor S1 is used to protect the circulation circuit against frost.

The DHW circulation pump (P3) has a week schedule for up to 3 ON-periods per day.

Typical A217.1. / A317.1 application:

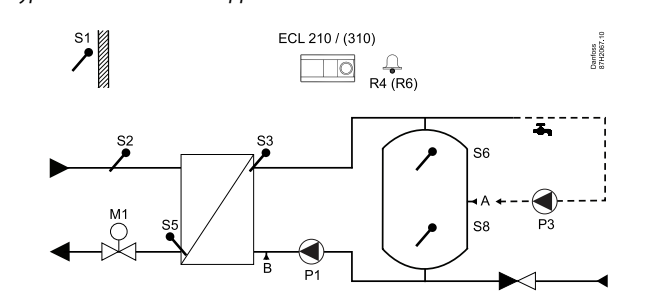

The shown diagram is a fundamental and simplified example and does not contain all components that are necessary in a system.

All named components are connected to the ECL Comfort controller.

List of components:

- S1 Outdoor temperature sensor
- S2 Supply temperature sensor
- S3 Charging temperature sensor
- S5 Return temperature sensor
- S6 DHW tank temperature sensor, upper
- S8 DHW tank temperature sensor, lower
- P1 DHW charging pump (DHW heating pump)
- P3 DHW circulation pump
- M1 Motorized control valve
- R4 Relay output, alarm, ECL Comfort 210
- (R6) Relay output, alarm, ECL Comfort 310

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Application A217.1 (used in ECL Comfort 210) / A317.1 (used in ECL Comfort 310) in general:

A Remote Control Unit, the ECA 30, can be connected in order to control the ECL controller remotely.


A connected flow or energy meter (in ECL Comfort 210 it is based on pulse signals and in ECL Comfort 310 based on M-bus signal) can limit the flow or energy to a set maximum.

Unused input can, by means of an override switch, be used to override the schedule to a fixed 'Comfort' or 'Saving' mode.


Modbus communication to a SCADA system can be established. In ECL Comfort 310 the M-bus data can furthermore be transferred to the Modbus communication.

Alarm relay (in ECL Comfort 210 it is R4 and in ECL Comfort 310 R6) can be activated if the actual flow temperature at S3 differs from the desired DHW charging temperature.


A217.1 / A317.1 example a:

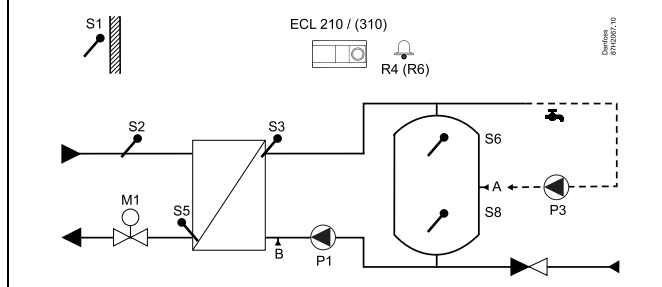


A217.1 / A317.1 example b:

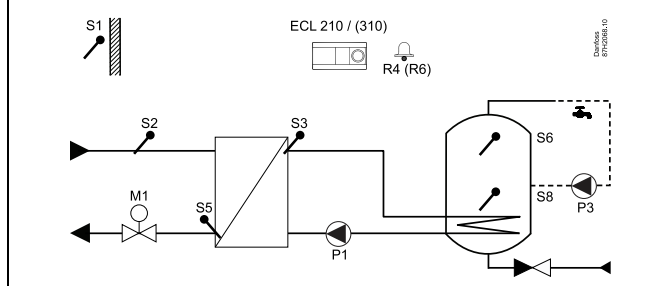

A217.1 / A317.1 example c:

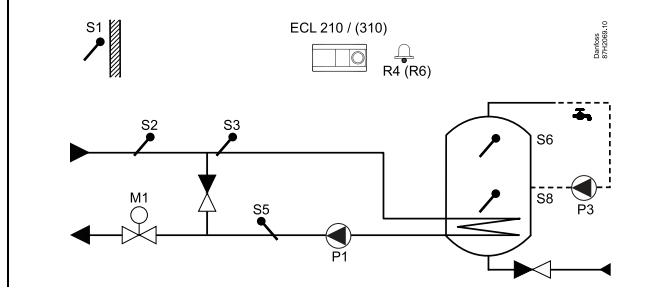

A217.1 / A317.1 example d:

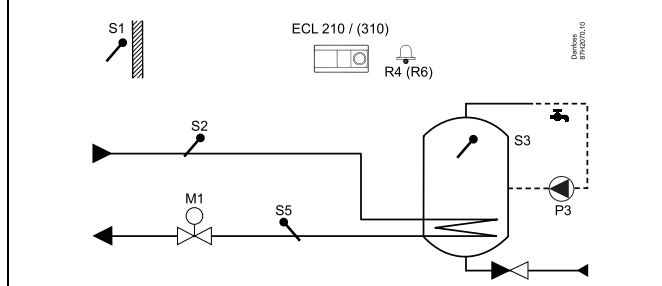

Installation Guide ECL Comfort 210 / 310, application A217 / A317

The two applications, **A217.2 / A317.2** are almost identical. However, A317.2 has some extra functions which are described separately.

The applications A217.2 / A317.2 are very flexible. These are the basic principles:

Domestic Hot Water (DHW):

By means of a week schedule (up to 3 'Comfort' periods / day), the DHW circuit can be in 'Comfort' or 'Saving' mode (two different temperature values for the desired DHW temperature at S6).

The DHW heating temperature sensor S3 and the charging temperature sensor S4 are the most important sensors.

If the measured DHW temperature (S6) gets lower than the desired DHW temperature, the DHW heating pump (P1) is switched ON. The motorized control valve (M1) is controlled in order to maintain the DHW heating temperature at S3. The DHW heating temperature is determined by the desired DHW charging temperature at S4.

When the DHW heating temperature is reached, the DHW charging pump P2 is switched ON.

If the DHW charging temperature at S4 can not be reached, the ECL controller gradually increases the desired DHW heating temperature at S3 in order to obtain the charging temperature. A max. value can be set.

The DHW charging temperature at S4 is typically 5–10 degrees higher than the desired DHW temperature.

DHW tank with 1 temperature sensor (S6):

If the measured DHW temperature (S6) gets higher than the desired DHW temperature, the DHW heating pump (P1) and the DHW charging pump (P2) are switched OFF. The post-run time can be set.

DHW tank with 2 temperature sensors (S6 and S8):

If the measured DHW temperature (S6) gets higher than the desired DHW temperature and the lower temperature (at S8) gets higher than the cut-out temperature, the DHW heating pump (P1) and the DHW charging pump (P2) are switched OFF. The post-run time can be set.


In charging applications the DHW circulation can be through the DHW tank (connection A) or through the heat-exchanger (connection B).

The solution with connection A results in closing of the motorized control valve after the DHW tank charging procedure.

The solution with connection B is used to compensate for the heat loss in the DHW circulation pipe.

Furthermore, after DHW tank charging, the circulation temperature (at S4) is controlled according to the desired DHW temperature.

Typical A217.2. / A317.2 application:

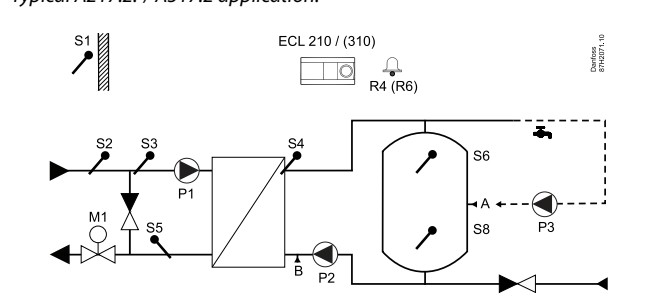

The shown diagram is a fundamental and simplified example and does not contain all components that are necessary in a system.

All named components are connected to the ECL Comfort controller.

List of components:

- S1 Outdoor temperature sensor
- S2 Supply temperature sensor
- S3 DHW heating temperature sensor
- S4 DHW charging temperature sensor
- S5 Return temperature sensor
- S6 DHW tank temperature sensor, upper
- S8 DHW tank temperature sensor, lower
- P1 DHW heating pump
- P2 DHW charging pump
- P3 DHW circulation pump
- M1 Motorized control valve
- R4 Relay output, alarm, ECL Comfort 210
- (R6) Relay output, alarm, ECL Comfort 310

Installation Guide ECL Comfort 210 / 310, application A217 / A317

The return temperature (S5) to the district heating supply should not be too high. If so, the desired charging temperature can be adjusted (typically to a lower value), thus resulting in a gradual closing of the motorized control valve.
In boiler-based heating supply the return temperature should not be too low (same adjustment procedure as above).

The supply temperature, S2, is used for adjusting the proportional band (Xp) in order to give a stable temperature control.

An anti-bacteria function is available for activation on selected days of the week.

The outdoor temperature sensor S1 is used to protect the circulation circuit against frost.

The DHW circulation pump (P3) has a week schedule for up to 3 ON-periods per day.

Application A217.2 (used in ECL Comfort 210) / A317.2 (used in ECL Comfort 310) in general:

A Remote Control Unit, the ECA 30, can be connected in order to control the ECL controller remotely.


A connected flow or energy meter (in ECL Comfort 210 it is based on pulse signals and in ECL Comfort 310 based on M-bus signal) can limit the flow or energy to a set maximum.

Unused input can, by means of an override switch, be used to override the schedule to a fixed 'Comfort' or 'Saving' mode.


Modbus communication to a SCADA system can be established. In ECL Comfort 310 the M-bus data can furthermore be transferred to the Modbus communication.

Alarm relay (in ECL Comfort 210 it is R4 and in ECL Comfort 310 R6) can be activated if the actual flow temperature at S3 differs from the desired DHW charging temperature.

A217.2 / A317.2 example a:

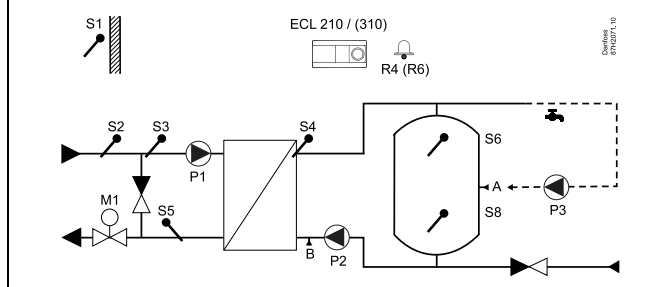

A217.2 / A317.2 example b:

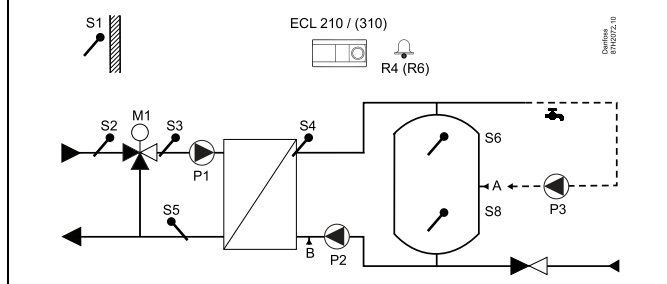

The controller is pre-programmed with factory settings that are shown in the relevant chapters of this guide.


Installation Guide ECL Comfort 210 / 310, application A217 / A317

2.2 Identifying the system type

Sketch your application

The ECL Comfort controller series is designed for a wide range of heating, domestic hot-water (DHW) and cooling systems with different configurations and capacities. If your system differs from the diagrams shown here, you may want to make a sketch of the system about to be installed. This makes it easier to use the Installation Guide, which will guide you step-by-step from installation to final adjustments before the end-user takes over.


The ECL Comfort controller is a universal controller that can be used for various systems. Based on the shown standard systems, it is possible to configure additional systems. In this chapter you find the most frequently used systems. If your system is not quite as shown below, find the diagram which has the best resemblance with your system and make your own combinations.

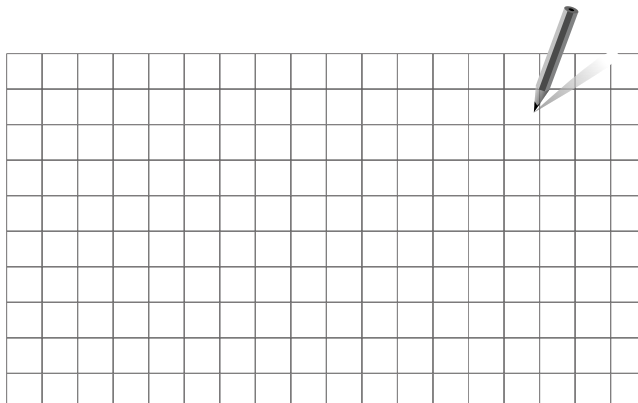

The circulation pump(s) in heating circuit(s) can be placed in the flow as well as the return. Place the pump according to the manufacturer's specification.

A217.1 / A317.1, example a

Indirectly connected DHW charging system. DHW circulation through DHW tank or heat exchanger.

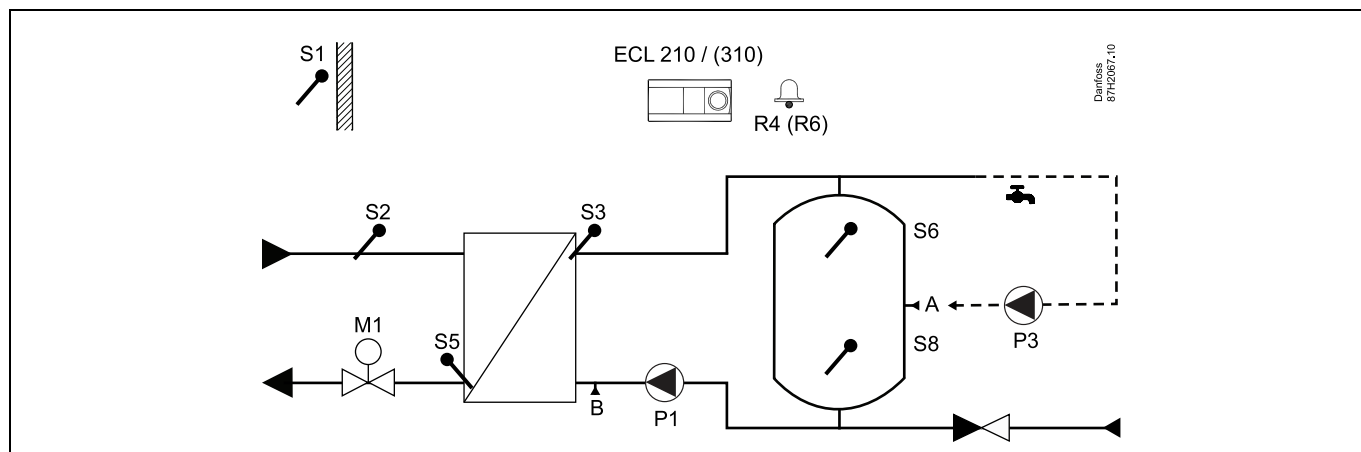

Special settings for type A217.1 / A317.1 example a:

The DHW circulation pipe can be connected to the DHW tank at 'A' for internal circulation or to the heat exchanger at 'B' for external circulation.

DHW circuit

Navigation:

(Internal DHW circulation) MENU \ Settings \ Application: 'Cont. T control'

(External DHW circulation) MENU \ Settings \ Application: 'Cont. T control'

ID no.:

11054

11054


Recommended setting:

OFF

ON


A217.1 / A317.1 example b

Indirectly connected DHW heating system

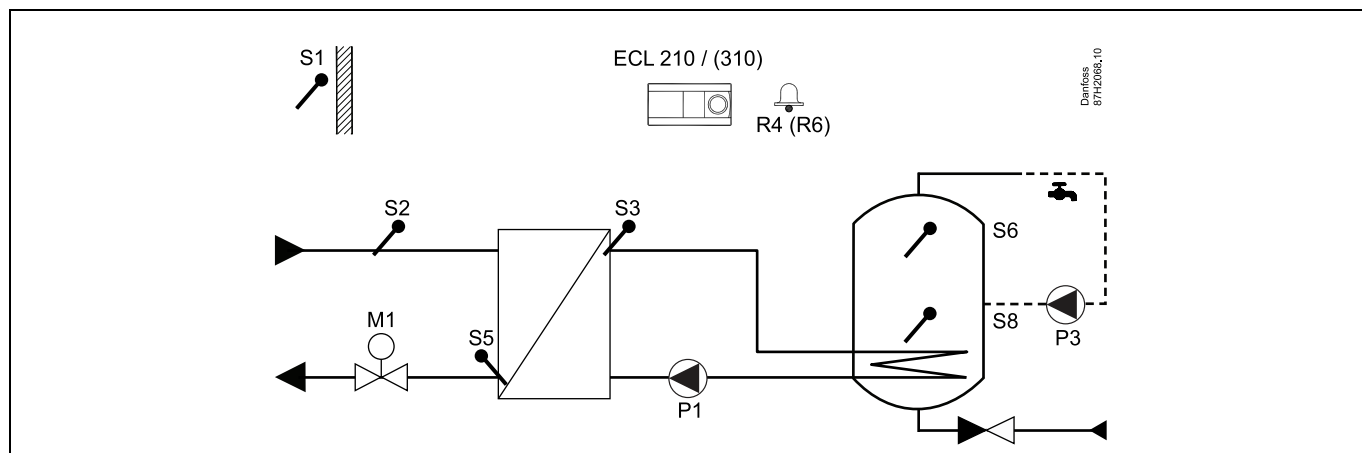

A217.1 / A317.1 example c


Directly connected DHW heating system

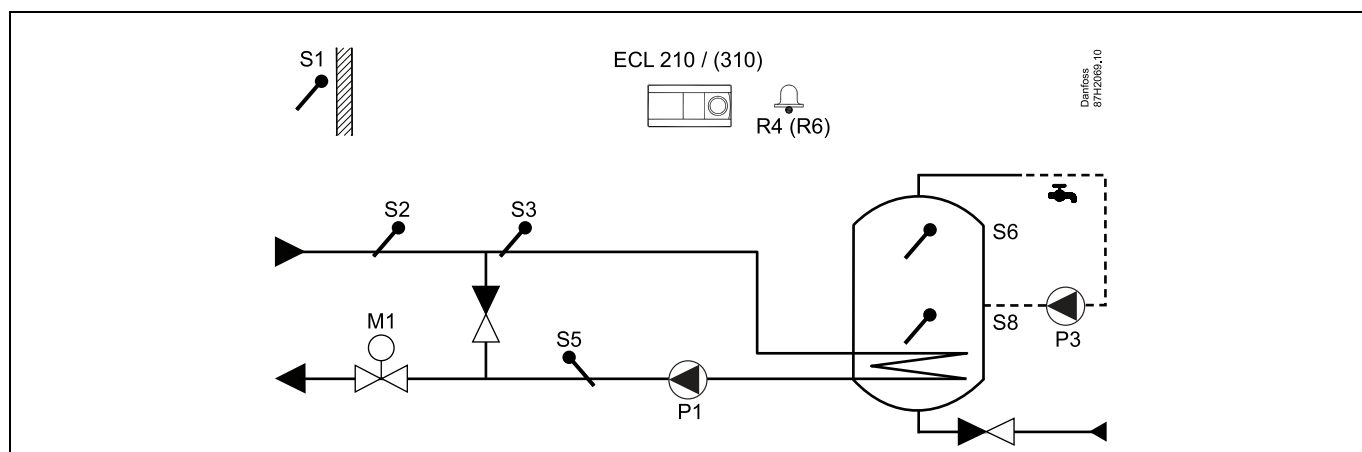

Installation Guide ECL Comfort 210 / 310, application A217 / A317

A217.1 / A317.1 example d

Directly connected DHW heating system (not a typical application)

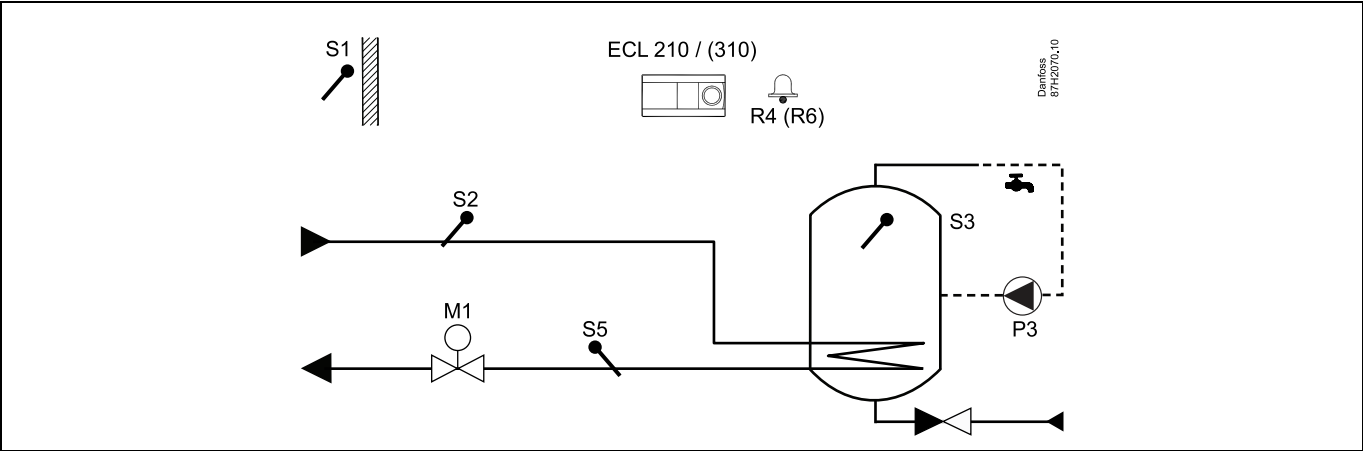

Special settings for type A217.1 / A317.1 example d:
This application is not typical!

DHW circuit

Navigation:

- MENU \ Settings \ Tank temp.: 'Charge difference'
- MENU \ Settings \ Tank temp.: 'Start difference'
- MENU \ Settings \ Tank temp.: 'Stop difference'
- MENU \ Settings \ Application: 'Cont. T control'

| ID no.: | Recommended setting: |
|---------|----------------------|
| 11193 | 1 K |
| 11195 | -1 K |
| 11194 | 50 K |
| 11054 | ON |




See also drawing for special connections of sensors in 'Electrical connections, Pt 1000 temperature sensors and signals'

Installation Guide ECL Comfort 210 / 310, application A217 / A317

A217.2 / A317.2 example a

Indirectly connected DHW charging system with controlled heating temperature. DHW circulation through DHW tank or heat exchanger.

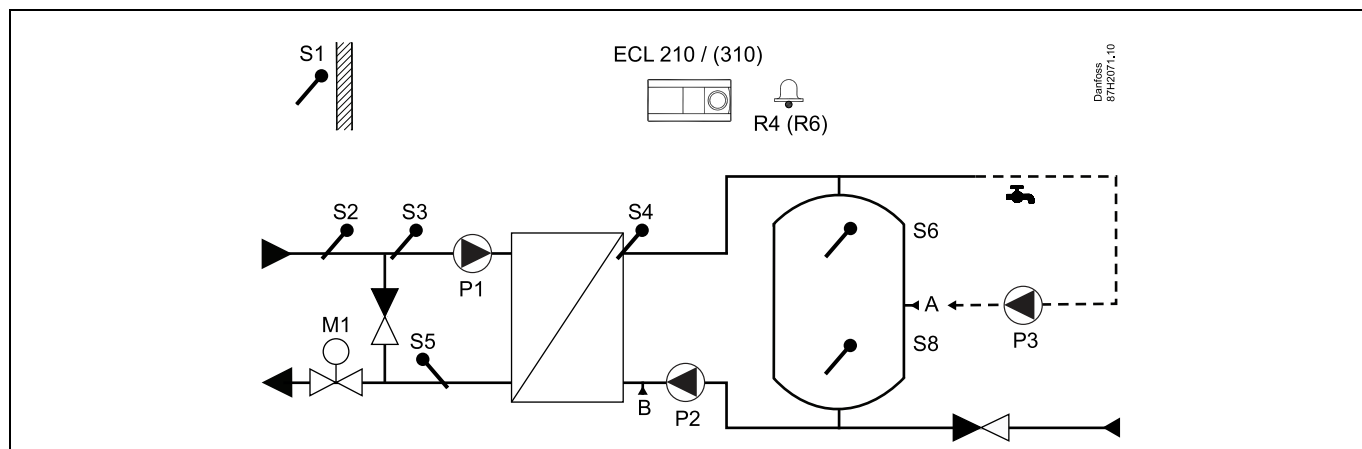

Special settings for type A217.2 / A317.2 example a:

The DHW circulation pipe can be connected to the DHW tank at 'A' for internal circulation or to the heat exchanger at 'B' for external circulation.

DHW circuit

Navigation:

(Internal DHW circulation) MENU \ Settings \ Application: 'Cont. T control'

(External DHW circulation) MENU \ Settings \ Application: 'Cont. T control'

ID no.:

11054

11054

Recommended setting:


OFF

ON

Installation Guide ECL Comfort 210 / 310, application A217 / A317

A217.2 / A317.2 example b

Indirectly connected DHW charging system with controlled heating temperature. DHW circulation through DHW tank or heat exchanger.

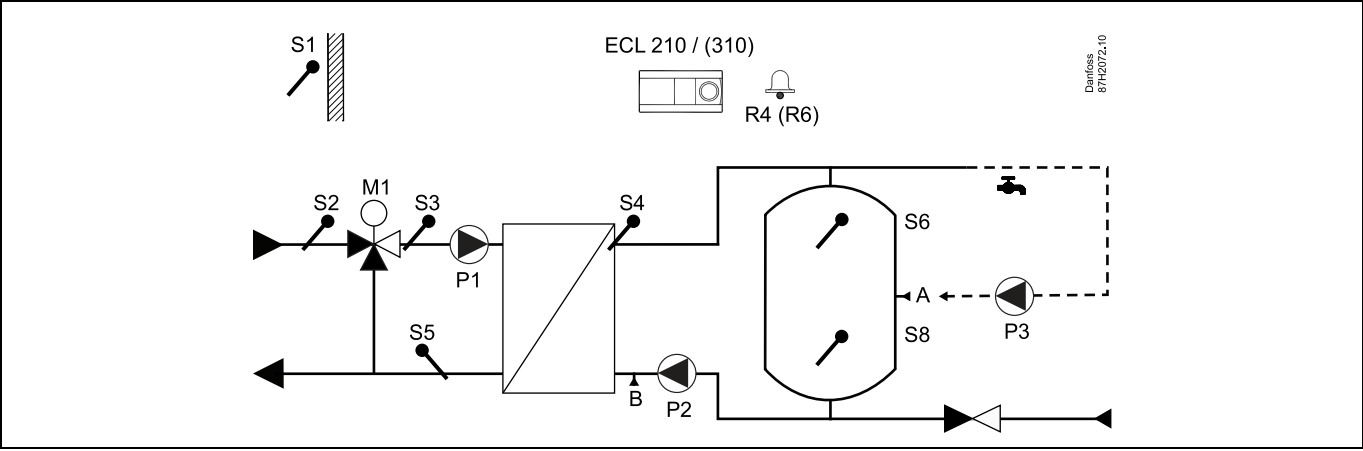

Special settings for type A217.2 / A317.2 example b:
 The DHW circulation pipe can be connected to the DHW tank at 'A' for internal circulation or to the heat exchanger at 'B' for external circulation.

DHW circuit

| Navigation: | ID no.: | Recommended setting: |
|---|---------|----------------------|
| (Internal DHW circulation) MENU \ Settings \ Application: 'Cont. T control' | 11054 | OFF |
| (External DHW circulation) MENU \ Settings \ Application: 'Cont. T control' | 11054 | ON |

2.3 Mounting

2.3.1 Mounting the ECL Comfort controller

For easy access, you should mount the ECL Comfort controller near the system. Select one of the following methods using the same base part (code no. 087H3220 (ECL Comfort 210) or 087H3230 (ECL Comfort 310)):

- Mounting on a wall
- Mounting on a DIN rail (35 mm)


The ECL Comfort 210 can be mounted in the ECL Comfort 210 / 310 base part.

The ECL Comfort 310 can only be mounted in the ECL Comfort 310 base part.

Screws, PG cable glands and rawlplugs are not supplied.


Locking the ECL Comfort controller

In order to fasten the ECL Comfort controller to its base part, secure the controller with the locking pin.

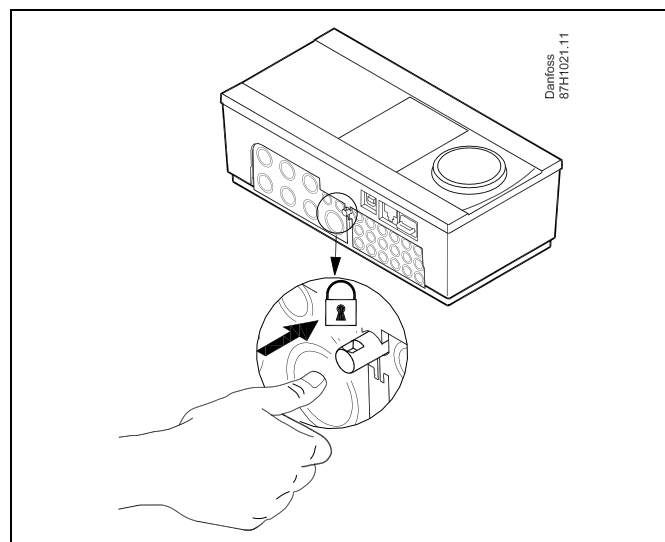

Mounting on a wall


Mount the base part on a wall with a smooth surface. Establish the electrical connections and position the controller in the base part. Secure the controller with the locking pin.

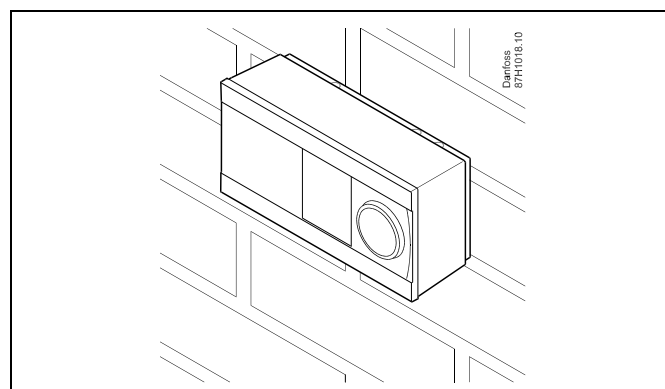

Installation Guide ECL Comfort 210 / 310, application A217 / A317


Mounting on a DIN rail (35 mm)

Mount the base part on a DIN rail. Establish the electrical connections and position the controller in the base part. Secure the controller with the locking pin.

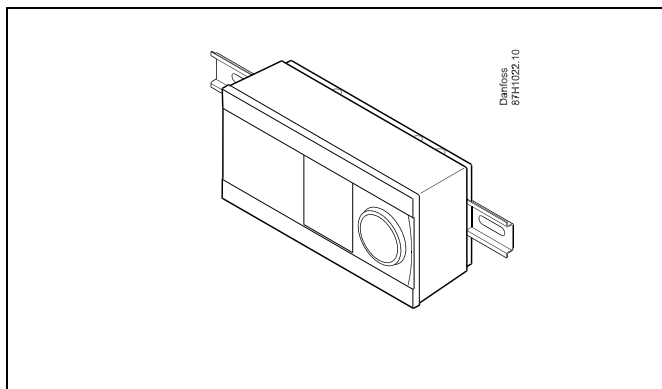

Dismounting the ECL Comfort controller

In order to remove the controller from the base part, pull out the locking pin by means of a screwdriver. The controller can now be removed from the base part.

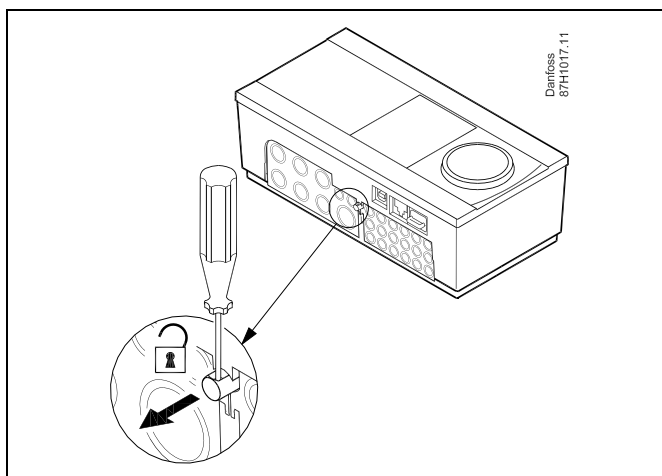

Installation Guide ECL Comfort 210 / 310, application A217 / A317

2.3.2 Mounting the Remote Control Units ECA 30/31


Select one of the following methods:

- Mounting on a wall, ECA 30 / 31
- Mounting in a panel, ECA 30

Screws and rawlplugs are not supplied.

Mounting on a wall


Mount the base part of the ECA 30 / 31 on a wall with a smooth surface. Establish the electrical connections. Place the ECA 30 / 31 in the base part.

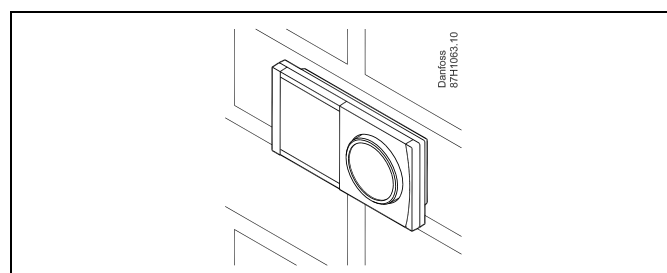

Mounting in a panel

Mount the ECA 30 in a panel using the ECA 30 frame kit (order code no. 087H3236). Establish the electrical connections. Secure the frame with the clamp. Place the ECA 30 in the base part. The ECA 30 can be connected to an external room temperature sensor.

The ECA 31 must not be mounted in a panel if the humidity function is to be used.

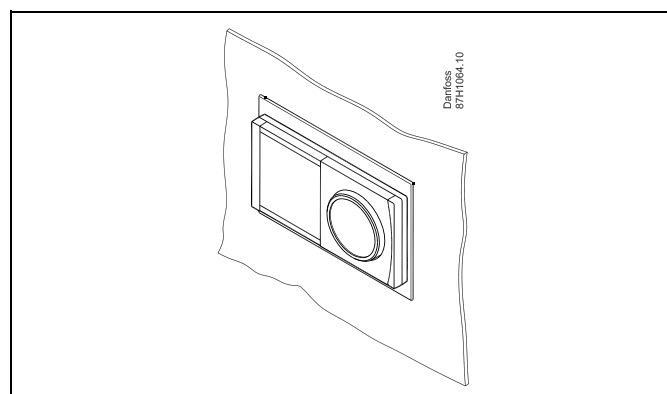

Installation Guide ECL Comfort 210 / 310, application A217 / A317

2.4 Placing the temperature sensors

2.4.1 Placing the temperature sensors

It is important that the sensors are mounted in the correct position in your system.

The temperature sensor mentioned below are sensors used for the ECL Comfort 210 and 310 series which not all will be needed for your application!

Outdoor temperature sensor (ESMT)

The outdoor sensor should be mounted on that side of the building where it is less likely to be exposed to direct sunshine. It should not be placed close to doors, windows or air outlets.


Flow temperature sensor (ESMU, ESM-11 or ESMC)

Place the sensor max. 15 cm from the mixing point. In systems with heat exchanger, Danfoss recommends that the ESMU-type to be inserted into the exchanger flow outlet.

Make sure that the surface of the pipe is clean and even where the sensor is mounted.


Return temperature sensor (ESMU, ESM-11 or ESMC)

The return temperature sensor should always be placed so that it measures a representative return temperature.

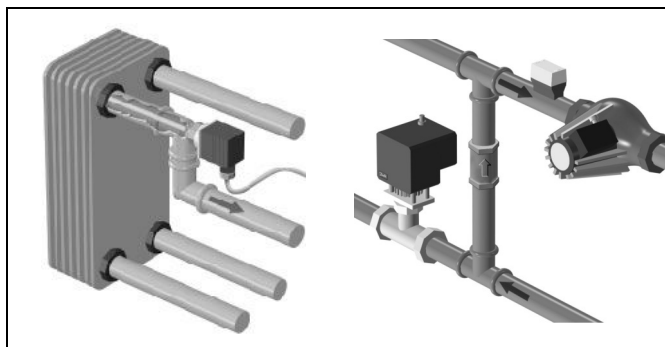

Room temperature sensor (ESM-10, ECA 30 / 31 Remote Control Unit)

Place the room sensor in the room where the temperature is to be controlled. Do not place it on outside walls or close to radiators, windows or doors.

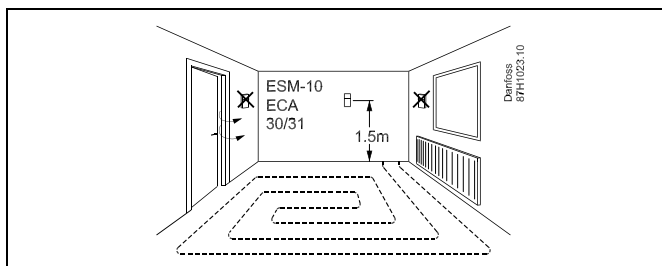

Boiler temperature sensor (ESMU, ESM-11 or ESMC)

Place the sensor according to the boiler manufacturer's specification.

Air duct temperature sensor (ESMB-12 or ESMU types)

Place the sensor so that it measures a representative temperature.

DHW temperature sensor (ESMU or ESMB-12)

Place the DHW temperature sensor according to the manufacturer's specification.

Slab temperature sensor (ESMB-12)

Place the sensor in a protection tube in the slab.




ESM-11: Do not move the sensor after it has been fastened in order to avoid damage to the sensor element.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Pt 1000 temperature sensor (IEC 751B, 1000 Ω / 0 $^{\circ}\text{C}$)


Relationship between temperature and ohmic value:

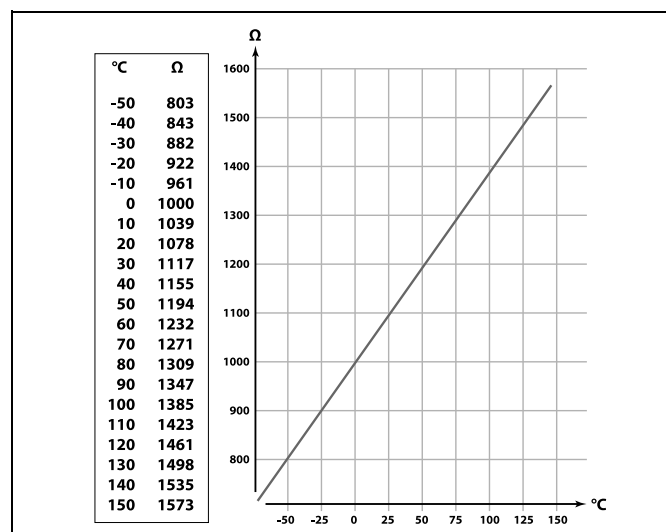

2.5 Electrical connections

2.5.1 Electrical connections 230 V a.c. in general


The common ground terminal is used for connection of relevant components (pumps, motorized control valves).

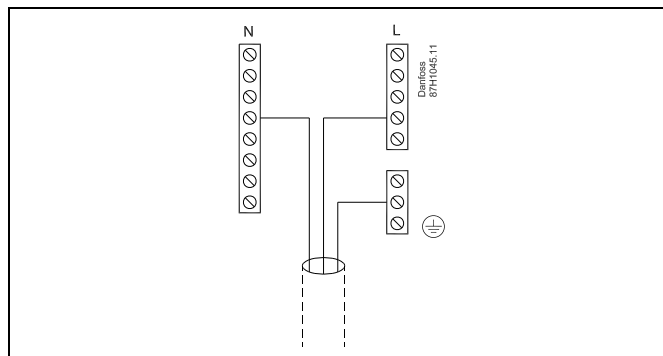

Installation Guide ECL Comfort 210 / 310, application A217 / A317

2.5.2 Electrical connections, 230 V a.c., power supply, pumps, motorized control valves etc.

Application A217.1

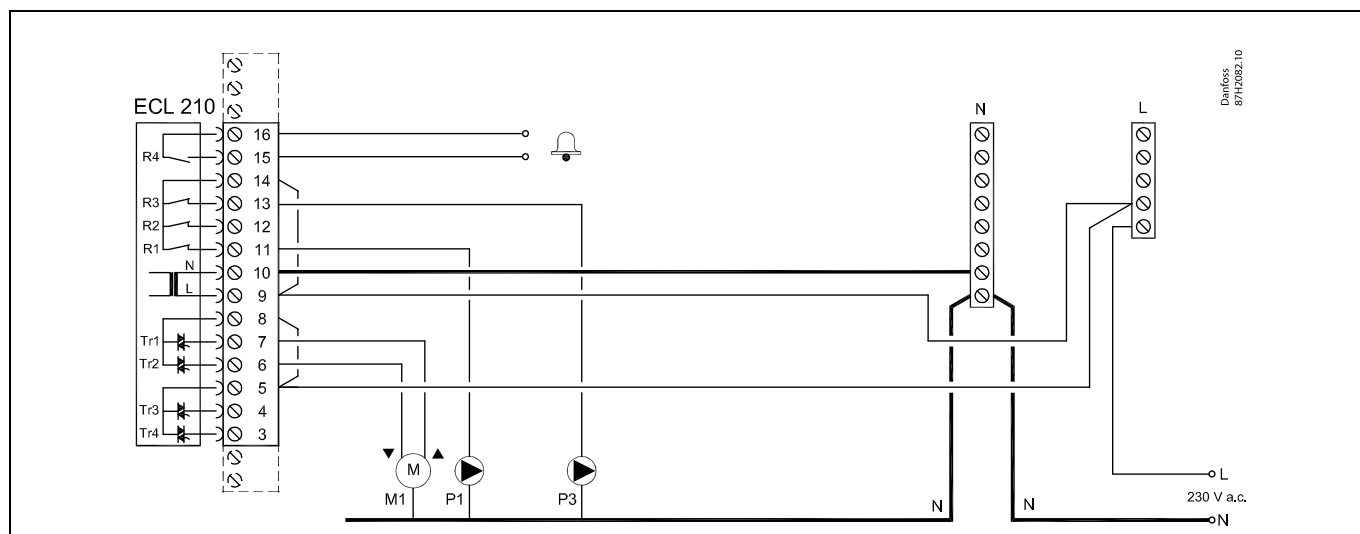

| Terminal | Description | Max. load |
|----------|--|-----------------------|
| 16 | Alarm | 4 (2) A / 230 V a.c.* |
| 15 | | |
| 14 | Phase for control of pumps | |
| 13 P3 | DHW circulation pump ON / OFF | 4 (2) A / 230 V a.c.* |
| 12 | Not to be used | |
| 11 P1 | DHW heating / charging pump ON / OFF | 4 (2) A / 230 V a.c.* |
| 10 | Supply voltage 230 V a.c. - neutral (N) | |
| 9 | Supply voltage 230 V a.c. - live (L) | |
| 8 M1 | Phase for motorized control valve output | |
| 7 M1 | Motorized control valve - opening | 0.2 A / 230 V a.c. |
| 6 M1 | Motorized control valve - closing | 0.2 A / 230 V a.c. |
| 5 | Not to be used | |
| 4 | Not to be used | |
| 3 | Not to be used | |

* Relay contacts: 4 A for ohmic load, 2 A for inductive load

Factory established jumpers:

5 to 8, 9 to 14, L to 5 and L to 9, N to 10




Wire cross section: 0.5 - 1.5 mm²

Incorrect connection can damage the electronic outputs.

Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Application A217.2

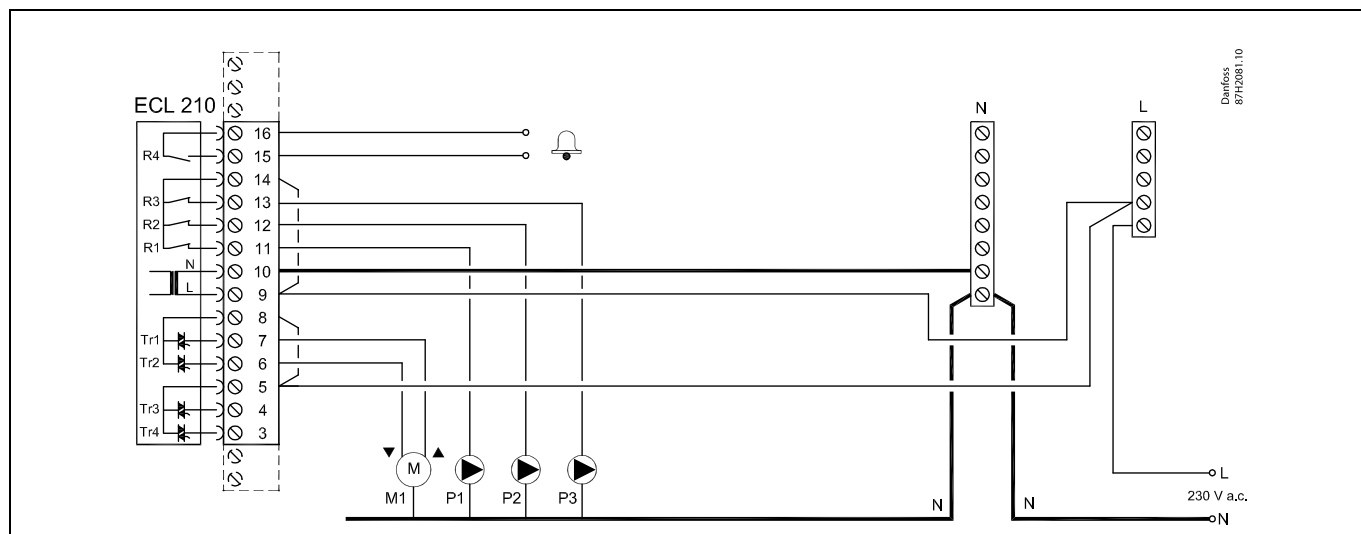

| Terminal | Description | Max. load |
|--|--|-----------------------|
| 16 | Alarm | 4 (2) A / 230 V a.c.* |
| 15 | | |
| 14 | Phase for control of pumps | |
| 13 P3 | DHW circulation pump ON / OFF | 4 (2) A / 230 V a.c.* |
| 12 P2 | DHW charging pump ON / OFF | 4 (2) A / 230 V a.c.* |
| 11 P1 | DHW heating pump ON / OFF | 4 (2) A / 230 V a.c.* |
| 10 | Supply voltage 230 V a.c. - neutral (N) | |
| 9 | Supply voltage 230 V a.c. - live (L) | |
| 8 M1 | Phase for motorized control valve output | |
| 7 M1 | Motorized control valve - opening | 0.2 A / 230 V a.c. |
| 6 M1 | Motorized control valve - closing | 0.2 A / 230 V a.c. |
| 5 | Not to be used | |
| 4 | Not to be used | |
| 3 | Not to be used | |
| * Relay contacts: 4 A for ohmic load, 2 A for inductive load | | |


Factory established jumpers:
5 to 8, 9 to 14, L to 5 and L to 9, N to 10



Wire cross section: 0.5 - 1.5 mm²
Incorrect connection can damage the electronic outputs.
Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Application A317.1

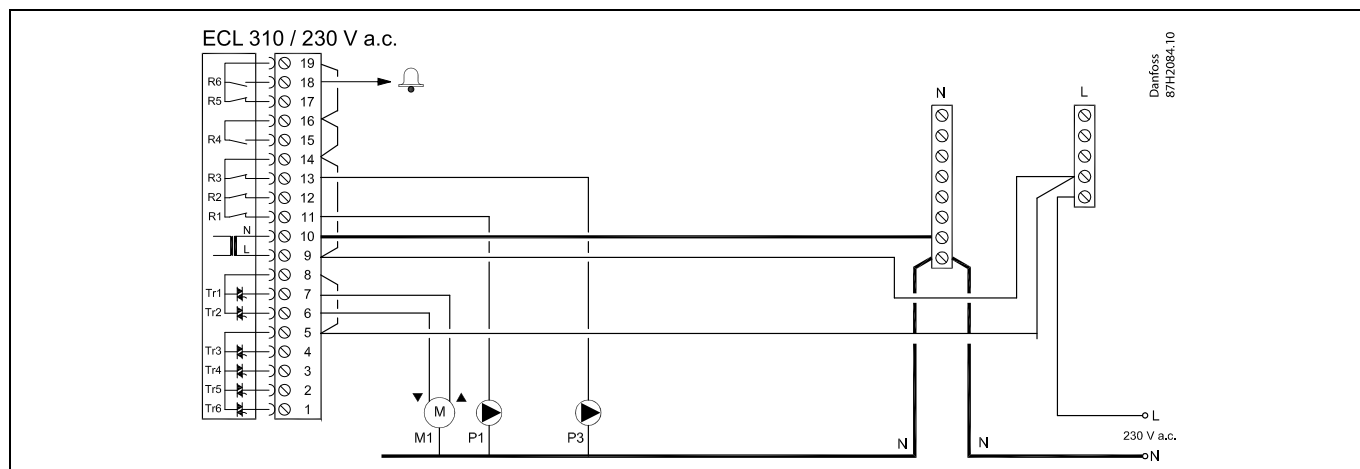

| Terminal | Description | Max. load |
|----------|--|-----------------------|
| 19 | Phase for alarm output | |
| 18 R6 | Alarm | 4 (2) A / 230 V a.c.* |
| 17 | Not to be used | |
| 16 | Interconnection for phase | |
| 15 | Not to be used | |
| 14 | Phase for control of pumps | |
| 13 P3 | DHW circulation pump ON / OFF | 4 (2) A / 230 V a.c.* |
| 12 | Not to be used | |
| 11 P1 | DHW heating / charging pump ON / OFF | 4 (2) A / 230 V a.c.* |
| 10 | Supply voltage 230 V a.c. - neutral (N) | |
| 9 | Supply voltage 230 V a.c. - live (L) | |
| 8 M1 | Phase for motorized control valve output | |
| 7 M1 | Motorized control valve - opening | 0.2 A / 230 V a.c. |
| 6 M1 | Motorized control valve - closing | 0.2 A / 230 V a.c. |
| 5 | Not to be used | |
| 4 | Not to be used | |
| 3 | Not to be used | |
| 2 | Not to be used | |
| 1 | Not to be used | |

* Relay contacts: 4 A for ohmic load, 2 A for inductive load

Factory established jumpers:


5 to 8, 9 to 14, 14 to 16, 16 to 19, L to 5 and L to 9, N to 10



Wire cross section: 0.5 - 1.5 mm²
Incorrect connection can damage the electronic outputs.
Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Application A317.2

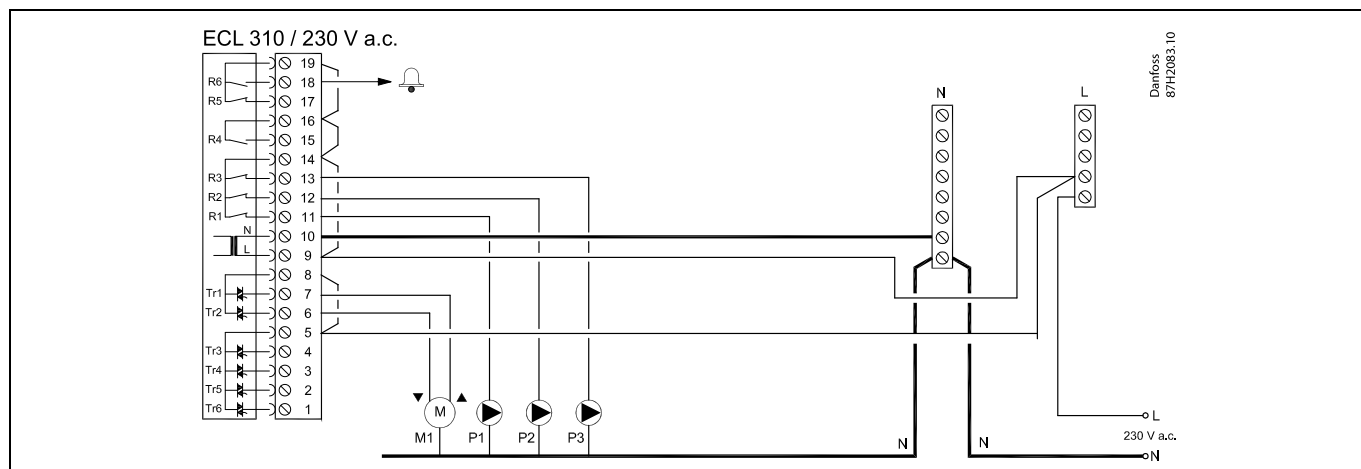

| Terminal | Description | Max. load |
|----------|--|-----------------------|
| 19 | Phase for alarm output | |
| 18 R6 | Alarm | 4 (2) A / 230 V a.c.* |
| 17 | Not to be used | |
| 16 | Interconnection for phase | |
| 15 | Not to be used | |
| 14 | Phase for control of pumps | |
| 13 P3 | DHW circulation pump ON / OFF | 4 (2) A / 230 V a.c.* |
| 12 P2 | DHW charging pump ON / OFF | 4 (2) A / 230 V a.c.* |
| 11 P1 | DHW heating pump ON / OFF | 4 (2) A / 230 V a.c.* |
| 10 | Supply voltage 230 V a.c. - neutral (N) | |
| 9 | Supply voltage 230 V a.c. - live (L) | |
| 8 M1 | Phase for motorized control valve output | |
| 7 M1 | Motorized control valve - opening | 0.2 A / 230 V a.c. |
| 6 M1 | Motorized control valve - closing | 0.2 A / 230 V a.c. |
| 5 | Not to be used | |
| 4 | Not to be used | |
| 3 | Not to be used | |
| 2 | Not to be used | |
| 1 | Not to be used | |

* Relay contacts: 4 A for ohmic load, 2 A for inductive load

Factory established jumpers:

5 to 8, 9 to 14, 14 to 16, 16 to 19, L to 5 and L to 9, N to 10




Wire cross section: 0.5 - 1.5 mm²
Incorrect connection can damage the electronic outputs.
Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.


Installation Guide ECL Comfort 210 / 310, application A217 / A317

2.5.3 Electrical connections, safety thermostats, 230 V a.c. or 24 V a.c.

With safety thermostat, 1-step closing:

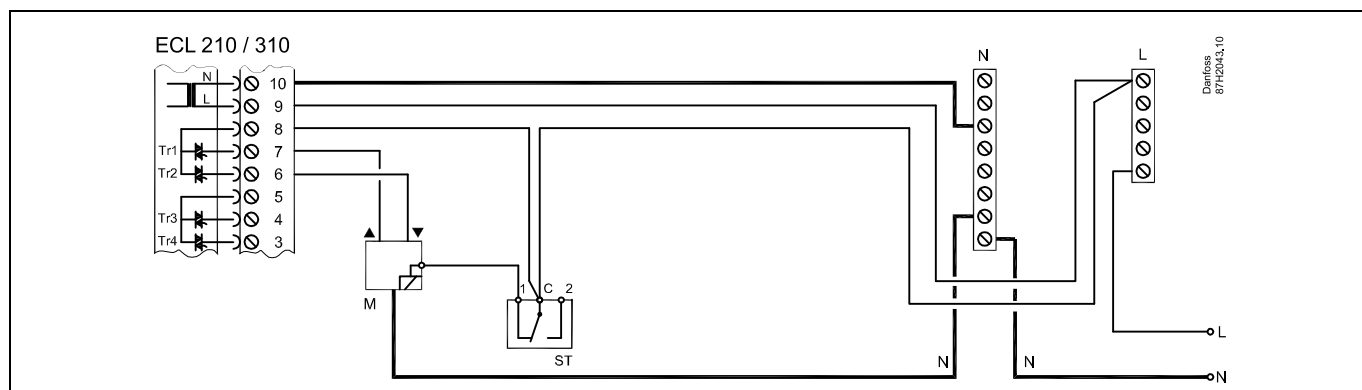

With safety thermostat, 2-step closing:

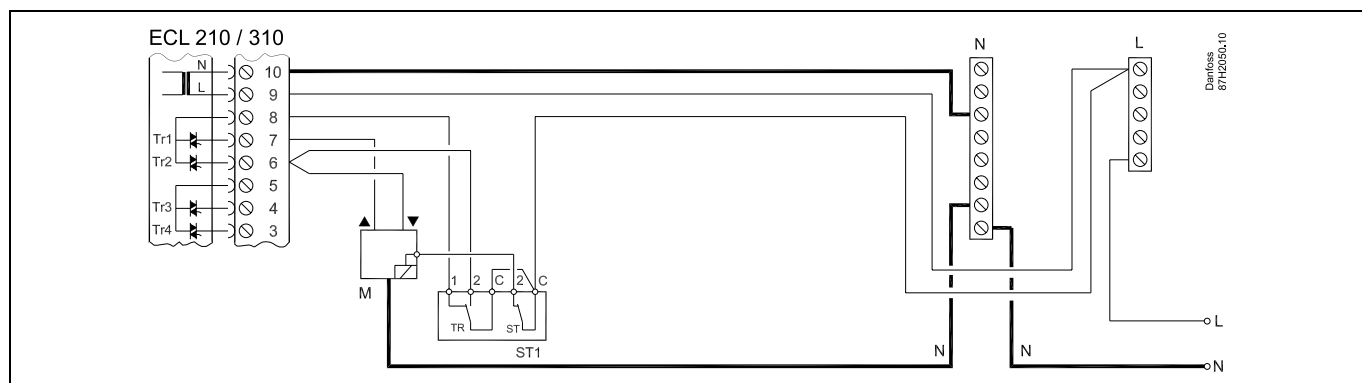


Wire cross section: 0.5 - 1.5 mm²
 Incorrect connection can damage the electronic outputs.
 Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

2.5.4 Electrical connections, 24 V a.c., power supply, pumps, motorized valves etc.

Application A217.1

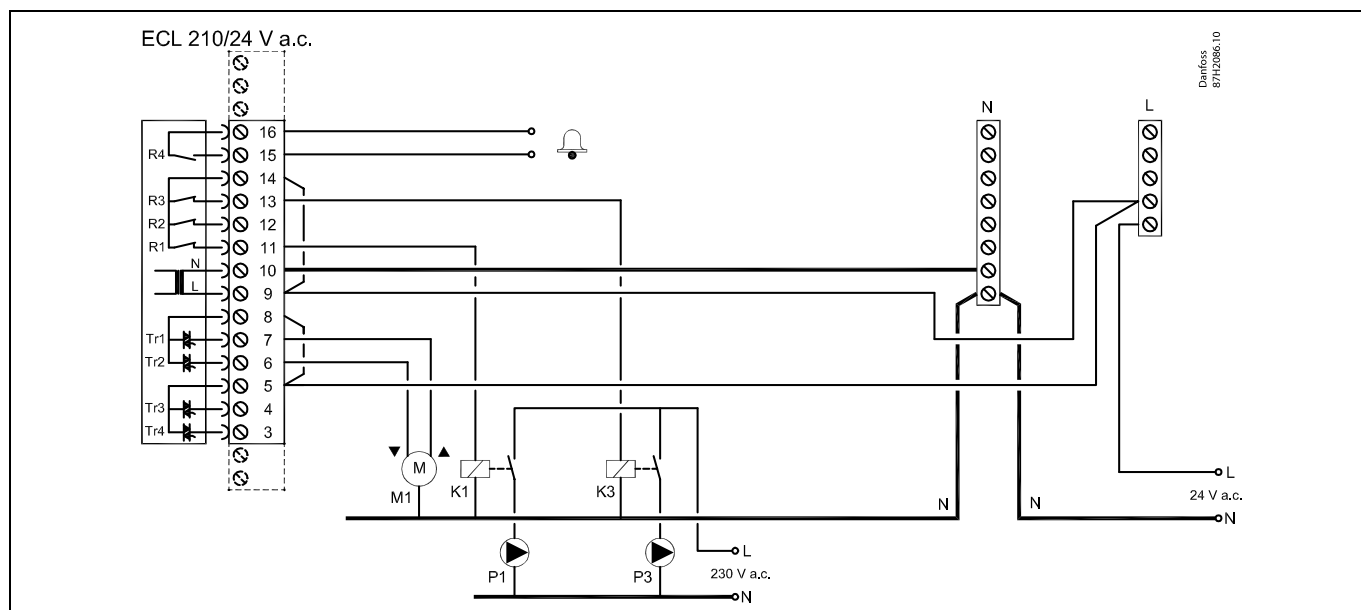

| Terminal | Description | Max. load |
|--|---|----------------------|
| 16 | Alarm | 4 (2) A / 24 V a.c.* |
| 15 | | |
| 14 | Phase for control of pumps | |
| 13 | K3 DHW circulation pump ON / OFF | 4 (2) A / 24 V a.c.* |
| 12 | Not to be used | |
| 11 | K1 DHW heating / charging pump ON / OFF | 4 (2) A / 24 V a.c.* |
| 10 | Supply voltage 24 V a.c. - (N) | |
| 9 | Supply voltage 24 V a.c. - (L) | |
| 8 | M1 Phase for motorized control valve output | |
| 7 | M1 Motorized control valve - opening | 1 A / 24 V a.c. |
| 6 | M1 Motorized control valve - closing | 1 A / 24 V a.c. |
| 5 | Not to be used | |
| 4 | Not to be used | |
| 3 | Not to be used | |
| * Relay contacts: 4 A for ohmic load, 2 A for inductive load | | |

Factory established jumpers:
5 to 8, 9 to 14, L to 5 and L to 9, N to 10




Wire cross section: 0.5 - 1.5 mm²
Incorrect connection can damage the electronic outputs.
Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.



Do not connect 230 V a.c. powered components to a 24 V a.c. power supplied controller directly. Use auxilliary relays (K) to seperate 230 V a.c. from 24 V a.c.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Application A217.2

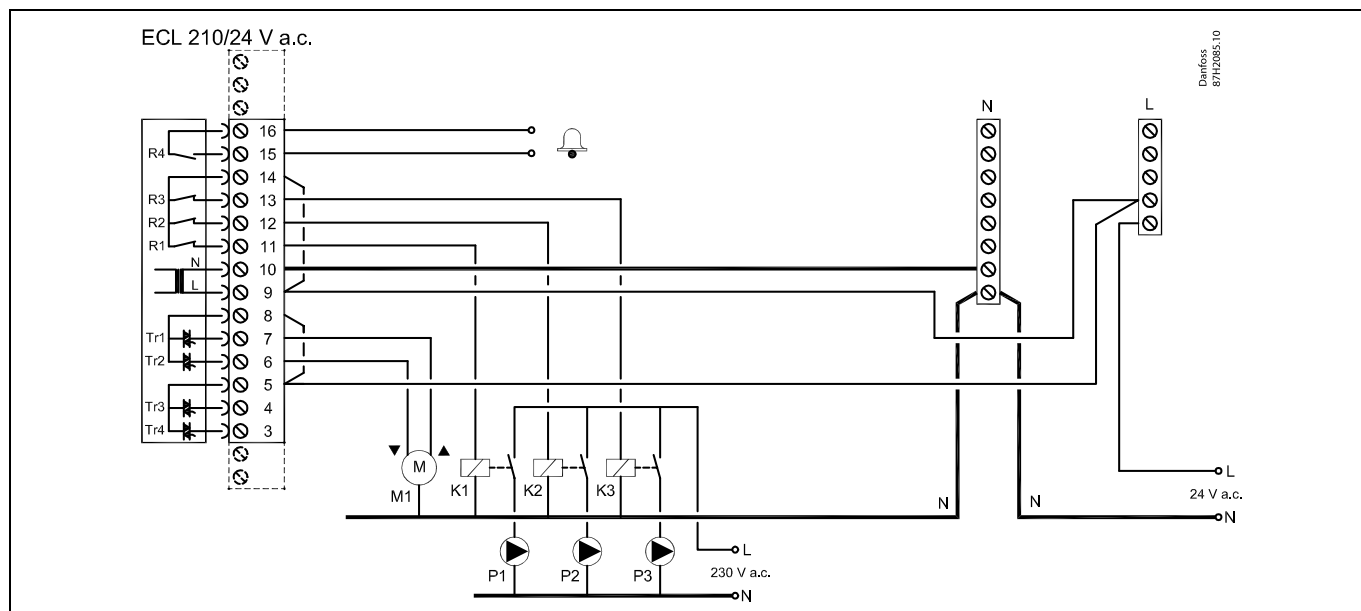

| Terminal | Description | Max. load |
|--|---|----------------------|
| 16 | Alarm | 4 (2) A / 24 V a.c.* |
| 15 | | |
| 14 | Phase for control of pumps | |
| 13 | K3 DHW circulation pump ON / OFF | 4 (2) A / 24 V a.c.* |
| 12 | K2 DHW charging pump ON / OFF | 4 (2) A / 24 V a.c.* |
| 11 | K1 DHW heating pump ON / OFF | 4 (2) A / 24 V a.c.* |
| 10 | Supply voltage 24 V a.c. - (N) | |
| 9 | Supply voltage 24 V a.c. - (L) | |
| 8 | M1 Phase for motorized control valve output | |
| 7 | M1 Motorized control valve - opening | 1 A / 24 V a.c. |
| 6 | M1 Motorized control valve - closing | 1 A / 24 V a.c. |
| 5 | Not to be used | |
| 4 | Not to be used | |
| 3 | Not to be used | |
| * Relay contacts: 4 A for ohmic load, 2 A for inductive load | | |

Factory established jumpers:
5 to 8, 9 to 14, L to 5 and L to 9, N to 10




Wire cross section: 0.5 - 1.5 mm²
Incorrect connection can damage the electronic outputs.
Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.



Do not connect 230 V a.c. powered components to a 24 V a.c. power supplied controller directly. Use auxilliary relays (K) to separate 230 V a.c. from 24 V a.c.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Application A317.1

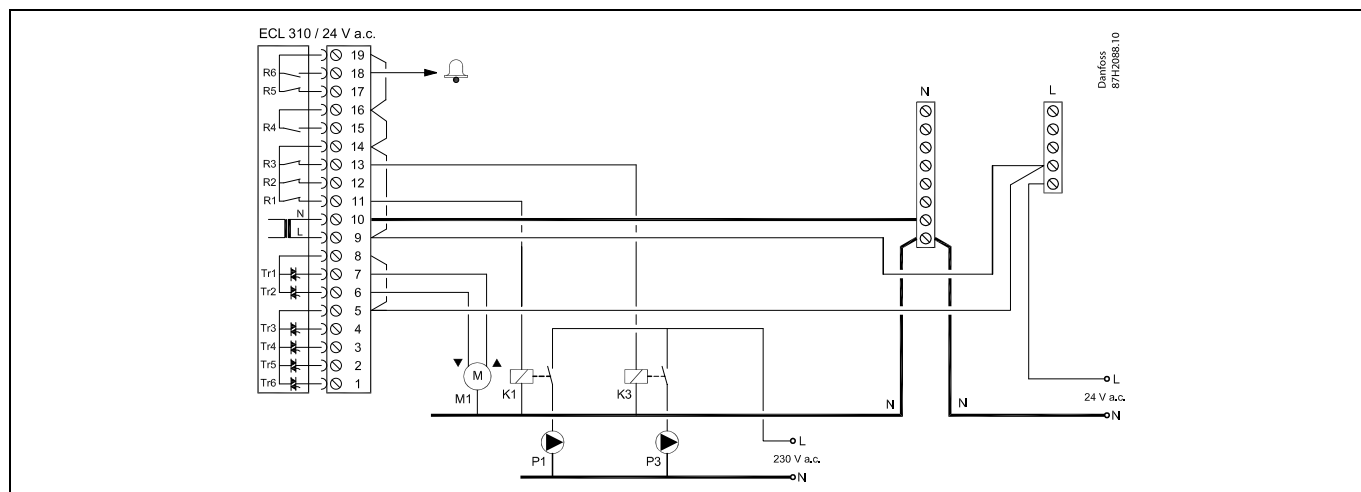

| Terminal | Description | Max. load |
|----------|--|----------------------|
| 19 | Phase for alarm output | |
| 18 R6 | Alarm | 4 (2) A / 24 V a.c.* |
| 17 | Not to be used | |
| 16 | Interconnection for phase | |
| 15 | Not to be used | |
| 14 | Phase for control of pumps | |
| 13 K3 | DHW circulation pump ON / OFF | 4 (2) A / 24 V a.c.* |
| 12 | Not to be used | |
| 11 K1 | DHW heating / charging pump ON / OFF | 4 (2) A / 24 V a.c.* |
| 10 | Supply voltage 24 V a.c. - (N) | |
| 9 | Supply voltage 24 V a.c. - (L) | |
| 8 M1 | Phase for motorized control valve output | |
| 7 M1 | Motorized control valve - opening | 1 A / 24 V a.c. |
| 6 M1 | Motorized control valve - closing | 1 A / 24 V a.c. |
| 5 | Not to be used | |
| 4 | Not to be used | |
| 3 | Not to be used | |
| 2 | Not to be used | |
| 1 | Not to be used | |

* Relay contacts: 4 A for ohmic load, 2 A for inductive load

Factory established jumpers:

5 to 8, 9 to 14, 14 to 16, 16 to 19, L to 5 and L to 9, N to 10




Wire cross section: 0.5 - 1.5 mm²
 Incorrect connection can damage the electronic outputs.
 Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.



Do not connect 230 V a.c. powered components to a 24 V a.c. power supplied controller directly. Use auxilliary relays (K) to separate 230 V a.c. from 24 V a.c.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Application A317.2

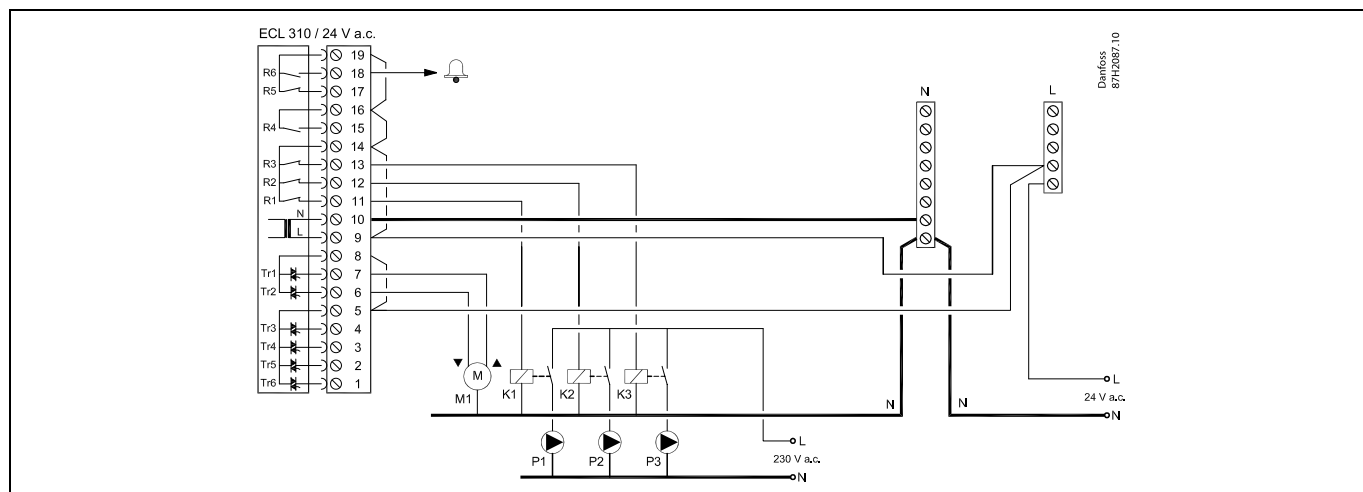

| Terminal | Description | Max. load |
|----------|--|----------------------|
| 19 | Phase for alarm output | |
| 18 R6 | Alarm | 4 (2) A / 24 V a.c.* |
| 17 | Not to be used | |
| 16 | Interconnection for phase | |
| 15 | Not to be used | |
| 14 | Phase for control of pumps | |
| 13 K3 | DHW circulation pump ON / OFF | 4 (2) A / 24 V a.c.* |
| 12 K2 | DHW charging pump ON / OFF | 4 (2) A / 24 V a.c.* |
| 11 K1 | DHW heating pump ON / OFF | 4 (2) A / 24 V a.c.* |
| 10 | Supply voltage 24 V a.c. - (N) | |
| 9 | Supply voltage 24 V a.c. - (L) | |
| 8 M1 | Phase for motorized control valve output | |
| 7 M1 | Motorized control valve - opening | 1 A / 24 V a.c. |
| 6 M1 | Motorized control valve - closing | 1 A / 24 V a.c. |
| 5 | Not to be used | |
| 4 | Not to be used | |
| 3 | Not to be used | |
| 2 | Not to be used | |
| 1 | Not to be used | |

* Relay contacts: 4 A for ohmic load, 2 A for inductive load

Factory established jumpers:

5 to 8, 9 to 14, 14 to 16, 16 to 19, L to 5 and L to 9, N to 10



Wire cross section: 0.5 - 1.5 mm²
 Incorrect connection can damage the electronic outputs.
 Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.



Do not connect 230 V a.c. powered components to a 24 V a.c. power supplied controller directly. Use auxilliary relays (K) to seperate 230 V a.c. from 24 V a.c.

Installation Guide ECL Comfort 210 / 310, application A217 / A317


2.5.5 Electrical connections, Pt 1000 temperature sensors and signals

A217/ A317:



| Terminal | Sensor / description | Type (recomm.) |
|-----------|--|-----------------------------|
| 29 and 30 | S1 Outdoor temperature sensor* | ESMT |
| 28 and 30 | S2 Supply temperature sensor | ESM-11 / ESMB / ESMC / ESMU |
| 27 and 30 | S3 DHW heating / charging temperature sensor ** (A217.1 / A317.1) DHW heating temperature sensor ** (A217.2 / A317.2) | ESM-11 / ESMB / ESMC / ESMU |
| 26 and 30 | S4 DHW charging temperature sensor** (A217.2 / A317.2 only) | ESM-11 / ESMB / ESMC / ESMU |
| 25 and 30 | S5 Return temperature sensor | ESM-11 / ESMB / ESMC / ESMU |
| 24 and 30 | S6 DHW tank temperature sensor, upper*** | ESMB / ESMU |
| 23 and 30 | S7 Flow / heat meter (pulse signal and ECL 210 only) | |
| 22 and 30 | S8 DHW tank temperature sensor, lower | ESMB / ESMU |
| 21 and 30 | ECL 310 only: Not used | |
| 20 and 30 | ECL 310 only: Not used | |

- * Used for frost protection purposes. If the outdoor temperature sensor is not connected or the cable is short-circuited, the controller assumes that the outdoor temperature is 0 (zero) °C.
- ** DHW charging / heating temperature sensor must always be connected in order to have the desired functionality. If the sensor is not connected or the cable is short-circuited, the motorized control valve closes (safety function).
- *** This sensor is used if only one tank temperature sensor is required.

Factory established jumper:
30 to common terminal.

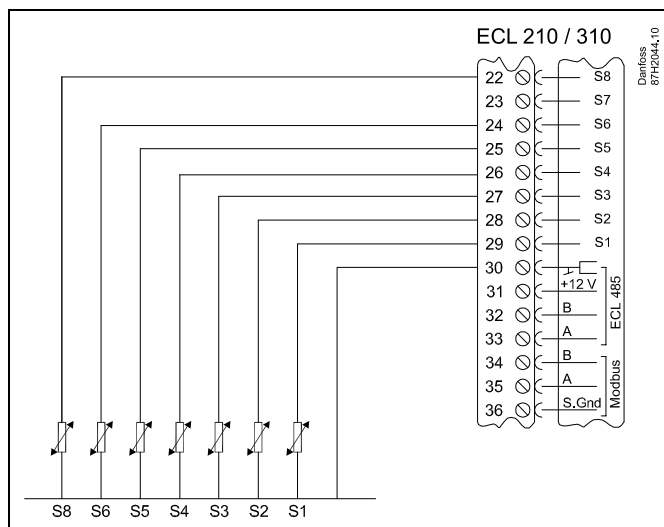


Connections for application 217.1 / 317.1, example d:

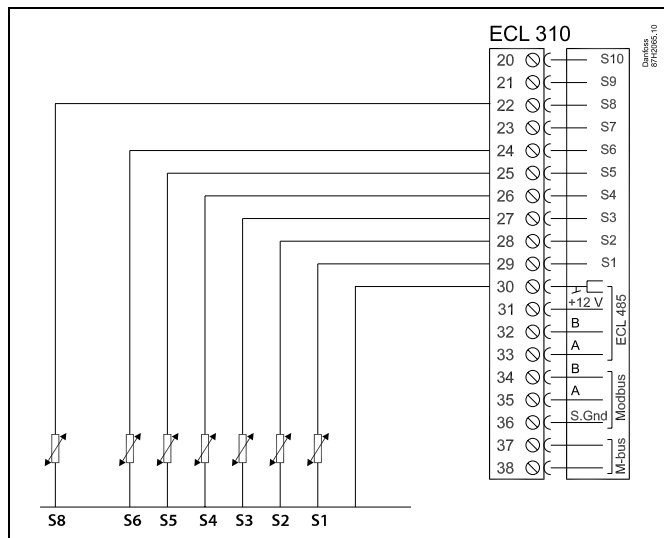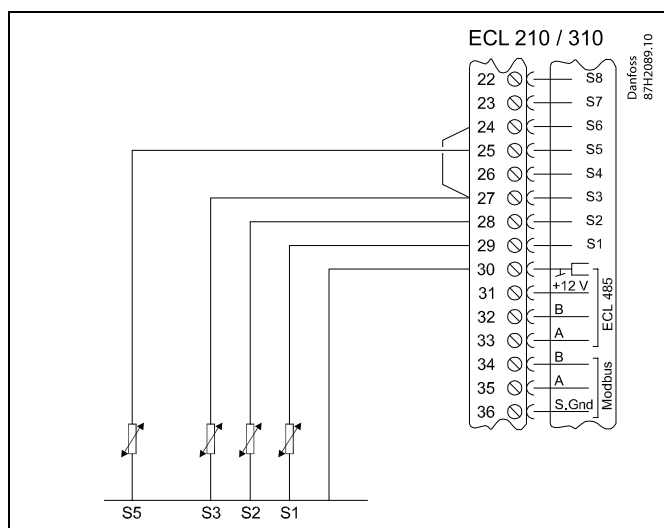

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Connection of flow / heat meter with pulse signal

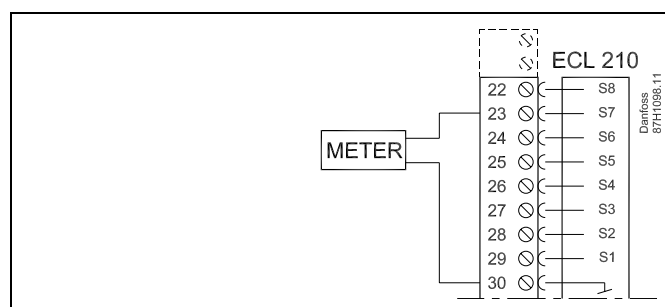

Wire cross section for sensor connections: Min. 0.4 mm².
 Total cable length: Max. 200 m (all sensors incl. internal ECL 485 communication bus)
 Cable lengths of more than 200 m may cause noise sensibility (EMC).

Installation Guide ECL Comfort 210 / 310, application A217 / A317

2.5.6 Electrical connections, ECA 30 / 31


| Terminal | Terminal ECA 30 / 31 | Description | Type (recomm.) |
|----------|----------------------------|----------------------------------|---------------------------|
| 30 | 4 | Twisted pair | Cable 2 x twisted pair |
| 31 | 1 | | |
| 32 | 2 | Twisted pair | Cable 2 x twisted pair |
| 33 | 3 | | |
| | 4 | Ext. room temperature sensor* | ESM-10 |
| | 5 | | |

* After an external room temperature sensor has been connected, ECA 30 / 31 must be repowered.

The communication to the ECA 30 / 31 must be set up in the ECL Comfort controller in 'ECA addr'.

The ECA 30 / 31 must be set up accordingly.

After application setup the ECA 30 / 31 is ready after 2–5 min. A progress bar in the ECA 30 / 31 is displayed.

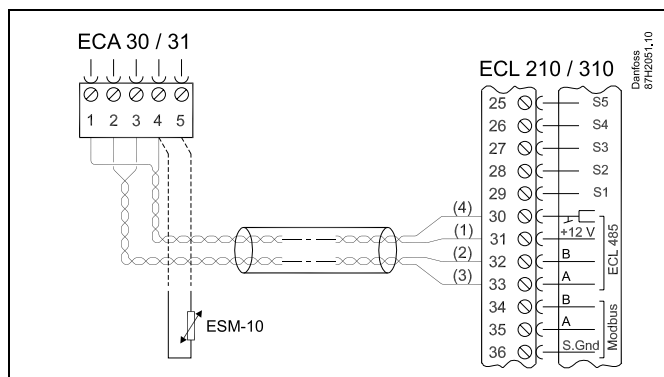

ECA information message:
'Application req. newer ECA':
The software of your ECA does not comply with the software of your ECL Comfort controller. Please contact your Danfoss sales office.



Some applications do not contain functions related to actual room temperature. The connected ECA 30 / 31 will only function as remote control.



Total cable length: Max. 200 m (all sensors incl. internal ECL 485 communication bus).
Cable lengths of more than 200 m may cause noise sensibility (EMC).


Installation Guide ECL Comfort 210 / 310, application A217 / A317

2.5.7 Electrical connections, master / slave systems

The controller can be used as master or slave in master / slave systems via the internal ECL 485 communication bus (2 x twisted pair cable).

The ECL 485 communication bus is not compatible with the ECL bus in ECL Comfort 110, 200, 300 and 301!


| Terminal | Description | Type (recomm.) |
|---|-----------------------------------|------------------------|
| 30 | Common terminal | Cable 2 x twisted pair |
| 31* | +12 V*, ECL 485 communication bus | |
| 32 | A, ECL 485 communication bus | |
| 33 | B, ECL 485 communication bus | |
| * Only for ECA 30 / 31 and master / slave communication | | |

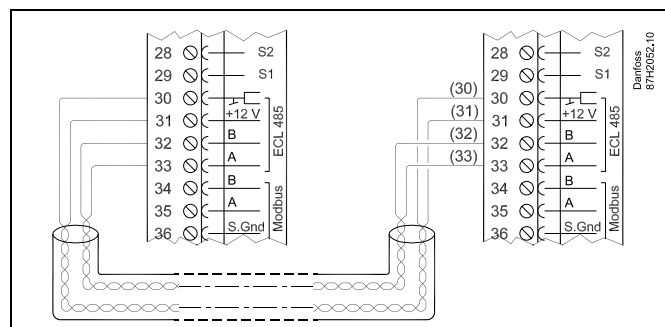


Total cable length: Max. 200 m (all sensors incl. internal ECL 485 communication bus).
Cable lengths of more than 200 m may cause noise sensibility (EMC).

2.5.8 Electrical connections, communication

Electrical connections, Modbus

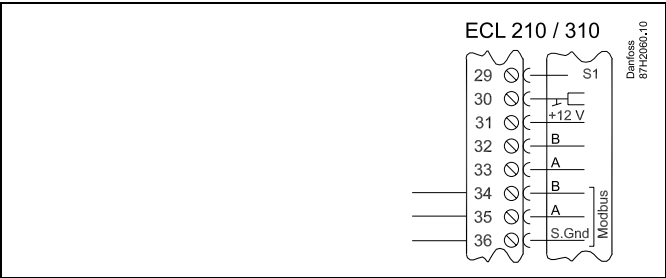

Electrical connections, M-bus

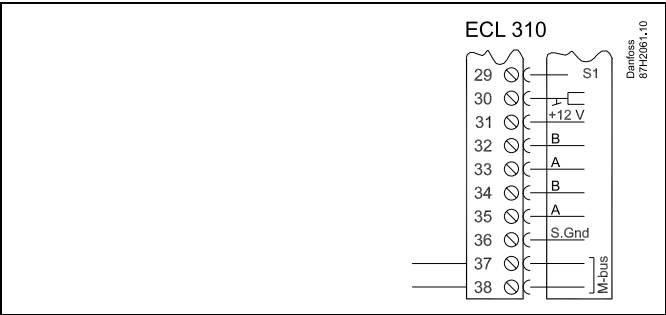

2.6 Inserting the ECL Application Key



2.6.1 Inserting the ECL Application Key

The ECL Application Key contains

- the application and its subtypes,
- currently available languages,
- factory settings: e.g. schedules, desired temperatures, limitation values etc. It is always possible to recover the factory settings,
- memory for user settings: special user / system settings.

After having powered-up the controller, different situations might be existing:

1. The controller is new from the factory, the ECL Application Key is not inserted.
2. The controller already runs an application. The ECL Application Key is inserted, but the application needs to be changed.
3. A copy of the controllers settings is needed for configuring another controller.

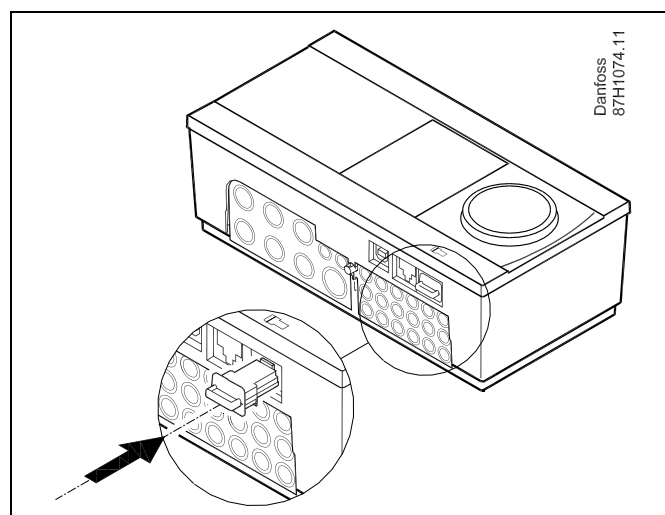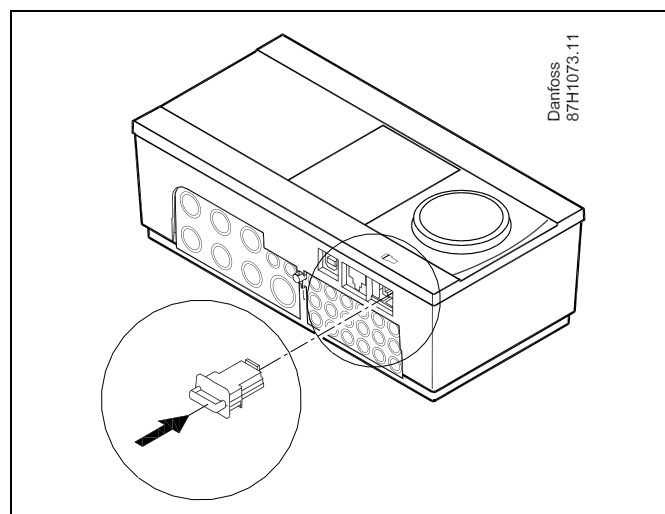


User settings are, among others, desired room temperature, desired DHW temperature, schedules, heat curve, limitation values etc.

System settings are, among others, communication set-up, display brightness etc.



Automatic update of controller software:

The software of the controller is updated automatically when the key is inserted (as of controller version 1.11). The following animation will be shown when the software is being updated:

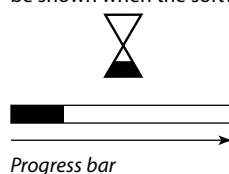

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Application Key: Situation 1

The controller is new from the factory, the ECL Application Key is not inserted.

An animation for the ECL Application Key insertion is displayed. Insert the Application Key .

Application Key name and Version is indicated (example: A266 Ver. 1.03).

If the ECL Application Key is not suitable for the controller, a "cross" is displayed over the ECL Application Key-symbol.

| Action: | Purpose: | Examples: |
|---------|---|-----------|
| | Select language | |
| | Confirm | |
| | Select application | |
| | Confirm with 'Yes' | |
| | Set 'Time & Date' | |
| | Turn and push the dial to select and change 'Hours', 'Minutes', 'Date', 'Month' and 'Year'. | |
| | Choose "Next" | |
| | Confirm with 'Yes' | |
| | Go to 'Aut. daylight' | |
| | Choose whether 'Aut. daylight' * should be active or not | YES or NO |

* 'Aut. daylight' is the automatic changeover between summer and winter time.

Depending on the contents of the ECL Application Key, procedure A or B is taking place:

A

The ECL Application key contains factory settings:

The controller reads / transfers data from the ECL Application Key to ECL controller.

The application is installed, and the controller resets and starts up.

B

The ECL Application key contains changed system settings:

Push the dial repeatedly.

'NO': Only factory settings from the ECL Application Key will be copied to the controller.

'YES*': Special system settings (differing from the factory settings) will be copied to the controller.

If the key contains user settings:


Push the dial repeatedly.

'NO': Only factory settings from the ECL Application Key will be copied to the controller.

'YES*': Special user settings (differing from the factory settings) will be copied to the controller.

* If 'YES' cannot be chosen, the ECL Application Key does not contain any special settings.

Choose 'Start copying' and confirm with 'Yes'.

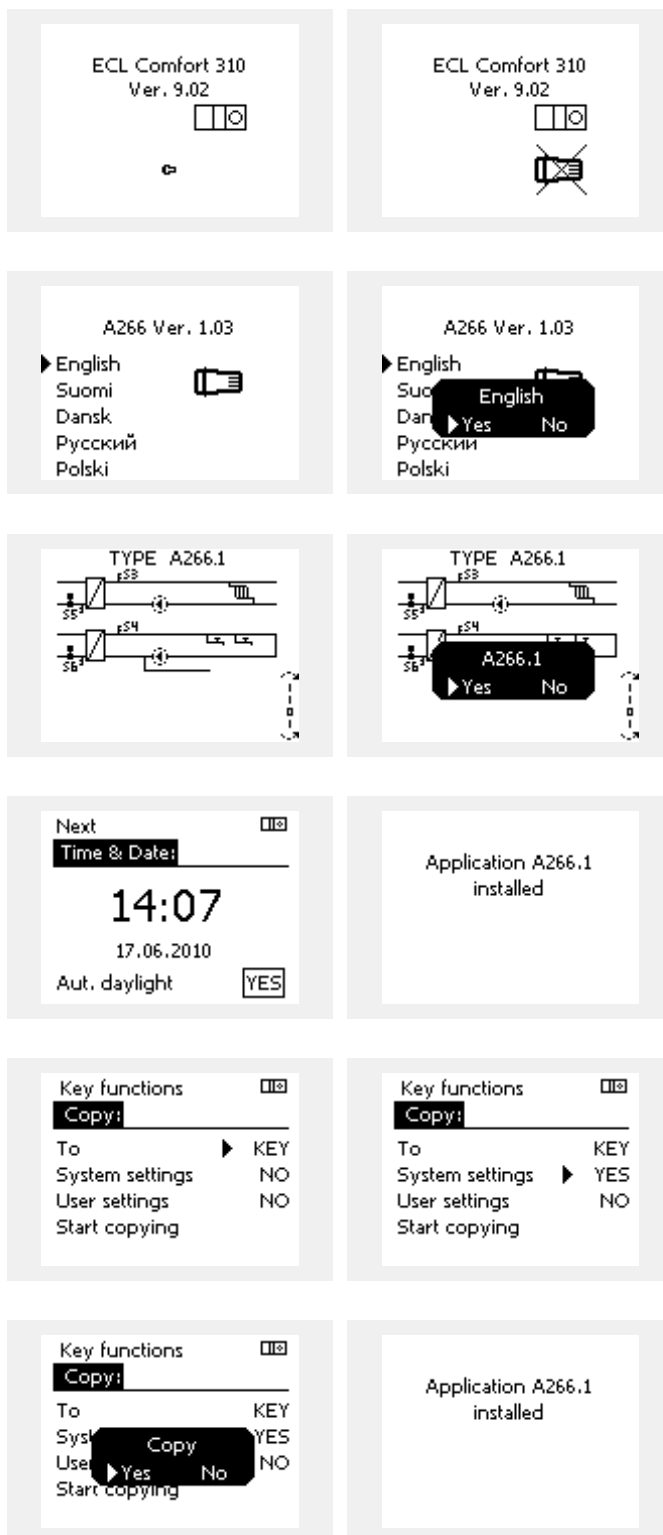






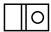





Installation Guide ECL Comfort 210 / 310, application A217 / A317





Application Key: Situation 2

The controller already runs an application. The ECL Application Key is inserted, but the application needs to be changed.

To change to another application on the ECL Application Key, the current application in the controller must be erased (deleted).

Be aware that the Application Key must be inserted.

| Action: | Purpose: | Examples: |
|---|--|---|
|  | Choose 'MENU' in any circuit | MENU |
|  | Confirm | |
|  | Choose the circuit selector at the top right corner in the display | |
|  | Confirm | |
|  | Choose 'Common controller settings' |  |
|  | Confirm | |
|  | Choose 'Key functions' | |
|  | Confirm | |
|  | Choose 'Erase application' | |
|  | Confirm with 'Yes' | |

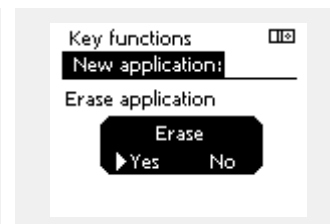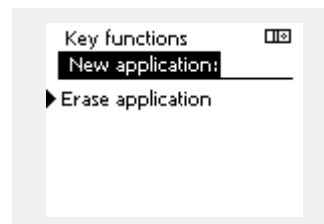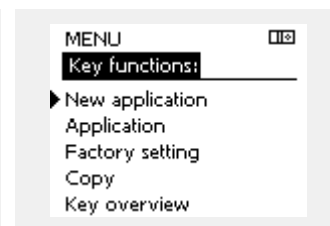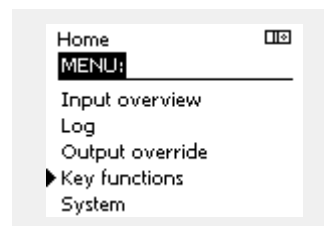

The controller resets and is ready to be configured.

Follow the procedure described in situation 1.

Installation Guide ECL Comfort 210 / 310, application A217 / A317


















Application Key: Situation 3

A copy of the controllers settings is needed for configuring another controller.

This function is used

- for saving (backup) of special user and system settings
- when another ECL Comfort controller of the same type (210 or 310) must be configured with the same application but user / system settings differ from the factory settings.

How to copy to another ECL Comfort controller:




| Action: | Purpose: | Examples: |
|---|--|---|
|  | Choose 'MENU' | MENU |
|  | Confirm | |
|  | Choose the circuit selector at the top right corner in the display | |
|  | Confirm | |
|  | Choose 'Common controller settings' |  |
|  | Confirm | |
|  | Go to 'Key functions' | |
|  | Confirm | |
|  | Choose 'Copy' | |
|  | Confirm | |
|  | Choose 'To:' | * |
|  | Push the dial repeatedly to choose copy direction | |
|  | Choose 'System settings' or 'User settings' | ** |
|  | Push the dial repeatedly to choose 'Yes' or 'No' in 'Copy'. Push to confirm. | 'NO' or 'YES' |
|  | Choose 'Start copying' | |
|  | The Application Key or the controller is updated with special system or user settings. | |

*

| | |
|--------|---|
| 'ECL': | Data will be copied from the Application Key to the ECL Controller. |
| 'KEY': | Data will be copied from the ECL Controller to the Application Key. |

**

| | |
|--------|--|
| 'NO': | The settings from the ECL controller will not be copied to the Application Key or to the ECL Comfort controller. |
| 'YES': | Special settings (differing from the factory settings) will be copied to the Application Key or to the ECL Comfort controller. If YES can not be chosen, there are no special settings to be copied. |

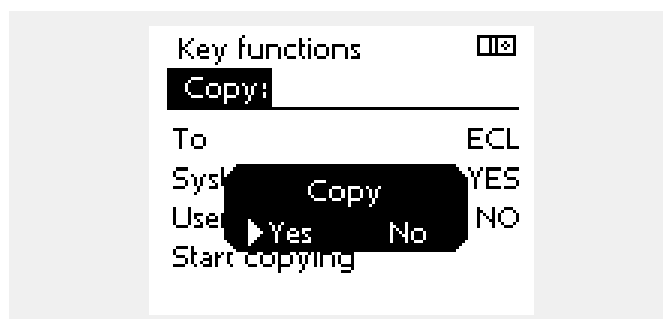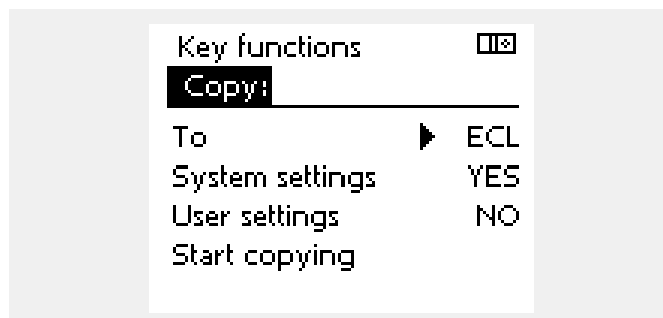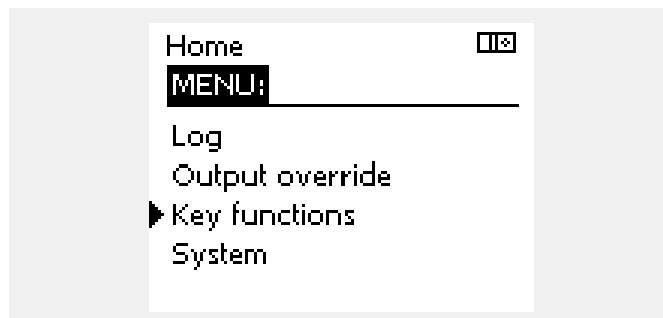

Installation Guide ECL Comfort 210 / 310, application A217 / A317

2.6.2 ECL Application Key, copying data

General principles

When the controller is connected and operating, you can check and adjust all or some of the basic settings. The new settings can be stored on the Key.

How to update the ECL Application Key after settings have been changed?

All new settings can be stored on the ECL Application Key.

How to store factory setting in the controller from the Application Key?

Please read the paragraph concerning Application Key, Situation 1: The controller is new from the factory, the ECL Application Key is not inserted.

How to store personal settings from the controller to the Key?

Please read the paragraph concerning Application Key, Situation 3: A copy of the controllers settings is needed for configuring another controller

As a main rule, the ECL Application Key should always remain in the controller. If the Key is removed, it is not possible to change settings.



Factory settings can always be restored.



Make a note of new settings in the 'Settings overview' table.



Do not remove the ECL Application Key while copying. The data on the ECL Application Key can be damaged!



It is possible to copy settings from one ECL Comfort controller to another controller provided that the two controllers are from the same series (210 or 310).

2.7 Check list



Is the ECL Comfort controller ready for use?

- ☐ Make sure that the correct power supply is connected to terminals 9 (Live) and 10 (Neutral).
- ☐ Check that the required controlled components (actuator, pump etc.) are connected to the correct terminals.
- ☐ Check that all sensors / signals are connected to the correct terminals (see 'Electrical connections').
- ☐ Mount the controller and switch on the power.
- ☐ Is the ECL Application Key inserted (see 'Inserting the Application Key').
- ☐ Is the correct language chosen (see 'Language' in 'Common controller settings').
- ☐ Is the time & date set correctly (see 'Time & Date' in 'Common controller settings').
- ☐ Is the right application chosen (see 'Identifying the system type').
- ☐ Check that all settings in the controller (see 'Settings overview') are set or that the factory settings comply with your requirements.
- ☐ Choose manual operation (see 'Manual control'). Check that valves open and close, and that required controlled components (pump etc.) start and stop when operated manually.
- ☐ Check that the temperatures / signals shown in the display match the actual connected components.
- ☐ Having completed the manual operation check, choose controller mode (scheduled, comfort, saving or frost protection).

Installation Guide ECL Comfort 210 / 310, application A217 / A317

2.8 Navigation, ECL Application Key A217 / A317

Navigation, application A217.1 / A317.1 (* A217.1 only, ** A317.1 only)

| Home | | DHW, circuit 1 | |
|--------------------|--------------------|----------------|-------------------|
| | | ID no. | Function |
| | | | |
| MENU | | | |
| Schedule | | Selectable | |
| Schedule circ. P | | Selectable | |
| Settings | Tank temperature | 11193 | Charge difference |
| | | 11195 | Start difference |
| | | 11194 | Stop difference |
| | | 11152 | Max. charge T |
| | Return limit | 11030 | Limit |
| | | 11035 | Infl. - max. |
| | | 11036 | Infl. - min. |
| | | 11037 | Adapt. time |
| | Flow / power limit | | Actual |
| | | 11111 | Limit |
| | | 11112 | Adapt. time |
| | | 11113 | Filter constant |
| | | 11109 | Input type |
| | | 11115 | Units |
| | | 11114 | Pulse* |
| | Control par. | 11174 | Motor pr. |
| | | | Xp actual |
| | | 11185 | Tn |
| | | 11186 | M run |
| | | 11187 | Nz |
| | Application | 11189 | Min. act. time |
| | | 11055 | Circ. P priority |
| | | 11054 | Cont. T control |
| | | 11041 | DHW P post-run |
| | | 11500 | Send desired T |
| | | 11076 | Circ. P frost T |
| | | 11093 | Frost pr. T |
| | | 11141 | Ext. input |
| | Anti-bacteria | 11142 | Ext. mode |
| | | | Selectable |
| Holiday | | Selectable | |
| Alarm | Temp. monitor. | 11147 | Upper difference |
| | | 11148 | Lower difference |
| | | 11149 | Delay |
| | | 11150 | Lowest temp. |
| | Digital S9** | 11636 | Alarm value |
| | | 11637 | Alarm time-out |
| Alarm overview | | | |
| Influence overview | Des. DHW T | | Return lim. |
| | | | Flow / power lim. |
| | | | Holiday |
| | | | Ext. override |
| | | | Anti-bacteria |
| | SCADA override | | |

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Navigation, application A217.1 / A317.1, Common controller settings (* A317.1 only)

| Home MENU | | Common controller settings | |
|------------------|---------------------|----------------------------|---|
| Time & Date | | ID no. | Function |
| Schedule output* | | | Selectable |
| Input overview | | | Supply T DHW flow T DHW return T Tank upper T Tank lower T S9 status* |
| Log (sensors) | Supply T | | Log today |
| | DHW flow & des. | | Log yesterday |
| | DHW return T & lim. | | Log 2 days |
| | Tank T up. & des. | | Log 4 days |
| | Tank T up. & low. | | |
| Output override | | | M1, P1, P3, A1 |
| Key functions | New application | | Erase application |
| | Application | | |
| | Factory setting | | System settings User settings Go to factory |
| | Copy | | To System settings User settings Start copying |
| | Key overview | | |
| System | ECL version | | Code no. Hardware Software Build no. Serial no. MAC Production week |
| | Extension | | |
| | Ethernet | | |
| | M-bus config | | Selectable |
| | Energy Meters | | Selectable |
| | Display | 60058 | Backlight |
| | | 60059 | Contrast |
| | Communication | 38 | Modbus addr. |
| | | 2048 | ECL 485 addr. |
| | | 2150 | Service pin |
| | | 2151 | Ext. reset |
| | Language | 2050 | Language |

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Navigation, application A217.2 / A317.2 (* A217.2 only, ** A317.2 only)

| Home | | DHW, circuit 1 | |
|--------------------|--------------------|-----------------|---|
| | | ID no. | Function |
| | | | |
| MENU | | | |
| Schedule | | Selectable | |
| Schedule circ. P | | Selectable | |
| Settings | Tank temperature | 11193 | Charge difference |
| | | 11195 | Start difference |
| | | 11194 | Stop difference |
| | | 11152 | Max. charge T |
| | | 11068 | Flow T adapt time |
| | Return limit | 11030 | Limit |
| | | 11035 | Infl. - max. |
| | | 11036 | Infl. - min. |
| | | 11037 | Adapt. time |
| | Flow / power limit | | Actual |
| | | 11111 | Limit |
| | | 11112 | Adapt. time |
| | | 11113 | Filter constant |
| | | 11109 | Input type |
| | | 11115 | Units |
| | | 11114 | Pulse* |
| | Control par. | 11174 | Motor pr. |
| | | | Xp actual |
| | | 11185 | Tn |
| | | 11186 | M run |
| | | 11187 | Nz |
| | | 11189 | Min. act. time |
| | Application | 11055 | Circ. P priority |
| | | 11054 | Cont. T control |
| | | 11041 | DHW P post-run |
| | | 11042 | Char. P post-run |
| | | 11500 | Send desired T |
| | 11076 | Circ. P frost T | |
| | 11093 | Frost pr. T | |
| | 11141 | Ext. input | |
| | 11142 | Ext. mode | |
| Anti-bacteria | | Selectable | |
| Holiday | | Selectable | |
| Alarm | Temp. monitor. | 11147 | Upper difference |
| | | 11148 | Lower difference |
| | | 11149 | Delay |
| | | 11150 | Lowest temp. |
| | Digital S9** | 11136 | Alarm value |
| | | 11137 | Alarm time-out |
| Alarm overview | | | |
| Influence overview | Des. DHW T | | Return lim. Flow / power lim. Holiday Ext. override Anti-bacteria SCADA override |

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Navigation, application A217.2 / A317.2, Common controller settings (* A217.2 only, ** A317.2 only)

| Home MENU | | Common controller settings | |
|-------------------|--|----------------------------|--|
| | | ID no. | Function |
| Time & Date | | | Selectable |
| Schedule output** | | | Selectable |
| Input overview | | | Supply T DHW flow T Charge T* DHW return T Tank upper T Tank lower T S9 status** |
| Log (sensors) | Supply T DHW flow & des. Charge T DHW return T & lim. Tank T up. & des. Tank T up. & low. | | Log today Log yesterday Log 2 days Log 4 days |
| Output override | | | M1, P1, P2, P3, A1 |
| Key functions | New application | | Erase application |
| | Application | | |
| | Factory setting | | System settings User settings Go to factory |
| | Copy | | To System settings User settings Start copying |
| | Key overview | | |
| System | ECL version | | Code no. Hardware Software Build no. Serial no. MAC Production week |
| | Extension | | |
| | Ethernet | | |
| | M-bus config | | Selectable |
| | Energy Meters | | Selectable |
| | Display | 60058 60059 | Backlight Contrast |
| | Communication | 38 2048 2150 2151 | Modbus addr. ECL 485 addr. Service pin Ext. reset |
| | Language | 2050 | Language |
| | | | |
| | | | |

Installation Guide ECL Comfort 210 / 310, application A217 / A317

3.0 Daily use

3.1 How to navigate


You navigate in the controller by turning the dial left or right to the desired position (↻).

The dial has a built-in accellerator. The faster you turn the dial, the faster it reaches the limits of any wide setting range.


The position indicator in the display (▶) will always show you where you are.

Push the dial to confirm your choices (⏏).


The display examples are from a two-circuit application: One heating circuit (⏏) and one domestic hot-water (DHW) circuit (⏏). The examples might differ from your application.

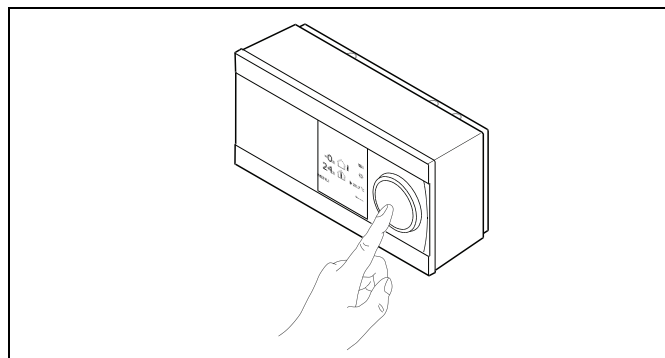

Heating circuit (⏏):

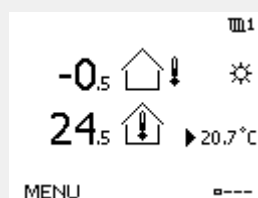

DHW circuit (⏏):

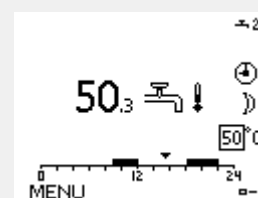

Some general settings which apply to the entire controller are located in a specific part of the controller.

To enter 'Common controller settings':

| Action: | Purpose: | Examples: |
|---------|--|-----------|
| ↻ | Choose 'MENU' in any circuit | MENU |
| ⏏ | Confirm | |
| ↻ | Choose the circuit selector at the top right corner in the display | |
| ⏏ | Confirm | |
| ↻ | Choose 'Common controller settings' | ⏏ |
| ⏏ | Confirm | |

Circuit selector



3.2 Understanding the controller display

Choosing a favorite display

Your favorite display is the display you have chosen as the default display. The favorite display will give you a quick overview of the temperatures or units that you want to monitor in general.

If the dial has not been activated for 20 min., the controller will revert to the overview display you have chosen as favorite.



Change between displays by turning the dial until you reach the display selector (A---) at bottom right side of the display. Turn the dial and push to choose your favorite overview display.



If the temperature value is displayed as

"- -" the sensor in question is not connected.

"- - -" the sensor connection is short-circuited.

DHW circuit

Overview display 1 informs about:
actual DHW temperature, controller mode, desired DHW temperature as well as the comfort schedule of the current day.

Overview display 2 informs about:
state of the controlled components, actual DHW temperature, (desired DHW temperature), controller mode, return temperature (limitation value).


Dependent on chosen display, the overview displays for the DHW circuit inform you about:

- actual DHW temperature (50.3)
- controller mode (☼)
- desired DHW temperature (50 °C)
- comfort schedule of the current day(0 - 12 - 24)
- state of the controlled components (M1, P1)
- actual DHW temperature (50 °C), (desired DHW temperature (50))
- return temperature (- - °C) (limitation temperature (30))


Setting the desired temperature

Depending on the chosen circuit and mode, it is possible to enter all daily settings directly from the overview displays (see also the next page concerning symbols).

Overview display 1:

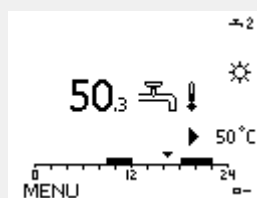



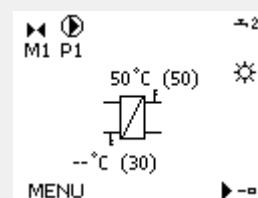

Overview display 2:




Installation Guide ECL Comfort 210 / 310, application A217 / A317

Setting the desired DHW temperature


The desired DHW temperature can easily be adjusted in the overview displays for the DHW circuit.

| Action: | Purpose: | Examples: |
|---|------------------------------------|-----------|
|  | Desired DHW temperature | 50 |
|  | Confirm | |
|  | Adjust the desired DHW temperature | 55 |
|  | Confirm | |

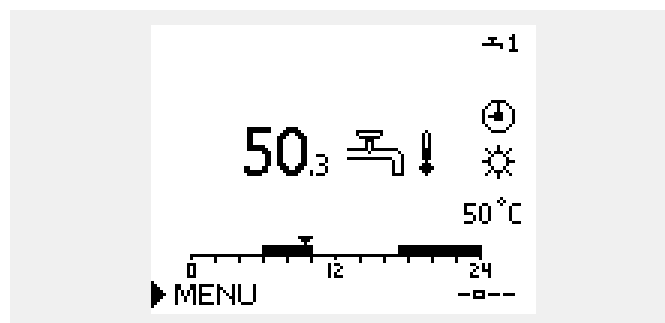

In addition to the information about desired and actual DHW temperature, the today's schedule is visible.

The display example indicates that the controller is in scheduled operation and in comfort mode.



Overview of setting range and settings for DHW modes:

| Mode | Setting range | Factory setting |
|-------------------|---------------|-----------------|
| Comfort | 10 ... 150 °C | 50 °C |
| Saving | 10 ... 150 °C | 10 °C |
| Frost protection* | 5 ... 40 °C | 10 °C |

* related to desired flow temperature

Installation Guide ECL Comfort 210 / 310, application A217 / A317

3.3 What do the symbols mean?

| Symbol | Description | |
|--------|------------------------------|----------------------|
| | Outdoor temp. | Temperature |
| | Room temp. | |
| | DHW temp. | |
| | Position indicator | |
| | Scheduled mode | Mode |
| | Comfort mode | |
| | Saving mode | |
| | Frost protection mode | |
| | Manual mode | |
| | Heating | Circuit |
| | DHW | |
| | Common controller settings | |
| | Pump ON | Controlled component |
| | Pump OFF | |
| | Actuator opens | |
| | Actuator closes | |
| | Alarm | |
| | Display selector | |
| | Max. and min. value | |
| | Trend in outdoor temperature | |
| | Wind speed sensor | |

| Symbol | Description |
|--------|-----------------------------------|
| -- | Sensor not connected or not used |
| --- | Sensor connection short-circuited |
| | Fixed comfort day (holiday) |
| | Active influence |
| — | No influence |

Additional symbols, ECA 30 / 31:

| Symbol | Description |
|--------|------------------------------------|
| | ECA Remote Control Unit |
| | Relative humidity indoor |
| | Day off |
| | Holiday |
| | Relaxing (extended comfort period) |
| | Going out (extended saving period) |


3.4 Monitoring temperatures and system components

DHW circuit

The overview display in the DHW circuit ensures a quick overview of the actual and (desired) temperatures as well as the actual state of the system components.

Display example:


| | |
|-------|--|
| 50 °C | Flow temperature |
| (50) | Desired flow temperature |
| - - | Return temperature: sensor not connected |
| (30) | Return temperature limitation |

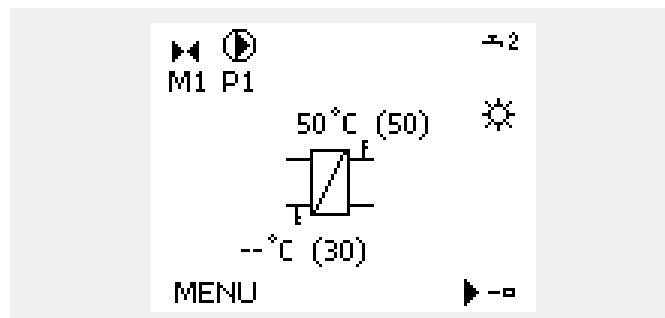

Input overview

Another option to get a quick overview of measured temperatures is the 'Input overview' which is visible in the common controller settings (how to enter the common controller settings, see 'Introduction to common controller settings'.)

As this overview (see display example) only states the measured actual temperatures, it is read-only.

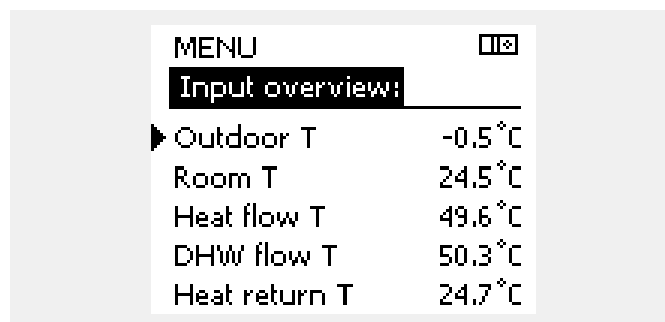

3.5 Influence overview

The menu gives an overview of the influences on the desired flow temperature. It differs from application to application which parameters are listed. It can be helpful in a service situation to explain unexpected conditions or temperatures among others.

If the desired flow temperature is influenced (corrected) by one or more parameters, it is indicated by a small line with arrow-down, arrow-up or double-arrow:

Arrow-down:

The parameter in question reduces the desired flow temperature.



Arrow-up:

The parameter in question increases the desired flow temperature.

Double-arrow:

The parameter in question creates an override (e.g. Holiday).



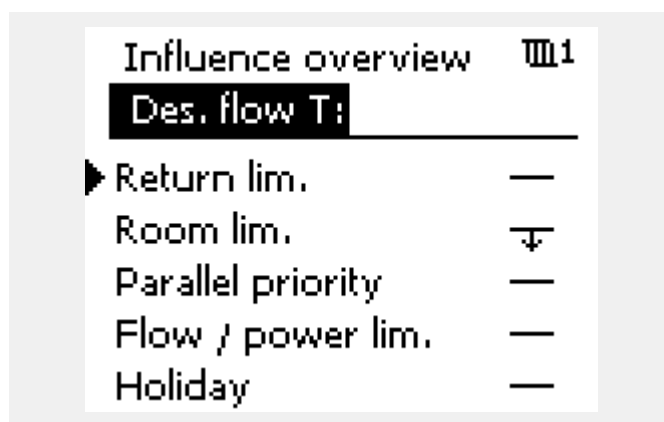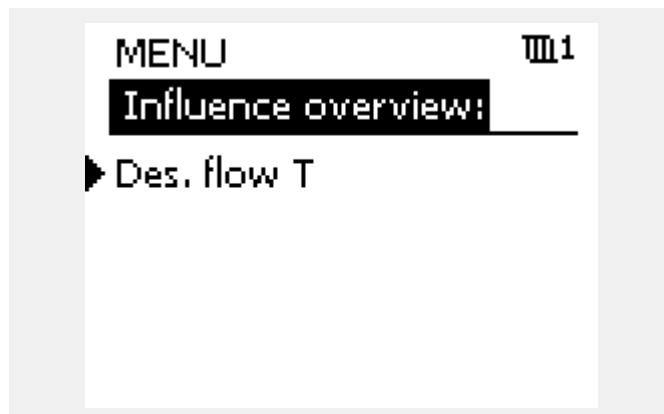























In the example, the arrow in the symbol points downwards for 'Room lim.'. This means that the actual room temperature is higher than the desired room temperature which again results in a decrease of the desired flow temperature.




3.6 Manual control

It is possible to manually control the installed components.

Manual control can only be selected in favorite displays in which the symbols for the controlled components (valve, pump etc.) are visible.

| Action: | Purpose: | Examples: |
|---|--------------------------------|---|
|  | Choose mode selector |  |
|  | Confirm | |
|  | Choose manual mode |  |
|  | Confirm | |
|  | Choose pump |  |
|  | Confirm | |
|  | Switch ON the pump |  |
|  | Switch OFF the pump. |  |
|  | Confirm pump mode | |
|  | Choose motorized control valve |  |
|  | Confirm | |
|  | Open the valve |  |
|  | Stop opening the valve |  |
|  | Close the valve |  |
|  | Stop closing the valve |  |
|  | Confirm valve mode | |

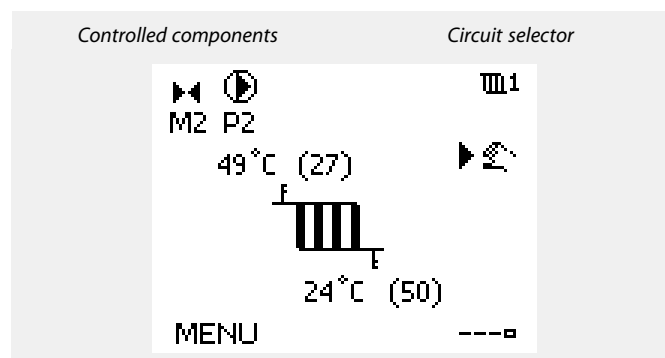

During manual operation, all control functions are deactivated. Frost protection is not active.



When manual control is selected for one circuit, it is automatically selected for all circuits!

To leave manual control, use the mode selector to select the desired mode. Push the dial.

Manual control is typically used when commissioning the installation. The controlled components, valve, pump etc., can be controlled for correct function.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

3.7 Schedule















3.7.1 Set your schedule

The schedule consists of a 7-day week:

- M = Monday
- T = Tuesday
- W = Wednesday
- T = Thursday
- F = Friday
- S = Saturday
- S = Sunday

The schedule will day-by-day show you the start and stop times of your comfort periods (heating / DHW circuits).




Changing your schedule:

| Action: | Purpose: | Examples: |
|---|---|-----------|
|  | Choose 'MENU' in any of the overview displays | MENU |
|  | Confirm | |
|  | Confirm the choice 'Schedule' | |
|  | Choose the day to change | ▶ |
|  | Confirm* | T |
|  | Go to Start1 | |
|  | Confirm | |
|  | Adjust the time | |
|  | Confirm | |
|  | Go to Stop1, Start2 etc. etc. | |
|  | Return to 'MENU' | MENU |
|  | Confirm | |
|  | Choose 'Yes' or 'No' in 'Save' | |
|  | Confirm | |

* Several days can be marked

The chosen start and stop times will be valid for all the chosen days (in this example Thursday and Saturday).

You can set max. 3 comfort periods a day. You can delete a comfort period by setting start and stop times to the same value.

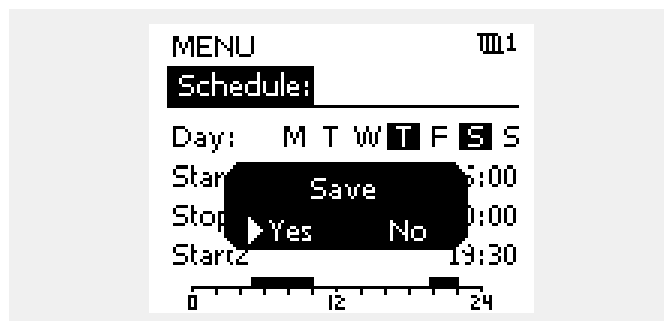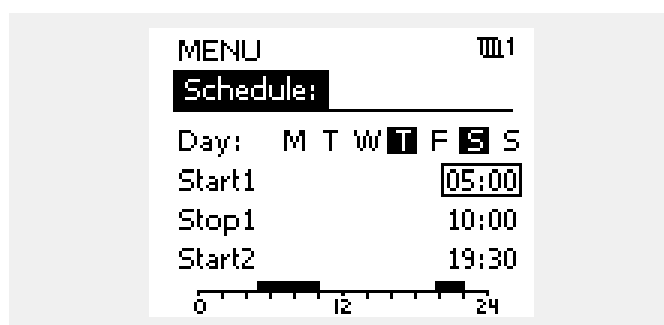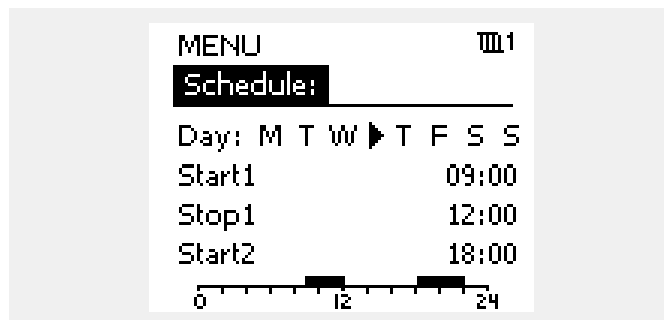

Each circuit has its own schedule. To change to another circuit, go to 'Home', turn the dial and choose the desired circuit.



The start and stop times can be set in half-hourly (30 min.) intervals.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

4.0 Settings overview

It is recommendable to make a note of any changed settings in the empty columns.

| Setting | ID | Page | Factory settings in circuit(s) | | | | | | | |
|---|-------|--------------------|--------------------------------|---|---|--|--|--|--|--|
| | | | 1 | 2 | 3 | | | | | |
| Charge difference | 11193 | 57 | 15 K | | | | | | | |
| Start difference | 11195 | 57 | -3 K | | | | | | | |
| Stop difference | 11194 | 58 | 3 K | | | | | | | |
| Max. charge T | 11152 | 59 | 80 °C | | | | | | | |
| Flow T adapt time — A217.2 / A317.2 | 11068 | 59 | 20 s | | | | | | | |
| Limit (return temp. limitation) | 11030 | 60 | 40 °C | | | | | | | |
| Infl. - max. (return temp. limitation - max. influence) | 11035 | 60 | -2.0 | | | | | | | |
| Infl. - min. (return temp. limitation - min. influence) | 11036 | 60 | 0.0 | | | | | | | |
| Adapt. time (adaptation time) | 11037 | 61 | 25 s | | | | | | | |
| Adapt. time (adaptation time) | 11112 | 62 | OFF | | | | | | | |
| Filter constant | 11113 | 62 | 10 | | | | | | | |
| Input type, ECL Key A2xx | 11109 | 63 | OFF | | | | | | | |
| Input type, ECL Key A3xx | 11109 | 63 | OFF | | | | | | | |
| Pulse, ECL Key A2xx | 11114 | 63 | OFF | | | | | | | |
| Units, ECL Key A2xx | 11115 | 64 | ml, l/h | | | | | | | |
| Units — ECL Key A3xx | 11115 | 64 | l/h | | | | | | | |
| Motor pr. (motor protection) | 11174 | 65 | OFF | | | | | | | |
| Xp actual | | 65 | | | | | | | | |
| Tn (integration time constant) | 11185 | 65 | 30 s | | | | | | | |
| M run (running time of the motorized control valve) | 11186 | 65 | 30 s | | | | | | | |
| Nz (neutral zone) | 11187 | 66 | 3 K | | | | | | | |
| Min. act. time (min. activation time gear motor) | 11189 | 66 | 3 | | | | | | | |
| Circ. P priority | 11055 | 67 | OFF | | | | | | | |
| Cont. T control | 11054 | 67 | OFF | | | | | | | |
| DHW P post-run – A217.1 / A317.1 | 11041 | 67 | 0 m | | | | | | | |
| DHW P post-run – A217.2 / A317.2 | 11041 | 67 | 0 m | | | | | | | |
| Char. P post-run – A217.2 / A317.2 | 11042 | 68 | 1 m | | | | | | | |
| Send desired T | 11500 | 68 | ON | | | | | | | |
| Circ. P frost T | 11076 | 68 | 2 °C | | | | | | | |
| Frost pr. T (frost protection temperature) | 11093 | 68 | 10 °C | | | | | | | |
| Ext. input (external override), ECL 210 | 11141 | 69 | OFF | | | | | | | |
| Ext. input (external override) — ECL 310 | 11141 | 70 | OFF | | | | | | | |
| Ext. mode (external override mode) | 11142 | 70 | COM-FORT | | | | | | | |
| Day | | 72 | | | | | | | | |
| Start time | | 72 | 00:00 | | | | | | | |
| Duration | | 72 | 120 m | | | | | | | |
| Desired T | | 72 | OFF | | | | | | | |
| Upper difference | 11147 | 73 | OFF | | | | | | | |
| Lower difference | 11148 | 73 | OFF | | | | | | | |
| Delay | 11149 | 74 | 10 m | | | | | | | |
| Lowest temp. | 11150 | 74 | 30 °C | | | | | | | |

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Setting | ID | Page | Factory settings in circuit(s) | | | | | | |
|--|-------|--------------------|--------------------------------|---|---|--|--|---------|--|
| | | | 1 | 2 | 3 | | | | |
| Backlight (display brightness) | 60058 | 83 | | | | | | 5 | |
| Contrast (display contrast) | 60059 | 83 | | | | | | 3 | |
| Modbus addr. | 38 | 83 | | | | | | 1 | |
| ECL 485 addr. (master / slave address) | 2048 | 84 | | | | | | 15 | |
| Service Pin | 2150 | 84 | | | | | | 0 | |
| Ext. reset | 2151 | 84 | | | | | | 0 | |
| Language | 2050 | 84 | | | | | | English | |


Installation Guide ECL Comfort 210 / 310, application A217 / A317

5.0 Settings, circuit 1

5.1 Tank temperature

| Charge difference | | 11193 |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 1 ... 50 K | 15 K |
| Set the number of degrees above the desired DHW temperature that will result in the DHW heating (charging) temperature. | | |

1 ... 50: Number of degrees to be added to the desired DHW temperature to obtain the DHW heating (charging) temperature.

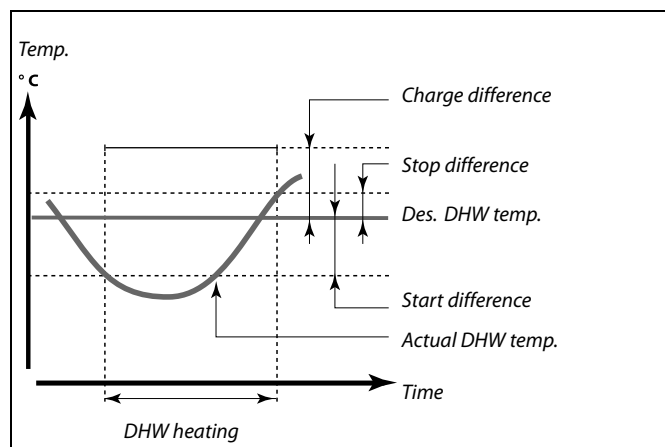

The desired DHW temperature is related to the tank temperature sensor.
If two tank temperature sensors are installed, the relation is to the upper tank temperature sensor.

| Start difference | | 11195 |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | -50 ... -1 K | -3 K |
| Set the number of degrees below the desired DHW temperature that will start the DHW heating (charging). | | |

-50 ... -1: Set the number of degrees.


Example:

Desired DHW temp.: 55 °C

Start difference: -3 K

Result:

The DHW heating starts when the temperature measured by the tank temperature sensor (upper) is lower than 52 °C.

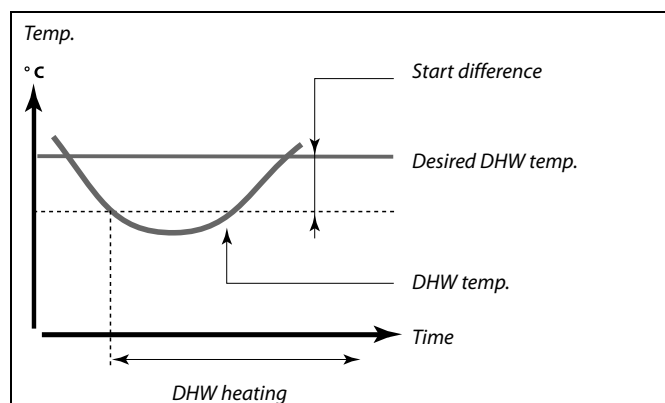


Installation Guide ECL Comfort 210 / 310, application A217 / A317


| Stop difference | | 11194 |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | -50 ... 50 K | 3 K |
| <p>One DHW tank temperature sensor: Set the number of degrees above the desired DHW temperature that will stop the DHW heating (charging).</p> <p>Two DHW tank temperature sensors: Set the number of degrees above or below the desired DHW temperature but measured by the lower tank temperature sensor that will stop the DHW heating (charging).</p> | | |

-50 ... 50: Set the number of degrees.


One DHW tank temperature sensor (example with positive 'Stop difference' value):

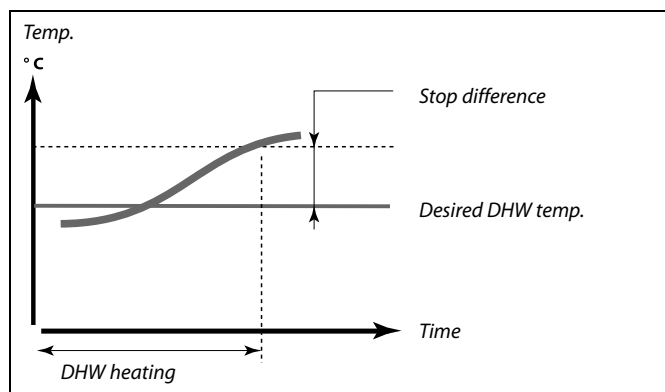

One DHW tank temperature sensor (example with negative 'Stop difference' value):

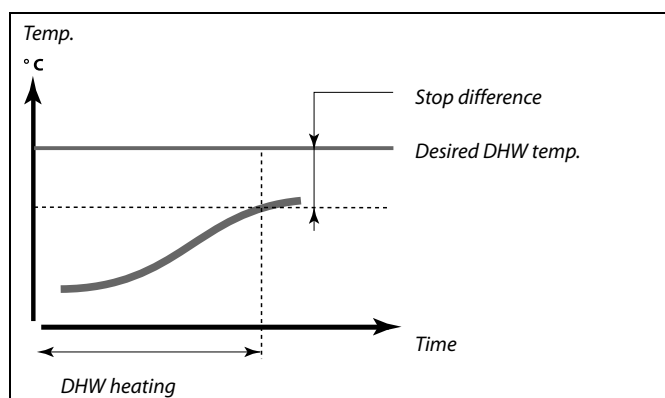


Two DHW tank temperature sensors, upper and lower

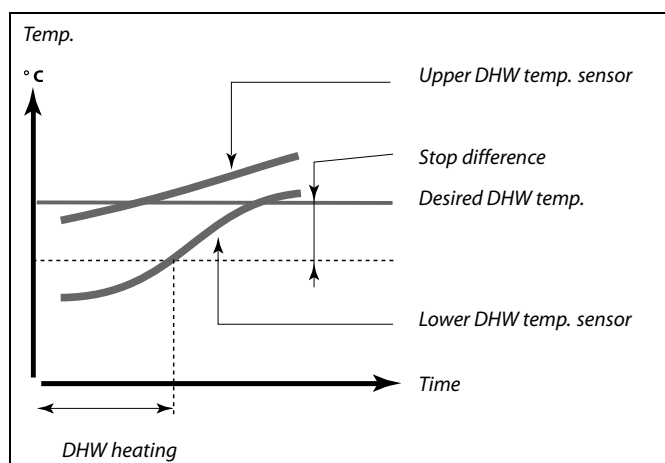


Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Max. charge T | | 11152 |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 10 ... 110 °C | 80 °C |
| Set the max. temperature at S3 for heating the DHW. | | |

10 ... 110: Set the temperature.

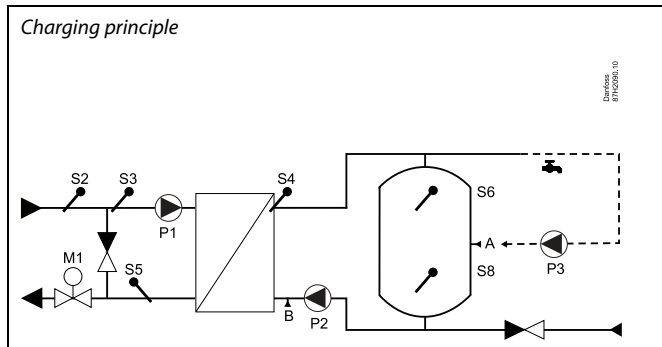

| Flow T adapt time — A217.2 / A317.2 | | 11068 |
|--|------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / 1 ... 50 s | 20 s |
| Set the adaptation time (seconds) for the desired temperature at S3 based on the desired charging temperature at S4. The ECL Comfort controller gradually increases the desired temperature at S3 in order to maintain the desired temperature at S4. | | |



The desired flow temperature at S3 cannot be higher than the set temperature in 'Max. charge T'.

- OFF:** The desired flow temperature at S3 is not adapted to the desired charging temperature at S4.
- 1:** The adaptation is quick.
- 50:** The adaptation is slow.


Installation Guide ECL Comfort 210 / 310, application A217 / A317

5.2 Return limit

The return temperature limitation is based on a constant temperature value.

The controller automatically changes the desired flow temperature to obtain an acceptable return temperature when the return temperature falls below or gets higher than the set limit.

This limitation is based on a PI regulation where P ('Infl.' factor) responds quickly to deviations and I ('Adapt. time') responds slower and over time removes the small offsets between the desired and actual values. This is done by changing the desired flow temperature.

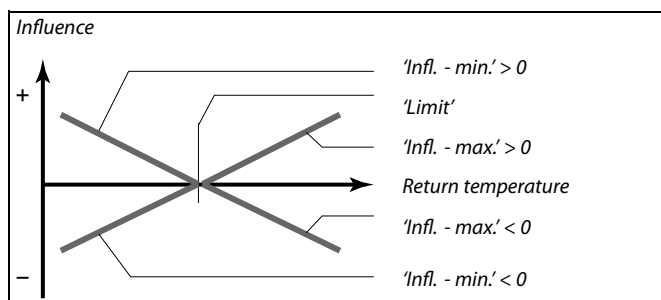

If the 'Infl.' factor is too high and / or the 'Adapt. time' too low, there is a risk of unstable control.

| Limit (return temp. limitation) | | 11030 |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 10 ... 110 °C | 40 °C |
| Set the return temperature you accept for the system. | | |

When the return temperature falls below or gets higher than the set value, the controller automatically changes the desired flow temperature to obtain an acceptable return temperature. The influence is set in 'Infl. - max.' and 'Infl. - min.'.

| Infl. - max. (return temp. limitation - max. influence) | | 11035 |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | -9.9 ... 9.9 | -2.0 |
| Determines how much the desired flow temperature will be influenced if the return temperature is higher than the calculated limit. | | |

Influence higher than 0:

The desired flow temperature is increased, when the return temperature gets higher than the calculated limit.

Influence lower than 0:

The desired flow temperature is decreased, when the return temperature gets higher than the calculated limit.

Example

The return limit is active above 50 °C.

The influence is set to -2.0.

The actual return temperature is 2 degrees too high.

Result:

The desired flow temperature is changed by $-2.0 \times 2 = -4.0$ degrees.



Normally, this setting is lower than 0 in district heating systems to avoid a too high return temperature.

Typically, this setting is 0 in boiler systems because a higher return temperature is acceptable (see also 'Infl. - min.').

| Infl. - min. (return temp. limitation - min. influence) | | 11036 |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | -9.9 ... 9.9 | 0.0 |
| Determines how much the desired flow temperature will be influenced if the return temperature is lower than the calculated limit. | | |

Influence higher than 0:

The desired flow temperature is increased, when the return temperature gets below the calculated limit.

Influence lower than 0:

The desired flow temperature is decreased, when the return temperature gets below the calculated limit.



Normally, this setting is 0 in district heating systems because a lower return temperature is acceptable.

Typically, this setting is higher than 0 in boiler systems to avoid a too low return temperature (see also 'Infl. - max.').

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Adapt. time (adaptation time) | | 11037 |
|--|------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / 1 ... 50 s | 25 s |
| Controls how fast the return temperature adapts to the desired return temperature limit (I control). | | |



The adaptation function can correct the desired flow temperature with max. 8 K.

- OFF:** The control function is not influenced by the 'Adapt. time'.
- 1:** The desired temperature is adapted quickly.
- 50:** The desired temperature is adapted slowly.

Installation Guide ECL Comfort 210 / 310, application A217 / A317


5.3 Flow / power limit

Depending on controller type, the flow / power limit is based on different input types:

| ECL Key application | ECL Comfort 210 controller | ECL Comfort 310 controller |
|---------------------|----------------------------|----------------------------|
| A2xx | Pulse signal | Pulse signal |
| A3xx | Not possible | M-bus signal |

A flow or energy meter can be connected to the ECL controller in order to limit the flow or consumed power. The signal from the flow or energy meter can be based on pulse or M-bus signal.

When the flow / power gets higher than the set limit, the controller gradually reduces the desired DHW temperature to obtain an acceptable max. flow or power consumption.

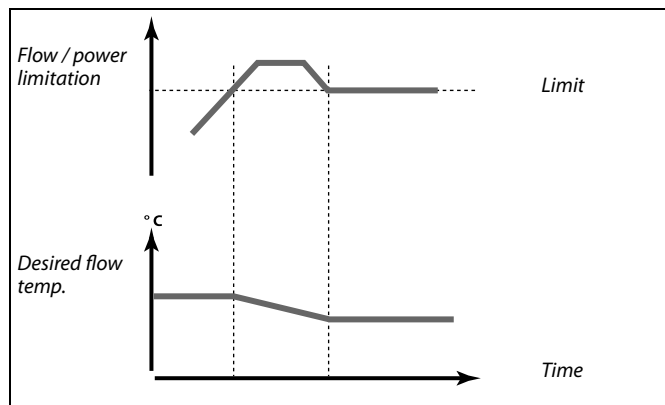

| Actual (actual flow or power) 11110 | | |
|-------------------------------------|----------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | Read-out only | |

The value is the actual flow or power based on the signal from flow / energy meter.

| Limit (limitation value) 11111 | | |
|--------------------------------|--------------------------|------------------|
| Circuit | Setting range | Factory setting |
| 1 | 0.0 ... 999.9 l/h | 999.9 l/h |

Set the limitation value.

| Adapt. time (adaptation time) 11112 | | |
|-------------------------------------|-------------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / 1 ... 50 s | OFF |

Controls how fast the flow / power limitation adapts to the desired limitation.



If the 'Adapt. time' is too low, there is a risk of unstable control.

OFF: The control function is not influenced by the 'Adapt. time'.

1: The desired temperature is adapted quickly.

50: The desired temperature is adapted slowly.

| Filter constant 11113 | | |
|-----------------------|-----------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 1 ... 50 | 10 |

The actual filter dampens the flow / power input data by the set factor.

1: Minor dampening (low filter constant)


50: Major dampening (high filter constant)

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Input type, ECL Key A2xx | | 11109 |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / IM1 | OFF |
| Choice of pulse type signal applied to input S7. Possible in ECL Comfort 210 as well as ECL Comfort 310 controllers. | | |

OFF: No input.

IM1: Pulse.




Flow or power limitation is based on pulse signals.

| Input type, ECL Key A3xx | | 11109 |
|--|-------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / EM1 ... EM5 | OFF |
| Choice of M-bus signal from energy meter number 1 ... 5. Only possible in ECL Comfort 310. | | |

OFF: No M-bus signal acquired.

EM1 ... EM5: Energy meter number.



Flow or power limitation is based on M-bus signal (ECL Comfort 310 controllers only).

| Pulse, ECL Key A2xx | | 11114 |
|---|------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / 1 ... 9999 | OFF |
| Set the value of the pulses from the flow / heat meter. | | |

OFF: No input.

1 ... 9999: Pulse value.

Example :

One pulse can represent a number of litres (from a flow meter) or a number of kWh (from a heat meter).

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Units, ECL Key A2xx | | 11115 |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | See the list | ml, l/h |
| Choice of units for measured values. Choose a value in the range 1 ... 9999 in 'Pulse'. | | |

Units to the left: pulse value.

Units to the right: actual and limitation values.

The value from the flow meter is expressed as ml or l.

The value from the heat meter is expressed as Wh, kWh, MWh or GWh.

The values for the actual flow and the flow limitation are expressed as l/h or m³/h.

The values for the actual power and the power limitation are expressed as kW, MW or GW.



List for setting range of 'Units':

ml, l/h
l, l/h
ml, m³/h
l, m³/h
Wh, kW
kWh, kW
kWh, MW
MWh, MW
MWh, GW
GWh, GW

Example 1:

'Units' (11115): l, m³/h

'Pulse' (11114): 10

Each pulse represents 10 litres and the flow is expressed as cubic meters (m³) per hour.

Example 2:

'Units' (11115): kWh, kW (= kilo Watt hour, kilo Watt)

'Pulse' (11114): 1

Each pulse represents 1 kilo Watt hour and the power is expressed in kilo Watt.

| Units — ECL Key A3xx | | 11115 |
|--------------------------------------|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | See the list | l/h |
| Choice of units for measured values. | | |

Flow values are expressed as l/h or m³/h

Power values are expressed as kW, MW or GW.



List for setting range of 'Units':

l/h
m³/h
kW
MW
GW

Installation Guide ECL Comfort 210 / 310, application A217 / A317

5.4 Control parameters

| Motor pr. (motor protection) 11174 | | |
|---|-------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / 10 ... 59 m | OFF |
| Prevents the controller from unstable temperature control (and resulting actuator oscillations). This can occur at very low load. The motor protection increases the lifetime of all involved components. | | |

OFF: Motor protection is not activated.

10 ... 59: Motor protection is activated after the set activation delay in minutes.



Recommended for heating systems with variable load.

| Xp actual | | |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | Read-out only | |
| 'Xp actual' is the read-out of the actual Xp (proportional band) based on the supply temperature. Xp is determined by settings related to the supply temperature. Typically, the higher the supply temperature, the higher the Xp must be in order to achieve a stable temperature control. | | |

Xp setting range: 5 ... 250 K


Fixed supply temperature settings: 65 °C and 90 °C

Factory settings: (65,40) and (90,120)

This means that the 'Xp' is 40 K at 65 °C supply temperature, and 'Xp' is 120 K at 90 °C.

Set the desired Xp values at the two fixed supply temperatures.

If the supply temperature is not measured (the supply temperature sensor is not connected), the Xp value at the setting 65 °C is used.

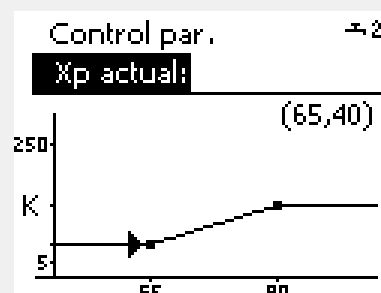

| Tn (integration time constant) 11185 | | |
|--------------------------------------|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 1 ... 999 s | 30 s |

Set a high integration time constant (in seconds) to obtain a slow but stable reaction to deviations.

A low integration time constant will make the controller react fast but with less stability.

| M run (running time of the motorized control valve) 11186 | | |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 5 ... 250 s | 30 s |

'M run' is the time in seconds it takes the controlled component to move from fully closed to fully open position. Set the 'M run' according to the examples or measure the running time by means of a stop watch.

How to calculate the running time of a motorized control valve

The running time of the motorized control valve is calculated using the following methods:

Seated valves

Running time = Valve stroke (mm) x actuator speed (sec. / mm)

Example: 5.0 mm x 15 sec. / mm = 75 sec.

Rotating valves

Running time = Turning degrees x actuator speed (sec. / degr.)

Example: 90 degr. x 2 sec. / degr. = 180 sec.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Nz (neutral zone) | | 11187 |
|-------------------|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 1 ... 9 K | 3 K |



The neutral zone is symmetrical around the desired flow temperature value, i.e. half the value is above and half the value is below this temperature.

Set the acceptable flow temperature deviation.

Set the neutral zone to a high value if you can accept a high variation in flow temperature. When the actual flow temperature is within the neutral zone, the controller does not activate the motorized control valve.

| Min. act. time (min. activation time gear motor) | | 11189 |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 2 ... 50 | 3 |

The min. pulse period of 20 ms (milliseconds) for activation of the gear motor.

Setting example

Value x 20 ms


| | |
|----|---------|
| 2 | 40 ms |
| 10 | 200 ms |
| 50 | 1000 ms |



The setting should be kept as high as acceptable to increase the lifetime of the actuator (gear motor).

If you want to tune the PI regulation precisely, you can use the following method:

- Set the 'Tn' (integration time constant) to its max. value (999 sec.).
- Decrease the value for the 'Xp' (proportional band) until the system starts hunting (i.e. gets unstable) with a constant amplitude (it might be necessary to force the system by setting an extreme low value).
- Find the critical time period on the temperature recorder or use a stop watch.

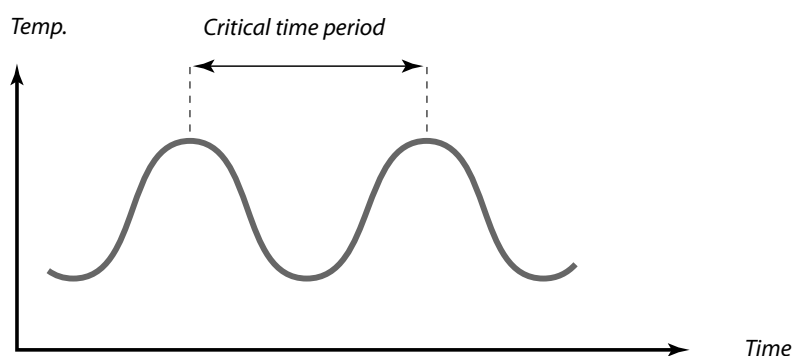

This critical time period will be characteristic for the system, and you can evaluate the settings from this critical period.

'Tn' = 0.85 x critical time period

'Xp' = 2.2 x proportional band value in the critical time period

If the regulation seems to be too slow, you can decrease the proportional band value by 10%. Make sure there is a consumption when you set the parameters.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

5.5 Application

| Circ. P priority | | 11055 |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / ON | OFF |
| Choose whether the DHW circulation pump should be ON during DHW heating. | | |



When the 'Circ. P priority' is set to OFF, the schedule for the DHW circulation pump is overruled.

OFF: The DHW circulation pump is switched OFF during DHW heating.

ON: The DHW circulation pump is not switched OFF during DHW heating.

| Cont. T control | | 11054 |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / ON | OFF |
| Depending on the DHW circulation pipe connection, the desired DHW heating / charging temperature can be lowered when the DHW heating procedure has elapsed. | | |

OFF: The desired temperature at S3 or S4 is lowered to 10 °C. Typically, the DHW is circulated through the DHW tank.

ON: The desired temperature at S3 or S4 is lowered to the desired DHW temperature. Typically, the DHW is circulated through the heat exchanger in order to compensate for the heat loss in the DHW circulation pipe.

| DHW P post-run – A217.1 / A317.1 | | 11041 |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 0 ... 30 m | 0 m |
| Set the DHW heating / charging pump (P1) post-run time (minutes). The pump can continue to be switched ON after the DHW heating procedure in order to utilize the remaining heat in the heat exchanger / boiler. | | |

0 ... 30: Set the number of minutes for the post-run.

| DHW P post-run – A217.2 / A317.2 | | 11041 |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 0 ... 30 m | 0 m |
| Set the DHW heating pump (P1) post-run time (minutes). The DHW heating pump can continue to be switched ON after the DHW heating procedure in order to utilize the remaining heat in the heat exchanger / boiler. | | |

0 ... 30: Set the number of minutes for the post-run.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Char. P post-run – A217.2 / A317.2 | | 11042 |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 0 ... 30 m | 1 m |
| Set the DHW charging pump (P2) post-run time (minutes). The DHW charging pump can continue to be switched ON after the DHW heating procedure in order to utilize the remaining heat in the heat exchanger. | | |

0 ... 30: Set the number of minutes for the post-run.

| Send desired T | | 11500 |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / ON | ON |
| When the controller acts as a slave controller in a master / slave system, information about the desired flow temperature can be sent to the master controller via the ECL 485 bus. | | |



In the master controller, 'Demand offset' must be set to a value in order to react on a desired flow temperature from a slave controller.

OFF: Information about the desired flow temperature is not sent to the master controller.

ON: Information about the desired flow temperature is sent to the master controller.

| Circ. P frost T | | 11076 |
|---|---------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / -10 ... 20 °C | 2 °C |
| Set the outdoor temperature value at which the DHW circulation pump is to be active to protect the DHW circuit against frost. | | |

OFF: The DHW circulation pump is not active.

-10 ... 20: The DHW circulation pump is active when the outdoor temperature is lower than the set value.

| Frost pr. T (frost protection temperature) | | 11093 |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 5 ... 40 °C | 10 °C |
| Set the desired flow temperature (S3) to protect the system against frost. | | |

5 ... 40: Desired frost protection temperature.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Ext. input (external override), ECL 210 | | 11141 |
|---|-----------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / S1 ... S8 | OFF |
| Choose the input for 'Ext. input' (external override). By means of a switch the controller can be overridden to Comfort or Saving mode. | | |


OFF: No inputs have been selected for external override.

S1 ... S8: Input selected for external override.

If S1...S6 is chosen as override input, the override switch must have gold-plated contacts.

If S7 or S8 is chosen as override input, the override switch can be a standard contact.

See the drawing for a connection example of an override switch to input S8.

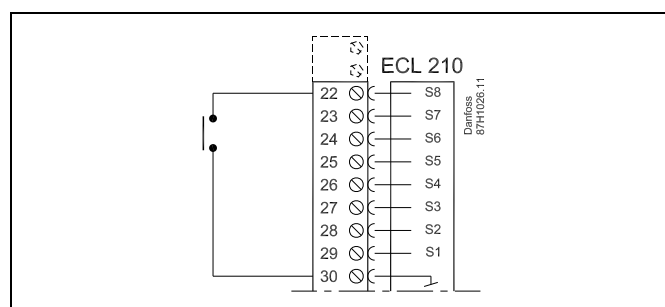

Choose only an unused input for override. If an already used input is applied for override, the functionality of this input is also neglected.



See also 'Ext. mode'.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Ext. input (external override) — ECL 310 11141 | | |
|---|------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / S1 ... S10 | OFF |
| Choose the input for 'Ext. input' (external override). By means of a switch the controller can be overridden to 'Comfort' or 'Saving' mode. | | |

OFF: No inputs have been selected for external override.


S1 ... S10: Input selected for external override.

If S1... S6 is chosen as override input, the override switch must have gold-plated contacts.

If S7 ... S10 is chosen as override input, the override switch can be a standard contact.

See the drawing for a connection example of an override switch to input S9.



The two drawings (override to comfort mode and override to saving mode) show the functionality.

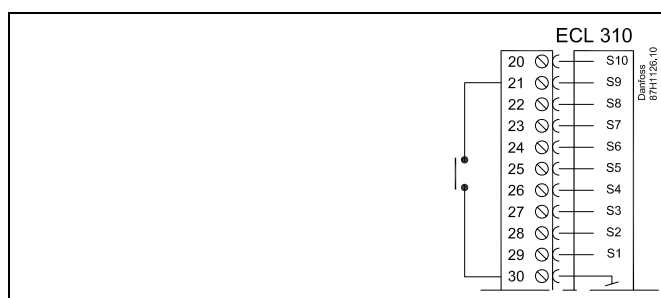

Choose only an unused input for override. If an already used input is applied for override, the functionality of this input is also neglected.



See also 'Ext. mode'.

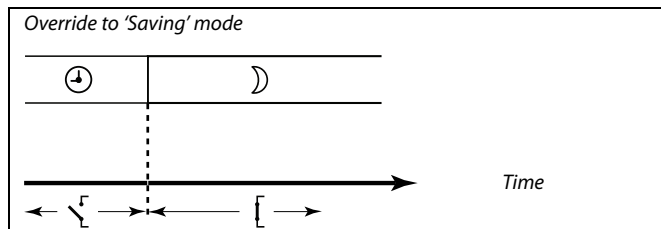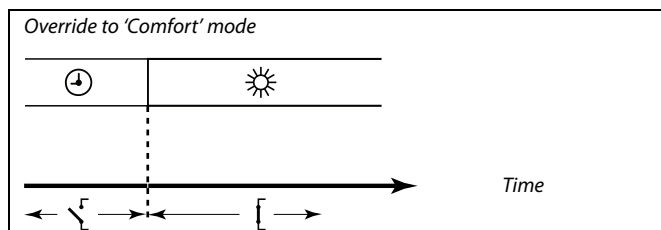

The result of override to 'Saving' mode depends on the setting in 'Total stop'.

Total stop = OFF: Heating reduced

Total stop = ON: Heating stopped

| Ext. mode (external override mode) 11142 | | |
|--|------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | COMFORT / SAVING | COMFORT |
| Choose external override mode. | | |

The mode override can be activated for saving or comfort mode. For override, the controller mode must be scheduled mode.

SAVING: The controller is in saving mode when the override switch is closed.

COMFORT: The controller is in comfort mode when the override switch is closed.



See also 'Ext. input'.

5.6 Anti-bacteria

On selected days during the week the DHW temperature can be increased in order to neutralize bacteria in the DHW system. The desired DHW temperature 'Desired T' (typically 80 °C) will be present for the selected day(s) and duration.

The anti-bacteria function is not active in frost protection mode.

Example of setting conditions for the anti-bacteria function:

'Desired T' = 80 °C

'Charge difference' = 10 K



Start:

On time, the desired DHW heating temperature changes to (80 + 10) 90 °C. The charging pump is switched ON.

When the DHW temperature reaches the stop temperature, the charging pump is switched OFF and the desired DHW heating temperature changes to 80 °C.

Stop:

On time, the desired DHW heating temperature changes from 80 °C to the set temperature according to the set Comfort / saving value.

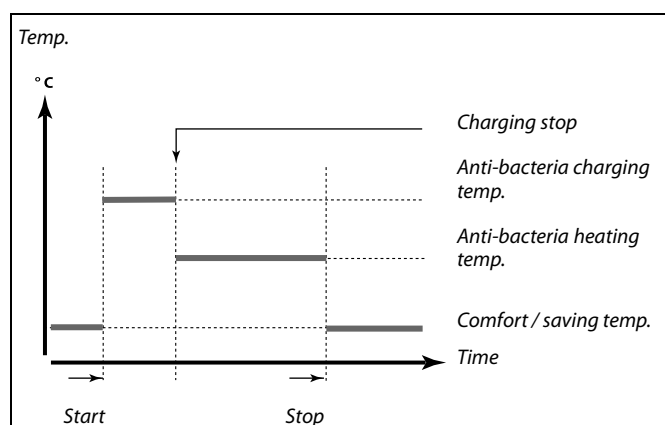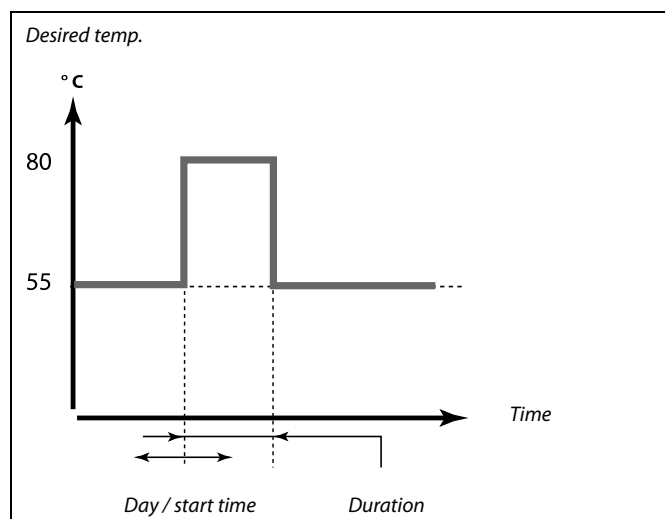

| | |
|----------------|---------------|
| Settings | → 2 |
| Anti-bacteria: | |
| Day: | M T W T F S S |
| Start time | 00:00 |
| Duration | 120 m |
| Desired T | 80 °C |



During the anti-bacteria process, the return temperature limitation is not active.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Day | | |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | Weekdays | |
| Select (mark) the day(s) of the week where the anti-bacteria function must be active. | | |

M = Monday
 T = Tuesday
 W = Wednesday
 T = Thursday
 F = Friday
 S = Saturday
 S = Sunday

| Start time | | |
|--|-----------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 00:00 ... 23:30 | 00:00 |
| Set the start time for the anti-bacteria function. | | |

| Duration | | |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 10 ... 600 m | 120 m |
| Set the duration (minutes) for the anti-bacteria function. | | |

| Desired T | | |
|---|---------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / 10 ... 110 °C | OFF |
| Set the desired DHW temperature for the anti-bacteria function. | | |

OFF: The anti-bacteria function is not active.

10 ... 110: Desired DHW temperature during the anti-bacteria function period.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

5.7 Alarm

Many applications in the ECL Comfort 210 and 310 series have an alarm function. The alarm function typically activates relay 4 (ECL Comfort 210) or relay 6 (ECL Comfort 310).

The alarm relay can activate a lamp, a horn, an input to an alarm transmitting device etc. etc.

The relay in question is activated as long as the alarm condition is present.

Typical alarms:


- Actual flow temperature differs from the desired flow temperature.

5.7.1 Temp. monitor.

| Upper difference | | 11147 |
|--|------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / 1 ... 30 K | OFF |
| The alarm is activated if the actual flow temperature increases more than the set difference (acceptable temperature difference above the desired flow temperature). See also 'Delay'. | | |

OFF: The alarm function is not active.


1 ... 30 K: The alarm function is active if the actual temperature gets above the acceptable difference.

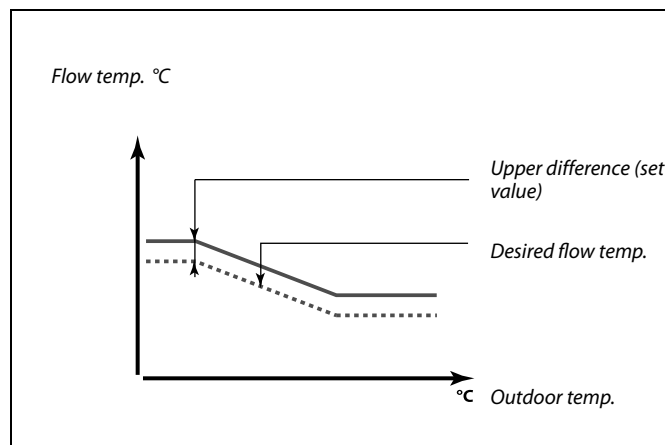

| Lower difference | | 11148 |
|--|------------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | OFF / 1 ... 30 K | OFF |
| The alarm is activated if the actual flow temperature decreases more than the set difference (acceptable temperature difference below the desired flow temperature). See also 'Delay'. | | |

OFF: The alarm function is not active.


1 ... 30 K: The alarm function is active if the actual temperature gets below the acceptable difference.

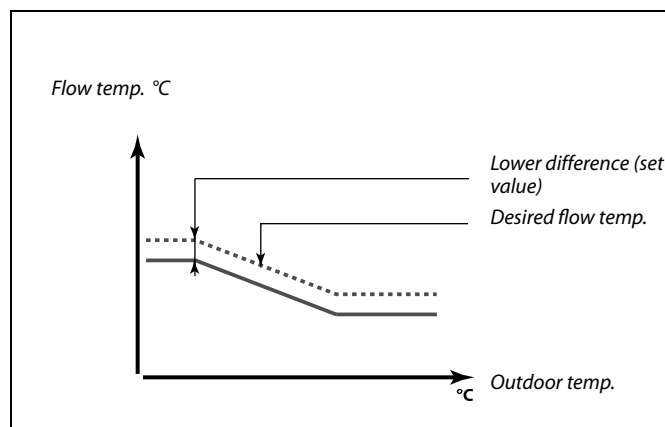

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| Delay 11149 | | |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 1 ... 99 m | 10 m |
| If an alarm condition from either 'Upper difference' or 'Lower difference' is present for a longer time than the set delay (in min.), the alarm function is activated. | | |

1 ... 99 m: The alarm function will be activated if the alarm condition remains after the set delay.

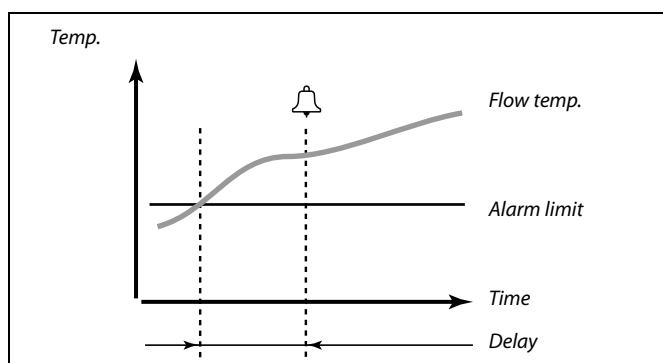

| Lowest temp. 11150 | | |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| 1 | 10 ... 50 °C | 30 °C |
| The alarm function will not be activated if the desired flow temperature is lower than the set value. | | |








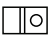

If the cause of the alarm disappears, the alarm indication and output also disappear.

6.0 Common controller settings

6.1 Introduction to 'Common controller settings'

Some general settings which apply to the entire controller are located in a specific part of the controller.

To enter 'Common controller settings':

| Action: | Purpose: | Examples: |
|---|--|---|
|  | Choose 'MENU' in any circuit | MENU |
|  | Confirm | |
|  | Choose the circuit selector at the top right corner in the display | |
|  | Confirm | |
|  | Choose 'Common controller settings' |  |
|  | Confirm | |

Circuit selector



6.2 Time & Date

It is only necessary to set the correct date and time in connection with the first use of the ECL Comfort controller or after a power break of more than 72 hours.

The controller has a 24 hour clock.

Aut. daylight (Daylight saving time changeover)

YES: The controller's built-in clock automatically changes + / - one hour on the standardized days for daylight saving time changeover for Central Europe.

NO: You change manually between summer and winter time by setting the clock backward or forward.



When controllers are connected as slaves in a master / slave system (via ECL 485 communication bus), they will receive 'Time & Date' from the master.

Installation Guide ECL Comfort 210 / 310, application A217 / A317



















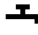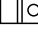






6.3 Holiday

There is a holiday program for each circuit and a holiday program for the common controller.

Each holiday program contains one or more schedules. Each schedule can be set to a start date and an end date. The set period starts on the start date at 00.00 and stops on end date at 24.00.

Selectable modes are Comfort, Saving, Frost protection or Comfort 7-23 (before 7 and after 23, the mode is scheduled).

How to set your holiday schedule:

| Action: | Purpose: | Examples: |
|---|---|---|
|  | Choose 'MENU' | MENU |
|  | Confirm | |
|  | Choose the circuit selector at the top right corner in the display | |
|  | Confirm | |
|  | Choose a circuit or 'Common controller settings' | |
| | Heating |  |
| | DHW |  |
| | Common controller settings |  |
|  | Confirm | |
|  | Go to 'Holiday' | |
|  | Confirm | |
|  | Choose a schedule | |
|  | Confirm | |
|  | Confirm choice of mode selector | |
|  | Choose mode | |
| | · Comfort |  |
| | · Comfort 7-23 |  |
| | · Saving |  |
| | · Frost protection |  |
|  | Confirm | |
|  | Enter the start time first and then the end time | |
|  | Confirm | |
|  | Go to 'Menu' | |
|  | Confirm | |
|  | Choose 'Yes' or 'No' in 'Save'. Choose the next schedule, if required | |










The holiday program in the 'Common controller settings' is valid for all circuits. The holiday program can also be set individually in the heating or DHW circuits.






The end date must be at least be one day later than the start date.

Home 
MENU:
 Time & Date
 ▶ Holiday
 Input overview
 Log
 Output override

MENU 
Holiday:
 ▶ Schedule 1 
 Schedule 2 
 Schedule 3 
 Schedule 4 

Holiday 
Schedule 1:
 Mode: ▶ 
 Start:
 24.12.2009
 End:
 2.01.2010

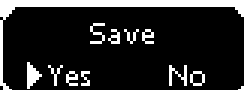Home 
 MENU
 Mode: 
 Start: 
 End: 2.01.2010

Installation Guide ECL Comfort 210 / 310, application A217 / A317

The ECA 30 / 31 cannot override the holiday schedule of the controller temporarily.

However, it is possible to make use of the following options from the ECA 30 / 31 when the controller is in scheduled mode:



Day off



Holiday



Relaxing (extended comfort period)



Going out (extended saving period)



Energy-saving trick:

Use 'Going out' (the extended saving period) for airing purposes (e.g. for ventilating the rooms by means of fresh air from open windows).

6.4 Input overview

The input overview is located in the common controller settings.

This overview will always show you the actual temperatures in the system (read-only).

In addition to the measured temperatures, pressures, pressure switches and alarm switches are indicated as follows:

| | | |
|----------------------------|-------------------------|---|
| Input: | Status: | |
| Static pressure: | 1.9 bar (example) | The input is set to OFF or a 0–10 V input (analog input = 'AI'). |
| | OFF: Pressure not OK | The input is set as a switch input (digital input = 'DI'). |
| | ON: Pressure OK | |
| S7 (S8, S9) status: | OFF | The input is activated by means of a differential pressure switch or an alarm contact, i.e. connected to terminal 30. |
| | ON | The input is not activated. |

| | |
|-----------------------|---------|
| MENU ☐☐☐ | |
| Input overview: | |
| ▶ Outdoor T | -0.3 °C |
| Supply T | 24.7 °C |
| Heat flow T | 49.8 °C |
| DHW flow T | 50.5 °C |
| Heat return T | 24.8 °C |

6.5 Log

The log function (temperature history) allows you to monitor the logs of today, yesterday, the past 2 days as well as the past 4 days for the connected sensors.

There is a log display for the relevant sensor, showing the measured temperature.

The log function is only available in the 'Common controller settings'.

Example 1:





1 day log for yesterday showing the development in outdoor temperature during the past 24 hours.

Example 2:

Today's log for the actual heating flow temperature as well as the desired temperature.

Example 3:



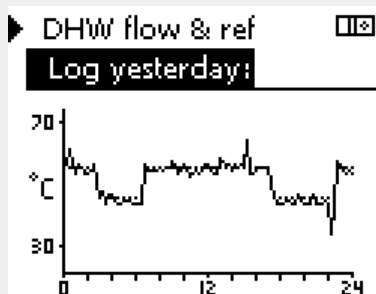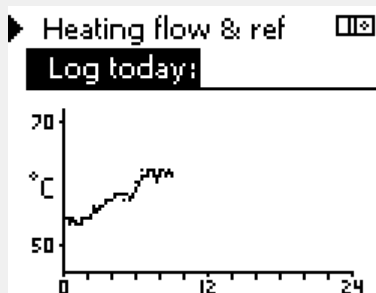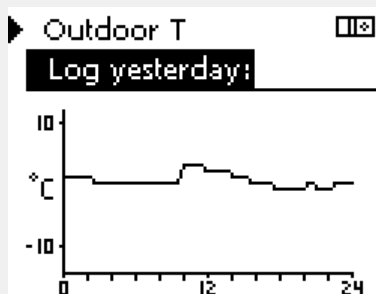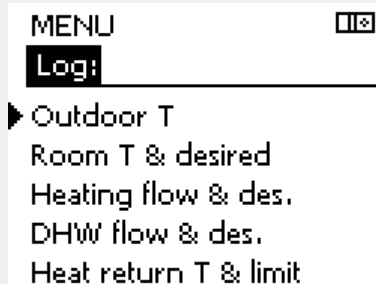










Yesterday's log for the DHW flow temperature as well as the desired temperature.




Installation Guide ECL Comfort 210 / 310, application A217 / A317

6.6 Output override

The output override is used to disable one or more of the controlled components. This could among others be useful in a service situation.

| Action: | Purpose: | Examples: |
|---|---|---|
|  | Choose 'MENU' in any of the overview displays | MENU |
|  | Confirm | |
|  | Choose the circuit selector at the top right corner in the display | |
|  | Confirm | |
|  | Choose common controller settings |  |
|  | Confirm | |
|  | Choose 'Output override' | |
|  | Confirm | |
|  | Choose a controlled component | M1, P1 etc. |
|  | Confirm | |
|  | Adjust the status of the controlled component: Motorized control valve: AUTO, STOP, CLOSE, OPEN Pump: AUTO, OFF, ON | |
|  | Confirm status change | |

| Controlled components | Circuit selector |
|-----------------------|---|
| MENU |  |
| Output override: | |
| ▶ M1 | AUTO |
| P1 | AUTO |
| M2 | OPEN |
| P2 | AUTO |
| A1 | AUTO |




When the selected controlled component (output) is not 'AUTO', the ECL Comfort controller does not control the component in question (pump or motorized control valve e.g.). Frost protection is not active.

Remember to change the status back again as soon as an override is not required any longer.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

6.7 Key functions

| | |
|------------------------|--|
| New application | Erase application: Removes the existing application. As soon as the ECL key is inserted, another application can be chosen. |
| Application | Gives an overview over the application and its subtypes of the ECL key in question. |
| Factory setting | System settings: System settings are, among others, communication set-up, display brightness etc. User settings: User settings are, among others, desired room temperature, desired DHW temperature, schedules, heat curve, limitation values etc. Go to factory: Restores the factory settings. |
| Copy | To: Copy direction System settings User settings Start copying |

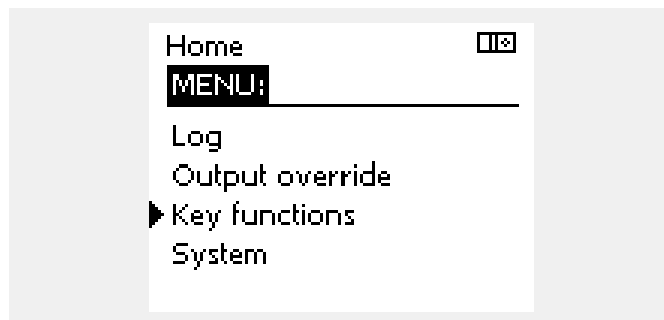

A more detailed description of how to use the individual 'Key functions' can also be seen in 'Inserting the ECL application key'.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

6.8 System

6.8.1 ECL version

In 'ECL version' you will always be able to find an overview of the data related to your electronic controller.

Please have this information available if you need to contact your Danfoss sales organization concerning the controller.

Information about your ECL Application Key can be found in 'Key functions' and 'Key overview'.

| | |
|-------------------------|--|
| Code no.: | The Danfoss sales and order no. for the controller |
| Hardware: | Hardware version of the controller |
| Software: | Software version of the controller |
| Serial no.: | Unique number for the individual controller |
| Production week: | Week no. and year (WW.YYYY) |

Example, ECL version

| | |
|--------------|-----------|
| System | |
| ECL version: | |
| ▶ Code no. | 87H3040 |
| Hardware | A |
| Software | P 1.01 |
| Build no. | 2693 |
| Serial no. | 123456789 |

6.8.2 Display

| Backlight (display brightness) 60058 | | |
|---------------------------------------|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| | 0 ... 10 | 5 |
| Adjust the brightness of the display. | | |

0: Weak backlight.

10: Strong backlight.

| Contrast (display contrast) 60059 | | |
|-------------------------------------|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| | 0 ... 10 | 3 |
| Adjust the contrast of the display. | | |

0: Low contrast.

10: High contrast.

6.8.3 Communication

| Modbus addr. 38 | | |
|---|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| | 1 ... 247 | 1 |
| Set the Modbus address if the controller is part of a Modbus network. | | |

1 ... 247: Assign the Modbus address within the stated setting range.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

| ECL 485 addr. (master / slave address) | | 2048 |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> | 0 ... 15 | 15 |
| This setting is relevant if more controllers are working in the same ECL Comfort system (connected via the ECL 485 communication bus) and / or Remote Control Units (ECA 30 / 31) are connected. | | |



The total cable length of max. 200 m (all devices incl. the internal ECL 485 communication bus) should not be exceeded.
Cable lengths of more than 200 m may cause noise sensibility (EMC).

- 0:** The controller works as slave.
The slave receives information about the outdoor temperature (S1), system time, and signal for DHW demand in the master.
- 1 ... 9:** The controller works as slave.
The slave receives information about the outdoor temperature (S1), system time, and signal for DHW demand in the master. The slave sends information about the desired flow temperature to the master.
- 10 ... 14:** Reserved.
- 15:** The ECL 485 communication bus is active.
The controller is master. The master sends information about the outdoor temperature (S1) and system time. Connected Remote Control Units (ECA 30 / 31) are powered.

The ECL Comfort controllers can be connected via the ECL 485 communication bus to perform a larger system (the ECL 485 communication bus can connect to max. 16 devices).

Each slave must be configured with its own address (1 ... 9).

However, more slaves can have the address 0 if they only have to receive information about outdoor temperature and system time (listeners).

| Service Pin | | 2150 |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> | 0 / 1 | 0 |
| This setting is only used in connection with set-up of Modbus communication. | | |

| Ext. reset | | 2151 |
|--|---------------|-----------------|
| Circuit | Setting range | Factory setting |
| <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> | 0 / 1 | 0 |
| This setting is only used in connection with set-up of Modbus communication. | | |

6.8.4 Language

| Language | | 2050 |
|--|-------------------|-----------------|
| Circuit | Setting range | Factory setting |
| <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> | English / 'Local' | English |
| Choose your language. | | |



Local language is selected during installation. If you want to change to another local language, the application must be reinstalled. However, it is always possible to change between the local language and English.

7.0 Miscellaneous

7.1 Frequently asked questions



The definitions apply to the Comfort 210 as well as ECL Comfort 310 series. Consequently, you might come across expressions that are not mentioned in your guide.

The time shown in the display is one hour off?

See 'Time and Date'.

The time shown in the display is not correct?

The internal clock may have been reset, if there has been a power break for more than 72 hours.

Go to the 'Common controller settings' and 'Time & Date' to set the correct time.

The ECL Application Key is lost?

Switch the power off and on again to see the system type and the software generation of the controller or go to 'Common controller settings' > 'Key functions' > 'Application'. The system type (e.g. TYPE A266.1) and the system diagram is displayed.

Order a replacement from your Danfoss representative (e.g. ECL Application Key A266).

Insert the new ECL Application Key and copy your personal settings from the controller to the new ECL Application Key, if required.

The room temperature is too low?

Make sure that the radiator thermostat does not limit the room temperature.

If you still cannot obtain the desired room temperature by adjusting the radiator thermostats, the flow temperature is too low. Increase the desired room temperature (display with desired room temperature). If this does not help, adjust the 'Heat curve' ('Flow temp.').

The room temperature is too high during saving periods?

Make sure that the min. flow temperature limitation ('Temp. min.') is not too high.

The temperature is unstable?

Check that the flow temperature sensor is correctly connected and in the right place. Adjust the control parameters ('Control par.').

If the controller has a room temperature signal, see 'Room limit'.

The controller does not operate and the control valve is closed?

Check that the flow temperature sensor is measuring the correct value, see 'Daily use' or 'Input overview'.

Check the influence from other measured temperatures.

How to make an extra comfort period in the schedule?

You can set an additional comfort period by adding new 'Start' and 'Stop' times in 'Schedule'.

How to remove a comfort period in the schedule?

You can remove a comfort period by setting start and stop times to the same value.

How to restore your personal settings?

Please read the chapter concerning 'Inserting the ECL Application Key'.

How to restore the factory settings?

Please read the chapter concerning 'Inserting the ECL Application Key'.

Why can't the settings be changed?

The ECL Application Key has been removed.

How to react on alarms?

An alarm indicates that the system is not operating satisfactorily.
Please contact your installer.

What does P and PI control mean?

P control: Proportional control.

By using a P control, the controller will change the flow temperature proportional to the difference between a desired and an actual temperature, e.g. a room temperature.

A P control will always have an offset which not will disappear over time.

PI control: Proportional and Integrating control.

A PI control does the same as a P control, but the offset will disappear over time.

A long 'Tn' will give a slow but stable control, and a short 'Tn' will result in a fast control but with a higher risk of instability.

7.2 Definitions



The definitions apply to the Comfort 210 as well as ECL Comfort 310 series. Consequently, you might come across expressions that are not mentioned in your guide.

Air duct temperature

Temperature measured in the air duct where the temperature is to be controlled.

Alarm function

Based on the alarm settings, the controller can activate an output.

Anti-bacteria function

For a defined period, the DHW temperature is increased in order to neutralize dangerous bacteria, e.g. Legionella.

Balance temperature

This setpoint is the basis for the flow / air duct temperature. The balance temperature can be adjusted by the room temperature, the compensation temperature and the return temperature. The balance temperature is only active if a room temperature sensor is connected.

Comfort operation

Normal temperature in the system controlled by the schedule. During heating the flow temperature in the system is higher to maintain the desired room temperature. During cooling the flow temperature in the system is lower to maintain the desired room temperature.

Comfort temperature

Temperature maintained in the circuits during comfort periods. Normally during daytime.

Compensation temperature

A measured temperature influencing the flow temperature reference / balance temperature.

Desired flow temperature

Temperature calculated by the controller on basis of the outdoor temperature and influences from the room and / or return temperatures. This temperature is used as a reference for the control.

Desired room temperature

Temperature which is set as the desired room temperature. The temperature can only be controlled by the ECL Comfort controller if a room temperature sensor is installed.

If a sensor is not installed, the set desired room temperature however still influences the flow temperature.

In both cases the room temperature in each room is typically controlled by radiator thermostats / valves.

Desired temperature

Temperature based on a setting or a controller calculation.

Dew point temperature

Temperature at which the humidity in the air condensates.

DHW circuit

The circuit for heating the domestic hot water (DHW).

Factory settings

Settings stored on the ECL Application Key to simplify the set up of your controller the first time.

Flow temperature

Temperature measured in the flow at any time.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

Flow temperature reference

Temperature calculated by the controller on basis of the outdoor temperature and influences from the room and / or return temperatures. This temperature is used as a reference for the control.

Heat curve

A curve showing the relationship between actual outdoor temperature and required flow temperature.

Heating circuit

The circuit for heating the room / building.

Holiday schedule

Selected days can be programmed to be in comfort, saving or frost protection mode. Besides this, a day schedule with comfort period from 07.00 to 23.00 can be selected.

Humidity, relative

This value (stated in %) refers to the indoor moisture content compared to the max. moisture content. The relative humidity is measured by the ECA 31 and is used for the calculation of the dew point temperature.

Limitation temperature

Temperature that influences the desired flow / balance temperature.

Log function

The temperature history is displayed.

Master / slave

Two or more controllers are interconnected on the same bus, the master sends out e.g. time, date and outdoor temperature. The slave receives data from master and sends e.g. desired flow temperature value.

Pt 1000 sensor

All sensors used with the ECL Comfort controller are based on the Pt 1000 type (IEC 751B). The resistance is 1000 ohm at 0 °C and it changes with 3.9 ohm / degree.

Optimization

The controller optimizes the start time of the scheduled temperature periods. Based on the outdoor temperature, the controller automatically calculates when to start in order to reach the comfort temperature at the set time. The lower the outdoor temperature, the earlier the start time.

Outdoor temperature trend

The arrow indicates the tendency, i.e. whether the temperature rises or falls.

Refill water function

If the measured pressure in the heating system is too low (e.g. due to a leakage), water can be supplemented.

Return temperature

The temperature measured in the return influences the desired flow temperature.

Room temperature sensor

Temperature sensor placed in the room (reference room, typically the living room) where the temperature is to be controlled.

Room temperature

Temperature measured by the room temperature sensor or the Remote Control Unit. The room temperature can only be controlled directly if a sensor is installed. The room temperature influences the desired flow temperature.

Schedule

Schedule for periods with comfort and saving temperatures. The schedule can be made individually for each week day and may consist of up to 3 comfort periods per day.

Saving temperature

Temperature maintained in the heating / DHW circuit during saving temperature periods.

Pump control

One circulation pump is working and the other is the spare circulation pump. After a set time, the roles are exchanged.

Weather compensation

Flow temperature control based on the outdoor temperature. The control is related to a user-defined heat curve.


2-point control

ON / OFF control e.g. circulation pump, change-over valve or damper control.

3-point control

Opening, closing or no action of the actuator for the motorized control valve. No action means that the actuator remains in its current position.

Installation Guide ECL Comfort 210 / 310, application A217 / A317

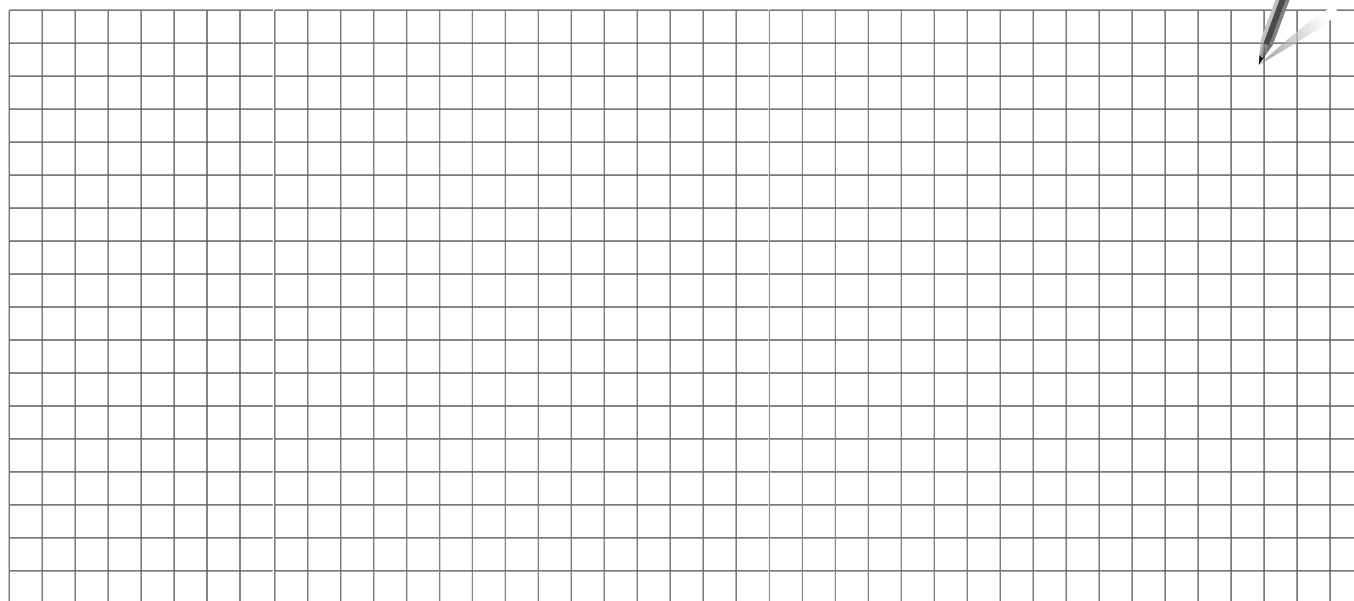

Installer:

By:

Date:

