

Data Sheet

Operator Replacement Series Type RA or RAV to RA 2000

Selection:

 










Existing (OLD)
Operator Types

Replacement (NEW)
Operator Types

   

 




Identifiable
mounting:

Large silver threaded nut

RA SERIES	RA 2000
 <p>Valve mounted dial 013-7001 RA-6 013-7101 RA-6 "Armored"</p>	 <p>013G8070 RA valve to RA 2000 operator adapter</p>
 <p>Remote mounted dial 013-7002 RA33 013-7003 RA-36 013-7004 RA-66</p>	 <p>013G8070 RA valve to RA 2000 operator adapter</p>
	 <p>013G8252 or 013G2922</p>
	 <p>or 013G8562 (6' cap. tube)</p>
	 <p>or 013G8564 (6' + 6' cap. tube)</p>
	 <p>or 013G8565 (16' cap. tube)</p>
	 <p>or 013G8568 (26' cap. tube)</p>

Identifiable
mounting:

Black or silver metal band
with flat screw holding the
operator to the valve


RAV SERIES	RA 2000
 <p>Valve mounted dial/sensor 013U8200 RAV "Built-in" 013U1100 RAVN "Built-in"</p>	 <p>013G8072 RAV valve to RA 2000 operator adapter</p>
 <p>Valve mounted dial/sensor 013U8202 RAV "Remote" 013U1102 RAVN "Remote"</p>	 <p>013G8072 RAV valve to RA 2000 operator adapter</p>
	 <p>013G8250</p>
	 <p>013G8240 (tamper proof)</p>
	 <p>013G8252 or 013G2922 (tamper proof)</p>

Selection (Cont.):

**Existing (OLD)
Operator Types**


Separate remote sensor/dial (RAV/RAVL)
013U2241
or 013U2211 (BRAVO)

013U7151 RAV-33
or 013G8222

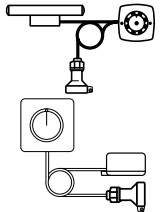


Separate remote sensor/dial (RAV/RAVL)
013U2241
or 013U2211 (BRAVO)

013U7151 RAV-33
or 013G8222

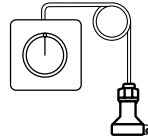


**Replacement (NEW)
Operator Types**

NOTE:
RA 2000 wall mount operators include additional socket for use on RAV valves. RAV Adapter included



013G8564
(6' + 6' cap. tube)



013G8562
(6' cap. tube)
013G8565
(16' cap. tube)
013G8568
(26' cap. tube)

Therefore, 013G8072 RAV to RA 2000 adapter is not required when replacing RAV/RAVL wall mount operators with RA 2000 wall mount operators.


Selection (Cont.):

Code No.	Type	Description
013G8070	RA service adapter	RA valve to RA 2000 operator adapter
013G8072	RAV service adapter	RAV valve to RA 2000 operator adapter


Note: Consult RA 2000 Data sheet for additional or technical information

Selection (Cont.):

RA to RA 2000 - Code no. 013G8070

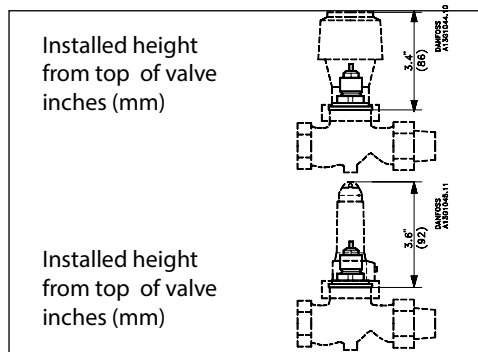

RAV to RA 2000 - Code no. 013G8072

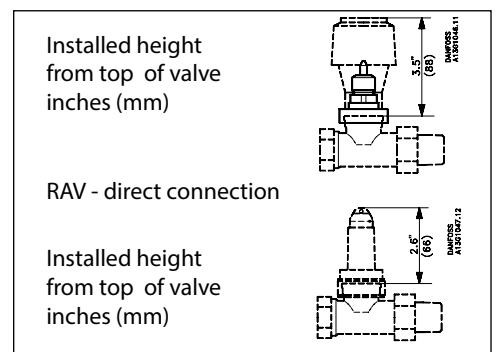

Danfoss can accept no responsibility for possible errors in printed materials and reserves the right to alter its products without notice. All trademarks in this material are property of the respective companies. Danfoss and Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.



Danfoss Inc.
Toronto, ON
Toll Free: 866-375-HVAC (4822)
Tel.: 905-285-2050, Fax: 905-285-2055
www.na.heating.danfoss.com

Danfoss Inc.
Baltimore, MD
Toll Free: 866-375-HVAC (4822)
Tel.: 443-512-0266, Fax: 443-512-0270
www.na.heating.danfoss.com