



Data sheet

Pressure switch and Thermostat CAS



The CAS Series consists of a series of pressure controlled switches and temperature controlled switches. In this series, special attention has been given to meeting demands for a high level of enclosure, robust and compact construction and resistance to shock and vibration.

The series is suitable for use in alarm and regulation systems in factories, diesel plants, compressors, power stations and on board ships.

Features

- A high level of enclosure
- Fixed differential
- Robust and compact construction
- Resistance to shock and vibration
- Available with all major marine approvals

Approvals

CE-marked in accordance with LVD 2006/95/EC

Ship approvals

American Bureau of Shipping, ABS (excl. CAS 139) Lloyds Register of Shipping, LR (excl. CAS 1080) Germanischer Lloyd, GL Bureau Veritas, BV EN 60947-1, EN-60947-4-1, EN 60947-5-1

Det Norske Veritas, DNV Registro Italiano Navale, RINA Maritime Register of Shipping, RMRS Nippon Kaiji Kyokai, NKK



Overview

Standard pressure switches

							[ba	ir]											Range P.	
0	10)		20)		30)			40	D		!	50		60)] '	Range Pe [bar]	Туре
																				0 – 3.5	CAS 133
																				0 - 10	CAS 136
																				0 – 18	CAS 137
																				10 – 35	CAS 139

Pressure switches for high pressure and strongly pulsating media

							[ba	ar]										Range P	
0	10		2	0		3	0			4	0		5	0		6	0	Range P _e [bar]	Туре
																		1 – 10	CAS 143
																		4 - 40	CAS 145
																		6 - 60	CAS 147

Differential pressure switches

	Range P.								1	ar	[b							
° T	Range Pe [bar]	50 	(50 		0	4			30		20	:		10 		0
CAS	0.2 – 2.5											Τ						

Thermostats

										[°	° C]														Range	
0	2	0		40)		6	0		8	0			100)		12	0		1	140)	1	60	[°C]	Туре
	Γ											Τ	Т		Τ	Τ			Т				1		20 - 80	CAS 178
																									70 – 120	CAS 180
																									60 - 150	CAS 181



PRESSURE SWITCH

Technical data

Switch	Microswitch with single pole	changeover (SPDT)
Carsta et la cal	Alternating current	AC-14 / AC-15: 0.1 A, 220 V
Contact load	Direct current	DC-13: 12 W, 125 V
Angleigent to generate und	CAS 133 – 139	-40 – 70 °C
Ambient temperature	CAS 143 – 155	-25 – 70 °C
Temperature	CAS 133 – 139	-40 – 100 °C
of medium ¹)	CAS 143 – 155	-25 – 100 °C
Vibration resistance	Vibration-stable in the range	2 – 30 Hz amplitude 1.1 mm and 30 – 100 Hz, 4 g.
Cable entry	Pg 13.5 for cable diametrers f	rom 5 – 14 mm.
Cable entry	5	rom 5 – 14 mm.

¹) For water and seawater, max. 80 °C

Materials in contact with the medium

Туре	Materials	
CAS 133, CAS 136,	Bellows:	Stainless steel, material no. 1.4306 (DIN 17440)
CAS 137, CAS 139	Pressure connection:	Brass material no. 2.0401 (DIN 17660)
CAS 143, CAS 145,	Diaphragm connection:	Nickel plated brass CuZn 40 Ob3 ISO R 426 (DIN 17569)
CAS 147, CAS 155	Diaphragm:	Nitrile-butadien rubber

Enclosure

IP67 acc. to EN 60529. The pressure control housing is enamelled pressure die cast aluminium (GD-AlSi 12). The cover is fastened by four screws which are anchored to prevent loss. The enclosure can be sealed with fuse wire.

Identification

The type designation and code no. of the unit is stamped in the side of the housing.



Ordering

Standard pressure switches

Туре	Setting range p _e	differential	Permissible operating pressure	Max test pressure	Min. burst pressure	Pressure connection	Code no.
	[bar]	[bar]	[bar]	[bar]	[bar]		
CAS 133	0 – 3.5	0.1	10	10	40	G 1⁄4	060-315066
CAS 136	0 - 10	0.2	22	22	40	G 1⁄4	060-315166
CAS 137	6 – 18	0.3	27	27	72	G 1⁄4	060-315266
CAS 139	10 – 35	0.6	53	53	100	G 1⁄4	060-315366

Pressure switches for high pressure and strongly pulsating media

Туре	Setting range p _e [bar]	Mechanical differential [bar]	Permissible operating pressure [bar]	Max test pressure [bar]	Min. burst pressure [bar]	Pressure connection	Code no.
CAS 143	1 – 10	0.2 – 0.6	120	180	240	G 1⁄4	060-316066
CAS 145	4 - 40	0.8 – 2.4	120	180	240	G 1⁄4	060-316166
CAS 147	6 - 60	1 – 3	120	180	240	G 1⁄4	060-316266

Differential pressure switch

Туре	Setting range p _e [bar]	differential	Permissible operating pressure for low pressure [bar]	Max test pressure [bar]	Min. burst pressure [bar]	Pressure connection	Code no.
CAS 155	0.2 – 2.5	0.1	0 - 8	22	42	2 × G ¼	060-313066

Preferred version

Terminology

Range setting

The pressure range within which the unit will give a signal (contact changeover).

Differential

The difference between make pressure and break pressure (see also page 6).

Permissible burst pressure

The highest permanent or recurring pressure the unit can be loaded with.

Max. test pressure

The highest pressure the unit may be subjected to when, for example, testing the system for leakage. Therefore, this presure must not occur as a recurring system pressure.

Min. burst pressure


The pressure which the pressure-sensitive element will withstand without leaking.

Janfoss

Function

a. CAS 155


Contacts 1-4 make and contacts 1-2 break when the differential pressure rises above the set range value. The contacts changeover to their initial position when the differential pressure again falls to the range value minus the differential (see fig. 1).

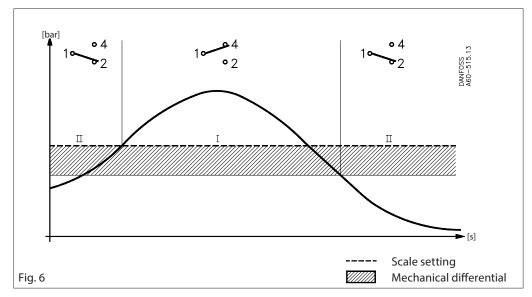

- Alarm for rising pressure given at the set range value
 Alarm for falling pressure
- given at the set range value minus the differential

b. All other CAS pressure switches

Contacts 1-2 make and contacts 1-4 break when the pressure falls under the set range value. The contacts changeover to their initial position when the pressure again rises to the set range value plus the differential (see fig. 2).

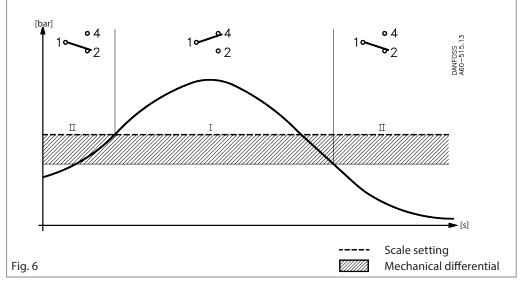

Example 1:

An alarm must be given when the lubrication oil pressure in a motor falls below 0.8 bar. Select CAS 133 (range 0 – 3.5 bar).

The minimum permissible lubricating oils pressure of 0.8 bar must be set using the range spindle. The differential is fixed at 0.1 bar, i.e. the alarm will not cut out before the pressure rises to 0.9 bar.

The switch break function is normally used for alarm purposes, i.e. the alarm must be connected to terminals 1 and 4.

Example 2:

When the differential pressure exceeds 1.3 bar a filter must be cleaned. The maximum static pressure (LP) for the CAS 155 of 8 bar must not be exceeded. The pressure control range spindle must be set at 1.3 bar.

The alarm must be connected to terminals 1 and 2 (alarm for broken circuit).

- I. Alarm for rising pressure given at the set range value
- **II.** Alarm for falling pressure given at the set range value minus the differential




Accessories

Part		Description	Qty.	Code no.
Connector with nipple	0 000 00	Pipe thread ISO 228-1, G∛connector, nipple and AL washer (10 mm ext. 8 mm int. diam) for solering onto steel or copper tubing, steel span of jaws 22	5	017-436866
Connector with nipple	0 💷 💭	G∛connector, nipple and washer (10 mm ext./ 6.5 mm int. diam.) for welding, steel span of jaws 22	1	017-422966
Reducer	0	Pipe thread ISO 228-1, G∦×∦ - 20 UNF reducer, washer, brass span of jaws 22	5	017-420566
Adaptor	0	Pipe thread ISO 228-1, G X×X- 27 NPT with copper washer brass span of jaws 22	1	060-333466
Adaptor	∰D 0	Pipe thread ISO 228-1, G $IA \times 1/4$ - 18 NPT with copper washer brass span of jaws 22	1	060-333566
Adaptor	0	Pipe thread ISO 228-1, G $IA \times 1/4$ - 18 NPT with copper washer brass span of jaws 22	1	060-333666
Adaptor		¾ - 20UNF × R∦(ISO 7-1) brass, span of jaws 19	1	060-324066
	e	G ¼ A × G ∦ A		060-333266
Nipple		G $\frac{1}{4}$ A × ext. M10 x 1 with washer		060-333866
Damping coil	O e	Pipe thread ISO 228-1, damping coil with G connector and 1.5 m copper capillary tube. Standard washers are supplied.	1	060-104766
Armoured damping coil		Pipe thread ISO 228-1, damping coil with G connector and 1 m copper capillary tube. Standard washers are supplied.	1	060-333366



Installation

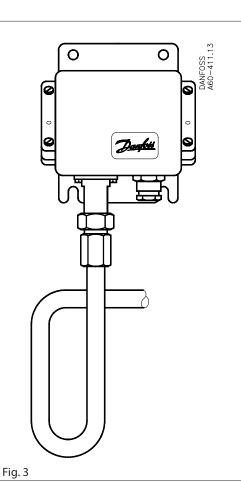

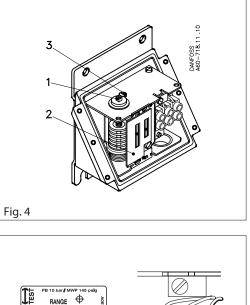


Fig. 5

1. Range spindle 2. Range scale 3. Locking screw

Installation

CAS pressure switches are fitted with a 3 mm steel mounting plate. The units should not be allowed to hang from the pressure connection.

Pressure connection

When fitting or removing pressure lines, the spanner flats on the pressure connection should be used to apply counter-torque.

Steam plant

To protect the pressure element from excessive heat, the insertion of a water-filled loop is recommended. The loop can, for example, be made of 10 mm copper tube as shown in fig. 3.

Water systems

Water in the pressure element is not harmful, but in case of frost a water-filled pressure element may burst. To prevent this happening, the pressure control can be allowed to operate on an air cushion.

Media resistance

See table of materials in contact with the medium, page 3. If seawater is involved, types CAS 143, CAS 145, CAS 147, CAS 155 are recommended.

Pulsations

If the pressure medium is superimposed with severe pulsations, which occur in automatic sprinkler systems (fire protection), fuel systems for diesel motors (priming lines), and hydraulic systems (e.g. propeller systems), etc, types case CAS 143, CAS 145, CAS 147 are recommended.

The maximum permissible pulsation level for these types is 120 bar.

Setting

When the pressure switche cover is removed, and the locking screw (3) is lossened, the range can be set with the spindle (1) while at the same time the scale (2) is being read (fig. 4).


Electrical connection


CAS pressure switches are fitted with a PG 13.5 screwed cable entry that is suitable for cable diameters from 5 - 13 mm.


Contact function is shown in fig. 5.



Dimensions [mm] and weights [kg]

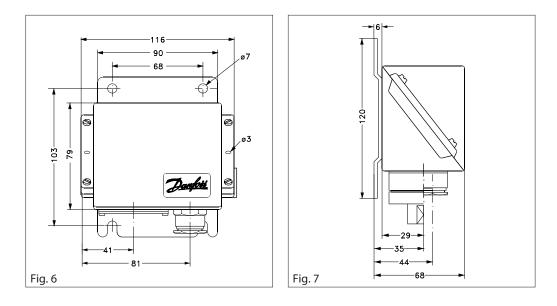

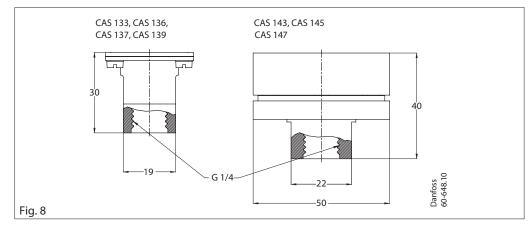

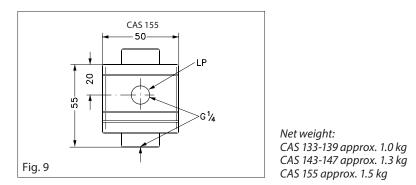



THERMOSTAT

Technical data

Туре		CAS 178, CAS 180, CAS 181	CAS 1080
Switch		Microswitch with single pole changeover (SPDT)	Microswitch with single pole changeover (2 x SPDT)
Contact load	Alternating current	AC-14 / AC-15: ().1 A, 220 V
Contact IOau	Direct current	DC-13: 12 V	V, 125 V
Ambient temperature		-25 – 70	°℃
Vibration resistance		Vibration-stable in the range 2 and 30 – 100	
Cable entry		Pg 13.5 for cable diameters from 5 – 14 mm	2 x g 13.5 for cable diameters from 5 – 14 mm

Ordering

2-step thermostat, type CAS 1080

Туре	Setting range	Mechanical differential adjustable / fixed	Max. sensor temperature		ensor (see	able lengtl also sories'		Capillary tube length	Code no.
	[° C]	[° C]	[° C]		[m	m]		[m]	
CAS 178	20 - 80	2.0	130	65	75	110	160	2	060L315166
CAS 180	70 – 120	2.0	220	65	75	110	160	2	060L315366
CAS 181	60 – 150	2.0	250	65	75	110	160	2	060L315566

Туре	Factory setting		Mechanical	Max.	Insert sensor	Cadana
	Step 1 [°C]	Step 2 [°C]	differential [°C]	temperature [°C]	length [mm]	Code no.
CAS 1080	80	80	2.0	220	200	060L502066

Enclosure

IP67 acc. to EN 60529. The thermostat housing is enamelled pressure die cast aluminium (GD-AISI 12). The cover is fastened by four screws which are anchored to prevent loss. The enclosure can be sealed with fuse wire.

 
Identification

The type designation and code no. of the unit is stamped in the side of the housing.

Preferred version



Accessories



Sensor pockets for thermostats

Brass sensor pocket			Steel 18/8 sensor pocket			
A [mm]	Thread B	Code no.	A [mm]	Thread B	Code no.	
65	1/2 NPT	060L326566			—	
75	1/2 NPT	060L326466	75	G 1⁄2 A	060L326766	
75	G 1⁄2 A	060L326266	_		_	
75	G 3⁄4 A	060L326666				
75	G ½ A (ISO 228/1)	060L328166	_		_	
110	1/2 NPT	060L328066	110	G 1⁄2 A	060L326866	
110	G ½ A	060L327166	110	1/2 NPT	060L327066	
110	G ½ A (ISO 228/1)	060L340666				
110	G ¾ A (ISO 228/1)	060L340366			—	
160	G 1⁄2 A	060L326366	160	G 1⁄2 A	060L326966	
200	G ½ A	060L320666			—	
200	G ½ A (ISO 228/1)	060L340866	_		_	
200	G ¾ A (ISO 228/1)	060L340266	_	_		
250	G ½ A	060L325466	_		_	
330	G ½ A	060L325566	_	_	_	

Note:

All sensor pockets are supplied without gland nut, gaskets and washes.

Other Accessories		Description	Qty./unit	Code no.
Clamping band		For CAS temperature controls with remote sensor (L = 392 mm).	10	017-420466
Heat conductive compound (Tube with 4.5 cm ³)	OFFICE	For CAS with sensor fitted in a sensor pocket. For filling sensor pocket to improve heat transfer between pocket and sensor. Application range for compound: -20 – 150 °C, momentarily up to 220 °C.	1	041E0114



Installation

Location of unit: CAS thermostats are designed to withstand the shocks that occur, for example, in ships on compressors and in large machine installations. CAS thermostats are fitted with a base of 3 mm steel plate for fixing to bulkheads, etc.

Resistance to media

Material specifications for sensor pockets.

Sensor pocket brass

The tube is made of Ms 72 to DIN 17660, the threaded portion of So Ms 58 Pb to DIN 17661.

Sensor pocket, stainless steel 18/8

Material designation 1.4305 to DIN 17440.


Sensor position


As far as possible the sensor should be positioned so that its longitudinal axis is at right angles to the direction flow. The active part of the sensor is $0.313 \text{ mm} \times 47.5 \text{ mm}$.

The medium

The fastest reaction is obtained from a medium having high specific heat and high thermal conductivity. It is therefore advantageous to use a medium that fulfils these conditions (provided there is a choice). The flow velocity of the medium is also of significance. (The optimum flow velocity for liquids is about 0.3 m/s). For permissible media pressure see fig. 10.



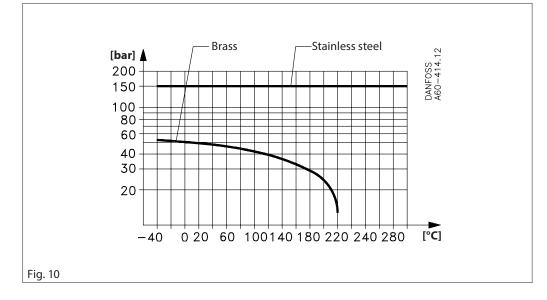

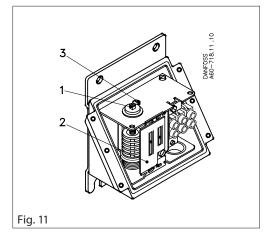

Setting

When the thermostat cover is removed, and the locking screw (3) fig. 2 is loosened, the range can be set with the spindle (1) while at the same time the scale (2) is being read (fig.11).

1. Range spindle 2. Range scale 3. Locking screw




Installation *(continued)*

Scale correction

The sensor on CAS thermostats contains an adsorption charge. Therefore function is not affected whether the sensor is placed warmer or colder than the remaining part of the thermostatic element (bellows and capillary tube).

However, such a charge is to some extent sensitive to changes in the temperature of bellows and capillary tube. Under normal conditions this is of no importance, but if the thermostat is to be used in extreme ambient temperatures there will be a scale deviation. The deviation can be compensated for as follows: Scale correction = $Z \times a$ Z can be found from fig. 12, while "a" is the correction factor from the table below. (See example, page 14).

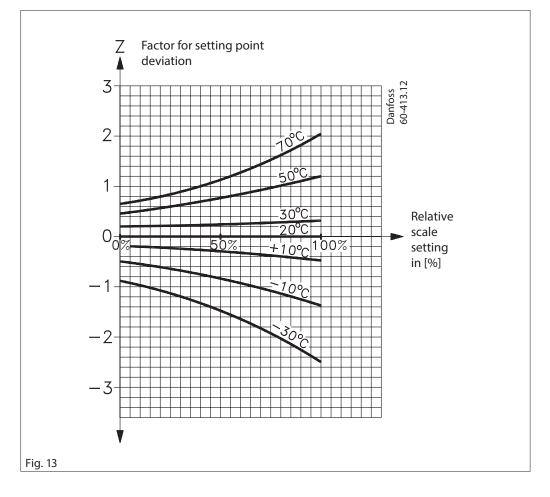


Туре	Regulation range [°C]	Correction factor a for thermostats
CAS 178	20 - 80	2.5
CAS 180	70 – 120	2.4
CAS 181	60 – 150	3.7




Installation *(continued)*

Electrical connection

CAS thermostats are fitted with a Pg 13.5 screwed cable entry suitable for cables from 5 – 14 mm.

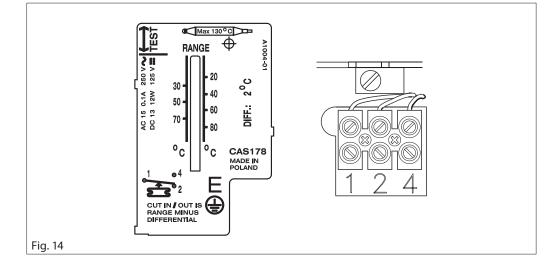

2-step CAS thermostat, type CAS 1080

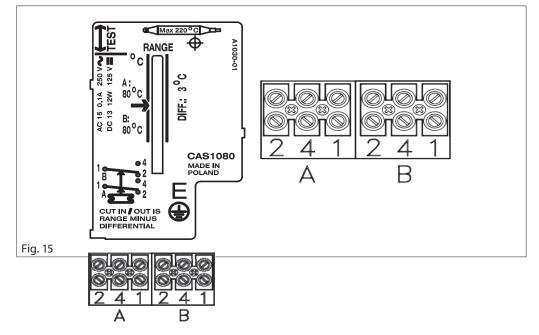



Function

Differentials

The mechanical differential is the differential determined by the design of the thermostat. The thermal differential (operating differential) is the differential the system operates on.

The thermal differential is always greater than the mechanical differential and depends on three factors:


- 1) Medium flow velocity
- 2) Temperature change rate of the medium
- 3) Heat transmission to the sensor

Thermostat function

Contacts 1-4 make while contacts 1-2 break when the temperature rises above the scale setting.

The contacts changeover to their initial position when the temperature falls to the scale setting minus the differential. See fig. 16.

- I. Alarm for rising temperature given at range setting value.
- II. Alarm for falling temperature given at range setting value minus the differential.

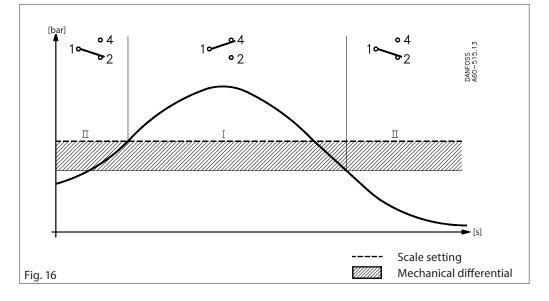

Example 1

Diesel engine with cooling water temperature of 85 °C (normal). An alarm must be triggered if the cooling water temperature exceeds 95 °C. Choose a CAS thermostat 180 (range 70 – 120 °C). Main spindle setting: 95 °C. The required alarm function is obtained by connecting to thermostat terminals 1-4.

Example 2

Find the necessary scale correction for a CAS 180. Set 95 $^\circ$ C at 50 $^\circ$ C ambient temperature.

The relative scale setting Z can be calculated from the following formula:

 $\frac{\text{Setting value - min. scale value}}{\text{max. scale value - min. scale value}} \times 100 = [\%]$

Relative scale setting:	95-70 × 100	= 50%
	120-70	- 50%

Factor for scale deviation Z fig. 12, $Z \approx 0.7$ Correction factor "a=2.4", see table page 12. Scale correction = $Z \times a = 0.7 \times 2.4 = 1.7$ °C CAS must be set at 95 + 1.7 = 96.7 °C



Function (continued)

CAS 1080 thermostats have fixed factory settings.

The thermostats with factory setting at 80 °C of step 1 and step 2 is used for special application, where double warning – like cranck case fire – is requested.

The contacts automatically reset when the temperature decreases in accordance with the differential.

Differentials

The mechanical differential is the differential determined by the design of the thermostat. The thermal differential (operating differential) is the differential the contact system operates on. The thermal differential is always greater than

the mechanical differential and depends on three factors:

- 1) Medium flow velocity
- 2) Temperature change rate of the medium and
- 3) Heat transmission to the sensor

Thermostat function


Contacts 1–4 make while contacts 1–2 break when the temperature rises above the scale setting.

The contacts changeover to their initial position when the temperature falls to the scale setting minus the differential. See fig. 17.

The contacts marked A correspond to step 1.


The contacts marked B correspond to step 2.

- I. Alarm for rising temperature given at range setting value.
- II. Alarm for falling temperature given at range setting value minus the differential

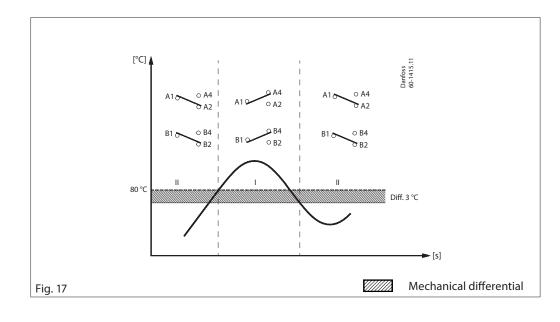




CAS with remote sensor and 2 m armoured capillary tube

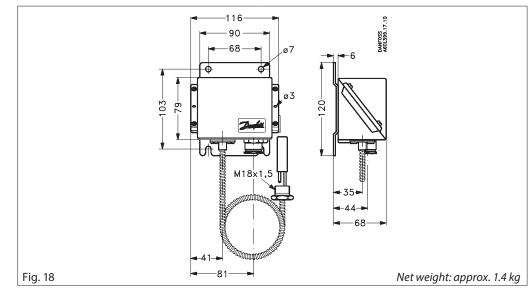

2-step thermostat, type CAS 1080

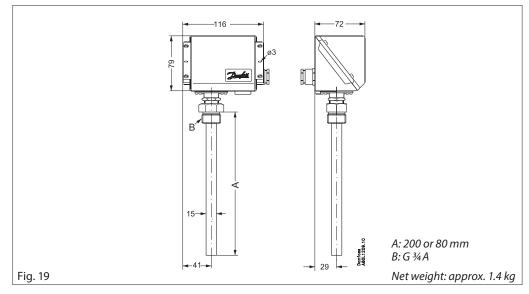

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

Dimensions [mm] and weights [kg]