


Installation Guide

# Warning Module for continuous monitoring of Field bus wiring state


148R9638

148R9638

## Warning Module

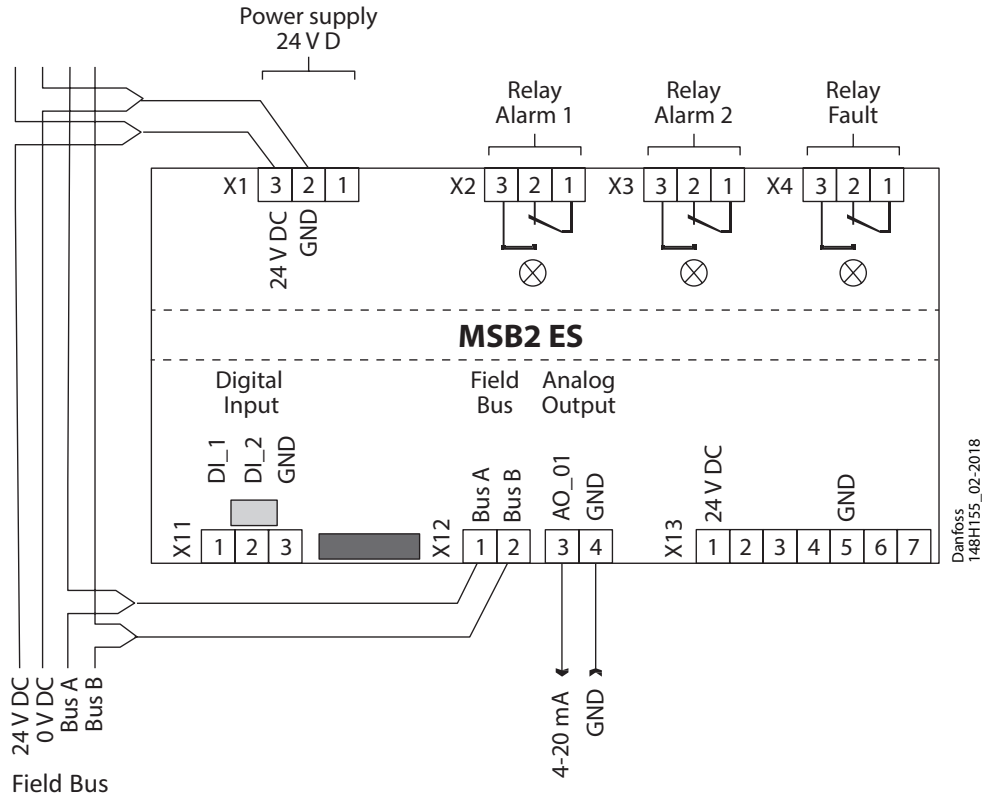

## Field bus wiring example

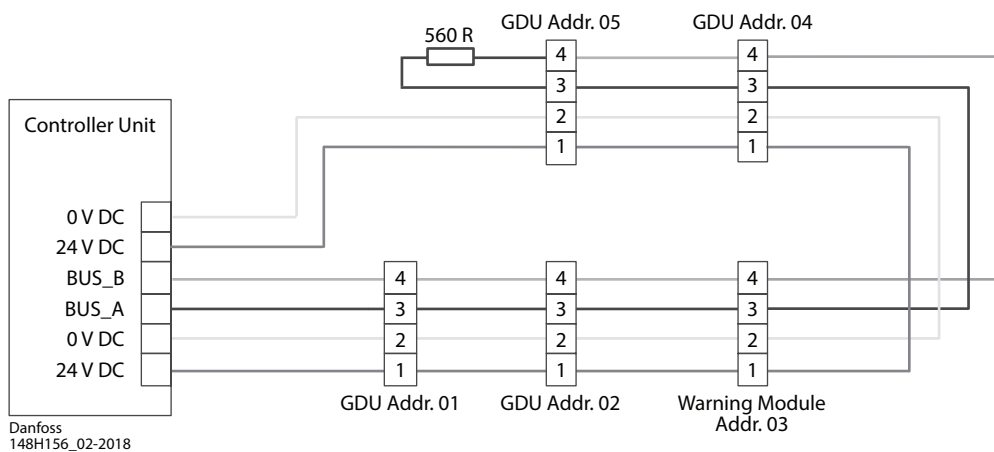

Further documentation:

