



Instruction

# Mounting Danfoss Radiator Valves

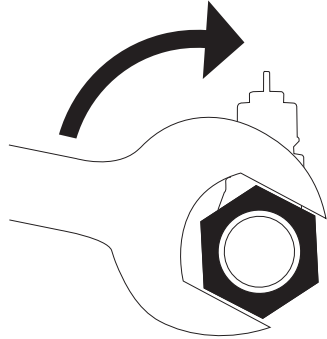

To secure non leaking connections at tailpiece/ union nut connection on valves, Danfoss recommends to apply the torques shown in below table:

RA-N/U/UN/UR/K/KW/NCX/DV/ FN/G/KE/KEW/FS/C RLV/RLV-B/D/S/CS FJVR Lance Valves Hydrocable	Min. [Nm]	Max. [Nm]
		
DN10 3/8"	40	60
DN15 1/2"	60	90
DN20 3/4"	80	120

**Danfoss A/S**

Heating Segment • heating.danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.