

Installation guide

Solenoid coil

Type AB, AM, AC, AK, AL, AP, BB, BA, BC and BD



042R9019

042R9019

A A - Coils		B B - Coils	
<p>IP00/PD3 Spade</p>		<p>+ (M) / (C) = IP65/PD3 Cable plug</p>	
<p>IP00/PD3 Spade</p>		<p>+ (M) / (C) = IP65/PD3 + (M) = IP67/PD4 Cable plug</p>	
A1		A2	
B1		B2	
B3			
1 <input checked="" type="checkbox"/>		2 <input checked="" type="checkbox"/>	
3 <input checked="" type="checkbox"/>		4 <input checked="" type="checkbox"/>	

Type of control	1	
Class of protection	Class I	
Ambient temperature	See T _{ambient} on coil	
Voltage variation	For voltage variation, see print on coil	
Voltage tolerances	For voltage tolerances see datasheet, when ordering the coil	
Humidity	Only non-conductive pollution occurs except that occasionally a temporary conductivity caused by condensation is to be expected.	
Ball pressure test	200 °C (392 °F) in accordance to IEC 60695-10-2	
Impulse withstand voltage	Spade	4.0 kV at altitude <4000 m (13123 ft)
	Plug	4.0 kV at altitude <2000 m (6561 ft)
	Plug	3.1 kV 2000 m <altitude <4000 m (6561 <altitude <13123 ft)
Overvoltage category	III	
Degree of protection IPxx	Enclosure rating according to IEC standard 60529 (See illustration for details A-B)	
Pollution degree PDX	Pollution degree according to EN60664-1 (See illustration for details A-B)	
Installation	Integrated control	
	Incorporated control	
	Independently mounted control (IP65/IP67)	
Suitable cable,	ø6.6 – ø11 mm (ø0.26 – ø0.43 in)	
Conductor size for plug	0.75 – 1.5 mm ² (21 – 15 AWG flexible cord)	
Suitable cable for cable plug	See datasheet when ordering the coil	
Cable conductor size	3 x 0.75 mm ² (3 x 0.001 in ²)	
Plugs can be removed/mounted	10 times	
Surface temperature	Independently mounted controls must be inaccessible in normal use if the surface temperature on the control > 85°C	

- Only qualified personnel is allowed to install or maintain this product
- Disconnect the power when dismantling the coil
- Avoid direct exposure to alkaline conditions, use in neutral conditions is recommended
- Ensure that the O-ring is in place on the valve
- If the coil is used as independently mounted control, the end-user shall use a plastic cable gland with strain relief

Імпортер: ТОВ з іі "Данфосс ТОВ" 04080, Київ 80, п/с 168, Україна

Info for UK customers only: Danfoss Ltd., 22 Wycombe End, HP9 1NB, GB

<p>5</p>	<p>6</p>	<p>7</p>	<p>8</p>
<p>9</p>	<p>10</p>	<p>A1</p>	<p>(1-A1)</p>
<p>A2</p>	<p>(1-A2)</p>	<p>B1</p>	<p>(1-B1)</p>
<p>B2</p>	<p>(1-B2)</p>	<p>B3</p>	<p>(1-B3)</p>

Visit www.products.danfoss.com for further technical data
 Para más información, visite www.products.danfoss.es
 Rendez-vous sur le site www.products.danfoss.fr pour plus de données techniques