


VLT® HVAC Basic Drive Decoupling Plate Mounting Instruction for H7 and H8**Step 1**


Mount metal plate on frequency converter and fasten with 3 screws. Tightening torque: 2Nm

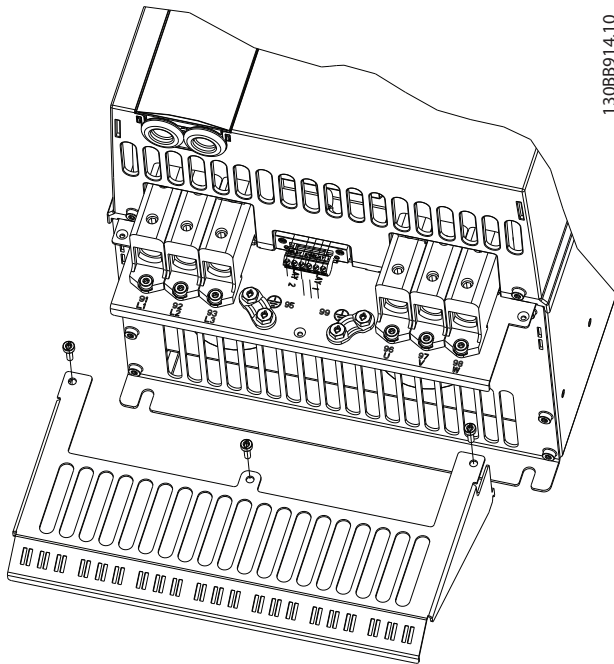

1308B914.10

Step 2

VLT HVAC Basic Drive mounted with decoupling plate

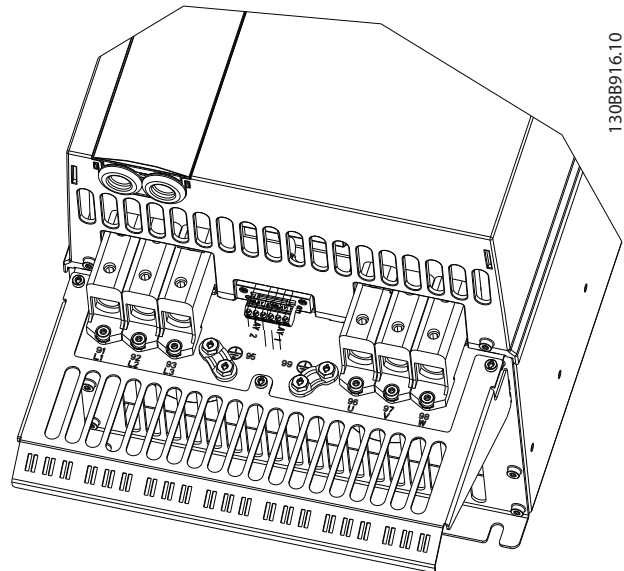

1308B916.10

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

