 




# INSTRUCTIONS


## Temperature transmitter type MBT 9110



084R9312

### Standard model

Supply 8–35 VDC  
4–20mA

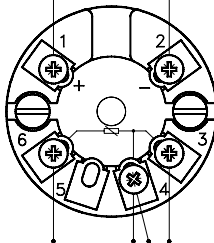


Pt100 / Pt1000	2-wire Jumper must be connected	
	3-wire	

DANFOSS  
A84205.11

### Standard EEx ia IIC T4/T6

Supply 8–30VDC  
4–20mA

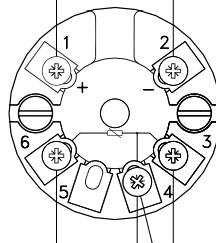


Pt100 / Pt1000	2-wire Jumper must be connected	
	3-wire	


Danfoss  
A84206.12

084R9312

Galvanically isolated

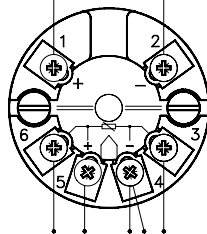Supply 7–35VDC  
4–20mA

Pt100 / Pt1000	2-wire	
	3-wire	
	4-wire	
	3-wire programmed 2-wire connected Jumper must be connected	
TC	Thermocouple	

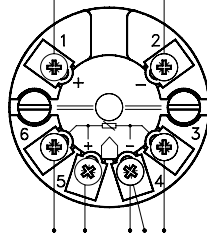DANFOSS  
A94209.11Galvanically isolated  
EEx ia IIC T4/T6Supply 7–28VDC  
4–20mA

Pt100 / Pt1000	2-wire	
	3-wire	
	4-wire	
	3-wire programmed 2-wire connected Jumper must be connected	
TC	Thermocouple	

DANFOSS  
A94210.12