

Installation Guide


I/O module
Type **AK-XM 102A, AK-XM 102B**






080R9214



AN000086427127en-000601

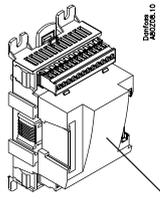

080Z0008 AK-XM 102A
080Z0013 AK-XM 102B

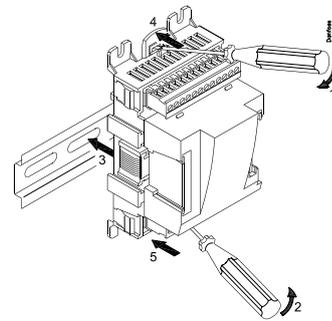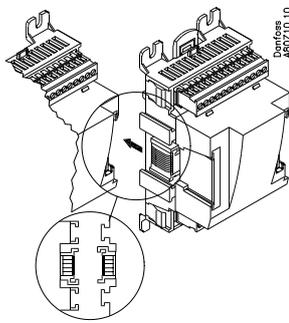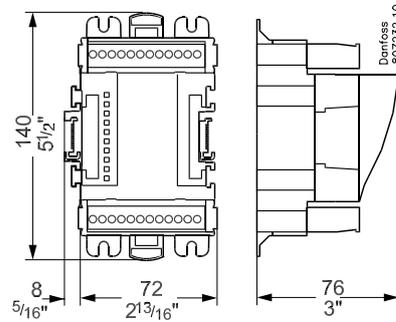

CE


-20 °C t_{amb} <math>< 55\text{ °C}</math>
 -0 °F <math>< t_{amb}</math> <math>< 130\text{ °F}</math>
 0 – 95% RH, non condensing
 IP10 / VBG4
 UL: E357029





Ensure power is disconnected before adding or removing Modules

DI x 8


AK-XM 102A

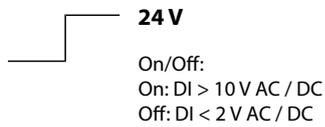

AK-XM 102B

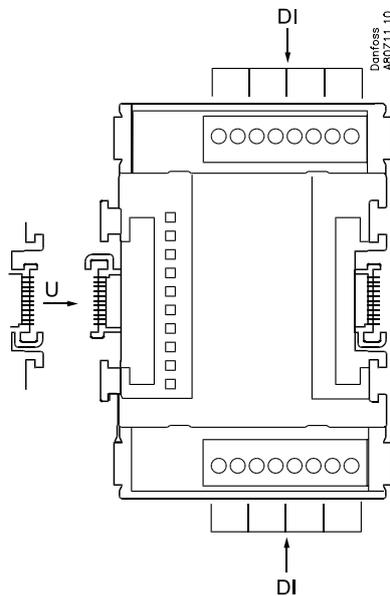
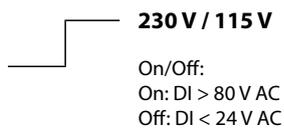


Point

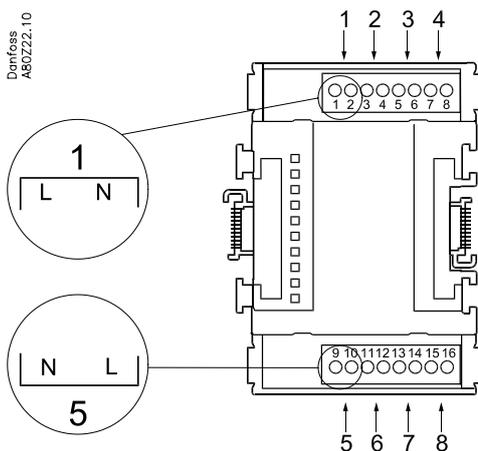

	Signal	Active at
DI 	Ext.Main Switch	Closed (voltage on)
	Day/ Night	/
	Comp. Safety 1	Open (voltage off)
	Comp. Safety 2	

Address

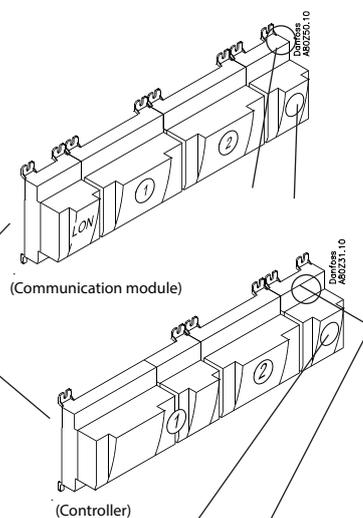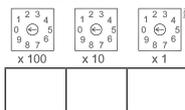

Signal	Active at	Module	Point	Terminals
			1 (DI 1)	1 - 2
			2 (DI 2)	3 - 4
			3 (DI 3)	5 - 6
			4 (DI 4)	7 - 8
			5 (DI 5)	9 - 10
			6 (DI 6)	11 - 12
			7 (DI 7)	13 - 14
			8 (DI 8)	15 - 16



The Product contains electrical components
 And may not be disposed together with domestic waste.
 Equipment must be separate collected with Electrical and Electronic waste. According to Local and currently valid legislation.