

Installation Guide




I/O module  
Type **AK-XM 204A, AK-XM 204B**



080R9216




AN000086427141en-000601

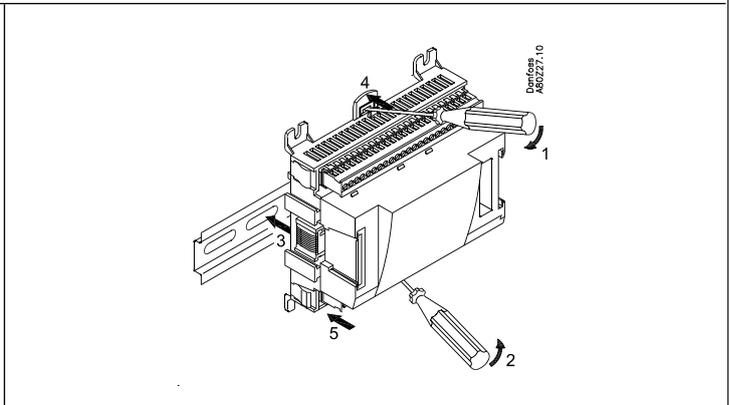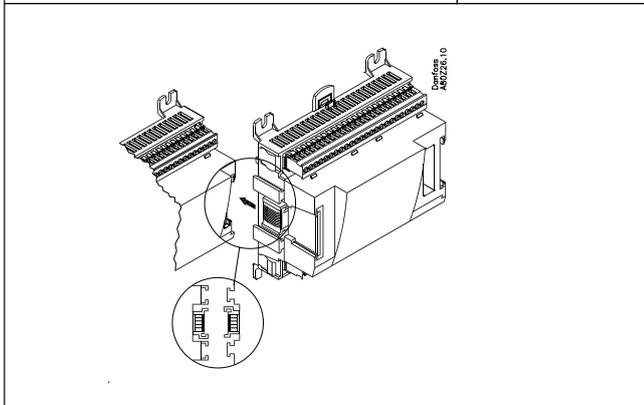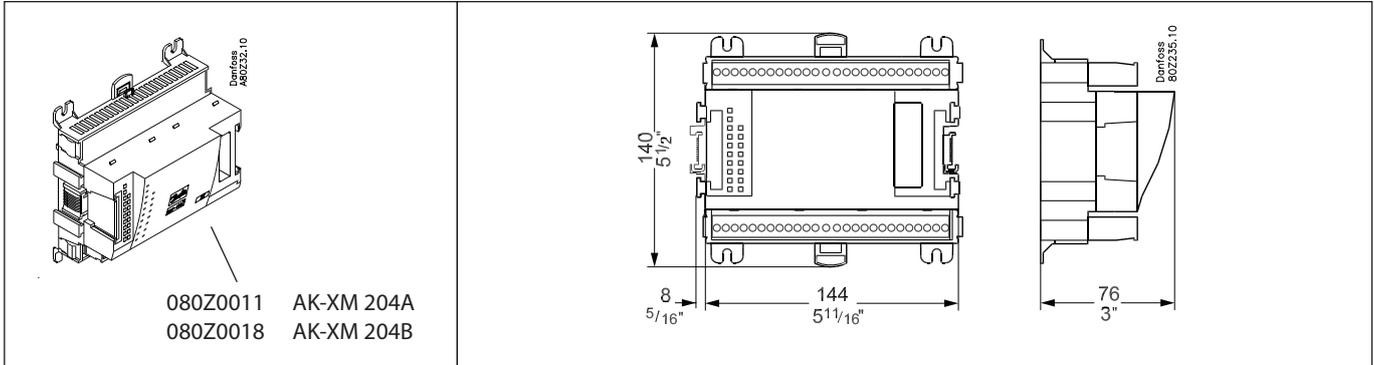



**CE**  
 -20 °C < t<sub>amb</sub> < 55 °C  
 -0 °F < t<sub>amb</sub> < 130 °F  
 0 – 95% RH, non condensing  
 IP10 / VBG4  
 UL: E357029

**!** Ensure power is disconnected before adding or removing Modules

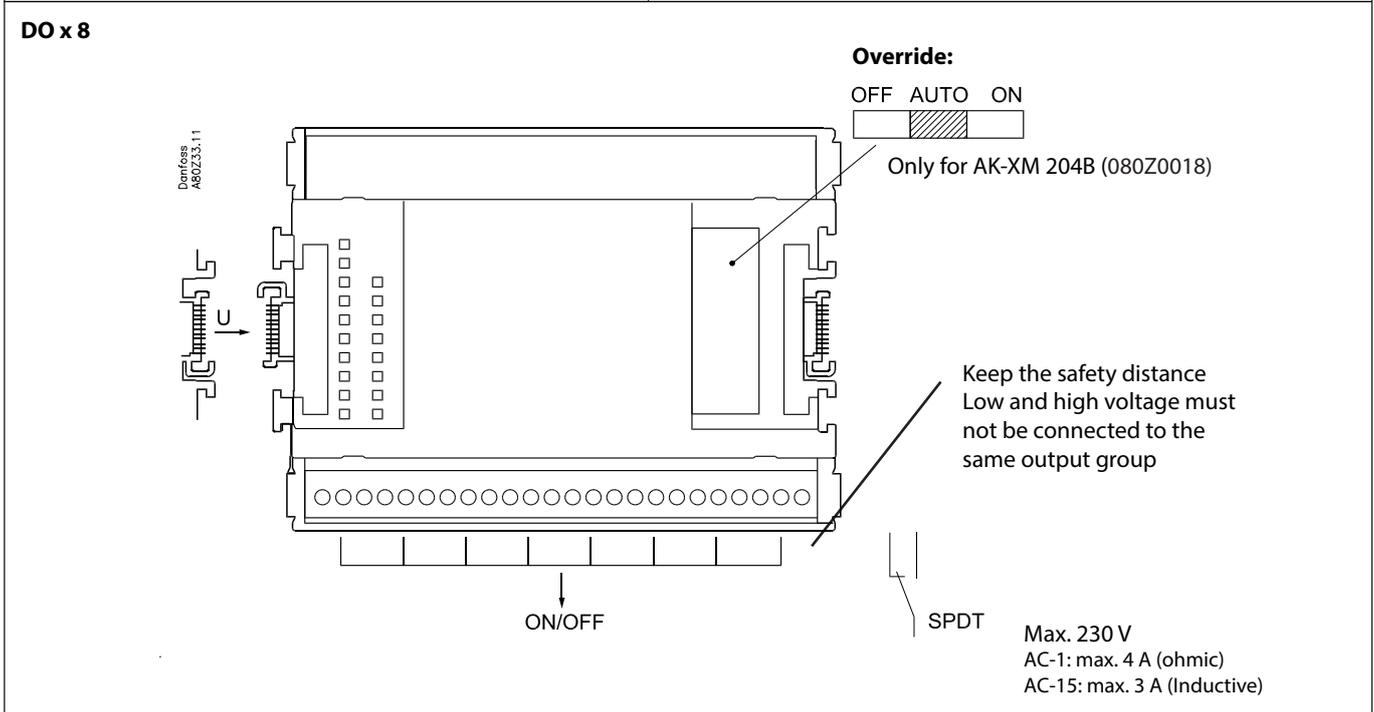


**Point**

Danfoss  
AB0Z34.10

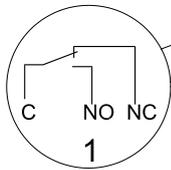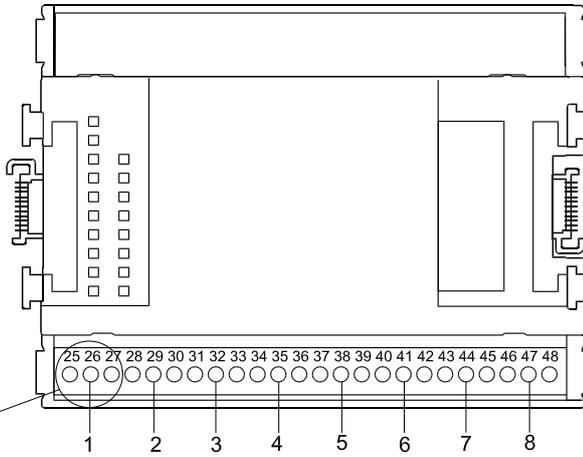



**Override (Off / Auto / On)**  
Only for AK-XM 204B (080Z0018)

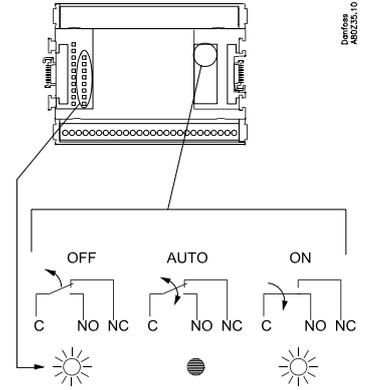


Danfoss  
AB0Z35.10

	Signal	Active at
	Comp 1	ON / OFF
	Comp 2	ON / OFF
	Fan 1	ON / OFF
	Alarm	ON / OFF

**Address**

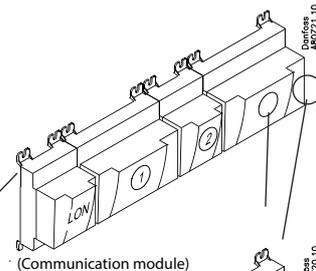 

(Communication module)

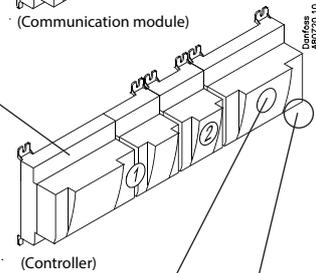

(Controller)

Signal	Active at	Module	Point	Terminals
			1 (DO 1)	25-26-27
			2 (DO 2)	28-29-30
			3 (DO 3)	31-32-33
			4 (DO 4)	34-35-36
			5 (DO 5)	37-38-39
			6 (DO 6)	40-41-42
			7 (DO 7)	43-44-45
			8 (DO 8)	46-47-48

The Product contains electrical components  
And may not be disposed together with domestic waste.  
Equipment must be separate collected with Electrical and Electronic waste. According to Local and currently valid legislation.