

Installation guide

Circuit breaker

CTI 25M-MB and CTI 45MB

047C3008

047C3008

Danfoss A47B400.10

Danfoss 47B402.11

Danfoss A47B399.10

1x1...4mm²
2x1...4mm²
No.16...12 AWG

1x1...6mm²
2x1...6mm²
No.16...10 AWG

9mm → 1x1.5...4mm²
2x1.5...4mm²
No.16...10 AWG

Use 75°C Cu wire only

1.0...2.5 Nm
8.9...22 lb-in

No.3
Pozidriv No.2

mm

Danfoss 47B423.10

CTI 25M

Danfoss 47B408.10

CTI 25MB

Danfoss 47B401.14

Danfoss 47B403.12


25A

18









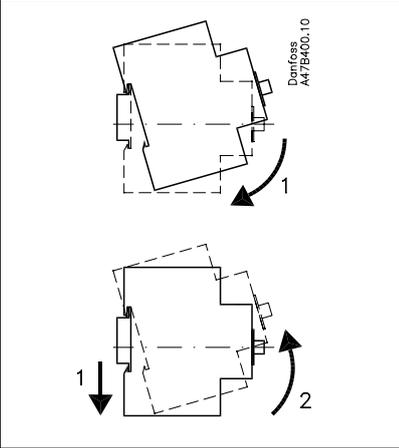


Danfoss
A47B400.10

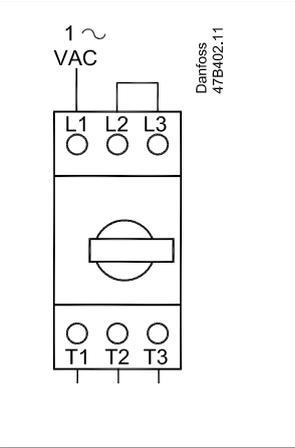

Danfoss
47B402.11

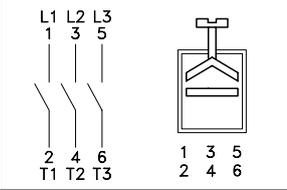


DANFOSS
A47B395.10

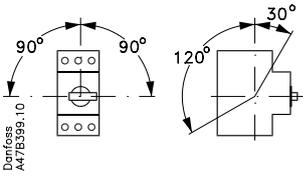


Danfoss
A47B399.10

Use 75 °C Cu wire only

-  1.5...4 Nm
-  13.2...35 lb-in
-  No.3
-  Pozidriv No.2

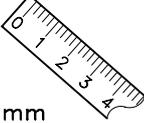


mm

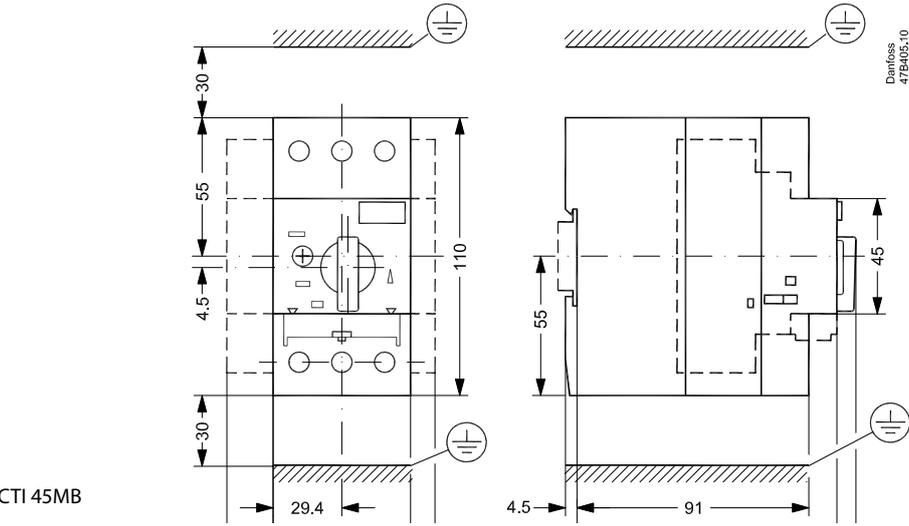


Danfoss
47B405.10

CTI 45MB



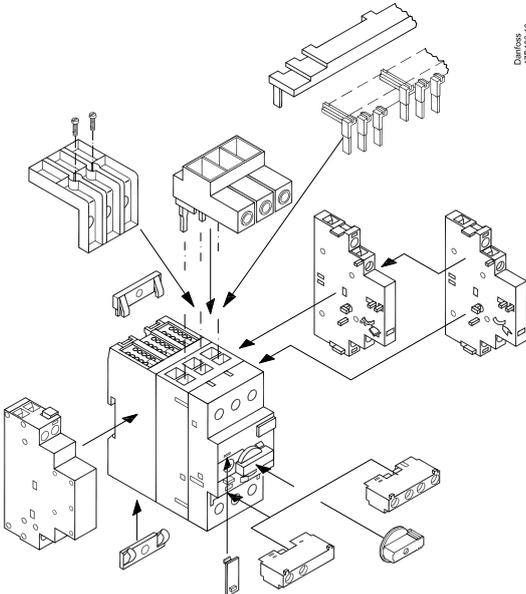

Danfoss
47B406.13

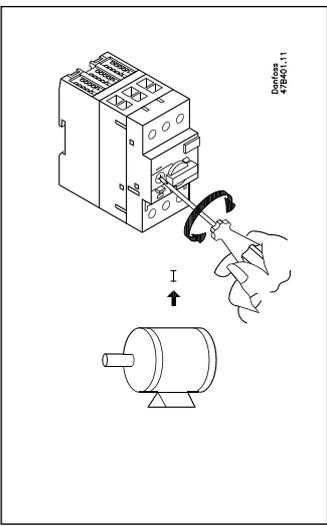

Danfoss
47B401.11