


Installation guide

# Electric expansion valve



AKVA 10-n (n = 1-8)

068R9546

068R9546

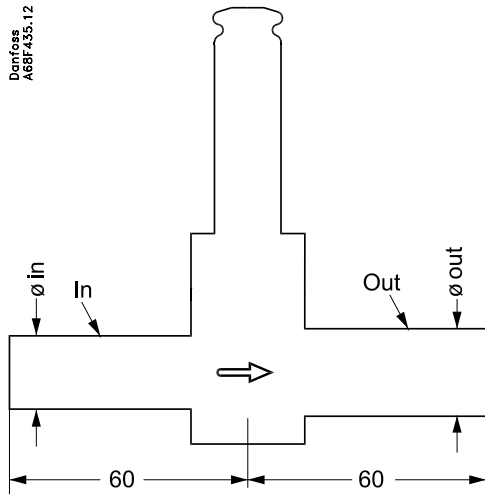

AKVA 10 -	1, 2, 3, 4, 5, 6	7, 8
In	3/8" (Ø <sub>in</sub> = 17.2 mm)	1/2" (Ø <sub>in</sub> = 21.3 mm)
Out	1/2" (Ø <sub>out</sub> = 21.3 mm)	3/4" (Ø <sub>out</sub> = 26.9 mm)

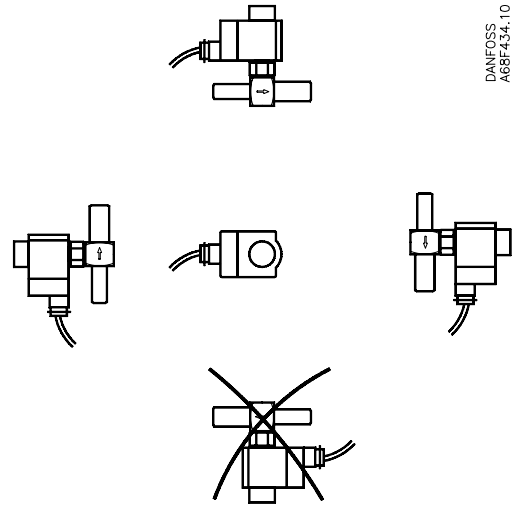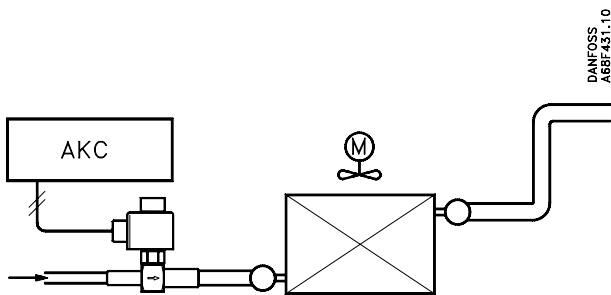

n	Code no. Best.nr. Bestell-Nr. N° de code Núm. de código	kW	TR
1	068F0526	4.0	1.1
2	068F0527	6.3	1.8
3	068F0528	10.0	2.8
4	068F0529	16.0	4.5
5	068F0530	25.0	7.1
6	068F0531	40.0	11.4
7	068F0532	63.0	18.0
8	068F0533	100.0	

